



CP-40, CP-60, CP-100 Coffee Percolators

This manual contains important information regarding your *Admiral Craft* unit. Please read this manual thoroughly prior to equipment set-up, operation and maintenance. Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty. MUST READ!!!

WARNINGS

- Do not touch any hot surfaces
- Do not immerse unit, cord or plug in liquid at any time
- Unplug cord from outlet when not in use and before cleaning
- Plug only into a 3-hole grounded electrical outlet
- Do not operate unattended
- Do not use this unit for anything other than intended use
- Do not use outdoors
- Always use on a firm, dry and level surface at least 12" from walls or any other obstruction
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner
- Keep children and animals away from unit
- Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury. All repairs should be done by authorized professionals only
- Ensure that the designated power supply is adequate for continual usage and the voltage is correct
- Scalding may occur if the lid is removed during the brewing cycle.

TO USE

1. Clean the filter basket, cover, percolator tube and the inside of the tank with a non- abrasive detergent.
2. Pour cool water into the urn to fill at least half of the total capacity of the urn.
3. Cover the filter basket with the basket cover.
4. Center the percolator tube into the basket and tray. Make sure that the base of the tube is positioned securely in the well of the urn.
5. Center the filter basket into the percolator tube and place ground coffee in the basket. Put the basket cover back on and put the cover on the urn.
6. Plug the cord into your electrical outlet and turn the power switch on. The switch will light up.
7. When the indicator lamp lights up the brewing process is complete.
8. The second heating system will start to operate automatically to keep the coffee warm.
9. When there are only about 3 cups of coffee left in the urn, turn the power switch off and unplug the cord from the outlet.
10. To reheat cold coffee in the urn, there must be at least 12 cups of coffee in the tank to reheat. Simply re-plug the cord back into the electrical outlet and turn the power switch on.

 
 
SEDIMENT REMOVAL

*On areas of the heating element, hard water will cause chalk and limestone to accumulate over time. It is recommended that you clean the percolator and remove the residue.

1. Pour 100 ml. of fresh lemon juice into the urn body
2. Wait 5-6 minutes to allow the lemon juice to run through the sediments
3. You can use a soft bristle brush to clean the heating element
4. Repeat steps 1-3 until limestone is removed
5. Use a dry cloth to wipe the residual liquid
6. Pour clean water into the urn until and rinse until lemon smell is gone

Parts – please check prior to installation


1. Cover
2. Urn
3. Level Indicator
4. Faucet
5. Power Switch
6. Indicator Lamp
7. Urn Base
8. Basket Cover
9. Filter Basket
10. Basket Tray – not included on CP-40
11. Percolator Tube
12. Cord
13. Bottom of Urn
14. Heating Element

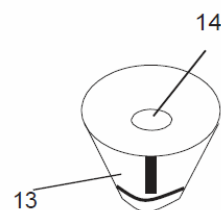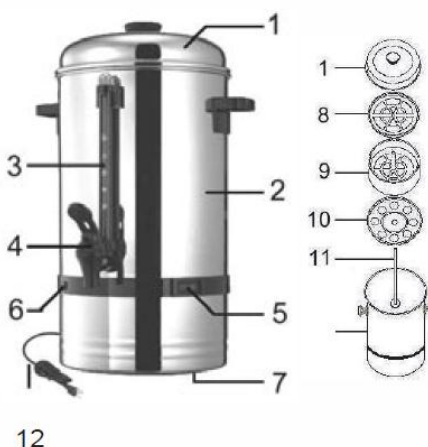


TROUBLESHOOTING - Troubles listed are for reference. If any fault occurs, please discontinue use. Do not attempt to repair yourself. This will void the warranty.


**UNDER NO CIRCUMSTANCES SHOULD THIS UNIT BE OPERATED DRY.
IT IS ALSO NOT INTENDED TO SIMPLY BOIL WATER.**

Problem	Cause	Solution
Not working as well as expected	Unit is not on a dedicated circuit	Unplug unit, plug into a dedicated line and retry
Leaking from the area where the spigot attaches to the urn	Nut/bolt is loose	Inside the urn, there is a nut/bolt that may loosen over time. Tighten the nut/bolt and leaking will stop.
Leaking from the area where the spigot attaches to the graduation	The fitting under the graduation water indicator has become loose	Tighten the small black fitting underneath the water indicator and the leaking will stop.
Leaking from the area where the spigot lever and spout meet	The area is loose	Twist the lever to tighten and the leaking will stop.

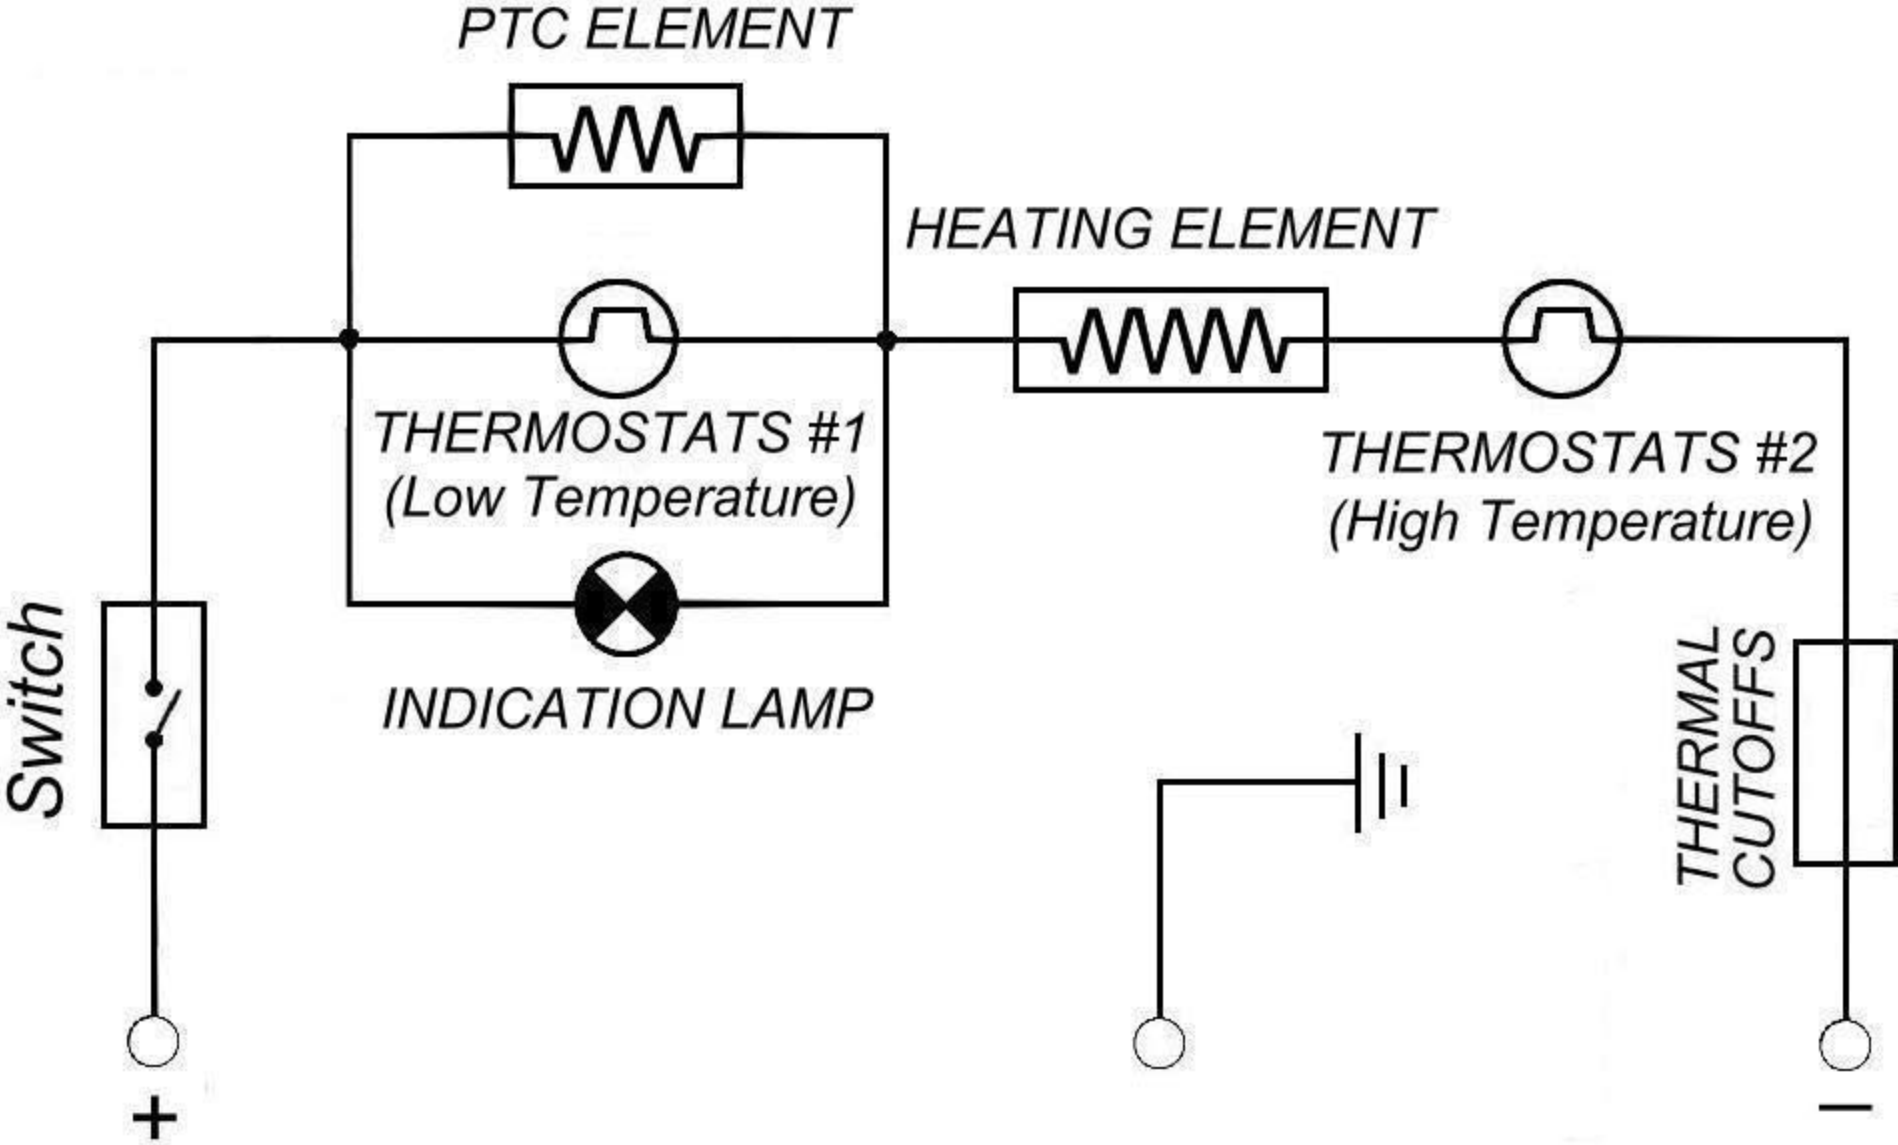 

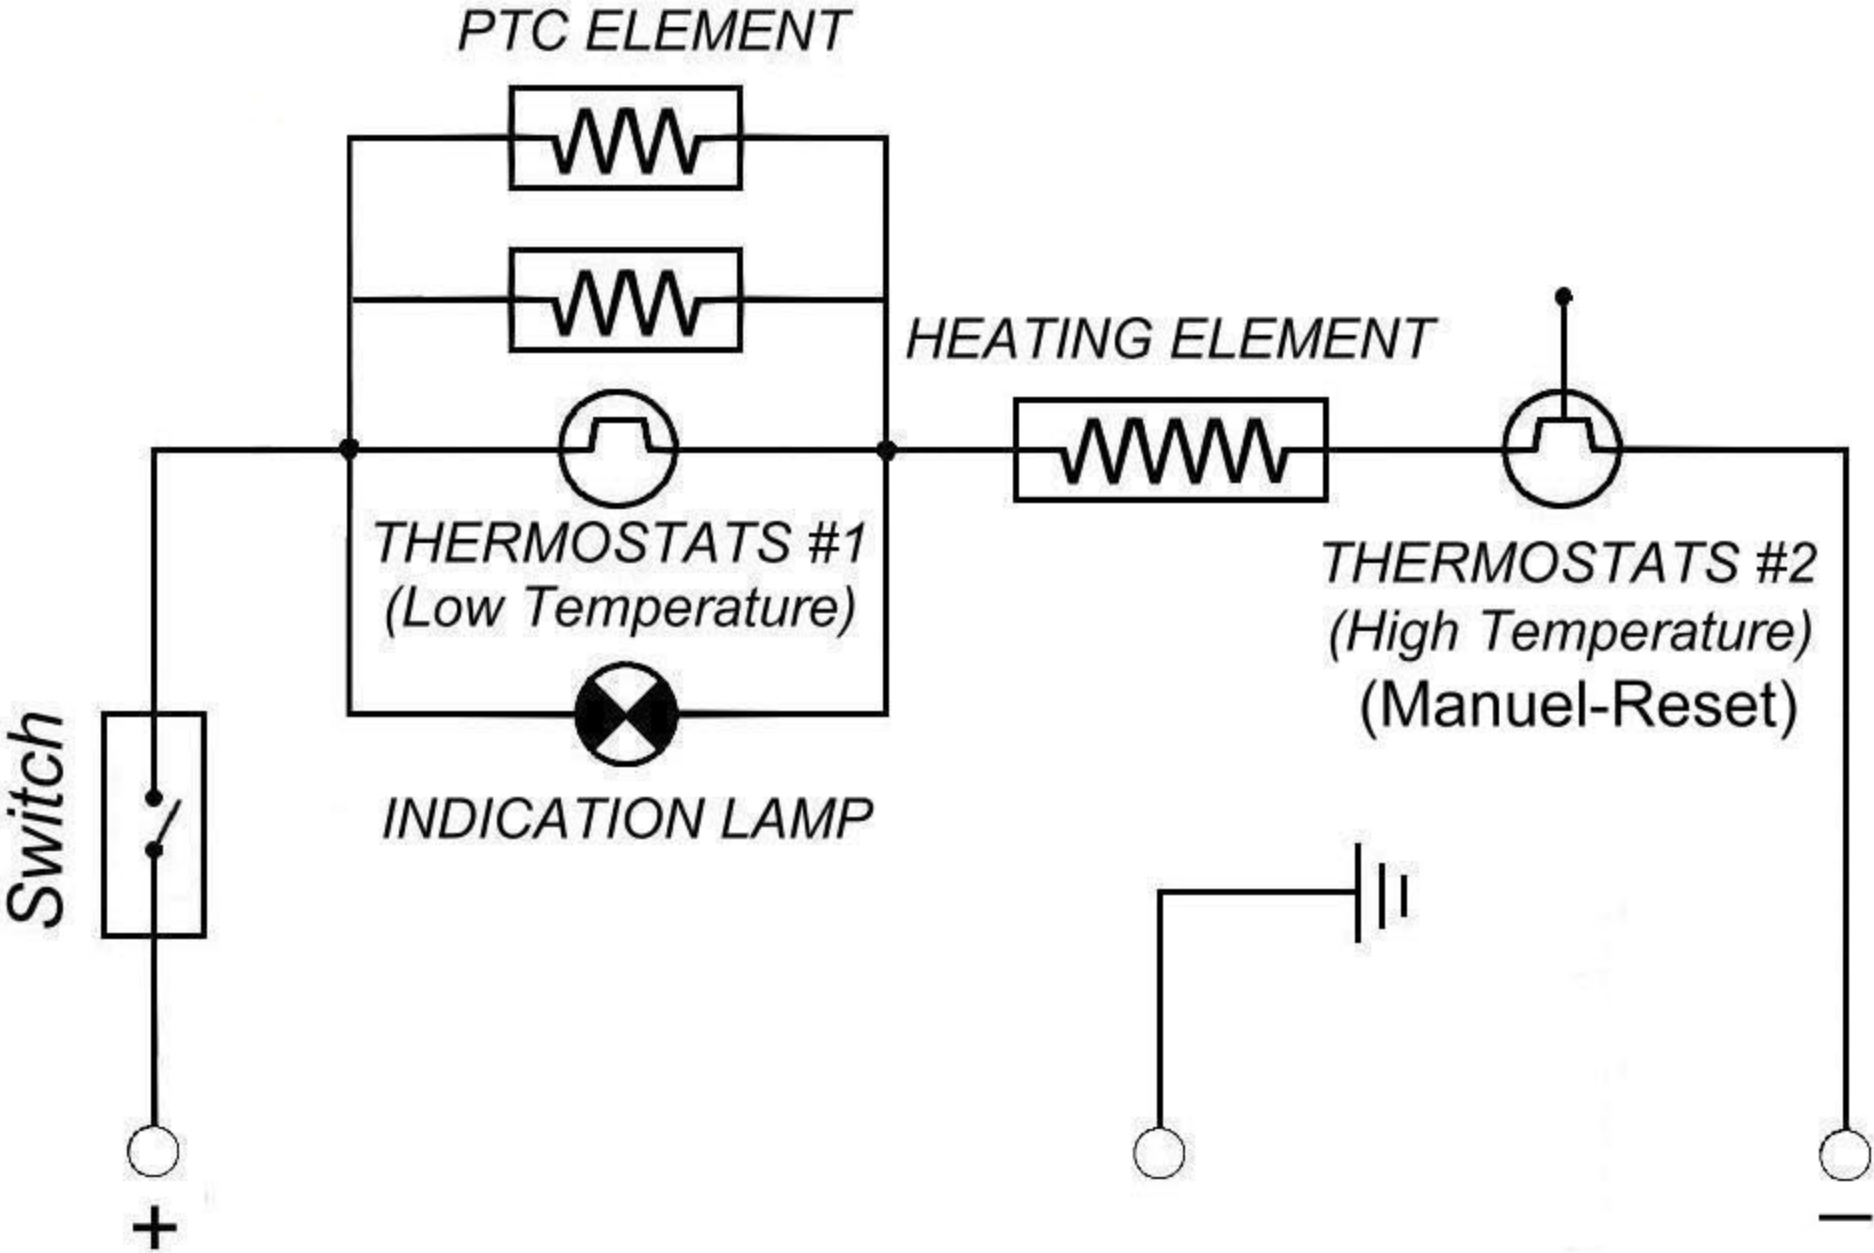 

CP-40
CP-60
CP-100

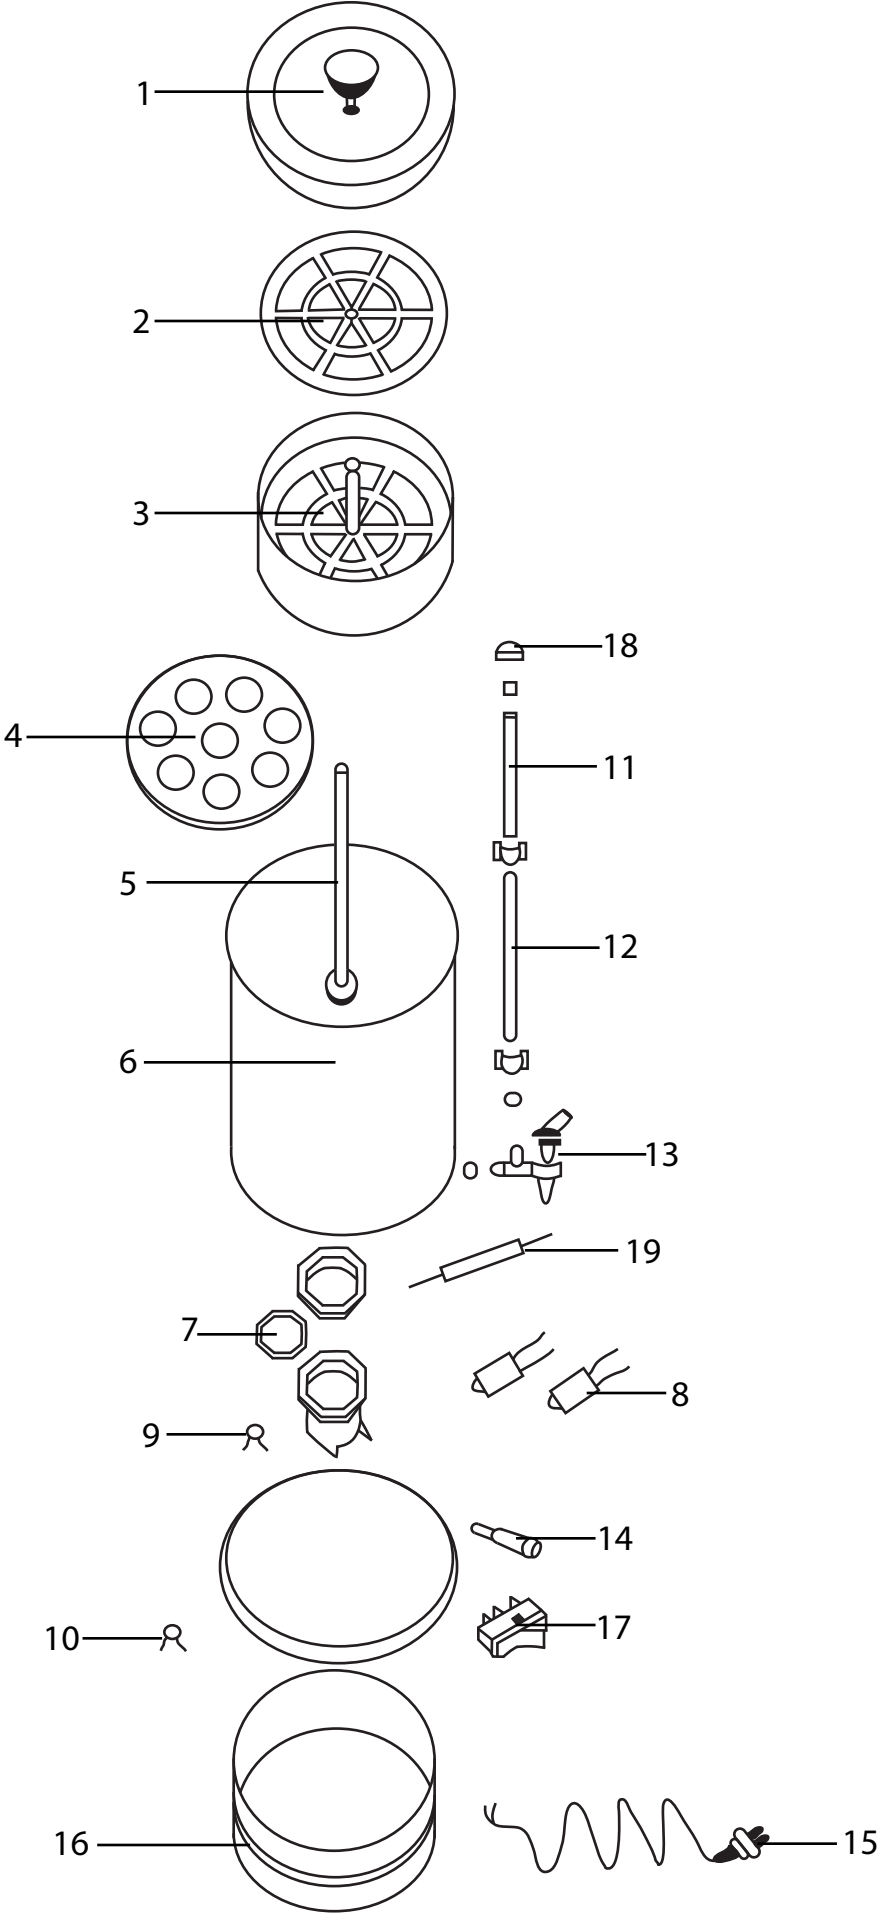 

Coffee Percolators - CP-40, CP-60, CP-100

Reference Number	CP-40 Part Number	CP-60 Part Number	CP-100 Part Number	Description
1	CP4-1	CP-01	CP-01	Cover with Knob
2	CP4-2	CP-02	CP-02	Basket Cover
3	CP4-3	CP-03	CP-03	Basket
4	CP4-4	CP-04	CP-04	Basket Base
5	CP4-5	CP6-5	CP1-5	Stem
14	CBCP-6	CBCP-6	CBCP-6	Indicator Light - Red
7	CP-7	CP-7	CP-7	High Heat Element
8	CP-8	CP-8	CP-8	Low Heat Element
9	CP-9	CP-9	CP-9	Thermostat High Temp
10	CP-10	CP-10	CP-10	Thermostat Low Temp
11	CP4-11	CP6-11	CP1-11	Glass Graduation
12	CP4-12	CP6-12	CP1-12	Sleeve for Graduation
13	CP-13	CP-13	CP-13	Spigot
15	CP-15C	CP-15C	CP-15C	Power Cord and Strain Relief
16	na	na	na	Base
17	CP-17	CP-17	CP-17	Lighted Switch - Red
18	CP-18	CP-18	CP-18	Screwcap for Sleeve
19	CP-19	CP-19	CP-19	Thermal Cutoff



1-YEAR LIMITED WARRANTY

Admiral Craft Equipment Corp. (the "Company") warrants this product (the "Product") will be free from failures in material and workmanship for one (1) year from the date of original purchase with proof of purchase, provided that the Product is operated and maintained in conformity with the Owner's Manual. This Limited Warranty is non-transferable. During this period, your exclusive remedy is repair or replacement without charge of the Product or any component found to be defective at the Company's discretion. If the Product or any component is no longer available, the Company will replace it with a similar one of equal or greater value. This Limited Warranty is void if the Product is used with voltage other than 120 Volts. **THIS WARRANTY IS IN LIEU OF ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, PERFORMANCE, OR OTHERWISE, WHICH ARE HEREBY EXCLUDED. IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, FORSEEABLE, CONSEQUENTIAL, OR SPECIAL ARISING OUT OF OR IN CONNECTION WITH THIS PRODUCT INCLUDING DAMAGES ARISING FOR FOOD OR BEVERAGE SPOILAGE CLAIMS.**

You may have other legal rights depending upon where you live. Some States or Provinces do not allow limitations on warranties so the foregoing may not apply to you.

WARRANTY EXCLUSIONS

IMPROPER ELECTRICAL CONNECTIONS:

The Company is not responsible for the repair or replacement of failed or damaged components resulting from electrical power failure, the use of extension cords, low voltage, or voltage spikes to the Product.

IMPROPER USAGE:

This Limited Warranty does not cover failure or other damages to the Product resulting from (i) improper usage or installation or failure to clean and/or maintain the Product as set forth in the Owner's Manual; or (ii) accident, misuse, abuse, negligence, or modification or alteration of the Product.

CONSUMABLES:

This Limited Warranty does not include consumables or wear-and-tear items such as legs, feet, plastic component parts, splash shields, filters, gaskets, and non-stick cooking surfaces.

ADJUSTMENTS & CALIBRATIONS:

Leveling, tightening of fasteners, or utility connections normally associated with the original installation are the responsibility of the dealer, installer, or the end user and not the responsibility of the Company and will not be considered warranty issues.

If you think the Product has failed, or requires service, within its warranty period, please contact the Company's Customer Care Department through our website at: www.admiralcraft.com "Service" --> "Technical Support Request". A receipt proving the original purchase date will be required for all warranty claims, handwritten receipts are not accepted. You may also be required to return the Product for inspection and evaluation. Return shipping costs are not refundable. The Company is not responsible for returns lost in transit.

This Limited Warranty is Valid only in the USA and Canada.