

250 WATT SPACE HEATER

Item Number W5011

OWNER'S MANUAL



Performance Tool[®]

▲WARNING: It is the owner and/or operators' responsibility to study all WARNINGS, operating, and maintenance instructions contained on the product label and instruction manual prior to operation of this product. The owner/operator shall retain product instructions for future reference.

The owner and/or operator are responsible for maintenance, maintaining all decals or warning labels and while in use, maintaining the unit in good working order. If the owner and/or operator are not fluent in English, the product warnings and instructions shall be read and discussed with the operators' native language by the purchaser/owner or his designee. Make sure that the operator comprehends its contents. Safety information shall be emphasized and understood prior to usage. The product shall be inspected per the operating instructions.

Users of this product must fully understand these instructions. Protect yourself and others by observing all safety information.

Failure to comply with instructions could result in personal injury and/or property damage! If you encounter any problems or difficulties, please contact our customer service department at: 1-800-426-1262 between 6 a.m. and 5 p.m. Pacific time.

SPECIFICATIONS:

Power:120v AC/60hz @ 2.1amp = 250W
Heat Output:853 BTUs
Dimensions:.....5 x 5 x 2.8 in. (12.6 x 12.6 x 7.1cm)
Weight:1 lbs. (0.45 Kg)
Power Cord:.....6 ft. (1.83 m) Polarized plug

Specifications are subject to change without notice.

TOOL FEATURES

1. ON/OFF Switch with Power Indicator Light
2. Front Grill
3. Ceramic Heating Element
4. Tip-over Switch Protection
5. 6 ft. Power Cord w/ Polarized Plug



UNPACKING AND INSPECTION

After opening the carton, unpack your new product and related parts and accessories. Please inspect it carefully for any damage that may have occurred during transit. Please check it against the photograph on carton. If any parts are missing, please call customer service at 1-800-426-1262 between 6 a.m. and 5 p.m. Pacific time.

▲WARNING: *DO NOT operate this product if damaged during shipment, handling or misuse. Do not operate the product until the parts have been replaced or the fault rectified. Failure to do so may result in serious personal injury or property damage. All damaged parts must be repaired or replaced as needed prior to operating this product. Check to see that all nuts, bolts and fittings are secure before putting this product into service.*

If you have any questions, or require assistance with damaged or missing parts, please contact our customer service department at 1-800-426-1262. Please have the serial number, model number, and date of purchase available for reference when calling.

SAFETY GUIDELINES / DEFINITIONS

This instruction manual is intended for your benefit. Please read and follow the safety, installation, maintenance and troubleshooting steps described within to ensure your safety and satisfaction. The contents of this instruction manual are based upon the latest product information available at the time of publication. The manufacturer reserves the right to make product changes at any time without notice.

▲WARNING: *Read and understand this entire instruction manual before attempting to assemble, install, operate or maintain this product. Failure to comply with the instructions may result in serious personal injury and/or property damage!*

The following signal words are used to emphasize safety warnings that must be followed when using this product:

▲DANGER: *Indicates an imminently hazardous situation that, if not avoided, WILL result in death or serious injury.*

▲WARNING: *Indicates a potentially hazardous situation that, if not avoided, COULD result in death or serious injury.*

▲CAUTION: *Indicates a potentially hazardous situation that, if not avoided, MAY result in minor or moderate injury.*

▲NOTE: *Indicates important information, which if not followed, MAY cause damage to equipment.*

SAFETY

- Do not place any object such as furniture, papers, clothes and curtains closer than 3 feet (0.9 m) to the front of the heater and keep them away from the sides and rear when the heater is plugged in.
- Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
- Always unplug the heater when not in use.
- Always plug heater directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- Do not operate heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Check your heater cord and plug connections.
 - a) Faulty wall outlet connections or loose plugs can cause the outlet or plug to overheat. Be sure the plug fits tight in the outlet.
 - b) Heaters draw more current than small appliances, overheating of the outlet may occur even if it has not occurred with the use of other appliances.
 - c) During use check frequently to determine if your plug outlet or faceplate is HOT!
 - d) If so, discontinue use of the heater and have a qualified electrician check and/or replace the faulty outlet(s).
- Always plug heaters directly into a wall outlet receptacle. Do not use an extension cord.
- Do not use outdoors.

OPERATION

1. Carefully remove your heater from the box. Please save the carton for off-season storage.
2. Make sure the unit is in the OFF (O) position before plugging the heater into the outlet.
3. Plug the 6-foot power cord directly into an outlet. Do not use an extension cord.

CAUTION: Avoid overloading your circuit by not using other high wattage appliances in the same outlet.

4. Place the heater, with its rubber feet facing down, on a firm, level surface.
5. Push the power switch to the (I) position to turn the unit ON.
6. The switch will illuminate to show the heater is running.

NOTE: The heater is single speed and will run continuously at 250 W / 850 BTUs until it is turned off.

CAUTION: Front grill is HOT when unit is in operation.

Built-in Auto safety shut-off

This heater is equipped with a total safety system with tip-over and overheating protection that will automatically shut-off the heater in the event of certain unsafe operating conditions.

Tip-over shut-off

When the unit is accidentally knocked over, it will automatically shut -off.

Solution: Simply place the heater in an upright position on a level surface and resume normal operation.

Overheat shut-off

When a potentially dangerous temperature is reached, the built-in over heating safety system will automatically shut-off the heater off.

Solution:

1. Turn the power switch OFF.
2. Unplug the unit and wait 30 minutes, allowing the heater to cool down.
3. Make sure heater is clear of all obstructions
4. Plug the unit in and operate normally resume normal operation.



Rest Button

MAINTENANCE

- Do not operate the heater without the grill in place.
- Do not use the heater if it has malfunctioned or become damaged in any way.
- Always unplug the heater before cleaning or storage and allow the heater to cool down.
- Clean the unit with a soft cloth moistened with mild soap and water solution.
- NEVER use abrasive or flammable solvents to clean the unit.
- DO NOT IMMERSER THE HEATER IN WATER.
- After cleaning, be sure to completely dry the unit with a cloth or towel.
- Store heater unit with cord in a cool, dry location.
- We recommend storing the unit in the original package.

TROUBLESHOOTING

If your heater fails to operate:

- Turn the heater OFF and UNPLUG THE HEATER.
- Make sure the electrical outlet or circuit breaker is working.
- Verify the heater is sitting securely on a flat surface and engages the tip-over protection switch.
- If the heater is hot warm to the touch, unplug heater, allow it to cool down.
- Check for obstructions. If you find an obstruction turn the heater OFF, and clear obstruction

PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER.

1 YEAR WARRANTY

PERFORMANCE TOOL® extends only the following warranties, and only to original retail purchasers. These warranties give specific legal rights. Except where prohibited by local law, the law of the State of Washington governs all warranties and all exclusions and limitations of warranties and remedies. There may be other rights which vary from state to state.

PERFORMANCE TOOL® warrants the product to be free from defects in materials and workmanship under normal use and service. A defective product may be returned for a free replacement within 90 days from the date of purchase, provided that product is returned to place of purchase immediately after discovery of defect. After 90 days and up to one year from date of purchase, PERFORMANCE TOOL® will replace at no charge any parts which our examination shall disclose to be defective and under warranty. These warranties shall be valid only when a sales receipt showing the date of purchase accompanies the defective product or defective part (s) being returned. For part (s) after 90 days, please remit your request, postage prepaid to:

PERFORMANCE TOOL, P.O. Box 88259 Tukwila, WA 98138

These warranties exclude blades, bits, punches, dies, bulbs, fuses, hoses, and other consumables which must be replaced under normal use and service. These warranties shall not apply to any product or part which is used for a purpose for which it is not designed, or which has been repaired or altered in any way so as to affect adversely its performance or reliability, nor shall these warranties apply to any product or part which has been subject to misuse, neglect, accident or wear and tear incident to normal use and service.

PERFORMANCE TOOL® does not authorize any other person to make any warranty or to assume any liability in connection with its products.

Except for warranties of title and the limited express warranties set forth above, PERFORMANCE TOOL® makes no express or implied warranties of any kind with respect to its products. In particular, PERFORMANCE TOOL® makes no implied warranty of merchantability and no implied warranty of fitness for any particular purpose, except that for goods purchased primarily for personal, family or household use and not for commercial or business use.

PERFORMANCE TOOL® makes an implied warranty of merchantability (and, if otherwise applicable, an implied warranty of fitness for a particular purpose), but only for the particular qualities or characteristics, and for the duration, expressly warranted above.

The laws on limitation of implied warranties may differ from state to state, so the above limitations may not apply in all cases.

PERFORMANCE TOOL® shall not be liable for consequential, incidental or special damages resulting from or in any manner related to any product, or to the design, use, or any inability to use the product. The sole and exclusive remedy for a defective product or part shall be the repair, or replacement thereof as provided above. The laws on limitation of remedies or on consequential, incidental or special damages may vary from state to state, so the above limitations may not apply in all cases.