

9



ne Adjustment INUT (1) on the slotted area of the linkage. Connect the Linkage Assembly to the spindle of the Ball Valve (3). Place the Activation Handle (2) back onto the spindle and secure with the Nut (4). Wrench tighten.

Õ

4

3

2

in the off posit Activation Paddle (1) in the vertical position, secure Adjustment Nut (2) to the slotted area of the linkage. Wrench tighten.



on Handle e unit by rotating the P (1) away from you, and assure the Dust Cover opens properly. Rotate the Activation Handle (1) to the closed position (vertical) to close the Dust Cover. The Dust Cover should sit flush on the bowl. Repeat this process a few times assuring proper operation.



ng to installation instructions, turn on water and test.



OCV ROUGH-IN DIAGRAM

SPEAKMAN[®]

