

SPEAKMAN®

SE-572

Installation, Operation & Maintenance Instructions

EYESAVER® EYEWASH

DESCRIPTION

Deck mounted emergency eyewash. Supplied with stay-open full flow ball valve; activated by stainless steel paddle handle; twin spray outlets with individual flow restrictors, and flip-off dust covers. Unit swivels 90° for easy access to sink, and mounts on counter tops up to 1-1/4" thick.

SPECIFICATIONS

SPRAY HEADS: (2) Aerated Yellow Abs Plastic Spray Outlets and Dust Cover

VALVE: 1/2" NPT Female Brass, Chrome-Plated

ACTIVATOR: Stainless Steel Push Handle

INLET: 1/2" NPTM

SHIPPING WEIGHT: 4.16 LBS

EMERGENCY SIGN: 7-7/8" X 7-7/8" Plastic Wall Sign

OPTIONS:

ILS	In-line Strainer
LH	Left Hand

INSTALLATION

NOTE: This unit should be connected to an uninterrupted source of potable water, with a minimum flowing pressure of 30 PSI and a maximum static pressure of 125 PSI.

Review rough-in drawing to assure proper installation. At desired location, drill a 1" diameter hole through countertop (1-1/4" thick max.). Be sure the hole is drilled as straight as possible. Attach eyewash to countertop using supplied hardware, and connect a water supply to unit that is a 1/2" minimum uninterrupted source of potable water (use pipe sealant on connection). Failure to use potable water can result in emergency units producing impure or contaminated water causing possible further injury.

OPERATION

Activate the eyewash by moving the bullhorn arm into position over the sink and pushing the paddle handle forward 90 degrees. Once the unit is activated, water will discharge from the spray outlets until the paddle handle is manually pulled back to the "Off" position.

TESTING PROGRAM


The American National Standards Institute (ANSI) states that all safety emergency equipment shall be activated on a weekly basis to flush the line and verify proper operation. Speakman Company furnishes a testing record tag (91-0635) with each unit. On this tag the date of inspection and the inspector's initials should be noted.

MAINTENANCE

The valve and the eyewash are the only portions of the unit that may require maintenance. Should you need parts to repair this unit, please reference the parts listing below for correct part numbers. Before any maintenance is done be sure to shut the water supply off.

SPEAKMAN®

ROUGH-IN

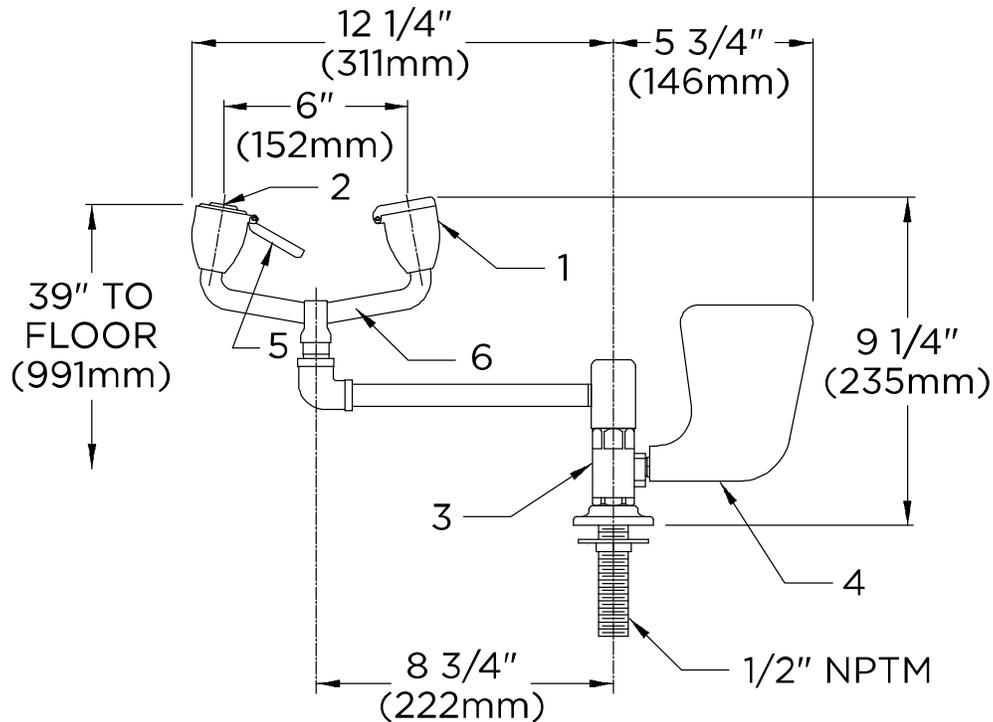

Note: All units meet existing ANSI Z358.1 Standards and OSHA Rules. Product improvements may cause specification and dimensional changes without notice.

FLOW DATA

EYEWASH:

FLOW PRESSURE	PSI (BAR)	30 (2.07)
FLOW RATE	GPM (LPM)	3.2 (12.1)

NOTE: This unit should be connected to an uninterrupted source of potable water, with a minimum flowing pressure of 30 PSI and a maximum static pressure of 125 PSI.

REPLACEMENT/REPAIR PARTS

ITEM	PART/GROUP #	DESCRIPTION
1	RPG38-0379	Aerated Spray Head Assembly (4 each)
2	RPG05-1177	Aerator Replacement Group (6 each)
3	RPG20-1996	1/2" Ball Valve Assembly
4	04-0841	Paddle Handle
5	RPG07-0104	Flip Top Dust Cap Replacement (20 each)
6	RPG05-0714	Bull Horn Assembly

WARNING: Use only genuine Speakman parts when repairing or replacing components. To order parts call 1-800-537-2107.

SPEAKMAN®