

- REPLACING LIGHT BULBS**
- WARNING - RISK OF ELECTRIC SHOCK!** Disconnect power at source prior to replacing light bulbs.
1. Replace light bulbs only during dry and calm weather conditions.
  2. Unscrew existing bulbs by lightly holding the socket in one hand and twisting the bulb counter-clockwise. Bulbs may be tight in the sockets. This is normal to prevent moisture from getting into sockets.
  3. Replace with medium base light bulbs. Screw bulb into socket clockwise until top of socket forms a tight seal around the light bulb and bulb makes solid contact with socket.
- Suitable for incandescent, CFL, or LED light bulbs.



**Do not alter the plug.**  
 The string light sets are supplied with an attached three prong plug that will only fit into a three prong outlet.

**CAUTION: RISK OF ELECTRIC SHOCK**  
 Do not use with extension cord near water or where water may accumulate.  
 Keep bulbs at least 4.8 m / 16 ft from pools and spas. Keep plugs and receptacles dry.

Do not allow connection(s) to become wet.  
 When connecting multiple sets protect connection(s) from direct exposure to rain and water.

Add the wattage of each string light set together for a total of 1200 Watts or less.

**CONNECTING MULTIPLE SETS: USING INCLUDED INCANDESCENT BULBS**

It is provided with 10 lampholders and 11 Watt, 5 Type bulbs.



**MODEL NUMBER: 72041**  
 The lighting string is rated at 120V, 60Hz, 110 Watts.

- CAUTION:**
1. To reduce the risk of fire use only type 5 bulbs, 11 Watt maximum
  2. To reduce the risk of fire do not deliberately reposition either lampholder contact.

1. Do not use these products outdoors unless marked suitable for outdoor use.
2. When products are used outdoors applications, connect the product to Ground Fault Interrupting (GFI) outlet. If one is not provided, contact a qualified electrician for proper installation.
3. Do not mount or place near gas or electric heaters, fireplace, candles, or other similar sources of heat.
4. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
5. Install only using the mounting means provided.
6. Do not let lamps rest on the supply cord or on any wires.
7. Do not hang objects from the cord, wire, or light string.
8. Do not use this product for other than its intended use.
9. Do not cover the product with cloth, paper or any material not part of the product when in use.
10. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.

**READ AND FOLLOW ALL SAFETY INSTRUCTIONS**


When using electrical products, basic precautions should always be followed including the following:

**IMPORTANT SAFETY INSTRUCTIONS**



**MODEL:  
 MODÈLE:  
 MODELO:  
 72041**


**30FT/9.1M/30PI  
 STRING LIGHTS  
 GUIRLANDE ÉLECTRIQUE  
 SERIE DE LUCES**

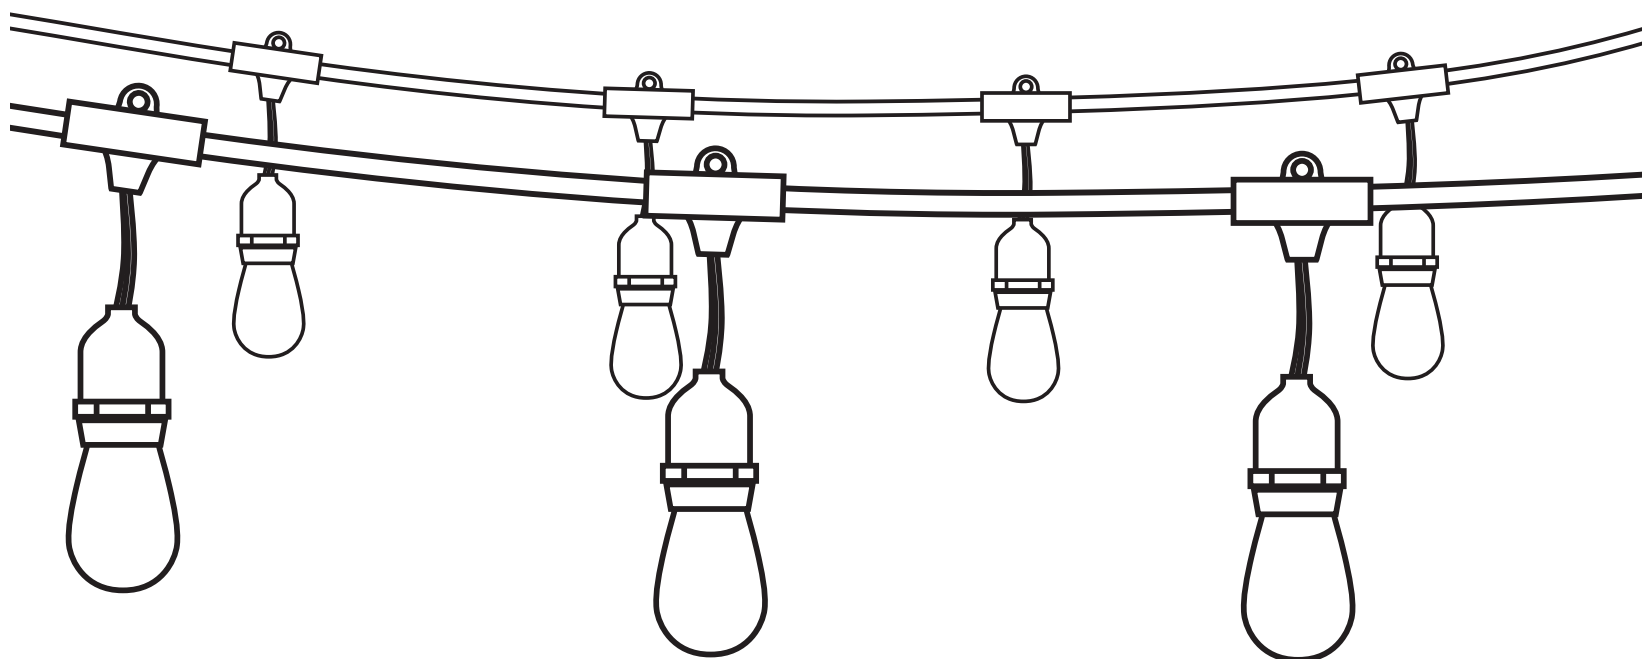

**INSTALLATION INSTRUCTIONS  
 INSTRUCTIONS D'INSTALLATION  
 INSTRUCCIONES DE INSTALACIÓN**





**CONNECTING STRING LIGHTS**

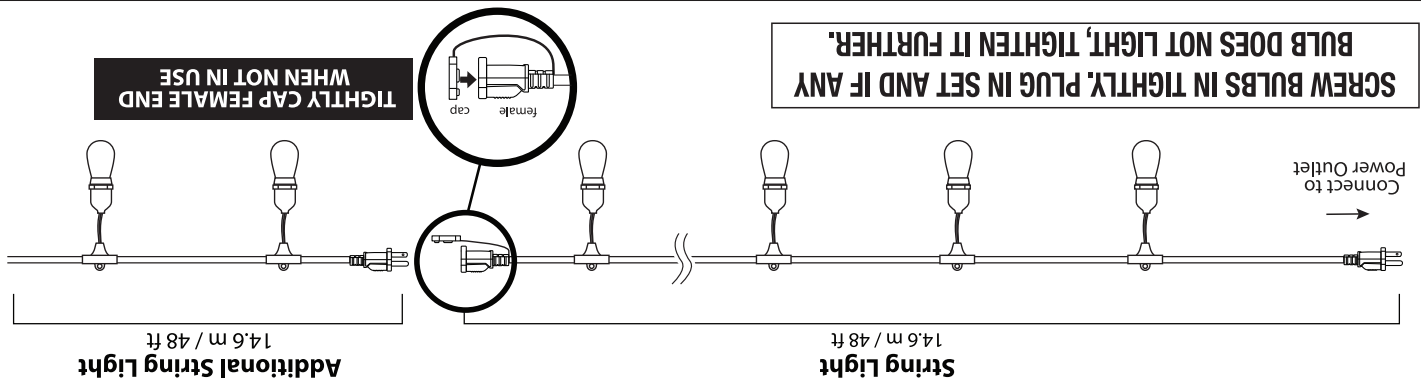 

**INSTALLATION METHODS**

  **SCREW BULBS IN TIGHTLY, TIGHTEN IT FURTHER.  
 BULB DOES NOT LIGHT, TIGHTEN IT FURTHER.**

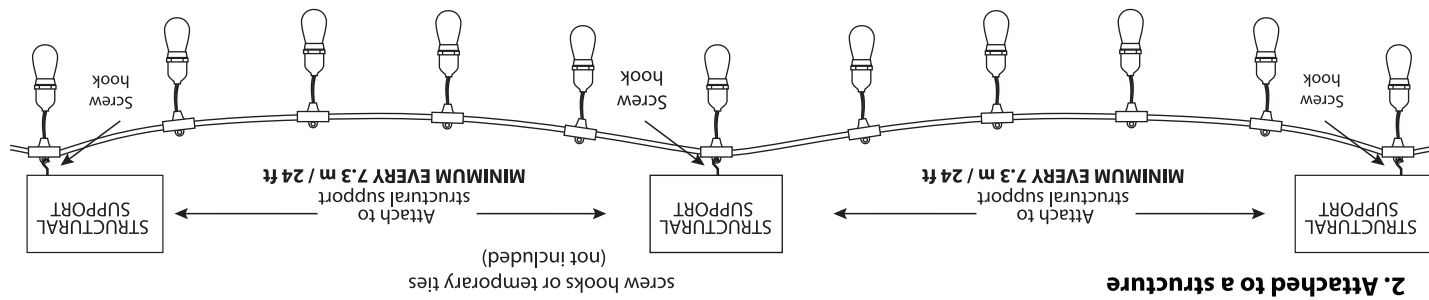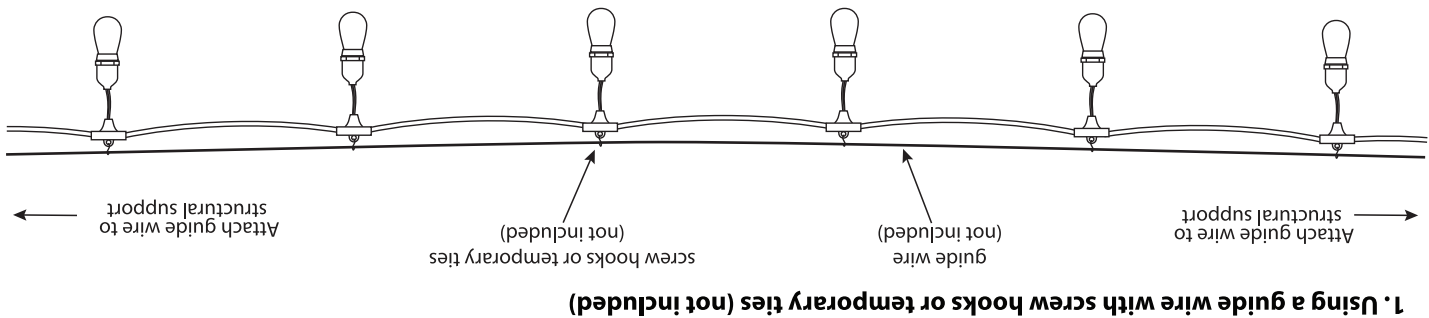

**CONNECTING MULTIPLE SETS**

**USING INCANDESCENT BULBS INCLUDED**

**CAUTION: DO NOT EXCEED 1200 WATTS WHEN USING INCANDESCENT BULBS**

MAXIMUM WATTAGE RANGE	NUMBER OF LIGHT STRINGS
7.5 WATTS	16 SETS
10 WATTS	12 SETS
11 WATTS	10 SETS
15 WATTS	8 SETS
20 WATTS	6 SETS
40 WATTS	3 SETS
60 WATTS	2 SETS

The performance specifications (life hours) printed on this manual should only be considered an approximation of expected performance.

