

# 88 5537 43

 
## Dresser

### IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home  
Styles

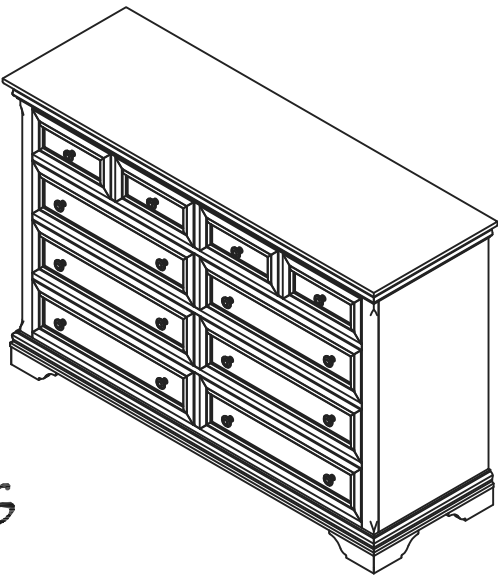

## Part List

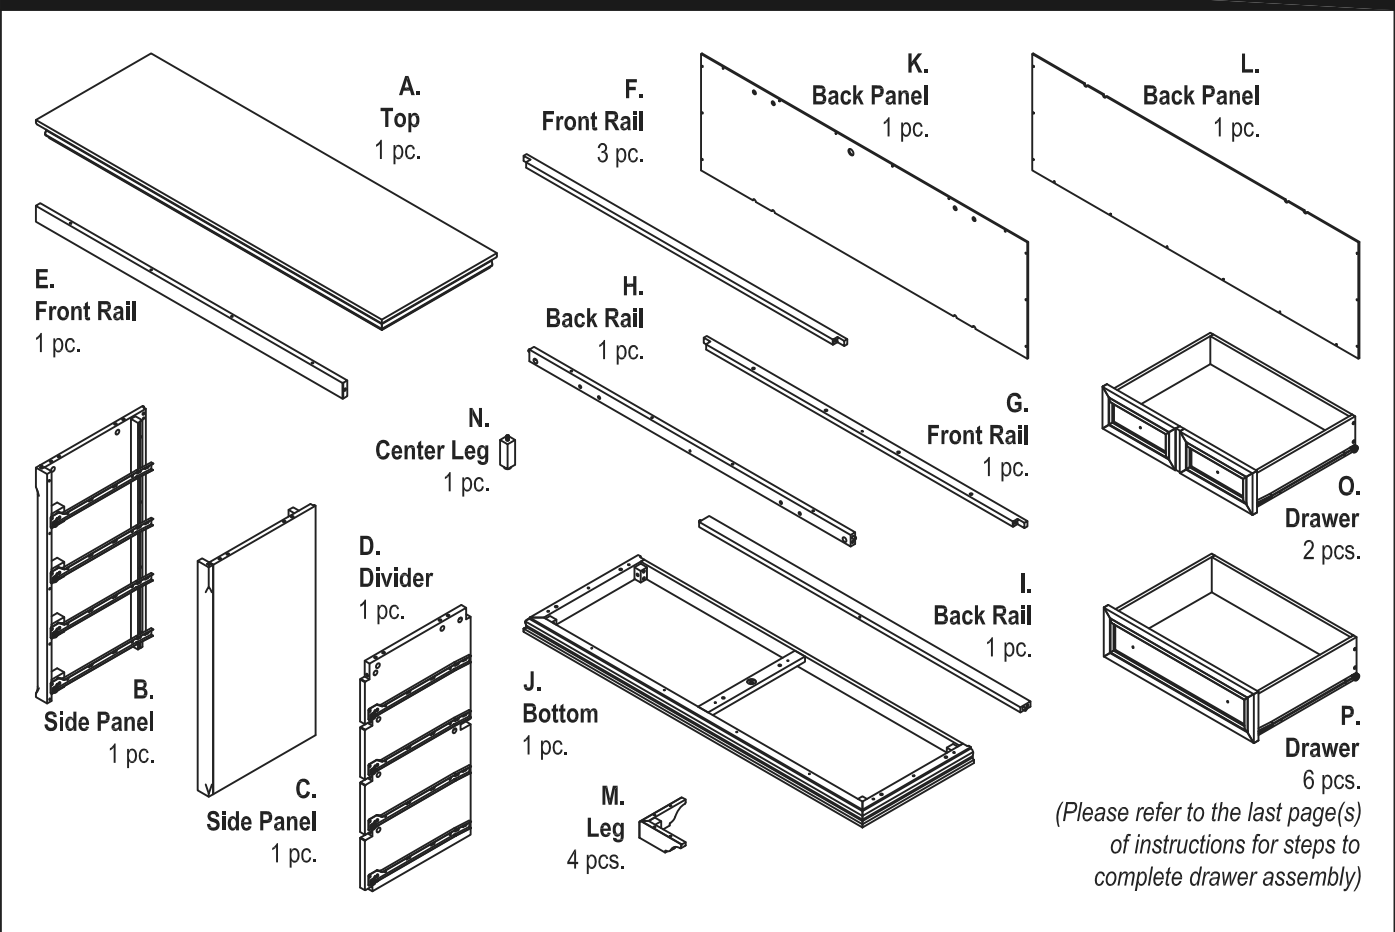 

## Hardware List

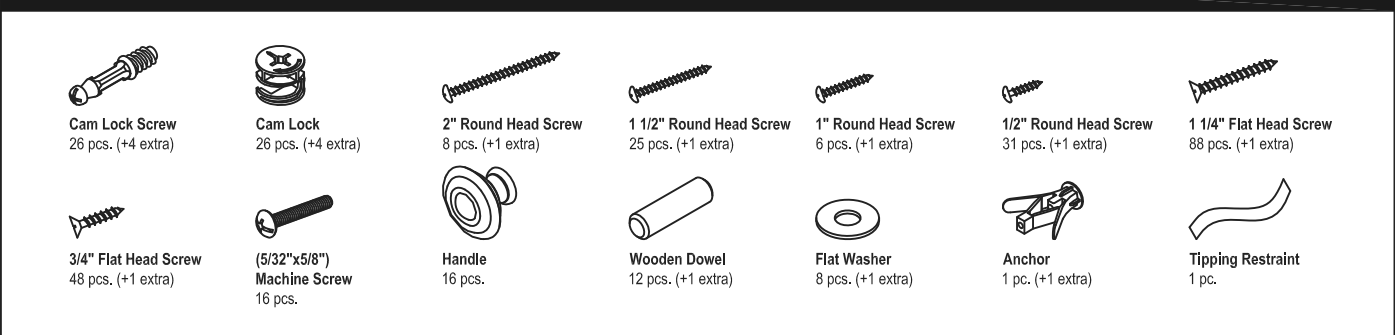 

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319


# Assembly Instructions 2/10

 **IMPORTANT**

- \* Do not tighten up all the screws until each part is properly assembled.
- \* Use a soft cloth between these parts and the floor.
- \* After assembly, item must be level to work properly. Use the included adjustable levelers to level.

**STEP 1**

Insert Cam Lock Screws into the pre-drilled holes of Top (A), Side Panels (B) and (C) and Front and Back Rails (E), (F), (H) and (I).

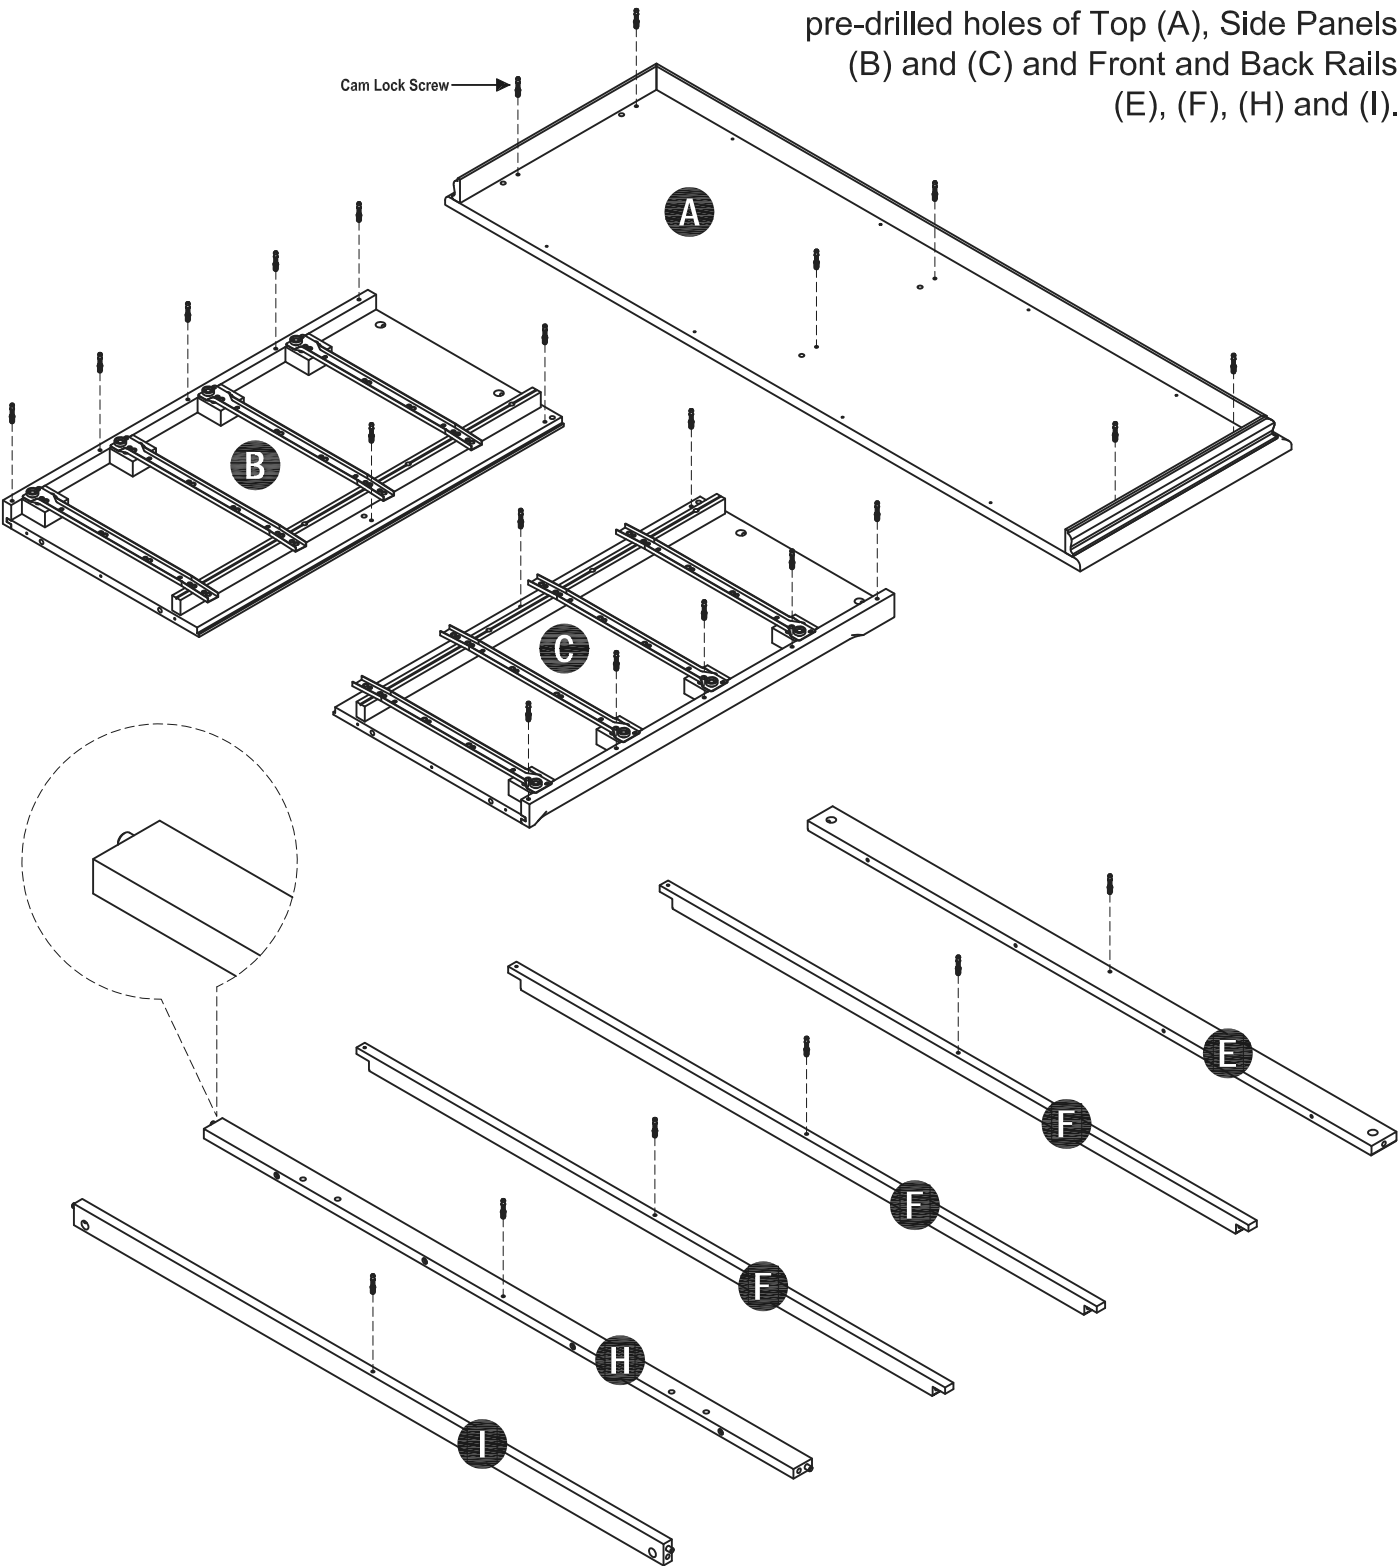

**STEP 2**

Attach Divider (D) to Front Rails (E) and (F) with Cam Locks. (See Figure 1)

Attach Front Rail (G) to Divider (D) using 1" Round Head Screws.


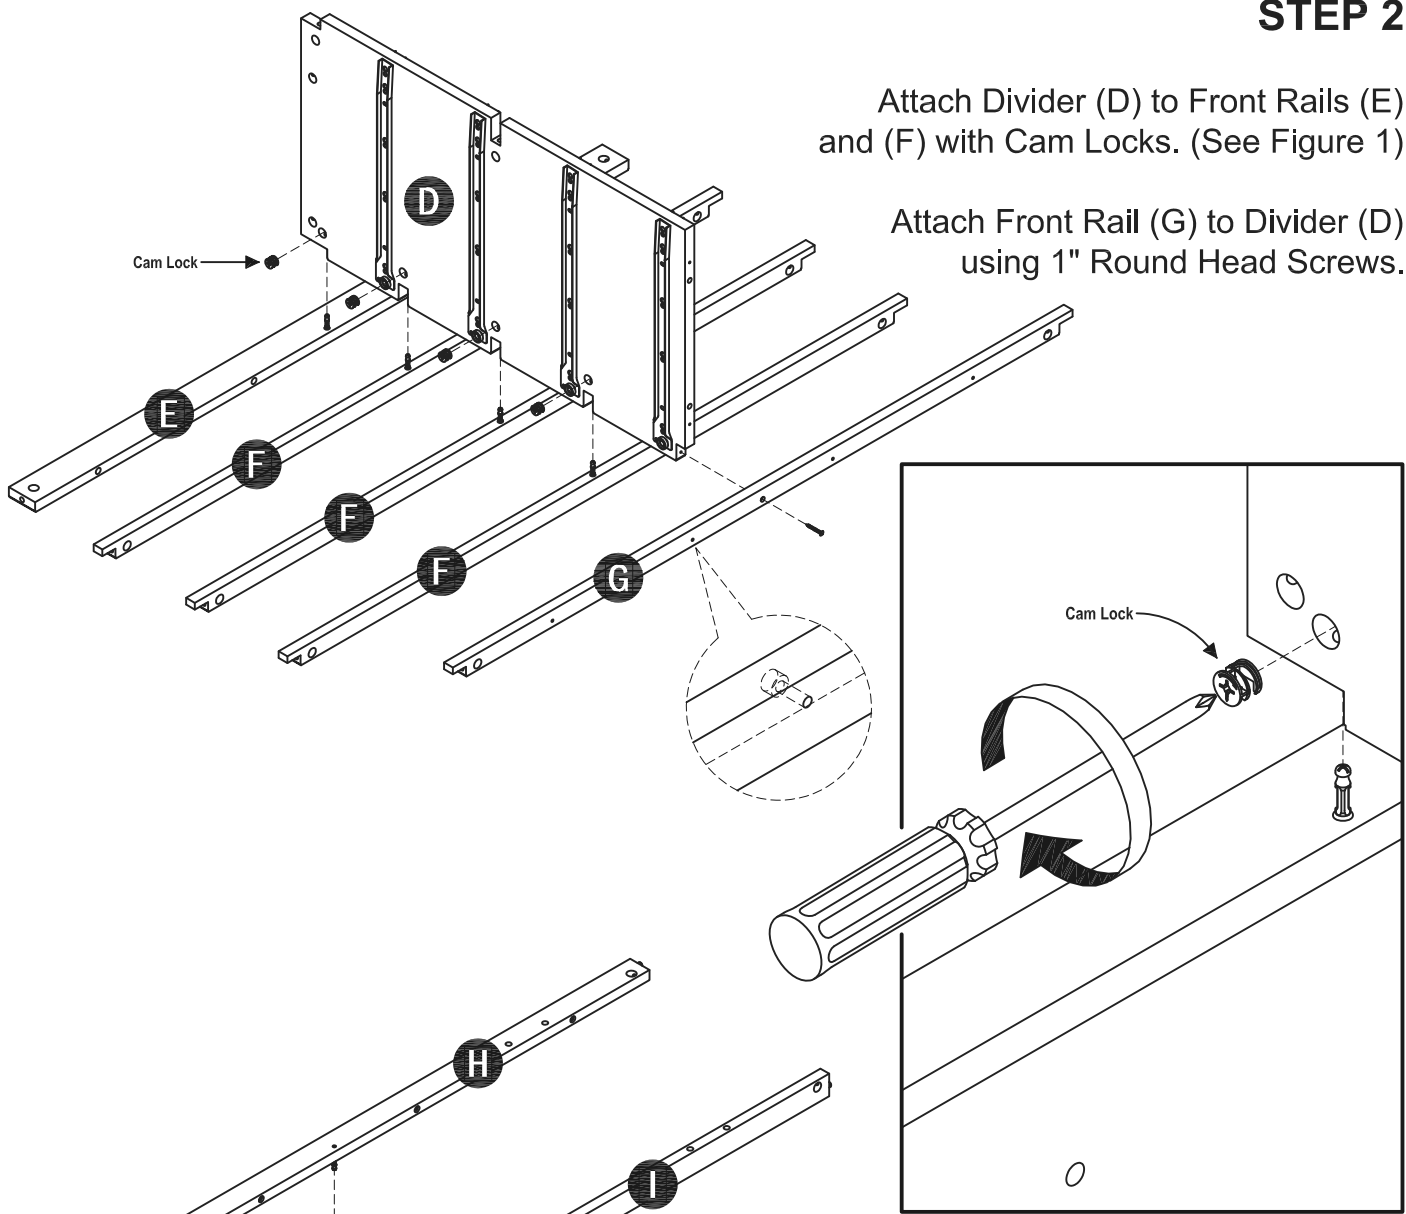 


Figure 1


**STEP 3**

 Attach Back Rails (H) and (I) to unit using Cam Locks.

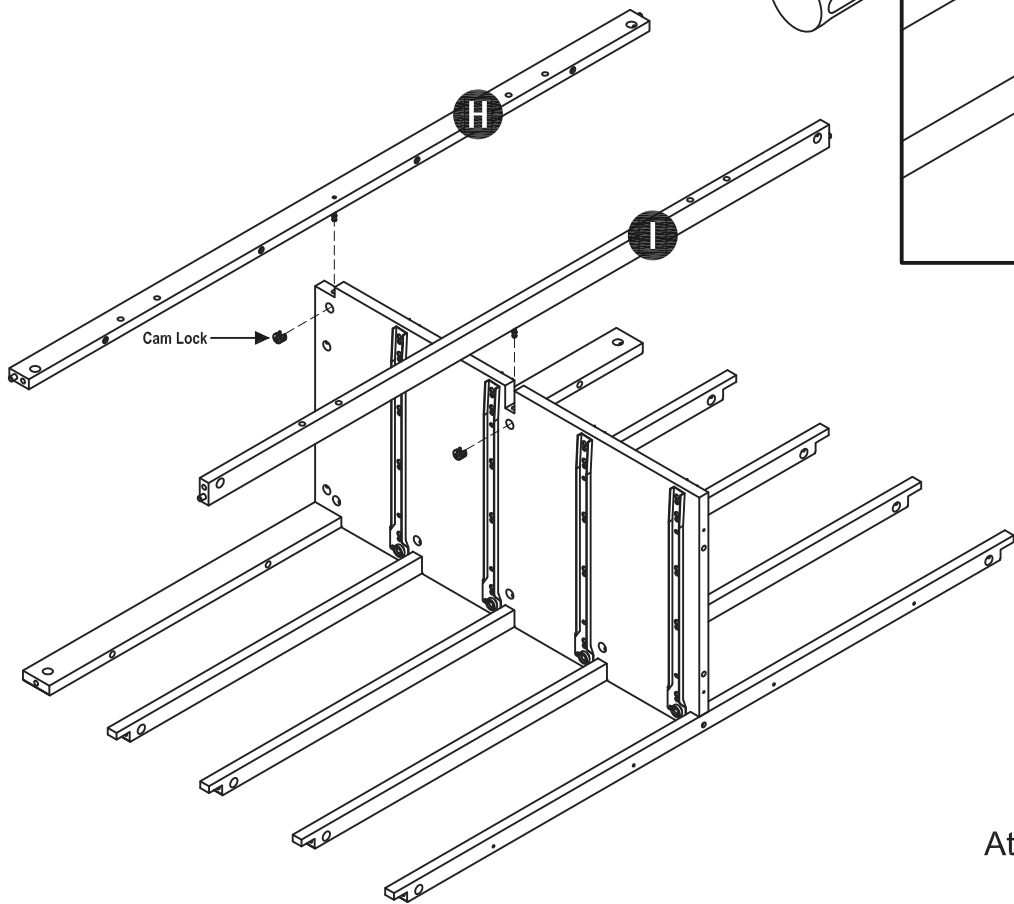

STEP 4

 
Attach Side Panels (B) and (C) to unit using Cam Locks.

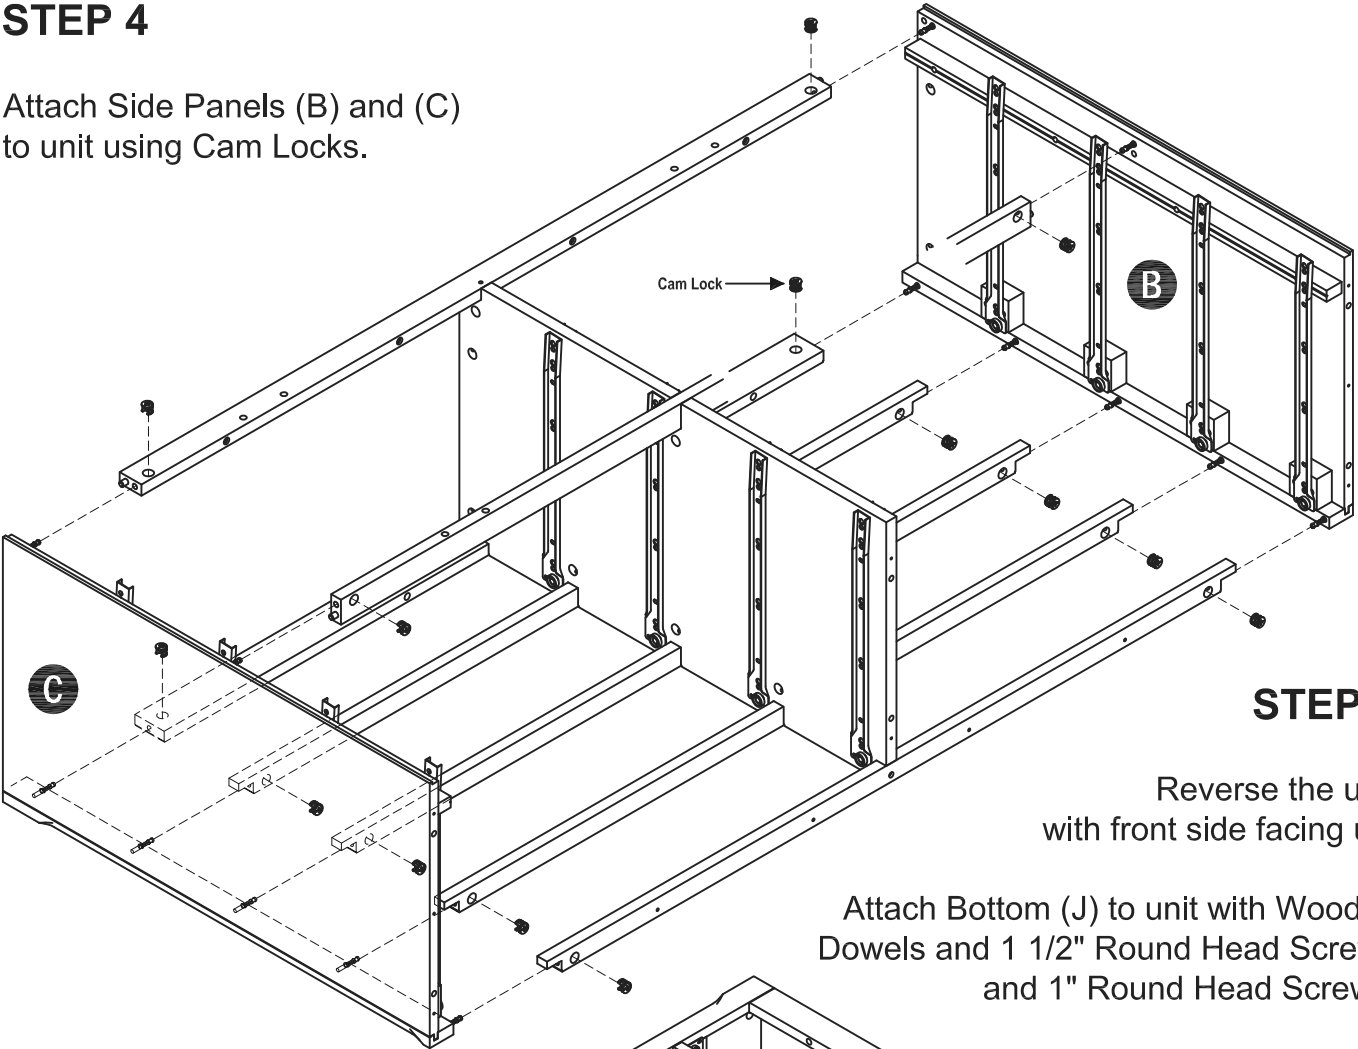

STEP 5

Reverse the unit with front side facing up.


 
Attach Bottom (J) to unit with Wooden Dowels and 1 1/2" Round Head Screws and 1" Round Head Screws.

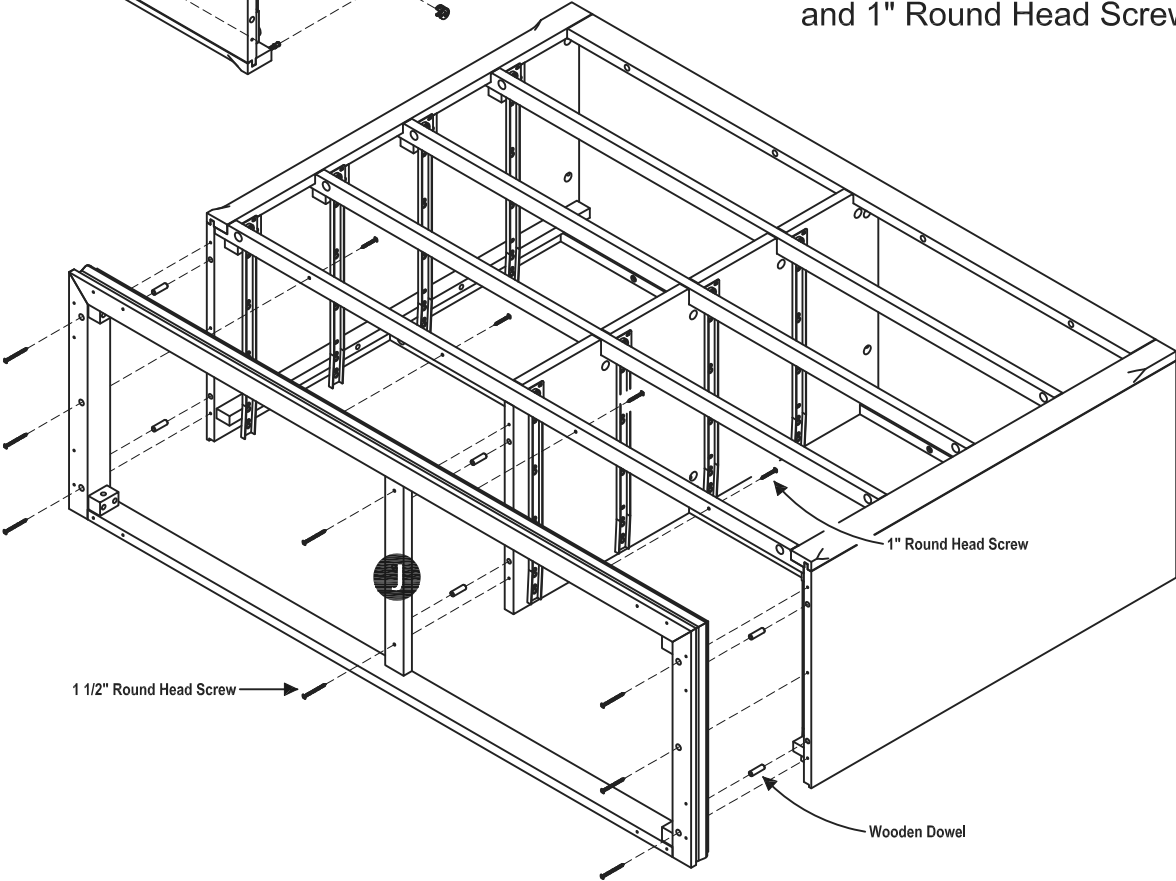

**STEP 6**

Attach Legs (M) to unit with  
1 1/2" Round Head Screws.

  Attach Center  
Leg (N) to unit.

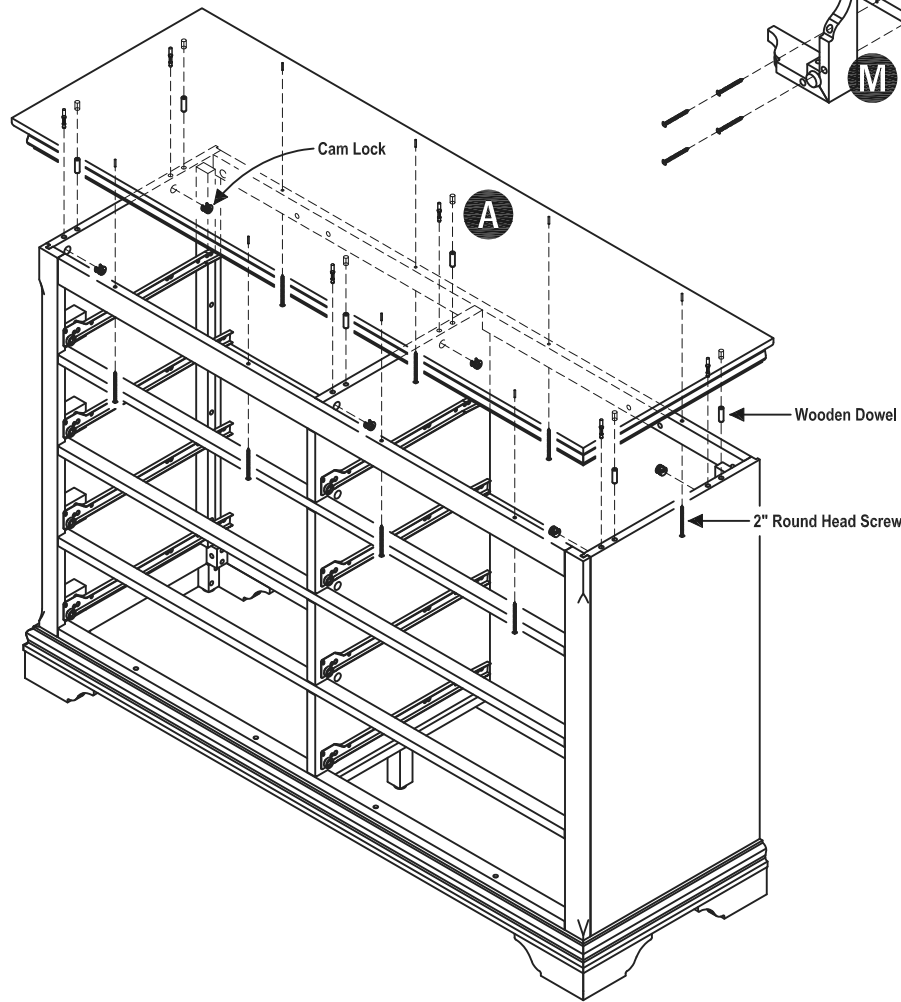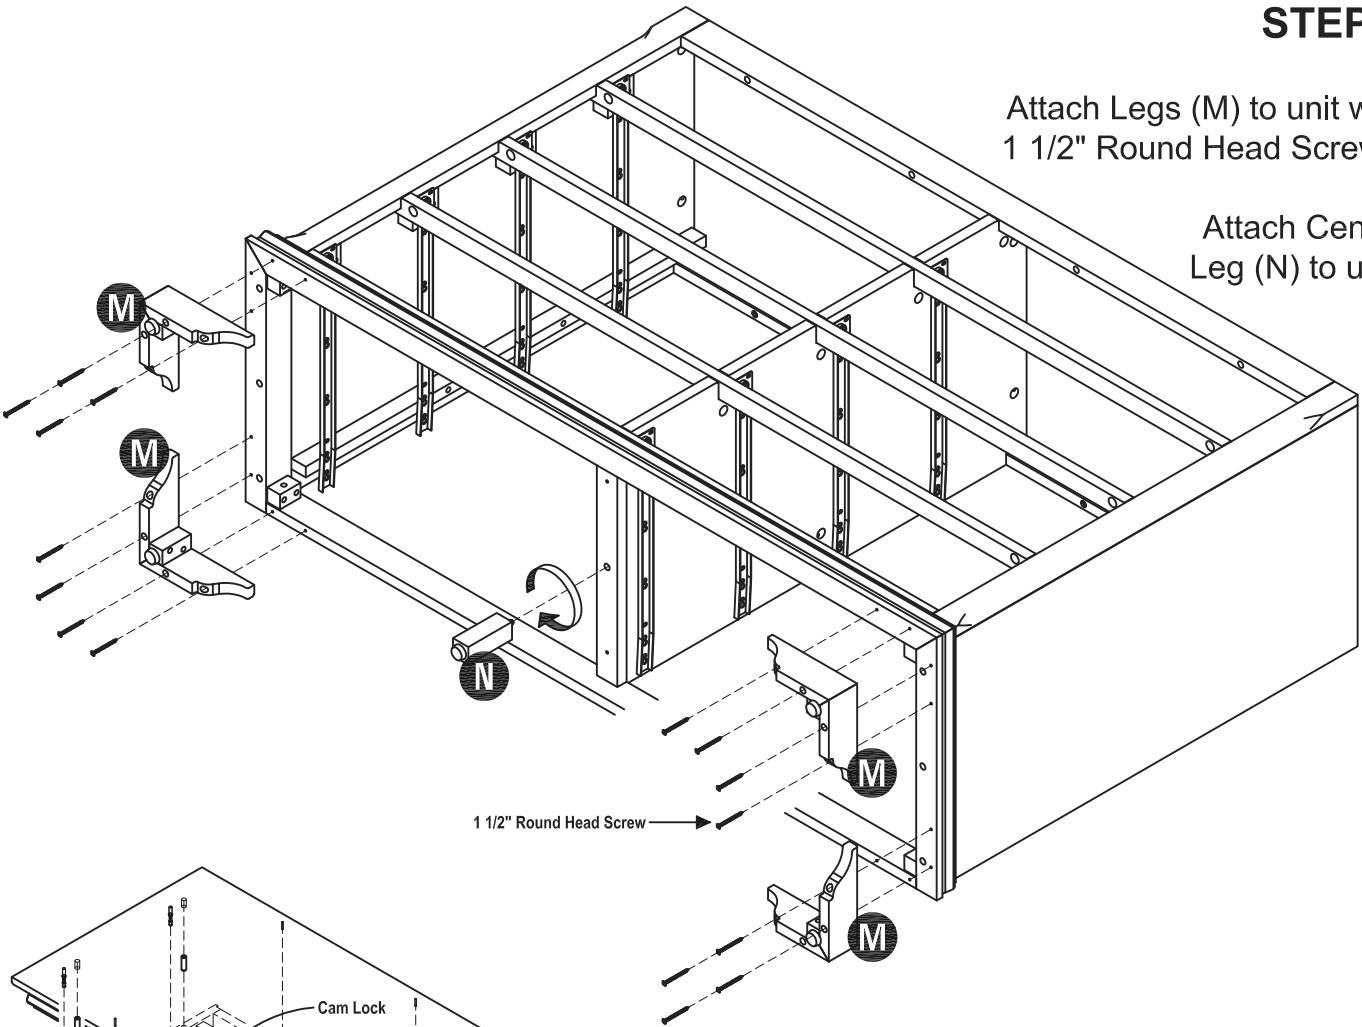

**STEP 7**

 
 
Attach Top (A) to unit with  
Wooden Dowels, Cam Locks and  
2" Round Head Screws.

**Note: A Philips screwdriver 5" or  
less in length is recommended.**

STEP 8

To level the unit, adjust the adjustable levelers on the bottom of the legs. (See Figure 3)


**Note: Unit must be level to work properly.**

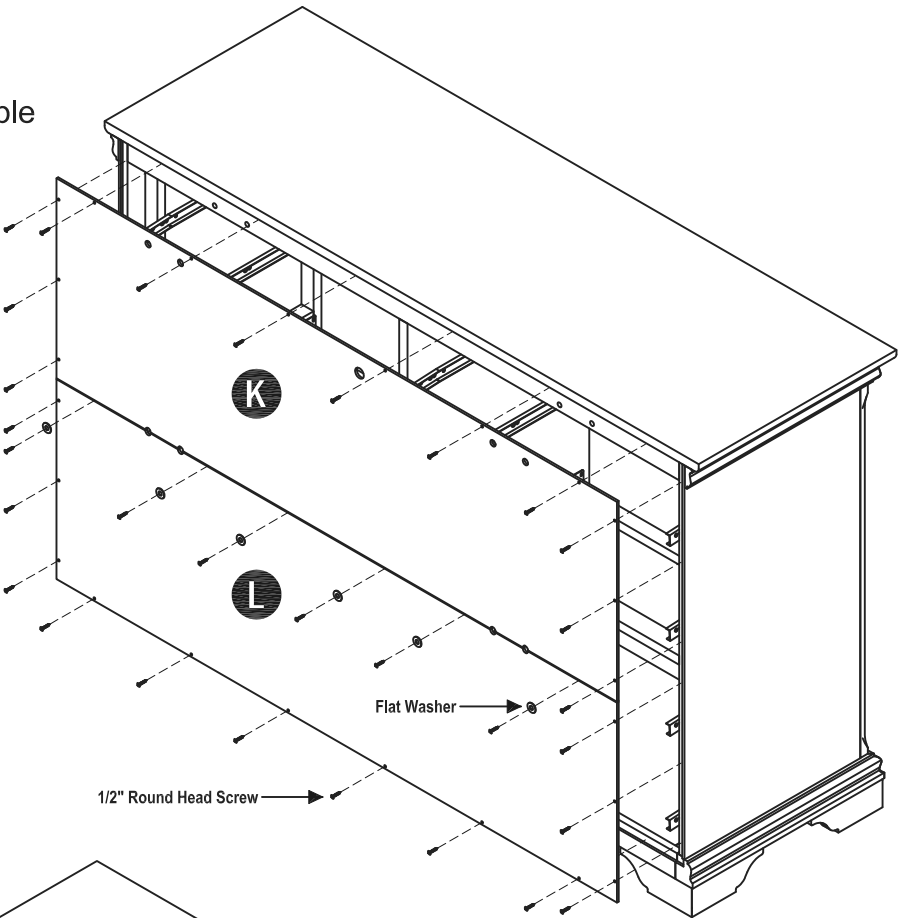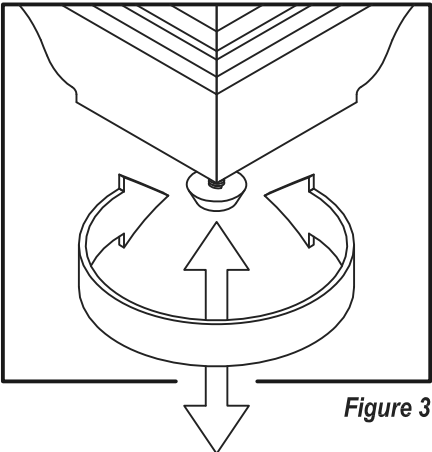

STEP 9

Attach Back Panels (K) and (L) to unit with Flat Washers and 1/2" Round Head Screws.

**Note: Please make sure unit is level before tightening these screws.**

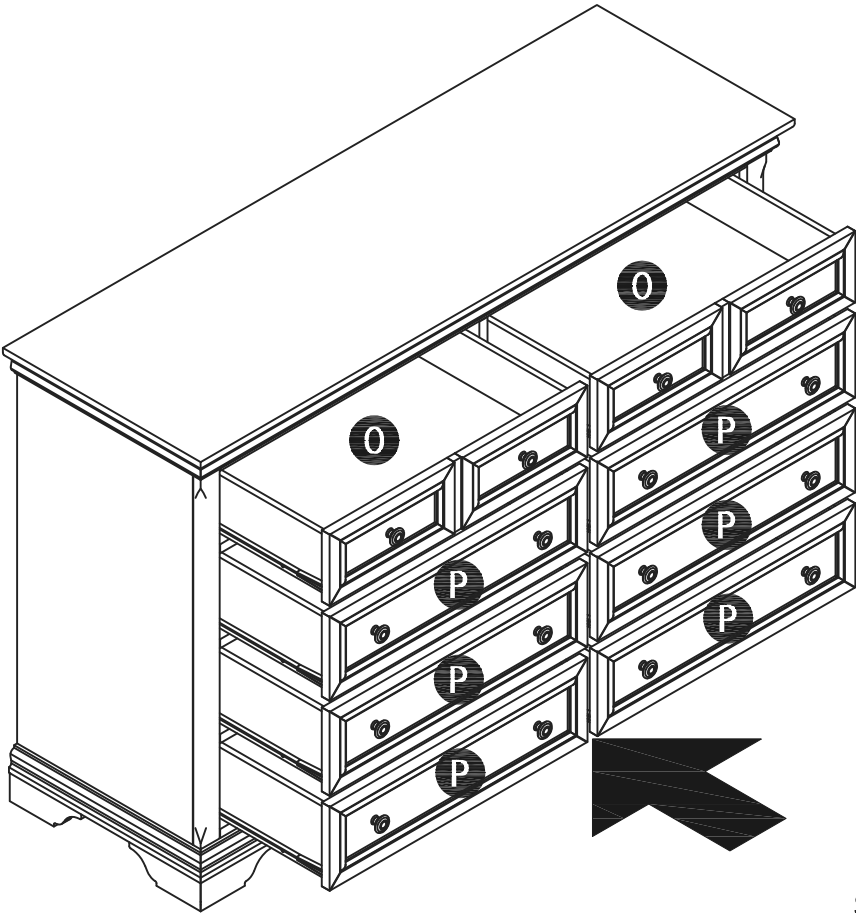 



STEP 10

Slide Drawers (O) and (P) into place.

Note: Follow the steps on the next page to use 3/4" Flat Head Screws to complete drawer assembly.

STEP 11

  Loosen slightly the two screws pre-installed on the back of the drawer fronts.

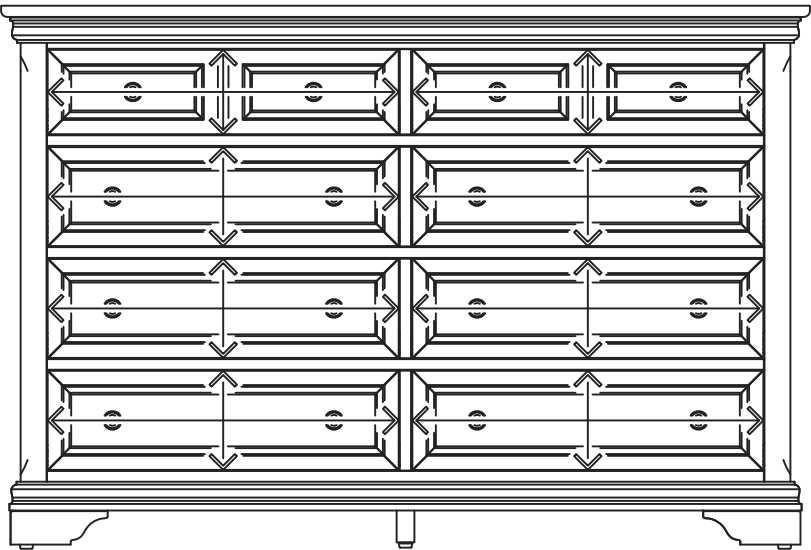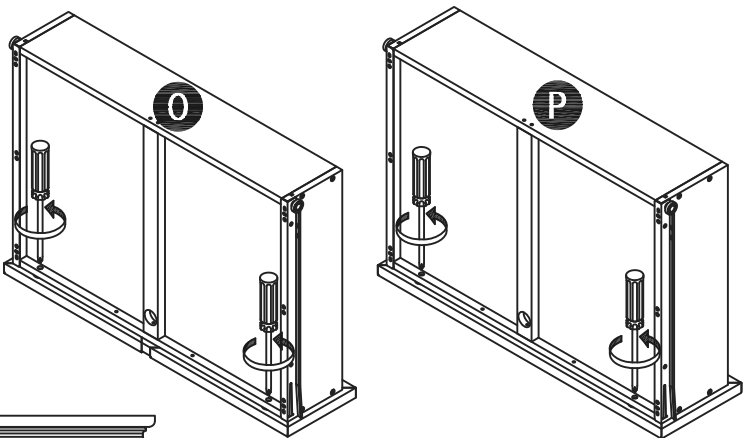


STEP 12

Insert the drawer into the unit, then adjust the drawer front panel left or right and up or down until the drawer gaps look proportional.

STEP 13

 
Pull the drawer open slowly and re-tighten the screws from Step 11. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

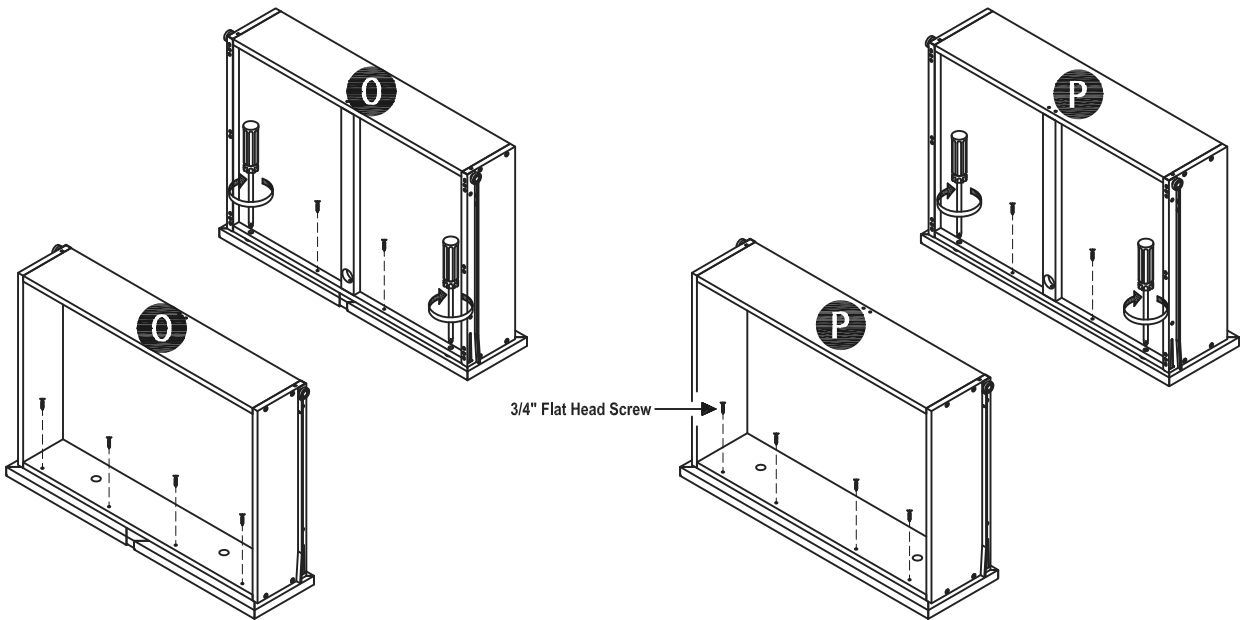


**Note:** These 3/4" Flat Head Screws on this page must be installed to complete the drawer assembly.

ATTENTION!

 
For safety reasons, please follow these instructions to prevent the unit from tipping over.

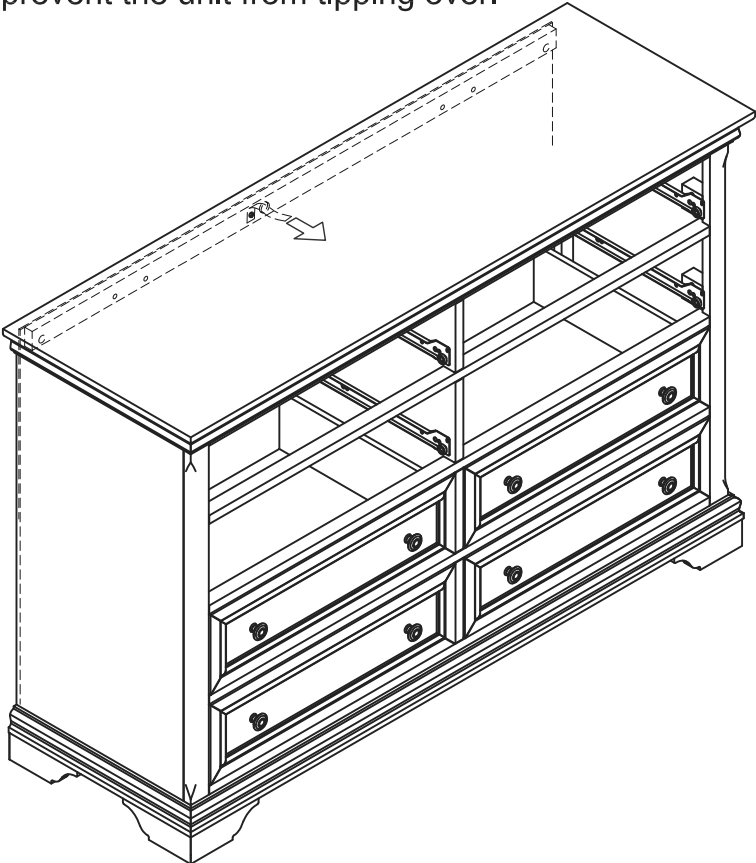


Remove Drawers (O) and (P) from unit.

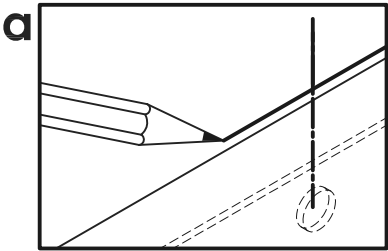 

 
Place the unit on the wall at desired location. Mark with pencil to show the height and center of hole at Back Panel (K).

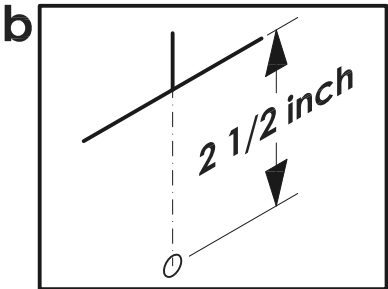

 
Move unit. Drill a 1/2" hole in the wall, 2 1/2 inches down and directly below the mark.

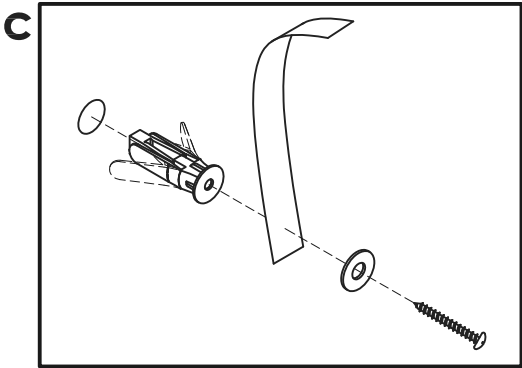

 
Attach Tipping Restraint to the wall using 1 1/2" Round Head Screw, Flat Washer & Anchor.

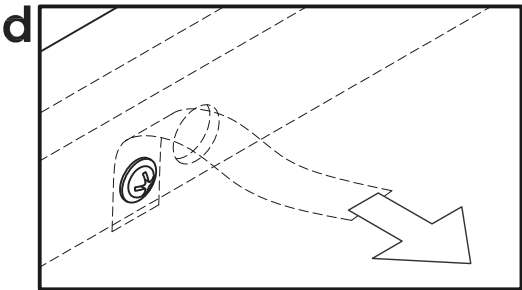

 Insert Tipping Restraint to unit through the hole of Back Panel (K).

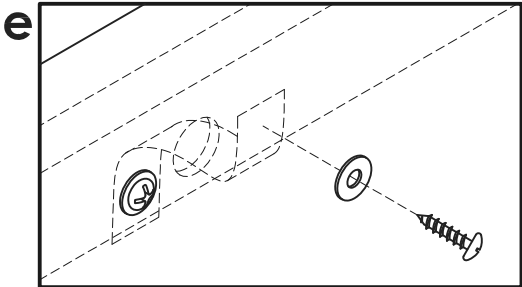

 
Screw Tipping Restraint to unit using 1/2" Round Head Screw & Flat Washer.

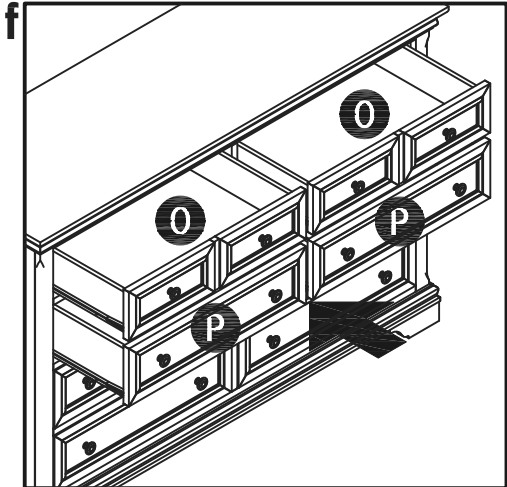

Insert Drawers (O) and (P) into unit.



# Drawer (O)

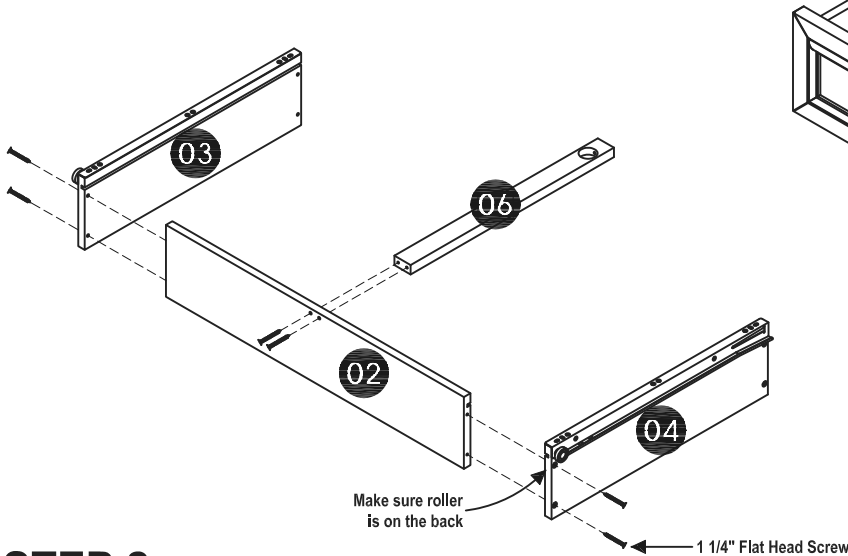 


**STEP 1**

Attach Side Parts (O3) and (O4) and Base Part (O6) to Back Part (O2) with 1 1/4" Flat Head Screws.

**STEP 2**

Insert Base Part (O5) into the groove.

 Attach Front Part (O1) to unit with 1 1/4" Flat Head Screws.

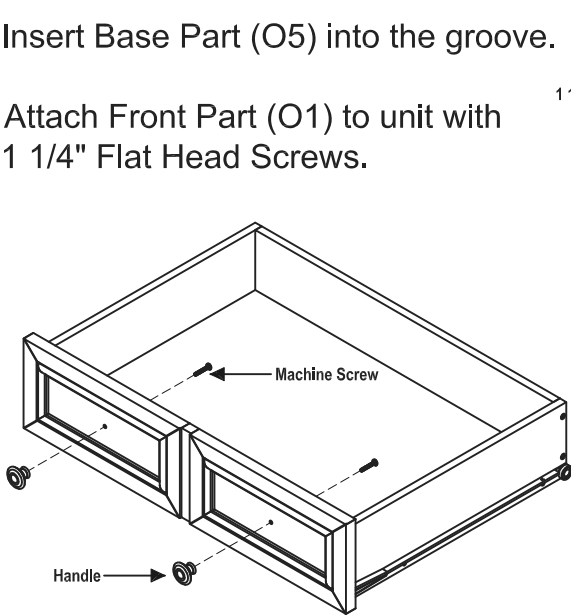


**STEP 3**


Attach Handles with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

 
Part List

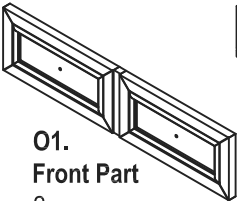


**01.**  
Front Part  
2 pcs.

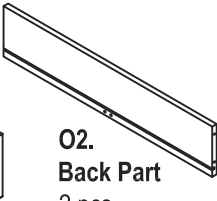 


**02.**  
Back Part  
2 pcs.

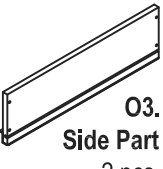 


**03.**  
Side Part  
2 pcs.

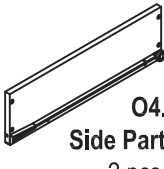 

**04.**  
Side Part  
2 pcs.

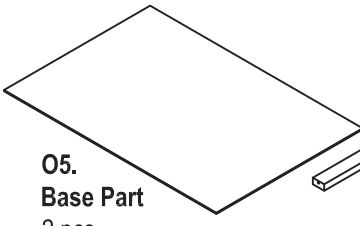 


**05.**  
Base Part  
2 pcs.

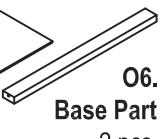 

**06.**  
Base Part  
2 pcs.

# Drawer (P)

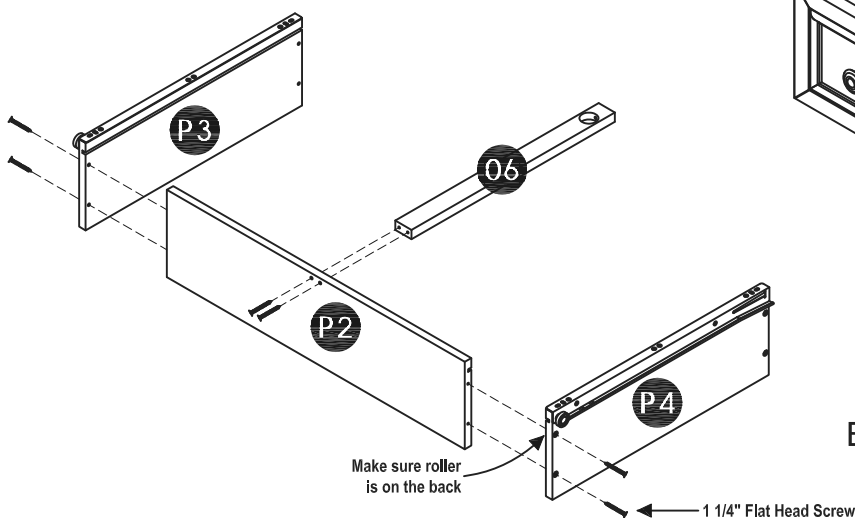 



## STEP 1

Attach Side Parts (P3) and (P4) and Base Part (O6) to Back Part (P2) with 1 1/4" Flat Head Screws.

## STEP 2

Insert Base Part (P5) into the groove.

  Attach Front Part (P1) to unit with 1 1/4" Flat Head Screws.

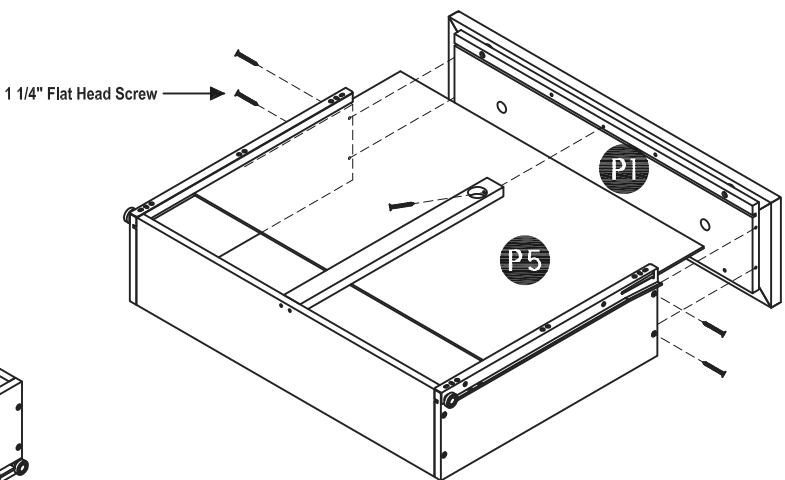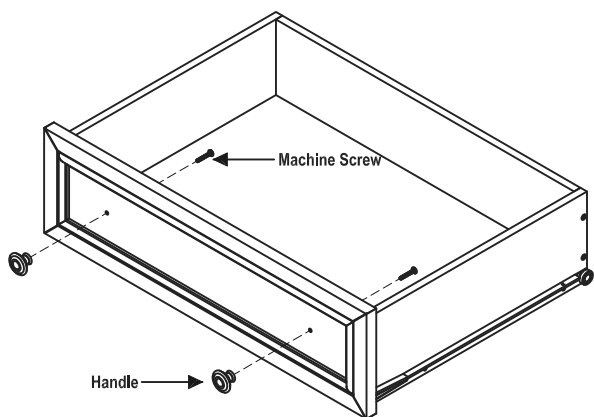


## STEP 3


Attach Handles with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

 
## Part List

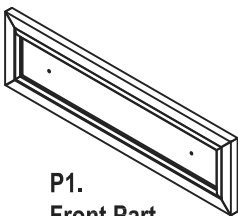


P1.  
Front Part  
6 pcs.

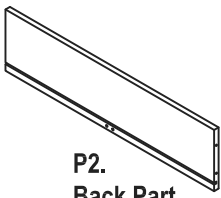 

P2.  
Back Part  
6 pcs.

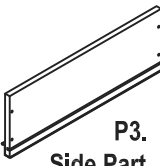 

P3.  
Side Part  
6 pcs.

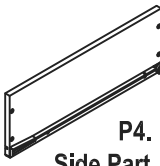 

P4.  
Side Part  
6 pcs.



P5.  
Base Part  
6 pcs.



O6.  
Base Part  
6 pcs.

# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

### NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE.



**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT.



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES.



**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE.



**PREVENT  
FINISH DAMAGE**

DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS.



**PREVENT  
DISCOLORING**

### TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer\\_service](http://www.homestyles-furniture.com/customer_service)

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319