# INSTRUCTION MANUAL



31.5" Outdoor Round Dining Table

# ! CARE & MAINTENANCE


- Be careful when assembly, avoid hurting the product.
- Clean the dust with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.



#### **HARDWARE**




## **PARTS**

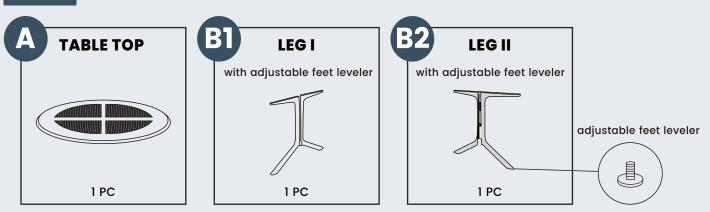

### **PRODUCT ASSEMBLY - OVERALL VIEW**

Look at the overall view of this table and learn the exact position of each part to be assembled.

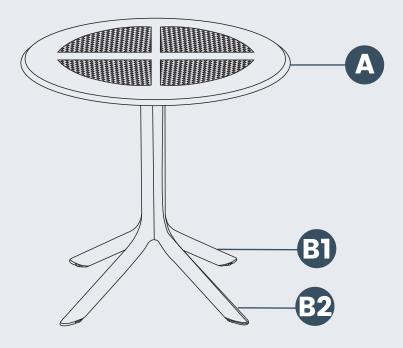

# **PRODUCT ASSEMBLY**


Slide Part B2 Leg II on Part B1 Leg I as shown below. Make sure the top of Part B1 & B2 are aligned and gently tap with a rubber mallet if necessary.



### **PRODUCT ASSEMBLY**

2


Turn over the legs. Attach 2pcs of **Hardware #1 Self-tapping Screws** on the bottom of **Part B1 Leg I** by using an screwdriver. 100% tighten at this step.

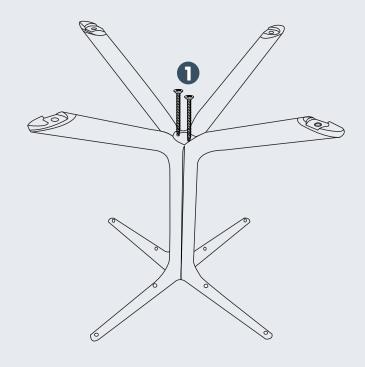

### **PRODUCT ASSEMBLY**

3

Put Part A Table Top upside down on a clean aground. Attach Combined Part (B1+B2) on the bottom of Part A Table Top with 8 sets of Hardware (#2 Bolt + #3 Lock Washer + #4 Flat Washer) by using an allen wrench. 100% tighten at this step.

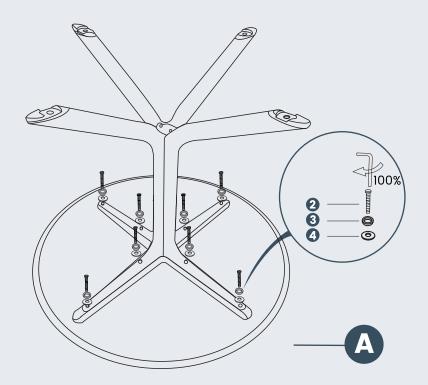


# PRODUCT ASSEMBLY



Adjust the feet levelers on the bottom of the legs for perfect balance.

Enjoy the table now.

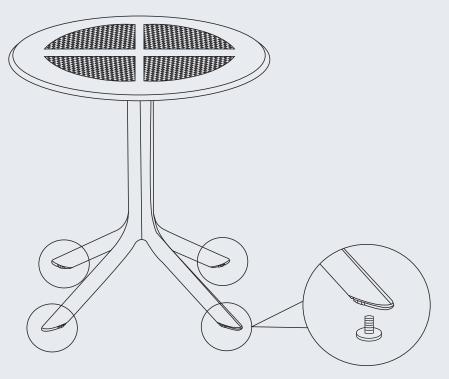

adjustable feet leveler

# **CLEANING TIPS**

**REGULAR CLEAN:** Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the furniture with a damp cloth.

Regular cleaning not only preserves the aesthetic appeal of your furniture, but also helps extend its lifespan.