## 88 5022 941 Kitchen Island


### **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



### Part List

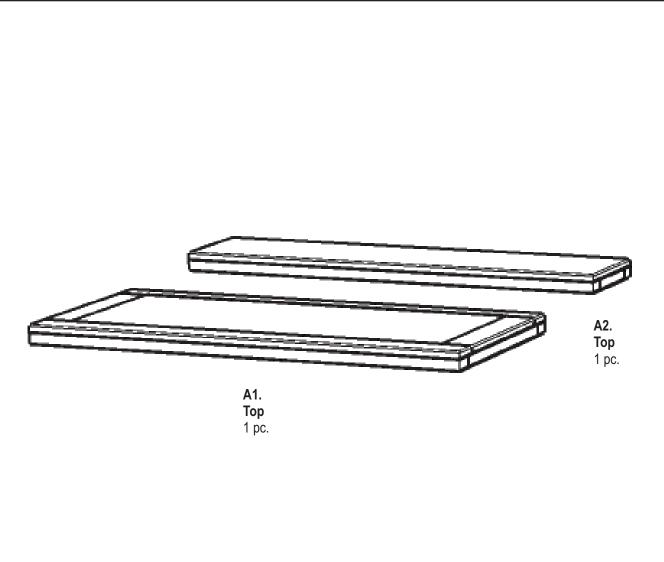

For assembly see instructions in carton 88 5022 942

Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

# HOW TO UNPACK THE GRANITE TOP

#### **IMPORTANT**

\* Please follow these step to unpack the granite top.

**STEP 1** 

Wood Crate –

Open carton.

Remove wood crate and place it on the floor.

