
Item # : BS68LOGBC Assembly Instructions

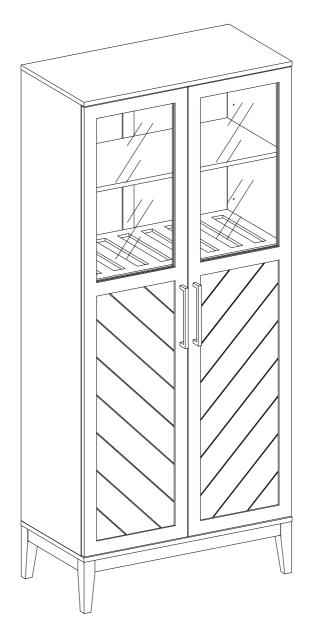

 


Please visit our website for the most current instructions, assembly tips, report damage, or request parts. <u>www.walkeredison.com</u>

Revised 28/11/2019 (L)

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.



 
VI. A Phillips head screwdriver is required for the assembly of this product.



 
VII. Power tools should not be used to assemble this product.




- VIII. Drill may be needed for securing product to wall.
- IX. Concealed hinges are three-way adjustable.

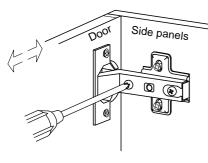


Horizontal by screw adjustment

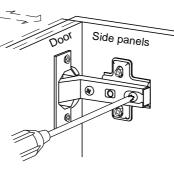

In-and-Out by loosening the hinge-arm mounting screw or via cam adjustment

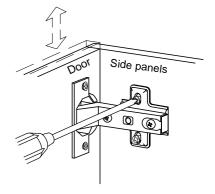

Vertical Via slots in the mounting plate or via cam adjustment

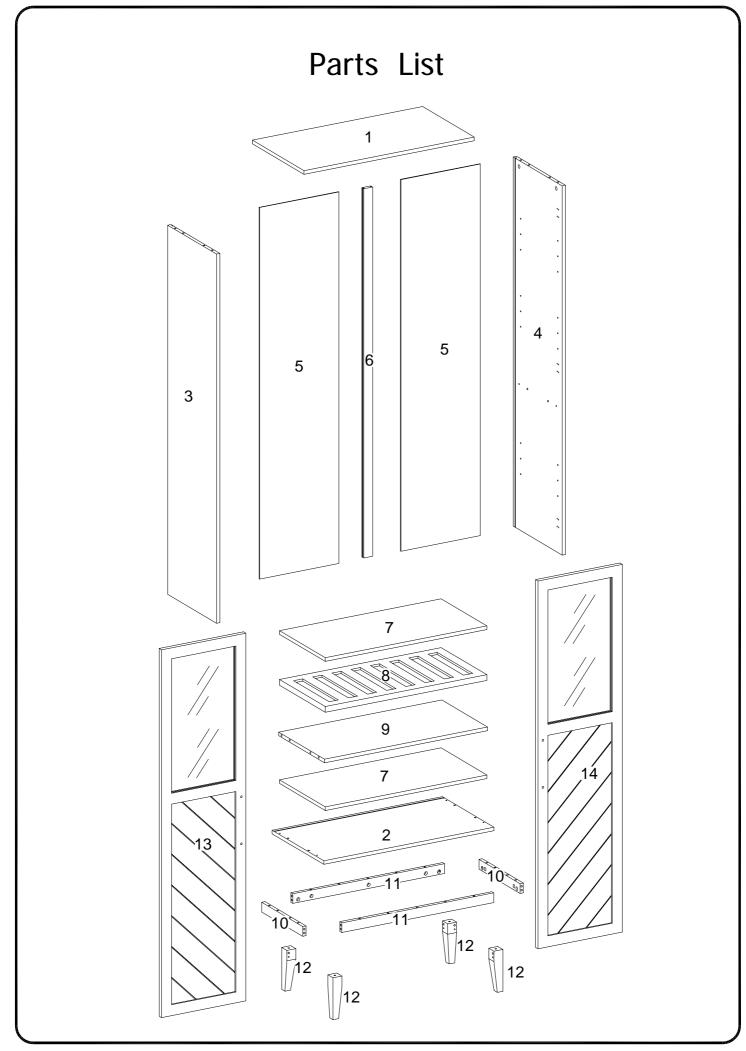

Copyright © 2019, by Walker Edison Furniture Co., LLC. All rights reserved.


Hardware List

А		Ø8x30mm	Wooden dowel	32	pcs
В		Ø6x35mm	Cam bolt	26	pcs
С		Ø15x11mm	Cam lock	26	pcs
D	0	Ø30mm	Sticker	26	pcs
Е		Ø6x50mm	Screw	4	pcs
F			Plastic wedge	16	pcs
G	 	Ø3x17mm	Screw	16	pcs
Н			Handle	2	pcs
J	aaaaa (C)	Ø4x25mm	Bolt	4	pcs
К			Europe Hinge	6	pcs
L		Ø3.5x14mm	Screw	36	pcs
L M		Ø3.5x14mm	Screw Door stopper	36 1	pcs pc
_		Ø3.5x14mm Ø3x14mm			-
Μ			Door stopper	1	рс
M N			Door stopper Screw(Black)	1 2	pc pcs
M N P		Ø3x14mm	Door stopper Screw(Black) L shape shelf support pin	1 2 12	pc pcs pcs
M N P Q		Ø3x14mm	Door stopper Screw(Black) L shape shelf support pin Hex Key	1 2 12 1	pc pcs pcs pc
M N P Q R		Ø3x14mm 4mm	Door stopper Screw(Black) L shape shelf support pin Hex Key Velcro strap	1 2 12 1 2	pc pcs pcs pc pcs
M N P Q R S		Ø3x14mm 4mm	Door stopper Screw(Black) L shape shelf support pin Hex Key Velcro strap Screw	1 2 12 1 2 2	pc pcs pcs pc pcs pcs



Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

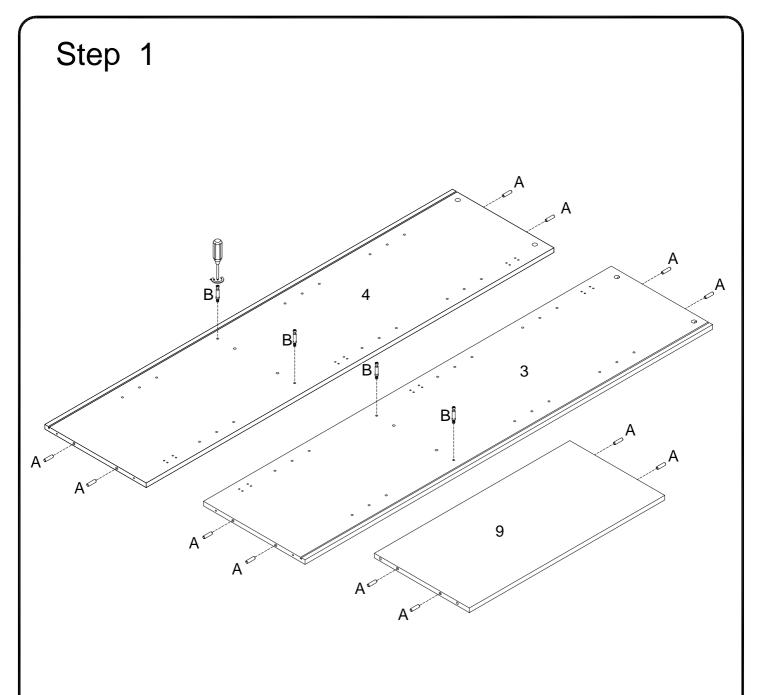

Insert wooden dowel (A) into parts (3,4,9), then secure cam bolt (B) into parts (3,4) with Philips head screwdriver as per diagram.

