

SPEAKMAN®

S-3661-CA-E

Installation, Maintenance & Operation Instructions

SINGLE LEVER DECK MOUNTED SINK FITTING

DESCRIPTION

Speakman polished chrome plated, NSF compliant, vandal resistant, single lever faucet. Long-life ceramic cartridge. Brass body constructions, metal handle with color-coded index. 8" spread brass gooseneck, swivel or rigid. Water conserving vandal-resistant flow control reduces flow to 0.5 gpm (1.89 L/min) maximum to meet existing ANSI A112.18.1 Standard. 3/8 compression threaded inlets for standard hose connections.

SPECIFICATIONS

SUPPLY: 3/8 COMPRESSION (9/16-24 THREAD)

FLOW RATE: 0.5 gpm (1.89 L/min) MAX

SHIPPING WEIGHT: 4.6 lbs.

STATIC PRESSURE: 20-80 PSI

INSTALLATION

- 1) Shut off hot and cold water supplies. Remove old fixture to be replaced and clean mounting surface.
- 2) Place the rubber o-ring mounting seal on the bottom groove of the valve body. Slip the valve body through the counter.
- 3) From underneath the counter, slip the cup washer onto mounting rod and secure with the mounting nut. Use the spacer for thin sink applications.

Note: The outlet/supply tubes can be bent slightly to allow access to tighten the mounting nut.

Warning: Do not kink the tubes. Kinked tubes will void warranty.

- 4) Set spout base on the counter and position. From underneath the counter, slip the cup washer onto the spout base inlet and secure with the mounting nut.
- 5) Connect water supply lines to inlets of the valve body. Also connect the valve body outlet to the inlet of the gooseneck with the hose provided. Use 2 wrenches when tightening all body connections.
Warning: When tightening the connections hold the valve body connection while turning the swivel hose/riser connections.
- 6) From above sink, install the spout. **For All Swiveling Spout:** Install spout assembly into the body outlet and wrench tighten spout collar nut. **Do not** use the spout locking washer. **For Rigid Spout:** Place the spout locking washer into the body outlet, install the spout assembly, position, and wrench tighten the spout collar nut.
- 7) Turn water supplies on and flush out the fitting. Install outlet device and check all connections for leaks.

OPERATION

Simply lift the handle up. Rotating the handle will change water temperature.

MAINTENANCE

Valves are washerless and require no routine maintenance. The gleaming finish of your SPEAKMAN single lever faucet can be cleaned by using mild soap and warm water. Dry immediately with a soft, clean cloth for best results.

SPEAKMAN®


Phone: 800-537-2107 Fax: 800-977-2747

02/26/19

www.speakman.com

92-S-3661-09

ROUGH-IN

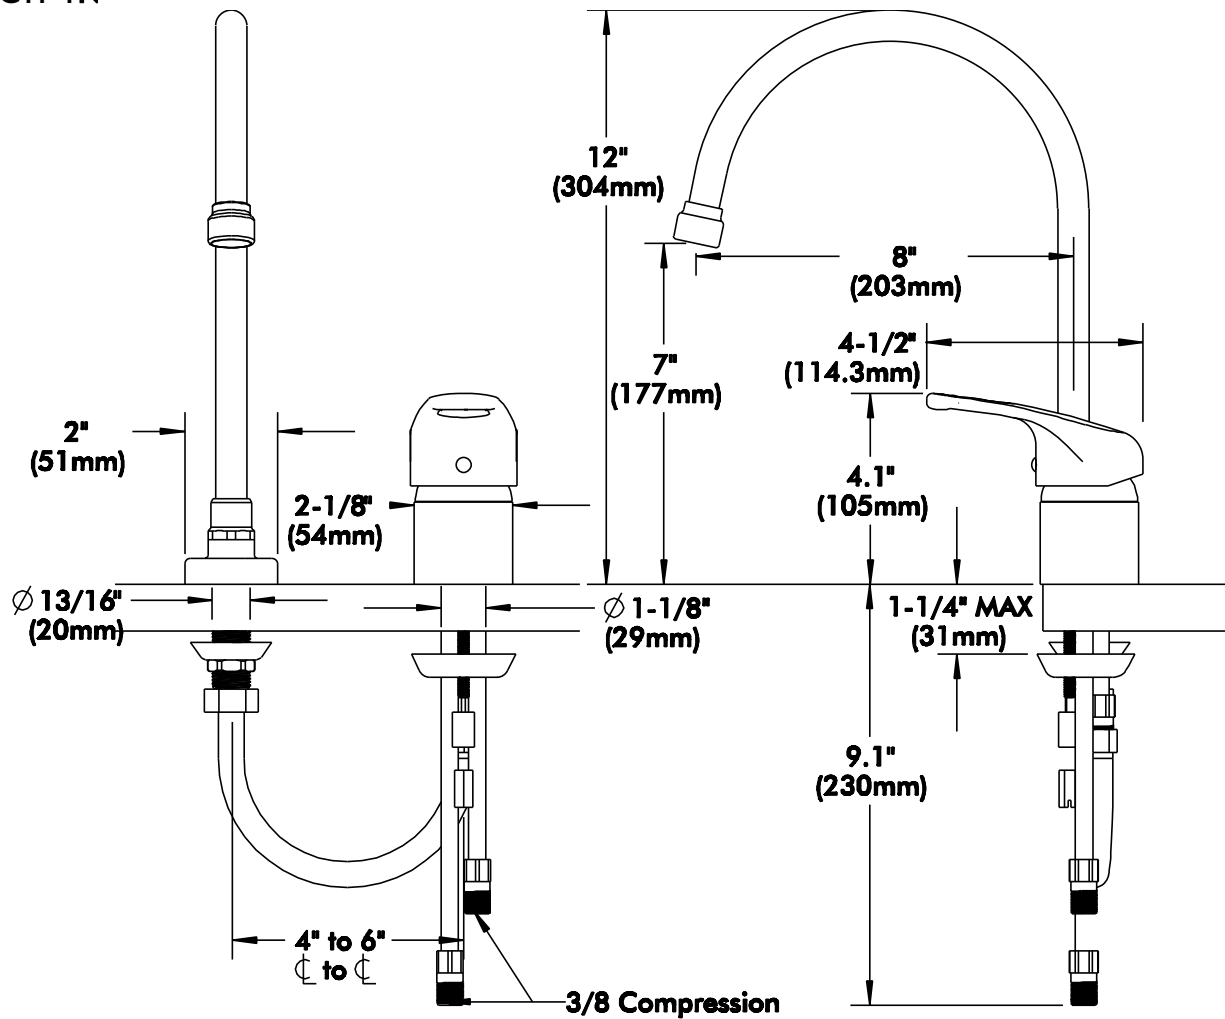

NOTES:

1. Hot and cold inlets have 3/8 compression threads.
2. All dimensions are in inches (millimeters) unless otherwise specified and are subject to change without notice.

REPAIR/REPLACEMENT PARTS

ITEM NUMBER	PART NUMBER	DESCRIPTION
1	G18-0217-CA	8" SPREAD GOOSENECK ASSEMBLY
2	RPG05-0837-PC	1.5 GPM AERATOR ASSEMBLY
3	RPG05-0851-PC	1.5GPM LAMINAR FLOW OUTLET ASSEMBLY
4	G20-1979-PC-CA	SINGLE LEVER FAUCET
5	63-0046	HOSE CONNECTION
6	A-EA12	1.2GPM AERATOR ASSEMBLY
7	A-ELF	1.2GPM LAMINAR FLOW OUTLET ASSEMBLY
8	RPG38-0128-PC	BOCA 0.5GPM FLOW OUTLET ASSEMBLY WITH WRENCH (-E)

SPEAKMAN®

Phone: 800-537-2107 Fax: 800-977-2747

02/26/19

www.speakman.com

92-S-3661-09