

# FLEXSTEEL®

 
 
 
**W1027-063**

## LARGE ENTERTAINMENT BASE

### IMPORTANT


Carefully remove all parts from the carton, and put them individually on a soft cloth to prevent damage to the parts.

We have taken great care in the design of this product and request that you carefully and accurately follow our assembly instructions to ensure proper set-up.

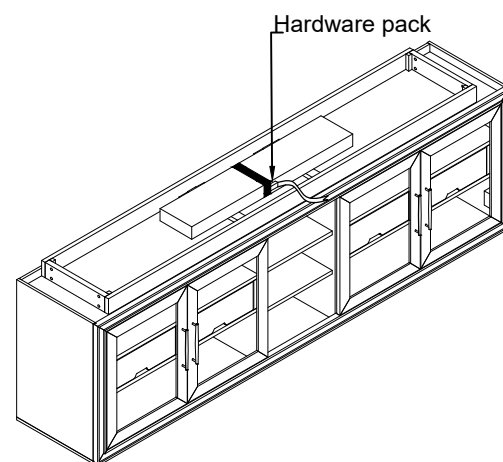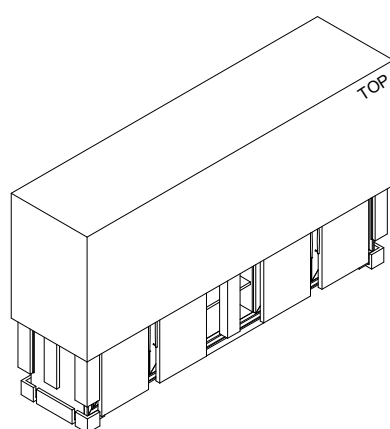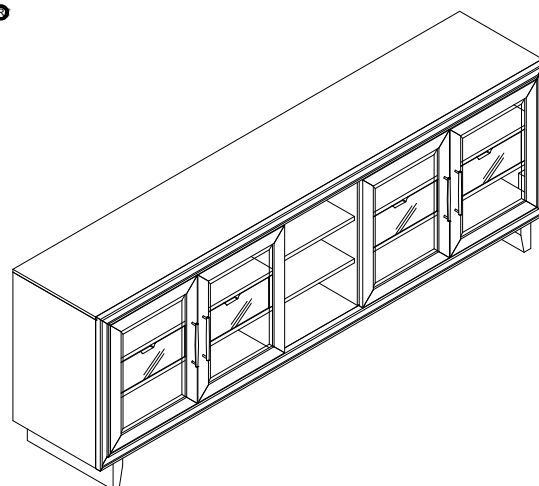


### Part List

 
### Assembly Instructions 1/3

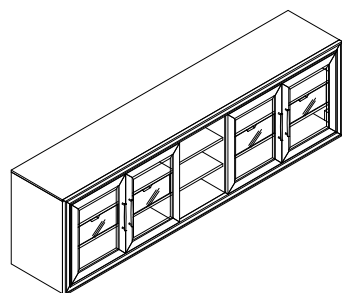

 
A. Box  
1 piece

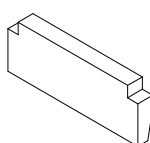

 B. Left Leg  
1 piece

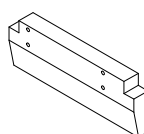


 C. Right Leg  
1 piece



D. Support Leg  
2 pieces

### Hardware List

 


Bolt  
Ø5/16"-18 UNC x 1-3/4"  
8 pieces




Spring Washer  
Ø5/16" x 1.5mm  
8 pieces



 Flat Washer  
Ø5/16" x Ø19mm x 1.5mm  
8 pieces



Hex Key  
5/32"  
1 piece

 

Anti- Tipping  
1set

# FLEXSTEEL®

 
## Assembly Instructions 2/3

### IMPORTANT NOTES

- Do not tighten up all the bolts until each part is properly assembled.
- Keep the Hex Key in a safe place as you may need to tighten up the bolts in the future.
- Use a soft cloth between these parts and the floor.
- We recommend this product be assembled by at least two adults.


### STEP 1

The assembly parts are located at the bottom of the cabinet - Left Leg (B) and Right Leg (C) (See Figure 1).

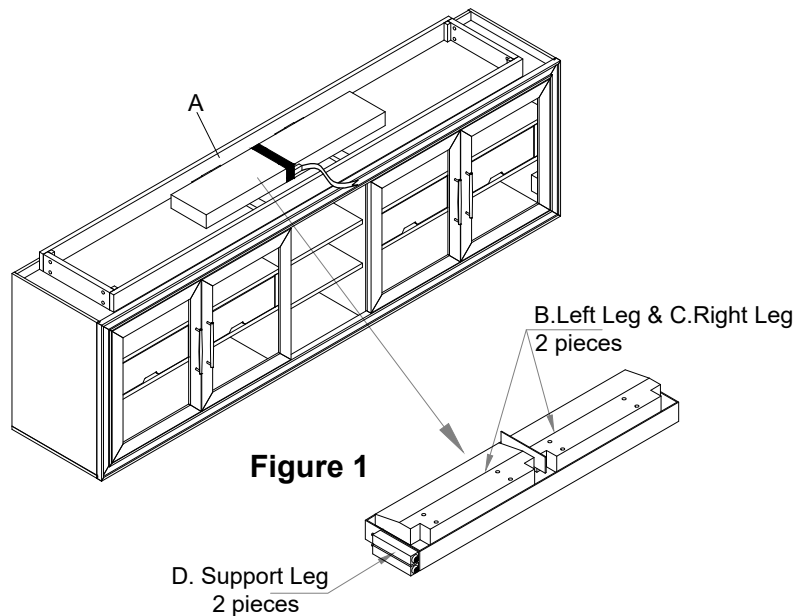

### STEP 2

 Fix Left Leg (B) and Right Leg (C) to the Box (A). Insert Bolt, Spring Washer, Flat Washer and fully tighten bolts with Hex Key. (See Figure 2), Connect the Support Leg (D) to Box (A) by turning by hand until tight (See Figure 3).

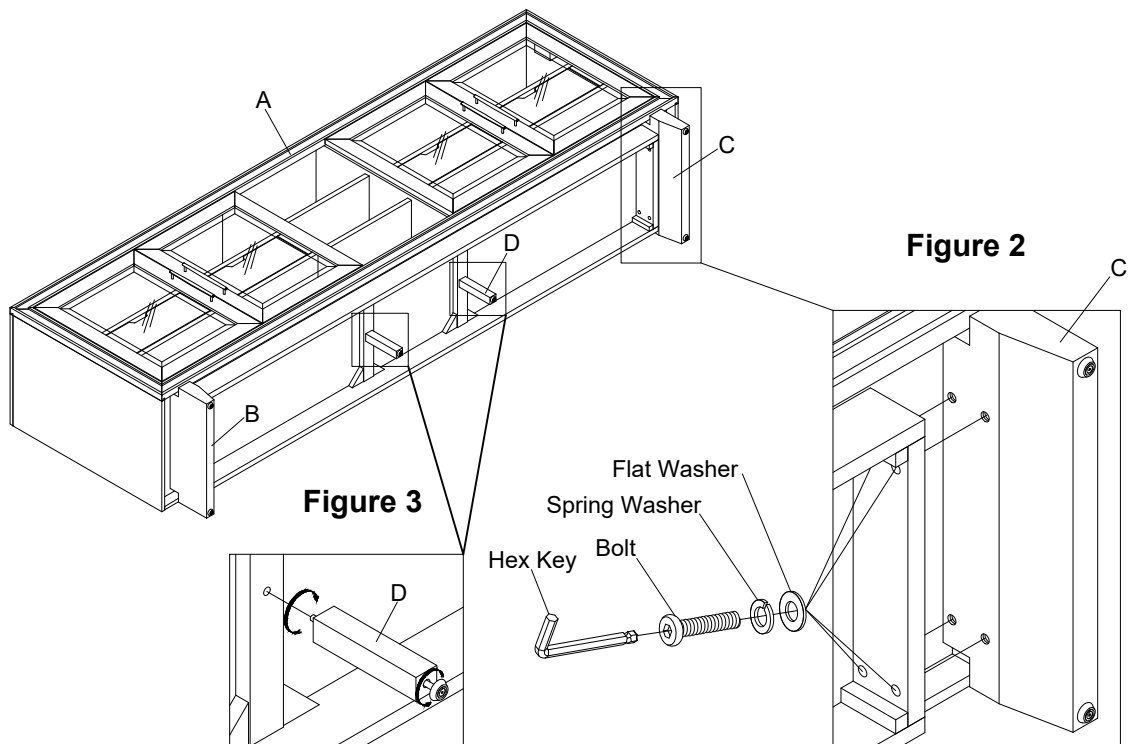

# FLEXSTEEL®

## Assembly Instructions 3/3

### IMPORTANT NOTES

- Do not tighten up all the bolts until each part is properly assembled.
- Keep the Hex Key in a safe place as you may need to tighten up the bolts in the future.
- Use a soft cloth between these parts and the floor.
- We recommend this product be assembled by at least two adults.

### STEP 3

Flip cabinet over, and adjust the levelers on the legs until the furniture is leveled. (See Figure 4)  
When two drawers collide, adjust the knob on the slide to raise the drawer (See Figure 5).

NOTE: There is a tip restraint kit provided on the back of this product. Take care to read the instructions thoroughly and install it immediately when placed in the home.


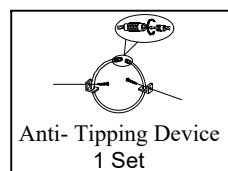 


Figure 4

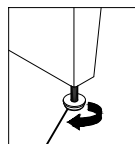 

Adjustable leveler


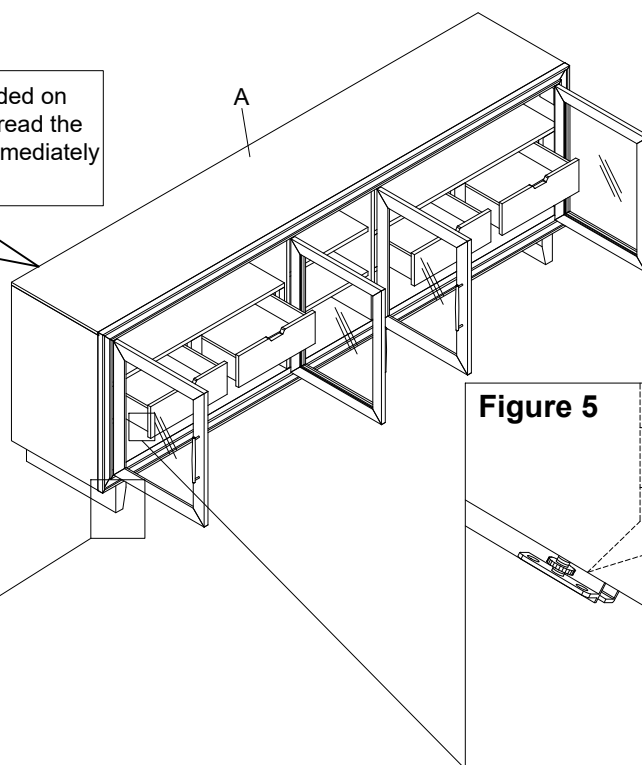 


Figure 5

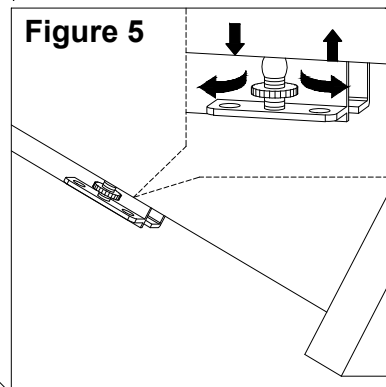 

### CARE INSTRUCTIONS

- To avoid scratches, do not place sharp or jagged objects directly on the table top.
- Do not place hot items directly on the table top.
- Use placemats or trivets under hot items and coasters under beverages to prevent marks and stains.
- Avoid the use of harsh chemicals or abrasive cleaning materials.
- Wipe the table clean with a soft, dry cloth after each use.
- Wipe up spills quickly with a soft, dry cloth.

Flexsteel Industries, Inc.

For Parts or Customer Service call

toll-free:

1-888-415-3979

Monday-Friday

8:00 a.m. -5:00 p.m.

(Central Time)

Email:

customersolutions@flexsteel.com

www.flexsteel.com