



**A:** This lever allows the back to tilt or to lock the chair in the upright position. To lock the chair, push the lever in towards the right. To unlock the chair pull the lever out towards the left.

**B:** This lever allows the chair to rise and go down. To activate this pull the lever up. To make the chair raise take your weight off the seat and the chair will come up. To bring it down sit in the chair and pull the lever up and the chair will move down.

**C:** Tilt tension knob. Turn the knob clockwise to lessen the tension and counter clockwise to tighten the tension