 


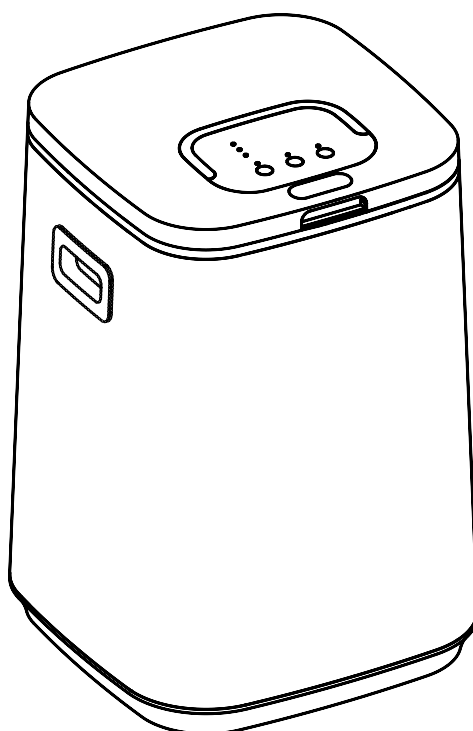

ITEM: TW-AZ028WHB
ANZZI LUXURY BUCKET TOWEL WARMER
OPERATION MANUAL

V1.0
06/30/2024



DON'T WAIT! REGISTER NOW!

Register your product within 90 days to ensure your product is recognized as an official purchase and is eligible for warranty coverage.

Mail in the completed registry card (Pg. 2) or register online at <https://register.anzzihome.com/register/>.

 


PRODUCT REGISTRATION*

IMPORTANT: Warranty will not be recognized unless product is registered.

We offer two options to register your product.

1. **Register online at** <https://register.anzzihome.com/register/> or Scan the QR code below. Registering online is fast, secure, and ensures we receive your information.

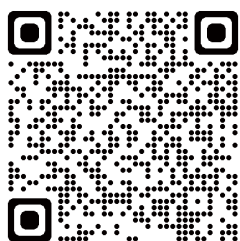

2. **Complete, cut out, and mail the registration card below.** Returning this registration card will ensure your product's warranty and allow us to process any warranty claims.

Mail the card to: 5701 NW 35 Avenue, Miami, FL 33142



CUT ALONG
DOTTED LINE.

Product Registration Card

Name Address

City.....State..... Zip.....

Phone Email

Date of Purchase Order or Purchase # SKU or Model #

Installer's Name Phone

I have read the Owner's Manual carefully and understand and agree that any installation, operation or maintenance of the product must be done strictly in accordance with instructions and guidelines contained in the owner's manual and installation guide.

Signature Date

Need help? For technical support call 305-614-4070 or visit us at www.ANZZI.com

INSTRUCTION

To reduce the risk of electric shock, burns, fire or injury:

- Always unplug the unit from the electrical outlet immediately after using.
- Do not use this appliance for anything other than its intended use.
- Do not place or store the unit where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for a unit that has fallen into water. Unplug it immediately.
- Care should be taken so that objects do not fall into and liquids are not spilled onto the unit.
- This unit should never be left unattended when plugged in.
- Close supervision is necessary when this unit is used near children or disabled persons.
- Use this unit only for its intended use as described in this manual.
- Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged or dropped in water.
- Keep cords away from heated surfaces. Do not wrap the cord around the exterior of the appliance or let the cord hang over table or counter edge.
- Do not use outdoors.
- Do not alter the safety plug or use an extension cord with this device.
- Do not operate with a voltage converter.
- Do not touch hot surfaces.
- Do not use accessory attachments not recommended by the manufacturer as this may cause injuries.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

FCC INFORMATION

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.



DO NOT USE WHILE EMPTY.



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER.
THERE ARE NO SERVICEABLE PARTS INSIDE.
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE
THIS UNIT TO RAIN OR MOISTURE.

 
SPECIFICATIONS

NOTE: Please use the product under 120 Voltage only.

- Power supply specification: 120V AC / 60HZ
- Power output: 450W
- Timer: 20, 40, 60 minutes
- Delay Timer: 0.5-24 hours
- Dimensions: 12.6" (L) x 12.6" (W) x 18.5" (H)

OPERATING INSTRUCTION

NOTE: Please read this instruction before use.

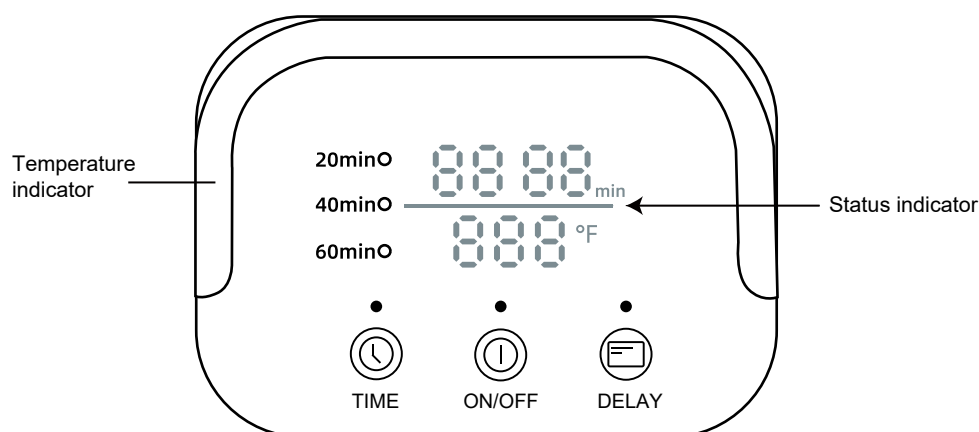

1. BUTTON CONTROL

ON/OFF: Turn ON/OFF the product.

TIME: select heating time.

DELAY: Delay time selection.

2. ON/OFF OPERATION

Press the ON/OFF button to turn on the product, and begin to heat after time indicator flashing for 5 seconds. The bucket temperature will heat to 266°F, then keep the temperature in the range of 215-266 °F in the first 20 minutes.

3. TIME OPERATION

When product is ON, press TIME button to change the heating time, the time indicator on the left will show current heating time. The product will stop heating after this time, if the heating time more than 20 minutes, the bucket temperature will keep in the range of 180-215 °F after 20 minutes.

4. DELAY OPERATION

When product is ON, press DELAY button to change the delay time, the DELAY indicator and time indicator in the screen will show the delay time, press this button to adjust delay time in 0.5-24 hours range, when delay function is activated, the product will begin countdown delay time and begin heating after countdown. Long press this button can adjust delay time quickly.

5. LED INDICATOR

 
 
 
5.1 When the bucket is heating, the Status indicator in the screen will flash.

5.2 Temperature indicator will show green color when bucket temperature lower than 140°F and show red when temperature higher than 140°F. When the product is OFF, the indicator still show red before the bucket temperature lower than 140°F.

NOTE: There will be tolerance between the actual temperature in bucket and the temperature shown in screen.

6. USAGE

- 6.1 Press child lock button(1) to open the lid.
- 6.2 Aroma disc box(2) can hold solid aroma disc with diameter not over 2.75" [70mm] and thickness not over 0.4" [10mm].
- 6.3 The hook(3) in bucket is removable.
- 6.4 Use handles(4) for moving product(Only move product when power off).
- 6.5 The power cord(5) can be stored at the bottom.

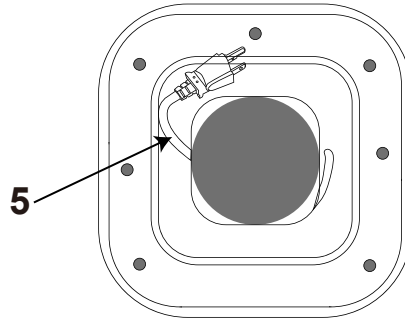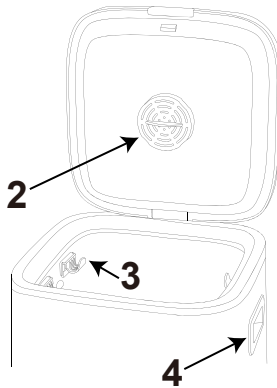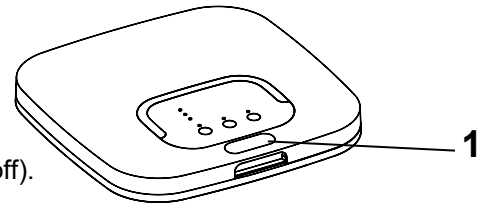

MAINTENANCE

Unplug the power cord before cleaning, and wipe the product with a dry cloth.

TROUBLESHOOTING

SYMPTOM	RECOMMENED ACTIONS
The screen show "E01" code when the product is working.	NTC is open circuit, please contact the after-sales service.
The screen show "E02" code when the product is working.	Heating part is failed, please contact the after-sales service.

 
FREQUENLY ASKED QUESTIONS

Why won't my Towel Warmer turn on?

Make sure the Towel Warmer is properly plugged into a wall outlet.

Why is my Towel Warmer taking a long time to reach optimal heating temperature?

Be sure to only use dry towels; using damp towels will greatly extend the preheating cycle.

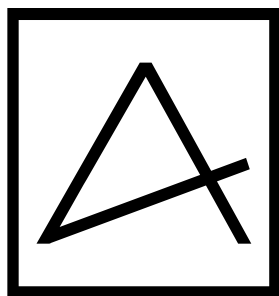

ANZZI®