


Step 3 Cleaning and care


Daily cleaning and care are required in order to keep the product shining and properly working.

- 1 Clean it with water and dry it with soft cloth.
- 2 Clean the product with gentle liquid or glass cleaner.
- 3 Don't use acid cleaner.
- 4 Don't clean with abrasive material, abrasive paper or knife.

Step 4 Parts list

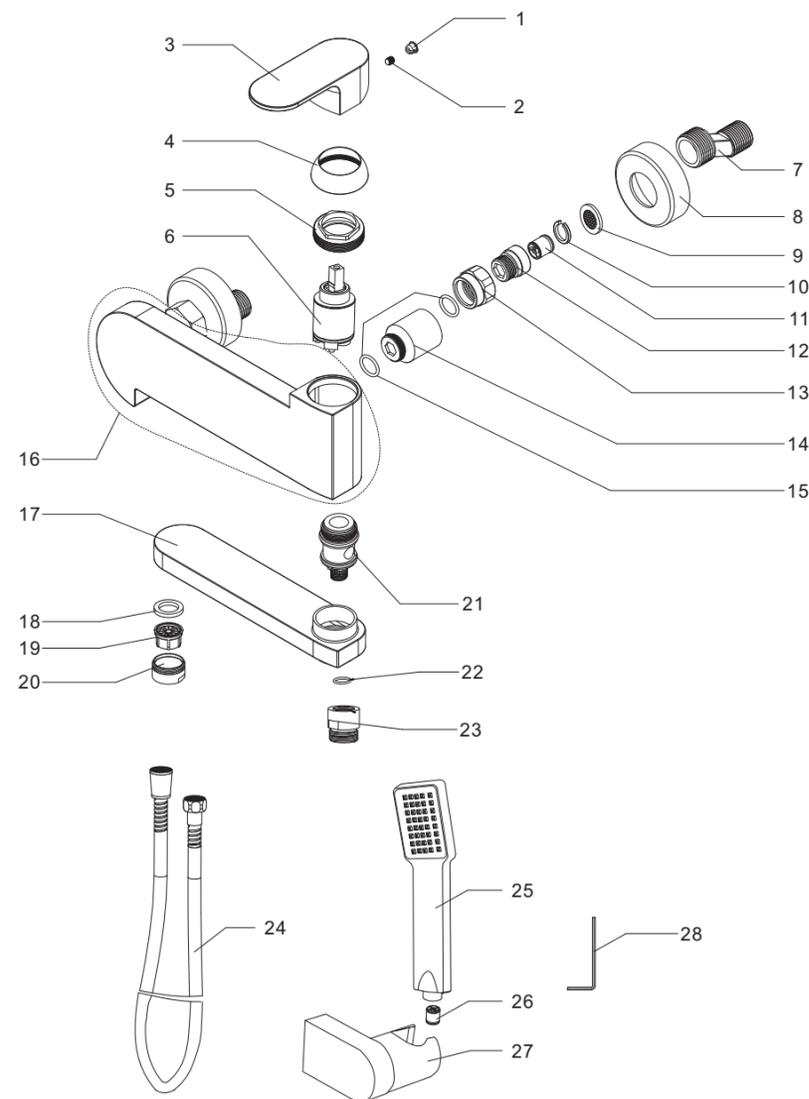

NO.	PART NAME
1	Index
2	Set screw
3	Handle
4	Trim cap
5	Cartridge locknut
6	Cartridge
7	Eccentric nut
8	Flange
9	Washer
10	Ring
11	Check valve
12	Inner screw
13	Nut
14	Base
15	O-ring
16	Body
17	Spout
18	Washer
19	Aerator
20	Aerator collar
21	Headwork
22	O-ring
23	Connector
24	Shower hose
25	Hand shower
26	Check valve
27	Shower holder
28	Allen key

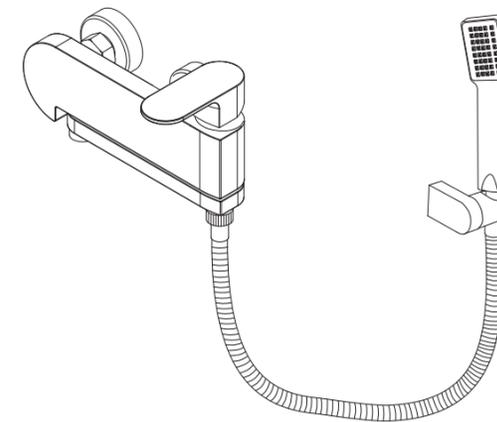


WALL-MOUNTED BATH FAUCET



ASME A112.18.1/CSA B125.1

RECOMMENDED TOOLS

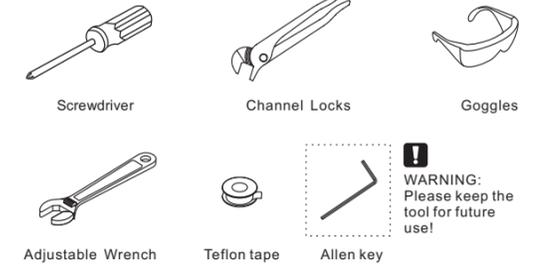


WARNING:
Please keep the tool for future use!





Attention:
for easy installation, you will need:
1. To read all the installation instruction completely before beginning.
2. To read all the warning, attention and maintenance information.


The tools might be applied to the following places:

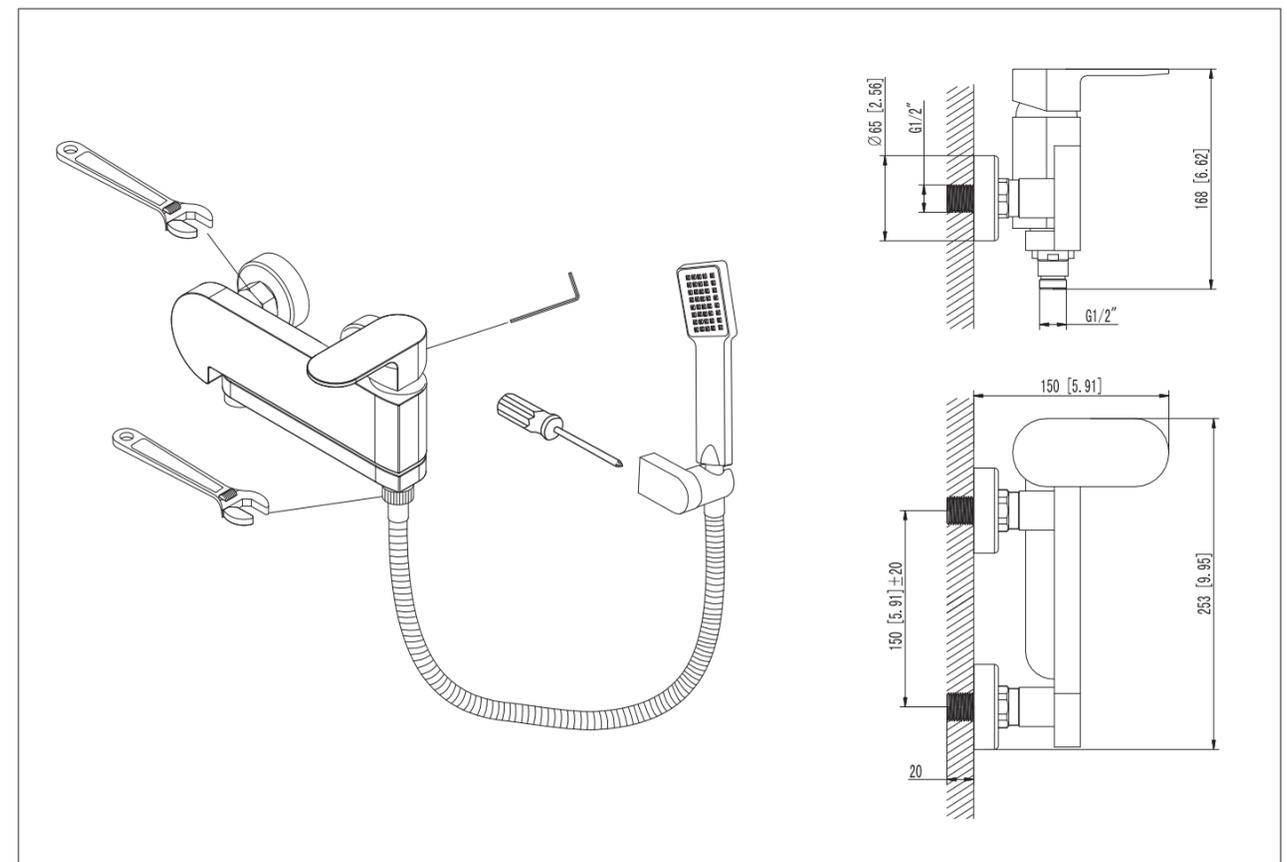


Step 1 Faucet installation

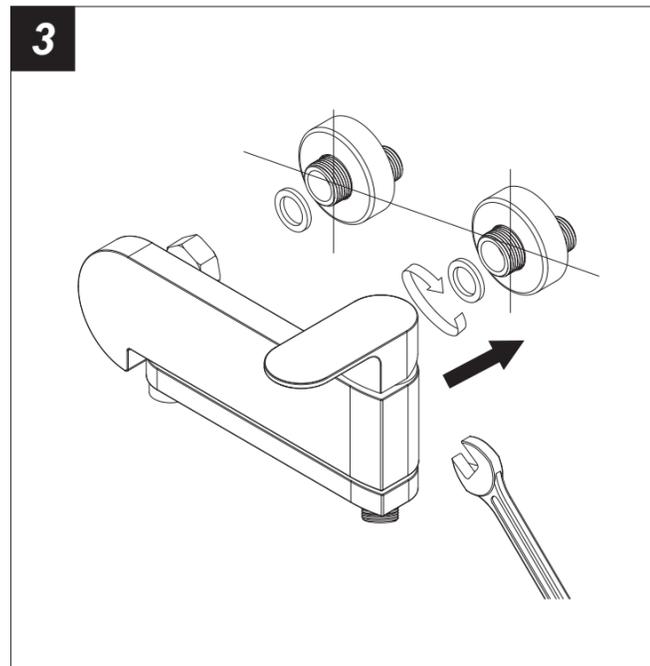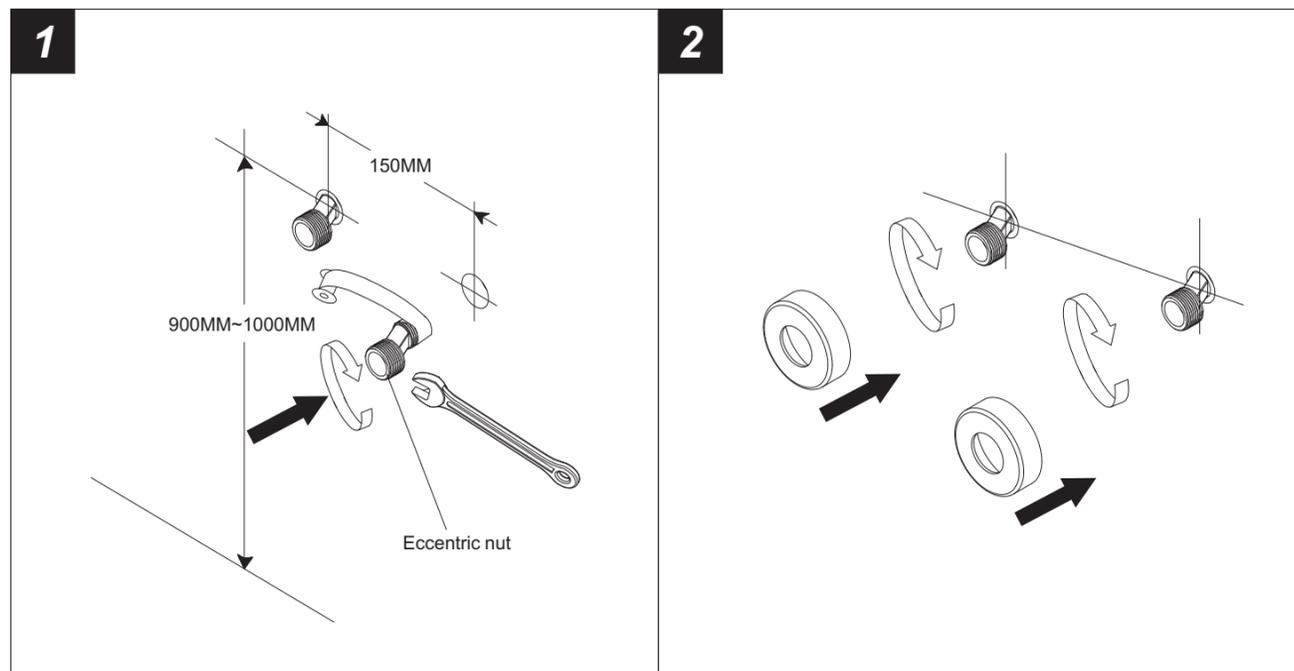

3. Install the faucet to the eccentric nuts as shown. Adjust the eccentric nuts if they do not match properly. Finally tighten by wrench.
- Warning: place washer between connected nuts on faucet and eccentric nuts.**

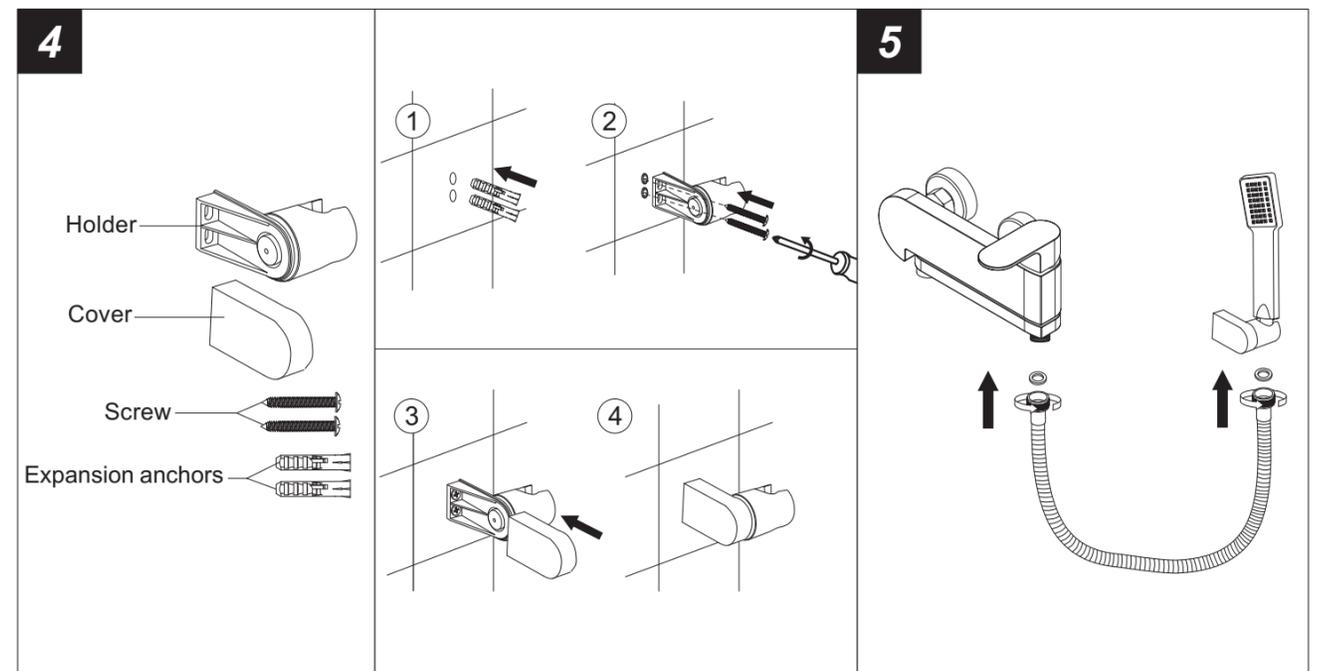

Step 2 Testing connections

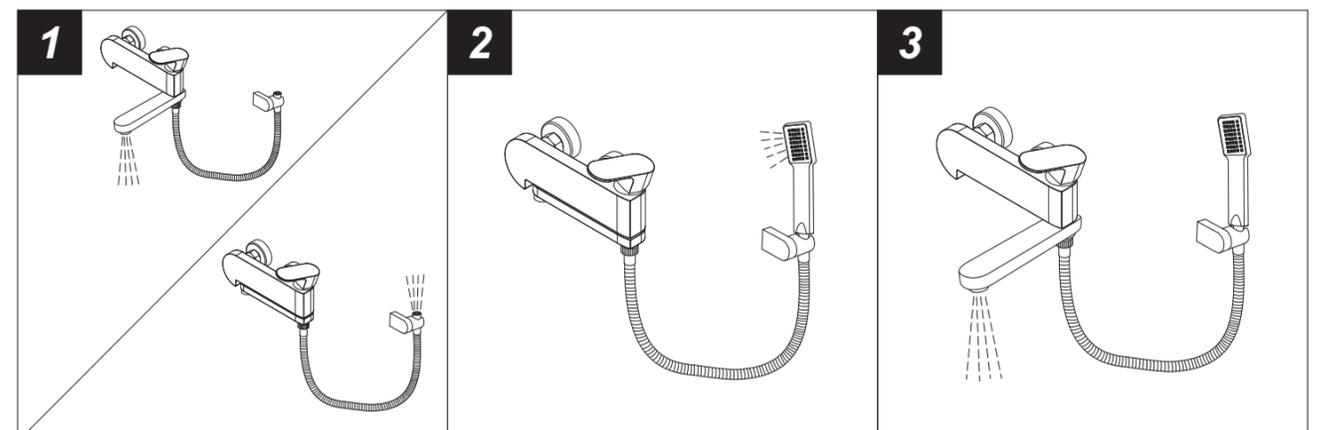

1. Open the handle, and turn the spout, water flows through the pipe, and cleans any debris out.
2. Turn spout to the left, open the handle. Water comes out from hand shower.
3. Turn spout to right side, open the handle. Water comes out from spout.