


M4000-PRO Instructions

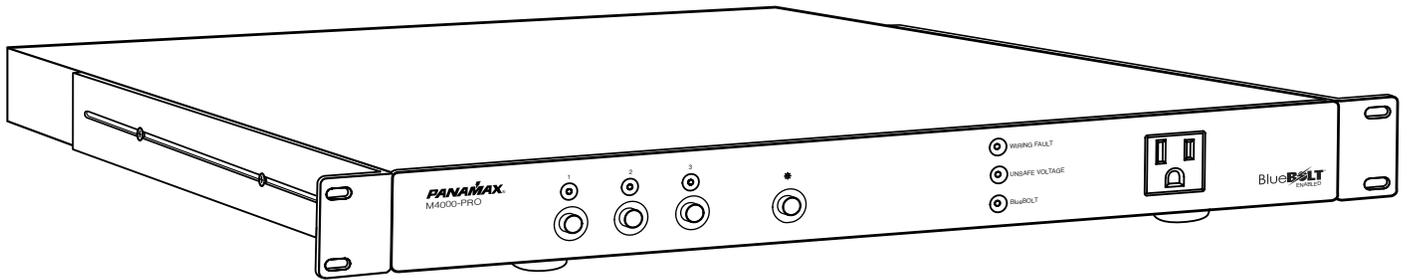

Power Management with Control System Interactive Functionality.

- 15 Amp Capacity M4000-PRO
- 7 Rear Panel Outlets and One Front Panel Convenience Outlet in 3 Controlable banks
- Fully Programmable
- BlueBOLT® Enabled **BlueBOLT™**
- Linear Filtration with 3 Isolated LiFT Filter Banks, -18.7dB@10kHz, -50.5dB@100kHz, -43.9@1MHz
- Rear Panel Circuit Breaker
- Removable Front Rack Ears
- 12 Volt Input Triggering
- Detachable 8 ft. Power Cord
- AVM & Protect-or-Disconnect Circuitry

Important: You will need the M4000-PRO's unique MAC Address and Challenge Key (provided on the 2 labels attached to the cover of the Quick Start Guide which is included in the M4000-PRO packaging). One label is permanently adhered to the Quick Start Guide and the other is removable for your convenience.

PANAMAX®

Introduction

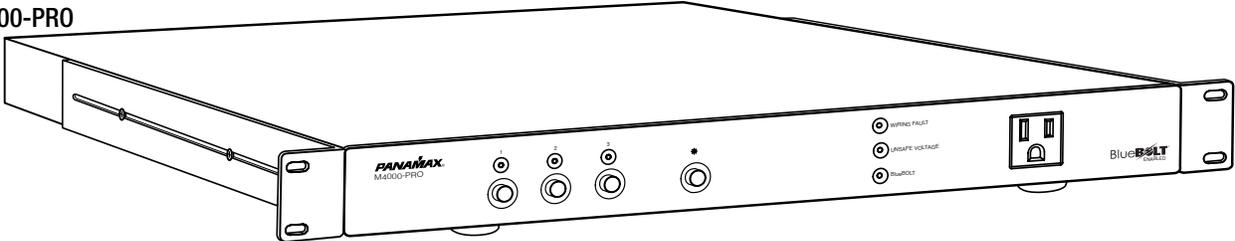
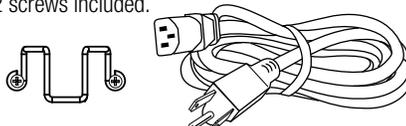
 
Thank you for purchasing a Panamax M4000-PRO Power Management with control system interactive functionality, and congratulations on your choice. The M4000-PRO features Panamax's revolutionary AVM (Automatic Voltage Monitoring) circuit, and our exclusive Linear Filtering Technology (LiFT). Together, these technologies comprise precisely what our customers have come to expect from Panamax: uncompromised AC protection and purification. Outlet: Rear panel outlets are controlled in three power filtered banks. They are grouped into three (3) switched banks. BlueBOLT™ is included, providing secure, hosted IP system control and monitoring for the M4000-PRO.

Table of Contents

Feature Descriptions.....	pg. 1
Important Safety Instructions, Front Panel Features Overview.....	pg. 2
Rear Panel Features Overview, Bubble of Protection.....	pg. 3
BlueBOLT™ Setup, Registration, Trouble Shooting.....	pg. 4
Outlet Sequencing and M4000-PRO Specifications.....	pg. 5
Diagram to Identify Connected Equipment, Additional Notes.....	pg. 6
Advanced Operation, Communication and Messaging Protocol	pgs. 7- 13
FCC Notice, Contacting Customer Service.....	pg. 14

Before You Begin Inspect Upon Receipt.

Box should contain the following, including the Quick Start Guide:

<p>1. M4000-PRO</p> 		
<p>2. 8 Ft. detachable power cord. Retention clip and 2 screws included.</p> 	<p>3. Four silicone rubber feet for shelf mounting.</p> 	<p>4. Four Phillips pan head screws with cup washers for rack mounting. Removable rack ears included (attached)</p> 



Panamax, 1800 S. McDowell Blvd., Petaluma, CA 94954 • www.panamax.com • 800-472-5555 • 707-283-5900 • Fax 707-283-5901

©2015 Core Brands LLC. All rights reserved. Panamax and BlueBOLT are registered trademarks of Core Brands LLC a Nortek, Inc. company

Features Descriptions

BlueBOLT™:

Remote Power Management technology provides secure, hosted IP (Internet Protocol) system control. With BlueBOLT™, custom electronics installers, integrators and end-users can remotely monitor and control power to home theater equipment by accessing power management components from anywhere in the world. From simple system reboots to comprehensive monitoring of power status, BlueBOLT™ provides the power to control complex A/V systems from their most fundamental level: their power source (M4000-PRO).

LIFT Technology EMI/RFI Noise Filtration :

Your audio/video components are constantly being bombarded by electromagnetic interference (EMI) and radio frequency interference (RFI) through their AC power source. This contaminated power can affect audio/video equipment and will degrade the overall performance of your entire system. Common symptoms of contaminated power include loss of picture detail, dull colors, pops, hisses, hums and visual artifacts.

Protect-or-Disconnect:

In the event of a catastrophic power surge, such as a direct lightning hit, the Panamax unit will disconnect AC power to connected equipment.

Automatic Over & Under Voltage Protection (AVM):

Panamax's patented power monitoring circuitry constantly monitors the AC line voltage for unsafe voltage conditions such as momentary spikes or prolonged over-voltages and under-voltages (brownouts). These unsafe conditions pose a very dangerous threat to all electronic equipment within the home. If the M4000-PRO senses an unsafe power condition, it will automatically disconnect your equipment from the power to protect equipment from damage. Once the voltage returns to a safe level, the M4000-PRO will automatically reconnect the power.

- When subjected to a 6,000V (open circuit voltage) / 3,000A (short circuit current) surge, the M4000-PRO limits its voltage output to less than 330V peak, UL's lowest rating.
- If the magnitude of the surge is greater than the capacity of the surge protection components, the M4000-PRO's Protect or Disconnect Circuitry will disconnect your equipment in order to protect it. The M4000-PRO will need to be repaired or replaced by Panamax if this occurs within the product's 3 year warranty.

Sequential Startup/Shutdown:

Complex audio/video systems may be susceptible to voltage transients generated internally at start-up/shutdown if all of the equipment is powered on or off at the same time. This can cause speaker "thumps", which are not only annoying, but can also damage the speakers and/or trip product circuit breakers. The M4000-PRO is designed to eliminate these transients by providing a "start-up" delay for the Bank 3 outlets and a "shut-down" delay for the other-Outlet Banks. This minimizes inrush current issues by allowing the components plugged into the Switched Outlet Banks to power-up and stabilize before any amplifiers and powered subwoofers are turned on. This sequence is reversed during shut-down. The amplifiers and powered subwoofers turn off, their power supplies drain, and then the equipment plugged into the Switched Outlet Banks are turned off. Additionally, the start-up and shut-down delays can be adjusted for custom applications.

Voltage Sense Trigger:

The M4000-PRO voltage sense trigger input uses a standard 3.5mm (1/8") mini-mono plug. This feature provides an ON/OFF trigger for the M4000-PRO using a Direct Current (DC) voltage signal. Many components such as pre-amplifiers and receivers have a DC trigger built in, and will transmit a constant power signal when turned on and in use. The presence of this power signal will turn on the M4000-PRO's switched outlets. When the source component is turned off, the voltage trigger signal is also turned off, and the M4000-PRO's shutdown sequence is initiated. An AC Adapter of the appropriate voltage (5-24 VDC) plugged into a switched outlet may also be used if a DC trigger is not built in.

Cable/Satellite/Antenna TV signal protection:

Coaxial protection circuits achieve optimum signal quality from our new coaxial protectors that have the smallest signal loss on the market - less than 0.5 db of attenuation from 0 Hz to 2.2 GHz. Our upgraded coaxial protection has been specifically designed to virtually eliminate signal loss. The clamping level of 75V will meet the demands of both cable and satellite voltage while minimizing exposure to damaging spikes and surges.

Telephone Line Protection:

Digital video recorders and satellite TV receivers require a telephone line connection for TV show scheduling and/or Pay-Per-View services. The M4000-PRO also provides surge protection for this line. One pair of RJ-11 telephone jacks is provided for this. The circuitry utilizes auto-resetting PTCRs and solid state SIDACTors® for reliability and unsurpassed protection. The clamping level of the M4000-PRO's telephone protector is 260 volts. This will allow typical ring voltage (90-130VAC) and operating battery voltage (-48DC) to pass through the circuit and still protect the modem in your satellite receiver from damage. Incoming tel line must be plugged into the IN Jack. Patch cord to the equipment must be plugged into OUT.


LAN Protection:

Protection circuits for 10/100/1000 baseT Ethernet lines. 8 wire protection, 60V clamping.

Important Safety Instructions

1. Read these instructions. 2. Keep these instructions.
3. Heed all warnings. 4. Follow all instructions.
5. **WARNING:** Do not use this apparatus near water. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
6. Clean only with dry cloth.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatuses that produce heat.
8. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades, with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
9. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. Where the power cord is used as the main disconnect device, the disconnect device shall remain readily accessible.
13. This device must be connected to a main socket outlet with a protective earthing connection.

Front Panel Features Overview

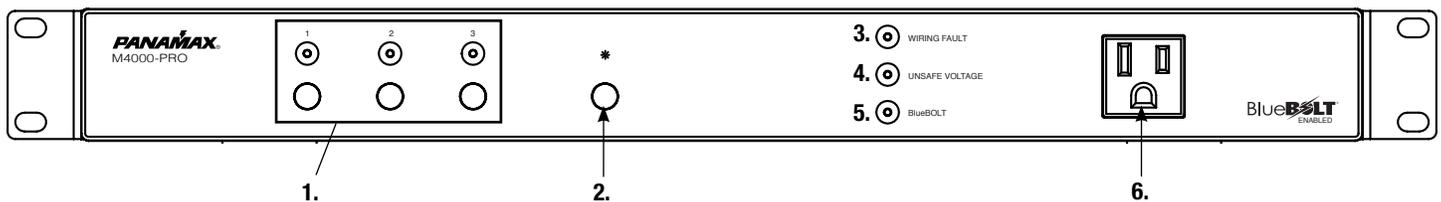

1. Outlet Bank 1, 2, 3 Buttons:

The blue light above each outlet bank button indicates its present ON/OFF state. Pressing the button for less than 5 seconds toggles the corresponding Outlet Bank's ON/OFF state. Pressing the button for 5 seconds or more initiates a power cycle for the corresponding Outlet Bank. In a power cycle, the Outlet Bank will turn OFF, delay for the programmed power cycle delay time (30 seconds by default) and then turn back ON. When the Outlet Bank is in an active power cycle or ON/OFF sequence, the corresponding indicator light will flash indicating that it is about to change state.

2. Brightness Control Button:

Pressing the Brightness Control button [button icon] cycles through the brightness level of all status indicator lights. The Outlet Bank ON/OFF indicators cannot be turned off completely.

3. Wiring Fault Indicator:

Illuminates red if the house wiring is reverse-wired or the ground is not connected.

4. Unsafe Voltage Indicator:

If the line voltage is less than 95 Vac or greater than 134 Vac, the outlets will shut off and this light will flash red. When the line voltage comes back to the safe operating range, this light will turn off and a turn-on sequence is initiated.

5. BlueBOLT: This light indicates the status of the network connection.

Light is OFF - Not connected to an active local area network.


Light is GREEN - Connected to an active local area network

6. Front Panel Outlet:

The outlet on the front panel is included in Outlet Bank 1 and can be used for temporarily powering portable equipment.

PLEASE NOTE: The lights' status is obvious when the outlet is just plain "ON" or just plain "OFF". However, there are transition states that cause the lights to blink. The lights will blink when performing a triggered cycle, but when a server initiated cycle command occurs, it just goes "OFF", **delays**, then "ON".

Rear Panel Features Overview

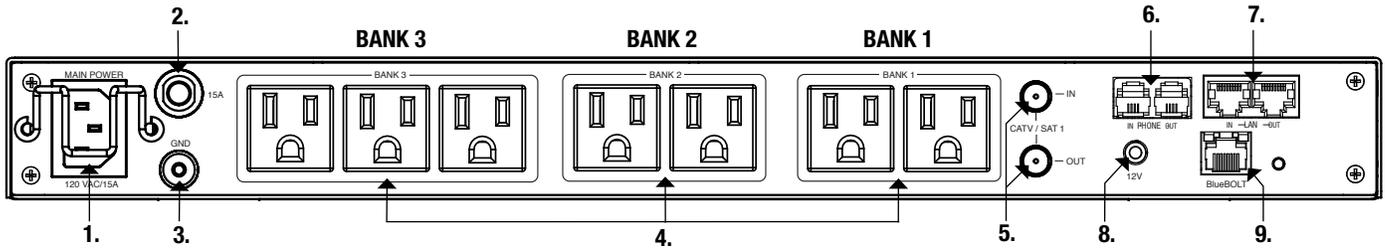

1. AC Inlet: 120 VAC, 15A, IEC 320-C13 do not remove steel retention clip.

2. Circuit Breaker: 120 Vac, 15A

3. Ground lug: Connect to Panamax MOD-series signal protection module grounding busses with 14AWG (<12" length) wire to expand the signal protection capabilities:

4. Outlets: the seven rear panel outlets are grouped into three switched outlet banks. All outlets within an outlet bank are controlled together.

Bank 1 has two back panel outlets and includes the front panel outlet;
Bank 2 has two outlets, **Bank 3** has three outlets.

5. CATV / SAT: Universal voltage (± 75V clamping), HD 1080i/p ready, <0.5dB

6. Telephone Protection: RJ-11 (6P2C) analog telephone/DSL protection. Do not connect in reverse (IN comes in from the wall, OUT connects to equipment)


7. LAN Cat 5e: RJ-45 (8P8C), 10/100/1000BASE-T compatible, PoE compatible

8. DC Trigger input: 3.5mm mono jack. ±5-24VDC tip-ring. When a phone plug is connected to the DC trigger, applied voltage on the trigger input initiates an outlet turn on sequence.

9. Ethernet/BlueBOLT Port: RJ-45 Ethernet. Connect to an active local area network (LAN) RJ-45 Port: Connect to an active local area network (LAN) to connect to BlueBOLT. Link LED: Illuminated Green when connected to an active LAN. Activity LED: Flashes to indicate that LAN connection is active.

The Bubble of Protection

Sample setup to indicate the basic configuration for a "Bubble of Protection". Protecting all AC and signal lines will keep your system safe and ensure compliance with Panamax's Connected Equipment Policy.

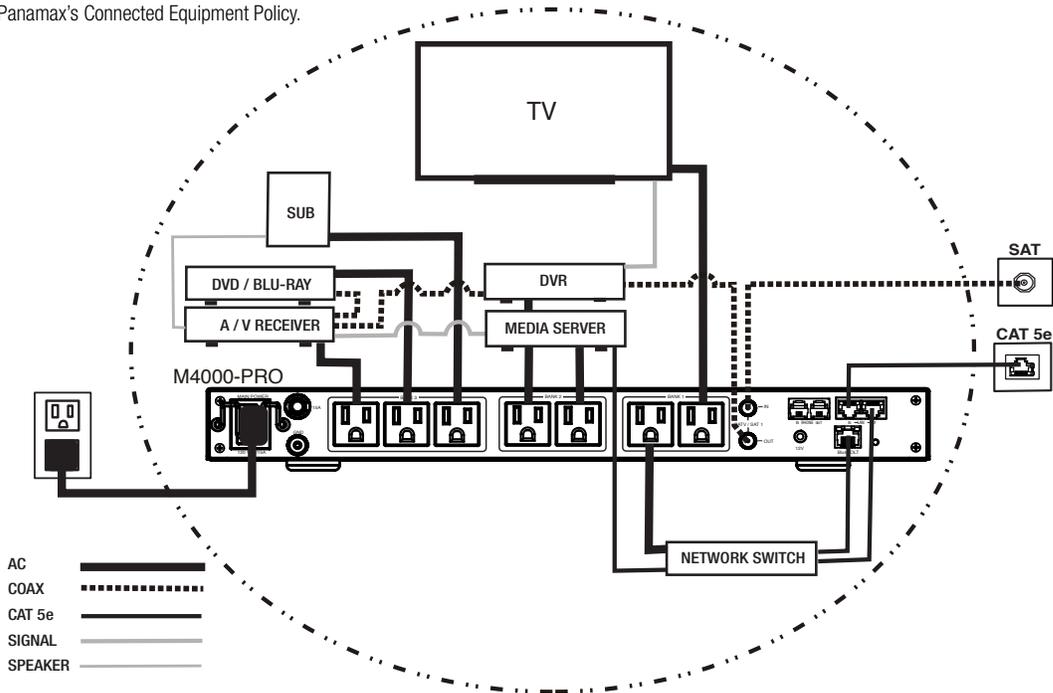


GETTING SETUP For BlueBOLT™

Note: You will need the M4000-PRO's unique **MAC ADDRESS** and **CHALLENGE KEY** (duplicate labels provided in packaging on cover of Quick Start Guide as well as on the underside of the unit itself) in order to register the BlueBOLT™ device

SYSTEM SETUP #1

Network Equipment Powered by M4000-PRO (devices in same room)

- Step 1.** Connect the power supply for the modem/router into the M4000-PRO.
- Step 2.** Connect the coaxial line or telephone DSL line from the wall, to M4000-PRO signal line pass-through protection circuits.
- Step 3.** Route coaxial cable line or telephone DSL line from the M4000-PRO back to modem/router's input.
- Step 4.** Connect Ethernet cable from router/modem to BlueBOLT input on M4000-PRO.
- Step 5.** Plug in M4000-PRO.

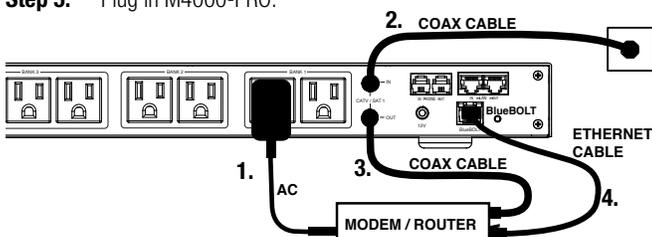

BlueBOLT Online Registration

Note: Make sure to complete system setup #1 or # 2 before registering.

- Step 1.** Log into <http://www.mybluebolt.com> for online registration.

Your BlueBOLT® enabled M4000-PRO Power Management Component is completely plug-and-play and does not require any software installation or network configuration (including configuring of network ports).

The online BlueBOLT® control interface is operated through your web browser.

- Step 2.** Using any Internet connected computer go to www.mybluebolt.com in your standard Internet browser. Please make sure your browser is up to date with the latest software for best BlueBOLT interface performance.


- Step 3.** Follow the on screen instructions to create an account and/or take control of your BlueBOLT enabled product.

Once you input the **MAC ADDRESS** and included **CHALLENGE KEY**, if BlueBOLT™ cannot detect your device (please allow up to 60 seconds), please follow the on-screen troubleshooting guide. Also confirm an Internet connection by accessing a general website – example www.panamax.com.

SYSTEM SETUP #2

Network Equipment NOT-Powered by M4000-PRO (devices in separate rooms)

- Step 1.** Connect network Ethernet cable from PoE/network adapter or wall plate to the Ethernet pass-through protection port on M4000-PRO.
- Step 2.** Connect second Ethernet cable from pass-through protection port to Ethernet/ BlueBOLT input..
- Step 3.** Power on M4000-PRO. (Note: adding a device to your home/office network may require a power cycle of the router/modem to establish connection.

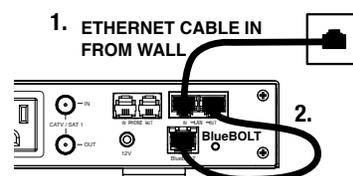

Troubleshooting

- Q.** Is your Power Management Component receiving power?
A. Check the power cable and confirm the unit's breaker has not been tripped.
- Q.** Is your Internet connection functioning?
Q. Can you access a general web page?
Q. Is your M4000-PRO connected to your internet router or modem?
A. Check the Ethernet cable and confirm that the unit is connected to an active Internet connection, and make sure those connected devices are receiving power.

If you have answered "Yes" to all of these questions and are still unable to connect your M4000-PRO component, please contact Panamax customer service at 1-800-472-5555.

ADVANCED OPERATION

M4000-PRO provides a built-in HTTP (web page server at default port 80) which can be accessed via a typical "web page browser" allowing the user to configure the network settings.

- DHCP or static IP address assignment
- IP address
- Subnet mask
- Gateway Address
- DNS server Address 1

On start-up, M4000-PRO will use two IP addresses on its Ethernet connection:

1. A random link-local address can be discovered by link-local utilities such as the Bonjour zero-configuration networking utility by Apple.
2. A local network address, either statically assigned, or from DHCP. If the address was assigned by DHCP it can be discovered by inspection of your router's connected devices table.

In addition to providing external access and control via Panamax/Furman's hosted BlueBOLT platform, M4000-PRO may also be interfaced to control and automation systems on the local area network. Command, information and event messages are provided in standard XML format over UDP port 57010.

Go to page 7 for details on the messaging protocol.

POWER CYCLE AND OUTLET SEQUENCING

The outlet banks of the M4000-PRO are configured to turn on and off in a programmed sequence where each outlet bank has a set of programmed delay times.

The delay times are pre-programmed but may be changed on the BlueBOLT web site or by issuing the <set> command to the Ethernet port (see the Advanced Operation section for details). The default configuration is:

Outlet Bank	Power Cycle Delay	Turn On Delay	Turn Off Delay	Trigger Enable
1	30 seconds	0 seconds	10 seconds	Enabled
2	30 seconds	0 seconds	10 seconds	Enabled
3	30 seconds	10 seconds	0 seconds	Enabled

Power Cycle Delay: When a Power Cycle is initiated, the outlet bank will immediately turn off and then turn back on after the **Power Cycle Delay** time

Turn On Delay: When a Turn On Sequence is initiated, the outlet bank will turn ON after the **Turn On Delay** time.

Turn Off Delay: When a Turn Off Sequence is initiated, the outlet bank will turn OFF after the **Turn Off Delay** time.

Trigger Enable: When enabled, the outlet bank will switch ON or OFF during a sequence initiated by the DC trigger or a <sequence> command received on the Ethernet port. During a turn on sequence following power-up or recovery from a fault condition, the outlets will return to their pre-fault power state regardless of the DC trigger status.

A turn-on sequence is initiated upon power-up, recovery from a fault condition, the DC trigger input going from 0V to 5-24VDC or by the <sequence> command received on the Ethernet port.

When the M4000-PRO is powered-up, recovering from an over-voltage shutoff or recovering from an under-voltage shutoff, the outlet banks will return to their pre-fault ON/OFF state after the programmed **Turn On Delay** time.

When the DC trigger input goes from 0V to 5-24VDC or the <sequence> command is received on the Ethernet port, the outlet banks that are trigger-enabled turn on after the programmed **Turn On Delay** time.

A turn-off sequence is initiated by the DC trigger input going from 5-24VDC to 0V or by the <sequence> command received on the Ethernet port.

M4000-PRO Specifications

AC POWER	
Operating Voltage	120 Vac / 60Hz
Current Capacity	15 A
UL 1449 Voltage Protection Rating	330V L-N, 400V L-G, 400V N-G
UL 1449 Nominal Discharge Current	3,000A
Initial Clamping Level	200V
Energy Dissipation	1,575 Joules (8/20µs)
Overvoltage shutoff	134 Vac ± 2 Vac
Undervoltage shutoff	95 Vac ± 2 Vac
EMI / RFI Noise Filtration	-18.7dB @ 10kHz
	-50.5dB @ 100kHz
	-43.9dB @ 1MHz

LAN PROTECTION	
Connectors	RJ-45 Cat 5e
Wires protected	8-wires
Compatibility	10/100BASE-T
Clamping Level	60V

TELEPHONE PROTECTION	
Connectors	RJ-11
Suppression Modes	Metallic & Longitudinal
Fuseless / Auto-resetting	Yes
Clamping Level	260V

UNIVERSAL COAX PROTECTION	
Connectors	Female "F", Gold-plated
Insertion loss	<0.5dB
Frequency Range	0 MHz – 2.2GHz
Clamping Level	75V


DC Trigger Input	
Voltage and Polarity	5 – 24VDC, bidirectional
Jacks	3.5mm (1/8") mono mini-plug

Specifications subject to change due to product upgrades and improvements.

Identify Connected Equipment

Use this diagram to write in what pieces of equipment are plugged into each outlet for an easy reference.

PLEASE NOTE that the outlets start at No. 7 on the left. The outlet BANK indicator lights on the front panel are numbered 1 through 3 left to right.

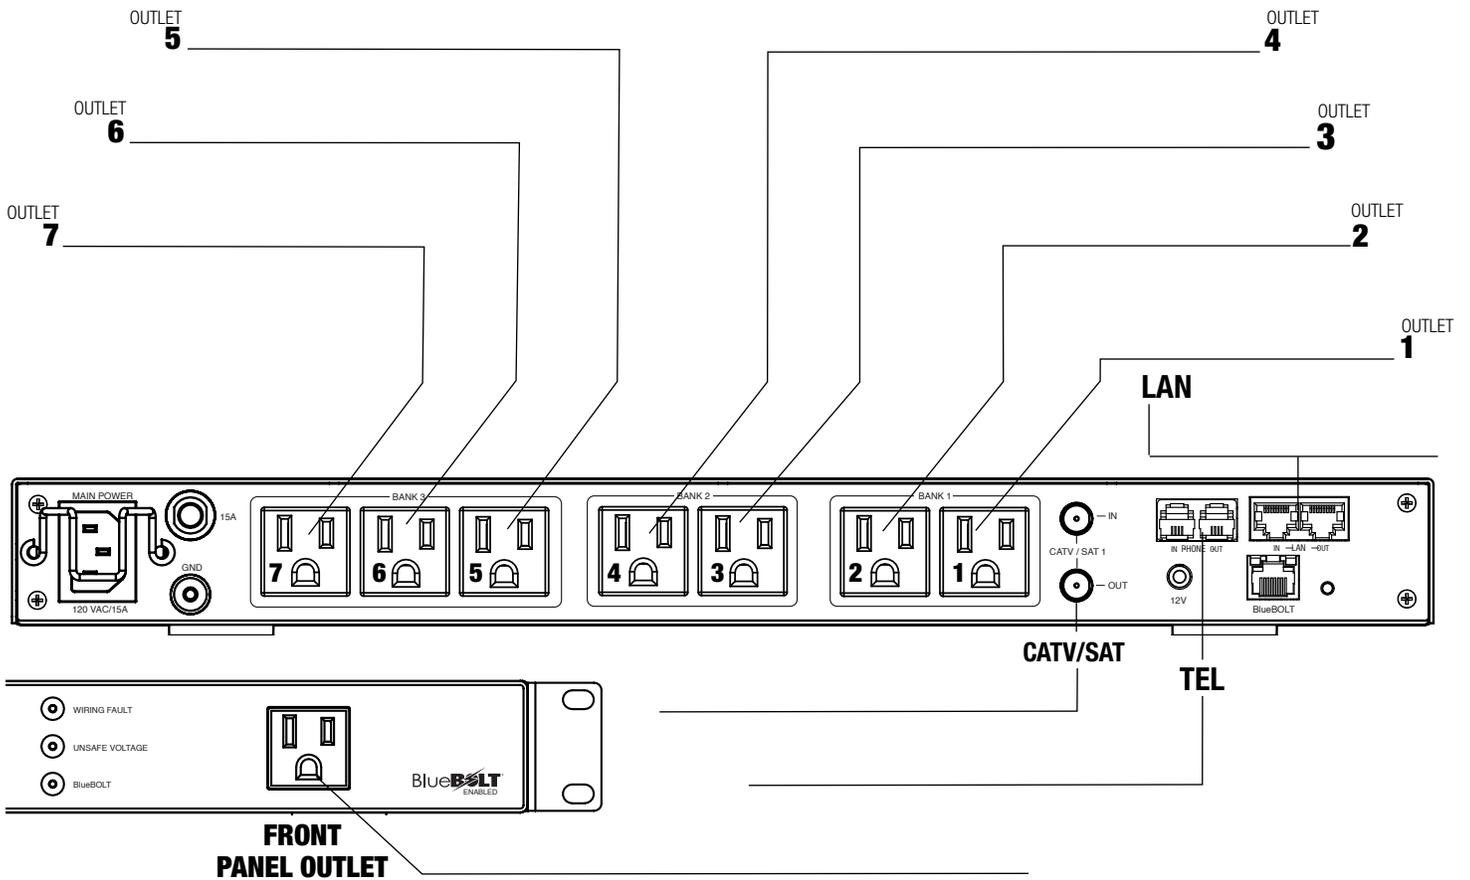

Additional Notes:

Name / Location of Installation

MAC ADDRESS - - - - -

CHALLENGE KEY - - - - -

Phone Number(s)

Advanced Operation:

All messages are encapsulated in standard XML format. As per XML standard, it is required that the XML version declaration be included at the start of each message. Messages that do not conform to the standard will be ignored. In addition to the XML version declaration, every message must also specify the type of device (model) and its unique MAC ID (mac) in its root element using the <device> tag. For M4000-PRO, device class is "m4000" and the MAC is expressed with no formatting. An example message would thus look like:

```
<?xml version="1.0" ?><device class="m4000" id="1065a3030000">...</device>
```

This would be considered the "envelope" for all messages, where the "..." is to be considered the "contents" of the message.

There are three types of messages: event messages, information messages and command messages.

Event messages are sent in response to a change of device status or settings. It should be noted that events are not sent in reply to a query.

Command messages are set to the M4000-PRO to query information, change settings or initiate an action.

Information messages are sent from M4000-PRO in response to a query command.

Examples of the message format are provided in the table below.

Example Event Message	Example Command Message	Example Information Message
Event message for outlet bank 3 switched ON	Command to switch outlet bank 2 OFF	Snippet of the response to <sendinfo> query
<pre><?xml version="1.0" ?> <device class="m4000" id="1065a30000"> <event time="1403729752"> <settings time="1403729752"> <outlet id="3">1</outlet> </settings> </event> </device></pre>	<pre><?xml version="1.0" ?> <device class="m4000" id="1065a30000"> <command> <outlet id="2">1</outlet> </command> </device></pre>	<pre><?xml version="1.0" ?> <device class="m4000" id="1065a30000"> <info time="1403729752"> <sernum>12345678</sernum> <fwver>1.0.1</fwver> .. </info> </device></pre>

The following sections document the possible message content and it should be assumed that the contents are always enclosed by the "envelope" and that the "envelope" text will not be repeated, unless needed for clarity.

Action and Queries

Command messages are sent to the M4000-PRO to have it perform a task. The task can be to perform a physical action such as switching an outlet bank and is referred to as an action. When the task is to transmit data such as device status it is referred to as a query. Whether the task is an action or query, the message is classified as a command.

If the command is for an action such as switching an outlet bank, the M4000-PRO will not necessarily provide a response message. If it is desired to receive an acknowledgement of receiving the command, the optional "xid" attribute may be included in the <command> element. Command messages with the "xid" attribute expressed will return an acknowledgement enclosed in an <ack> element.

For example, when the message

```
<?xml version="1.0" ?><device class="m4000" id="1065a3030000"><command xid="123"><outlet id="1">0</outlet></command></device>
```

Is received by the M4000-PRO, it will respond with

```
<?xml version="1.0" ?><device class="m4000" id="1065a3030000"><ack xid="123"></device>
```

General Query Element Structure

All query command messages are contained within a <command> element. The M4000-PRO responds to the query with a set of elements enclosed in the <info>, <status> or <settings> element depending on the type of query. Every query contains a timestamp attribute "time". The timestamp is in standard UNIX time, up to 10 decimal digit characters and represents the number of seconds that have passed since January 1st 1970 GMT.

A sample query and response:	
Query	Response
<command><sendinfo/></command>	<pre><info time="1403729752"> <sernum>12345678</sernum> <fwver>1.0</fwver> <bootcodever>1.0</bootcodever> <ipaddr>3194548209</ipaddr> </info></pre>

Send Information Query

The Send Information query is used to retrieve the following system-level information from the M4000-PRO. Information elements are enclosed in the <info> element.

Query <sendinfo/>

Response

<info time="timestamp">	Time stamp of the data, provided in UNIX time
<sernum>serialnumber	Serial number
<fwver>firmwareversion	Firmware version
<bootcodever>bootcode	Boot loader firmware version
<ipaddr>ipaddress	IP address, provided as a 32-bit (base-10) decimal value

Send Status Query

The Send Status query is used to retrieve the following outlet status and electrical measurement information from the M4000-PRO. Status elements are enclosed in the <status> element.

Query <sendstatus/>

Response

<status time="timestamp">...	Time stamp of the data, provided in UNIX time
<voltage>volts	Measured RMS line voltage, 1 Vac precision
<amperage>amps	Measured total load current, 0.1 Ampere precision
<wattage>watts	Measured total power consumption, 1 Watt precision
<pwrva>voltamps	Measured volt-ampere consumption, 1 VA precision
<pwrfact>powerfactor	Measured load power factor, 0.01 precision
<voltpeak time = "timestamp"> >peakvoltage	Measured peak voltage, 1 Vac precision, occurred at time "timestamp"
<seq>sequencetype	Outlet sequencing status: 0 = no sequence, 1 = sequencing ON, 2 = sequencing OFF
<pwrcond>powercondition	Power Condition: 0 = normal, 1 = fault recovery, 2 = under voltage, 3 = over voltage
<wiringfault>wiringfault	Outlet wiring fault: 0 = no fault, 1 = reverse wiring or open ground fault
<triggersense>triggersense	DC trigger input usage: 0 = no signal cable connected, 1 = signal cable connected
<trigger>triggerstatus	DC trigger input status: 0 = DC trigger voltage not sensed; triggerstatus = 1 indicates DC trigger voltage sensed
<outlet id="outlet">state	Outlet bank state. Attribute "outlet" represents the outlet bank; 0 = outlet bank OFF, 1 = outlet bank ON
<tfilestate>	For Core Brands use only

Send Settings Query

The Send Settings query is used to retrieve the device settings from the M4000-PRO such as outlet bank delays & trigger enable and display brightness level. Settings elements are enclosed in the <settings> element.

Query <sendsettings/>

Response

<settings time="timestamp">...	Time stamp of the data, provided in UNIX time
<delay id="bank" act="action"> delaytime	Delay for outlet bank "bank" Action: 0 = turn off delay, 1 = turn on delay, 2 = power cycle delay Delay time, in seconds
<triggerena id = "bank"> trigenable	Trigger enable for outlet bank "bank" Trigger enable: 0 = DC trigger disabled, 1 = DC trigger enabled
<brightness>brightnesslevel	Brightness level, brightnesslevel out of 5 levels

General Command Element Structure

Command messages are contained within a <command> element.

A sample command and M4000-PRO action:	
Command	Response
<command><outlet id="2">0</outlet></command>	M4000-PRO turns outlet bank 2 OFF

Switch Outlet Bank

Command an outlet bank to turn ON or turn OFF

Command	<outlet>	Control an outlet bank
Attribute:	id = "bank"	Which outlet bank to control
Content	0 1	0 = turn outlet bank OFF 1 = turn outlet bank ON
Example:	<outlet id="2">0</outlet>	Turn OFF outlet bank 2

Cycle Outlet Bank

Command an outlet bank to turn OFF, wait for its power cycle delay time and then turn back ON.

Command	<cycleoutlet>	Power cycle an outlet bank
Attribute:	id = "bank"	Which outlet bank to control
Content	None	
Example:	<cycleoutlet id="1"/>	Power cycle outlet bank 1

Power Sequence

Command the M4000-PRO to initiate a power on/off sequence. For a turn on sequence, the outlet banks will turn on after their turn on delay time. For a turn off sequence, the outlet banks will turn off after their turn off delay time.

Command	<sequence>	Power sequence
Attribute:	None	
Content	0 1	0 = Initiate power OFF sequence 1 = Initiate power ON sequence
Example:	<sequence>1</sequence>	Initiate a power ON sequence

Reboot

Command the M4000-PRO to reboot all of its systems, equivalent to pulling the plug and plugging it back into an electrical outlet. Upon reboot, all outlets will turn off; outlets are restored to their on/off state prior to reboot; network connection is restored; connection to BlueBOLT is reestablished

Command	<reboot>	Reboot M4000-PRO
Attribute:	None	
Content	None	
Example:	<reboot/>	

Set Settings

This command is used to change one or more of the M4000-PRO configuration settings. All settings within the <set>...</set> are affected. It is not necessary to include all of the parameters when using this command.

Set Outlet Bank Delays

Command	<set><delay>	Set delay settings for an outlet bank
Attribute:	id="bank" act= 0 1 2	Set delay settings for an outlet bank Action: 0=OFF delay, 1=ON delay, 2=Power cycle delay
Content	delay	Delay time, in seconds, 65536 seconds max

Set Trigger Enable

Command	<set><triggerena >	Set the trigger enable for an outlet bank
Attribute:	id="bank"	Set delay settings for an outlet bank
Content	Act = 0 1	Action: 0=disable trigger, 1=enable trigger

Set Brightness

Command	<set><brightness>	Set the front panel LED brightness
Attribute:	None	
Content	1-5	Brightness level, out of 5 steps

Set Settings Example:

<pre>.. <command><set> <delay id="1" act="2">60</delay> <triggerena id="2">1</triggerena> <brightness>3</brightness> </set></command>...</pre>	Set bank 1 for 60 second power cycle delay Set bank 2 trigger enable to enabled Set brightness to level 3
--	---

EVENTS

Event messages are sent autonomously from M4000-PRO when some change occurs within the device – they are not replies to a query.

Subscribing to Event Messages

After start-up, M4000-PRO will not send any event messages. To receive event messages a command to “subscribe” to events must be sent.

The event subscription command is enclosed within the XML declaration and <device> element and is as follows:

```
...<commands><eventmgr><subscribe uri="ctrlsys://IPADDR:PORT"/></eventmgr></commands>...
```

IPADDR is the IP address and port number where the event messages should be sent. It may be a different IP address than the control system which sent the request.

PORT is the UDP port number.

Only one IP address / port event subscription is allowed.

For example, to have event messages sent from a M4000-PRO with MAC address 10-65-A3-03-FF-FF to a control system at IP address 192.168.0.127 listening on port 1726:

```
<?xml version="1.0" ?><device class="m4000" id="1065a303ffff"><eventmgr><subscribe uri="ctrlsys://192.168.0.127:1726"/></eventmgr></device>
```

The unsubscribe command follows the same format

```
...<commands><eventmgr><unsubscribe uri="ctrlsys://IPADDR:PORT"/></eventmgr></commands>...
```

General Event Element Structure

All event messages are contained within an <event> element, which will contain a timestamp attribute, “time”, and an event ID attribute, “evtid”. The time attribute is a UNIX timestamp, up to 10 decimal digit characters and represents the number of seconds that have passed since January 1st 1970 GMT. The evtid attribute is the numeric ID value of the event message, starting from 0 after each device start-up.

A sample **event** element: <event time="1234567890" evtid="123" subsid="1">...</event>

A subscriber ID, “subsid” is assigned to each event subscription.

A sample event message for outlet bank 2 switching ON:

```
...<event time="1234567890" evtid="123" subsid="1"><outlet id="2">1</outlet></event></device>
```

Event messages will be repeated until an acknowledgement message is sent back to M4000-PRO, or after a timeout period of approximately 20 minutes. The acknowledgement message must contain the same evtid and subsid as the event message.

The acknowledgement message syntax is: ...<command><eventmgr><ack evtid="123" subsid="1"></eventmgr></command></device>

Event Messages:

Outlet State Change

An Outlet State Change event is posted when any of the outlet banks turn ON->OFF or OFF->ON.

Element Tag:	<outlet>	
Attribute:	id = "bank"	"bank" is the affected outlet bank number
Content	0 1	0 = outlet bank is OFF 1 = outlet bank is ON
Example:	<outlet id="1">0</outlet>	Outlet bank 1 is OFF

Sequence Status

A Sequence Status event is posted when a power on or power off sequence is initiated or completed.

Element Tag:	<seq>	
Attribute:	None	
Content	0 1 2	0 = sequence done/finished/complete 1 = turn on sequence initiated 2 = turn off sequence initiated
Example:	<seq>0</seq>	Sequence has completed

Power Condition

A Power Condition event is posted when the unit enters or recovers from over-voltage or under-voltage shutdown mode.

Element Tag:	<powercond>	
Attribute:	None	
Content	0 1 2 3	0 = power normal 1 = fault recovery 2 = under voltage 3 = over voltage
Example:	<powercond>3</powercond>	Overvoltage condition

Wiring Fault

A Wiring Fault event is posted when a change to the outlet wiring condition is detected.

Element Tag:	<wiringfault>	
Attribute:	None	
Content	0 1	0 = no wiring fault detected 1 = wiring fault detected
Example:	<wiringfault>1</wiringfault>	Wiring fault detected

DC Trigger Jack Sensed

A DC Trigger Jack Sensed event is posted when a connector is inserted into or removed from the DC trigger input jack.

Element Tag:	<triggersense>	
Attribute:	None	
Content	0 1	0 = Trigger input was disconnected 1 = Trigger input was connected
Example:	<triggersense>1</triggersense>	Sensed that a connector was plugged into the DC trigger input

DC Trigger Status

A DC Trigger Status event is posted when the DC trigger input signal changes.

Element Tag:	<trigger>	
Attribute:	None	
Content	0 1	0 = Trigger voltage sensed ON->OFF 1 = Trigger voltage sensed OFF->ON
Example:	<trigger>1</trigger>	Trigger voltage sensed OFF->ON

Settings Changed

A Settings Changed event is posted when the device settings such as outlet bank delays, outlet bank trigger enable and display brightness is changed. Information for all settings is transmitted, not just for the individual settings that changed.

Element Tag:	<set>	
Attribute:	None	
Content	<delay>...</delay> <triggerena>...</triggerena> <brightness>...</brightness>	See Settings Event section for details
Example:	<set> <delay id="1" act="2">12</delay> <triggerena id="1"></triggerena> <brightness>2</brightness> </set>	Outlet bank 1-power cycle delay=12 sec Outlet bank 1-trigger enabled Brightness level 2 (out of 5 max)

Scheduled Action Fired

A Scheduled Action Fired event is posted when the M4000-PRO performs a scheduled operation.

Element Tag:	<schedmgr>	
Attribute:	None	
Content	<pre><fire> <day>daysofweek</day> <min>minuteofday</min> <command> <outlet id="bank">action</outlet> </command> </fire></pre>	<p>Scheduled days. See below. Elapsed minutes since midnight See the Outlet Command section for details</p>
Example:	<pre><schedmgr> <fire> <day>115</day> <min>550</min> <command> <outlet id="2">1</outlet> </command> </fire> </schedmgr></pre>	<p>Scheduled event fired scheduled for Monday-Friday at minute 550 of today (9:10AM) the event was a command for outlet 2 to turn ON</p>

The <day> element contains the *daysofweek* value for the days of the week the action is scheduled to fire. This element is a bit tricky in that the scheduled days are encoded in a 7-bit binary bitmap that is provided in decimal format. To process the data it must be converted from decimal to binary where each bit represents a day of the week the action is scheduled. Bit 0 represents Thursday.

Scheduled day(s) of the week	<i>daysofweek</i>	Binary
Thursday	1	0000001
Friday	2	0000010
Saturday	4	0000100
Sunday	8	0001000
Monday	16	0010000
Tuesday	32	0100000
Wednesday	64	1000000
Monday – Friday	115	1110011
Saturday-Sunday	12	0001100

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- (1) Reorient or relocate the receiving antenna.
- (2) Increase the separation between the equipment and receiver.
- (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- (4) Consult the dealer or an experienced radio/TV technician for help. Any special accessories needed for compliance must be specified in the instruction.

CAUTION: A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used. Use only shielded cables to connect RS-232 devices to this equipment.

CAUTION: Any changes or modifications not expressly approved by the guarantee of this device could void the user's authority to operate the equipment.

Contacting Tech Support

If you require technical support or equipment service, please contact Panamax Tech Support at 800-472-5555. You may also email info@Panamax.com.

All equipment being returned for repair must have a Return Authorization (RA) number. To get an RA number, please call Panamax Tech Support.

Before returning any equipment for repair, please be sure that it is adequately packed and cushioned against damage in shipment, and that it is insured. We suggest that you save the original packaging and use it to ship the product for servicing. Also, please enclose a note giving your name, address, phone number and a description of the problem.

