



INSTRUCTIONS FOR MODELS


CD521

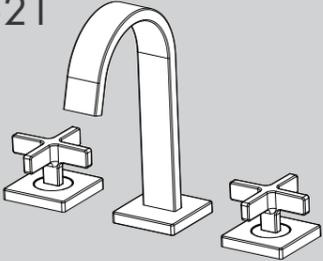

CD522

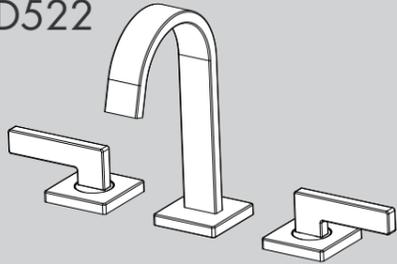

CD523

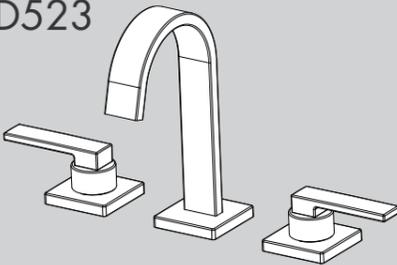

NEED HELP?

For additional assistance or service please contact:

SPEAKMAN®


800-537-2107

customerservice@speakman.com

www.speakman.com

92-CD5XX-04

TOOLS AND SUPPLIES

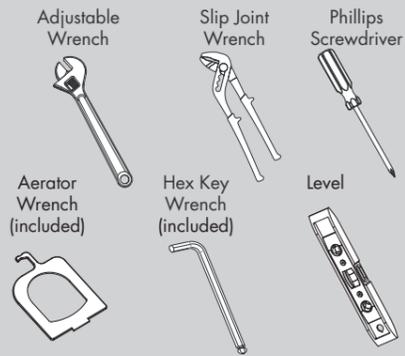

HELPFUL TOOLS & SUPPLIES:



IMPORTANT

- Do not over-tighten any connections or damage may occur.
- Be sure to read instructions thoroughly before beginning installation.
- This faucet has an operating range of 20-80 psi.

SAFETY TIPS

Cover your drain to prevent loss of parts. Be sure to wear eye protection while cutting pipe.


MAINTENANCE

Your new Speakman Product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. The use of harsh chemicals and abrasives on any of the Speakman custom finish products may damage the finish and void the product warranty. Please be sure to only use approved cleaners. Please contact Speakman for any clarification of acceptable cleaners.


WARRANTY

Warranty information can be found at: www.speakman.com


1 Remove Inlet Hose Assembly (1), Mounting Nut (2), Metal Washer (3), and Rubber Washer (4) from Spout.

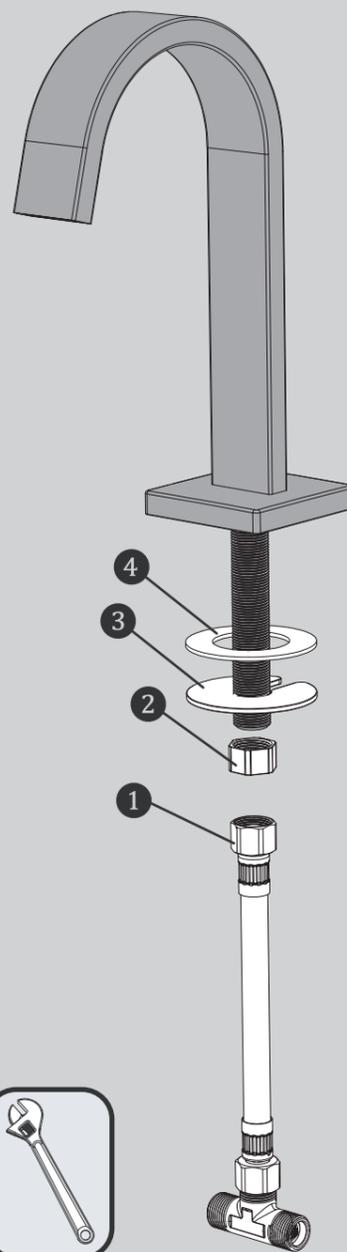


2 Remove Mounting Nut (1), Metal Washer (2), and Rubber Washer (3) from Cold Endbody Assembly. Repeat process for Hot Endbody Assembly.

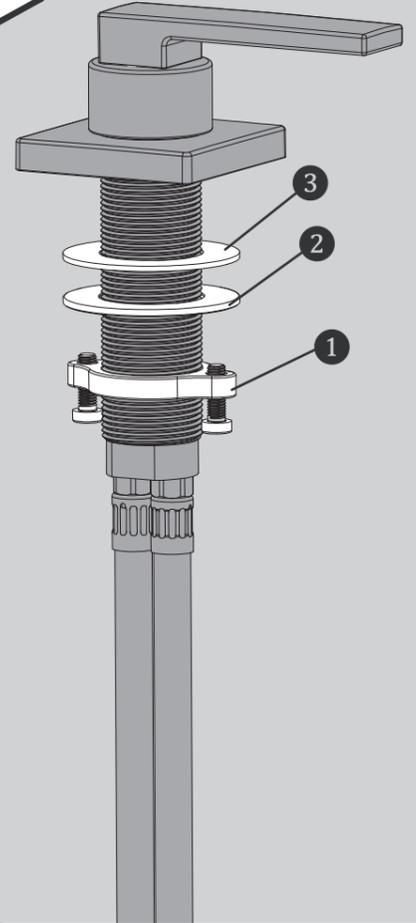


3 The "COLD" and "HOT" Endbody Assemblies are clearly marked. Place COLD Endbody Assembly through the appropriate hole in the counter top. Align Endbody Assembly so the Rubber Access Plug (1) is facing the rear. Repeat process for the HOT Endbody Assembly.

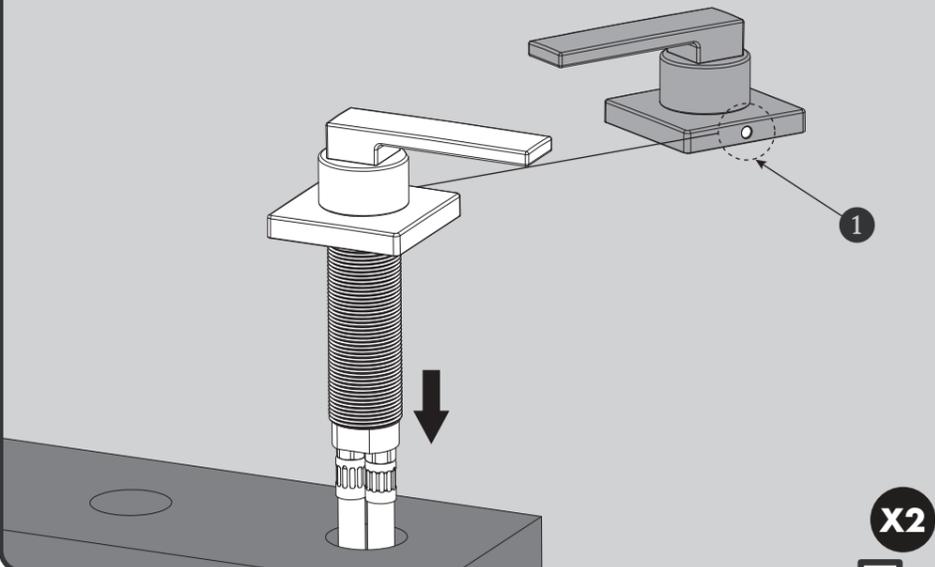


4 From below, reinstall the Endbody Rubber Washer (1), Metal Washer (2), and Mounting Nut (3). Loosely assemble at this time. Repeat process for the HOT Endbody Assembly.

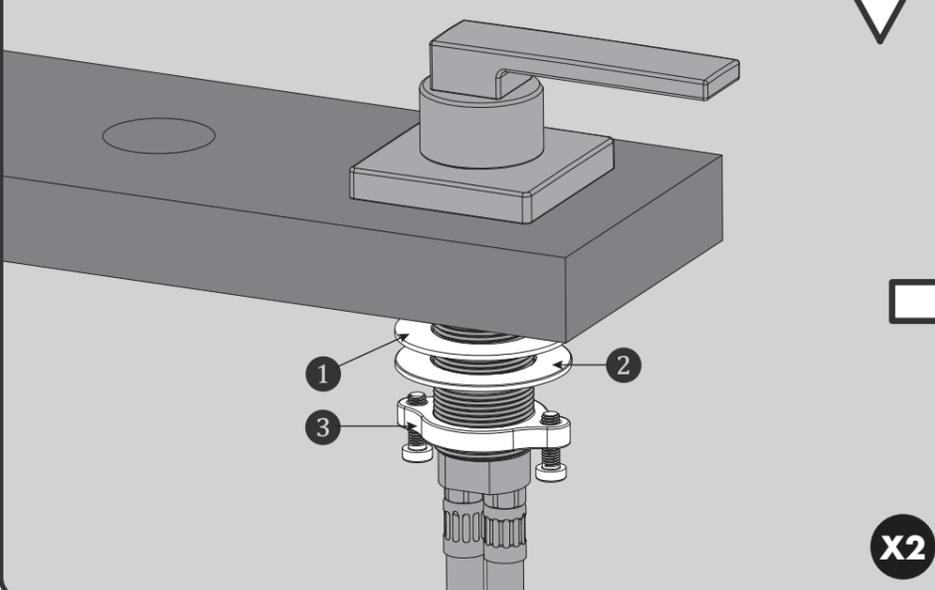


5 Place Spout Assembly through the center hole of counter top. From below, reinstall the Spout Rubber Washer (1), Metal Washer (2), and Mounting Nut (3). Loosely assemble at this time. Reinstall Inlet Hose Assembly (4)

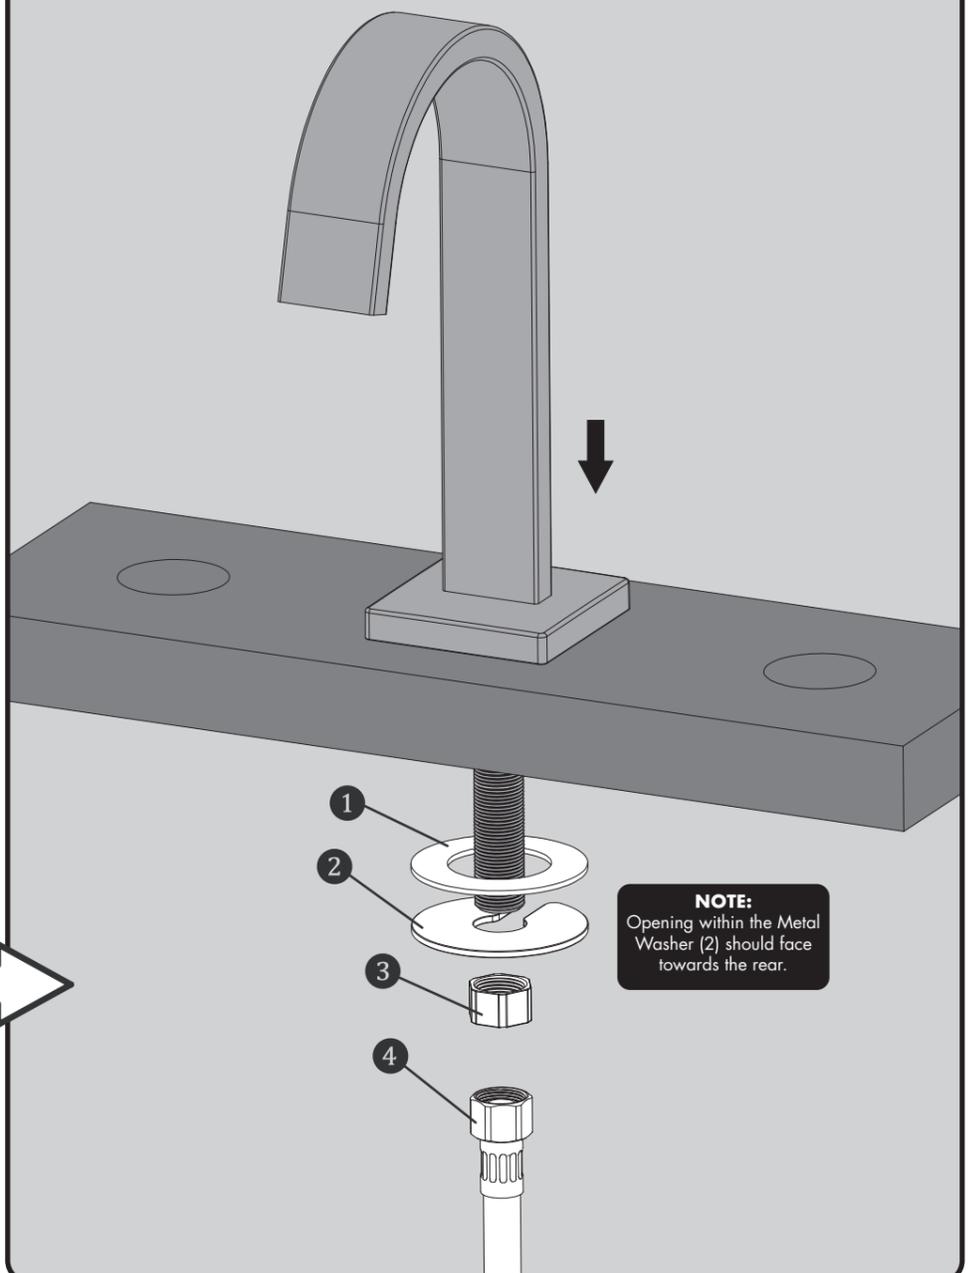


6 From above, align Spout and Handle bases so that they are aligned horizontally.

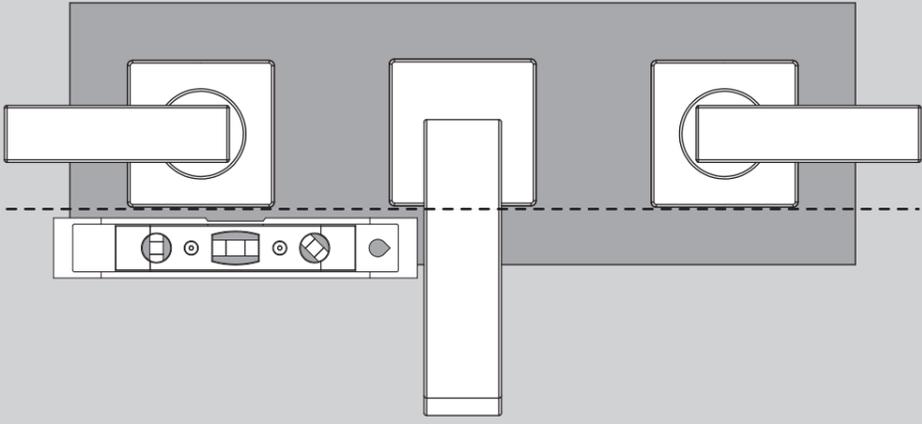


7 While maintaining the proper alignment, Wrench Tighten Spout Mounting Nut (1). Then snug Endbody Mounting Nuts (2). Final tightening of Endbody mounting is accomplished by Tightening the Mounting Screws (3) while using a Phillips Screwdriver. Wrench tighten Spout Inlet Hose (4).

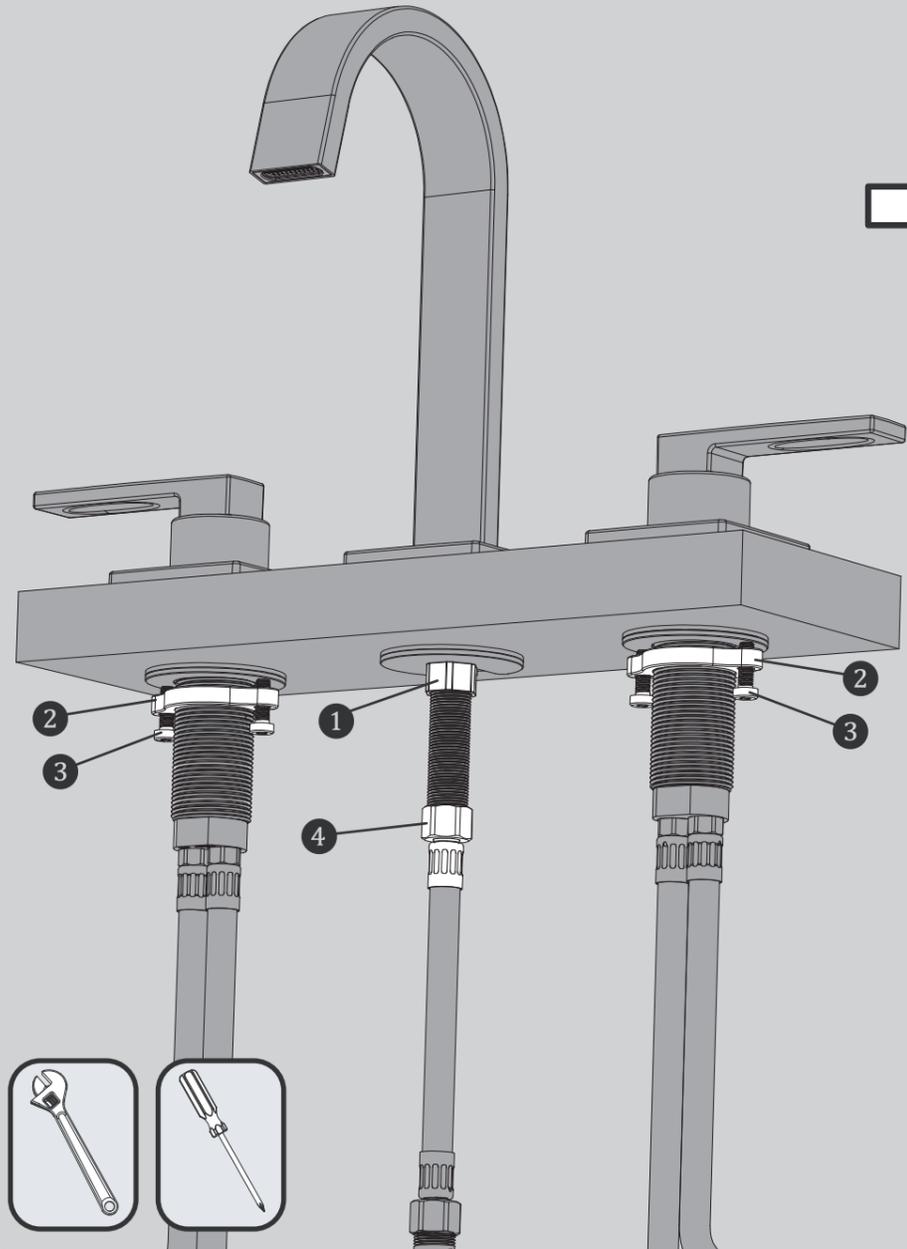


8 From below, install the Endbody Outlet Hoses (1) (shorter hose) to the Inlet Tee of the Spout (2). Wrench Tighten. Wrench tighten Spout Inlet Hose (3) to Inlet Tee (2)

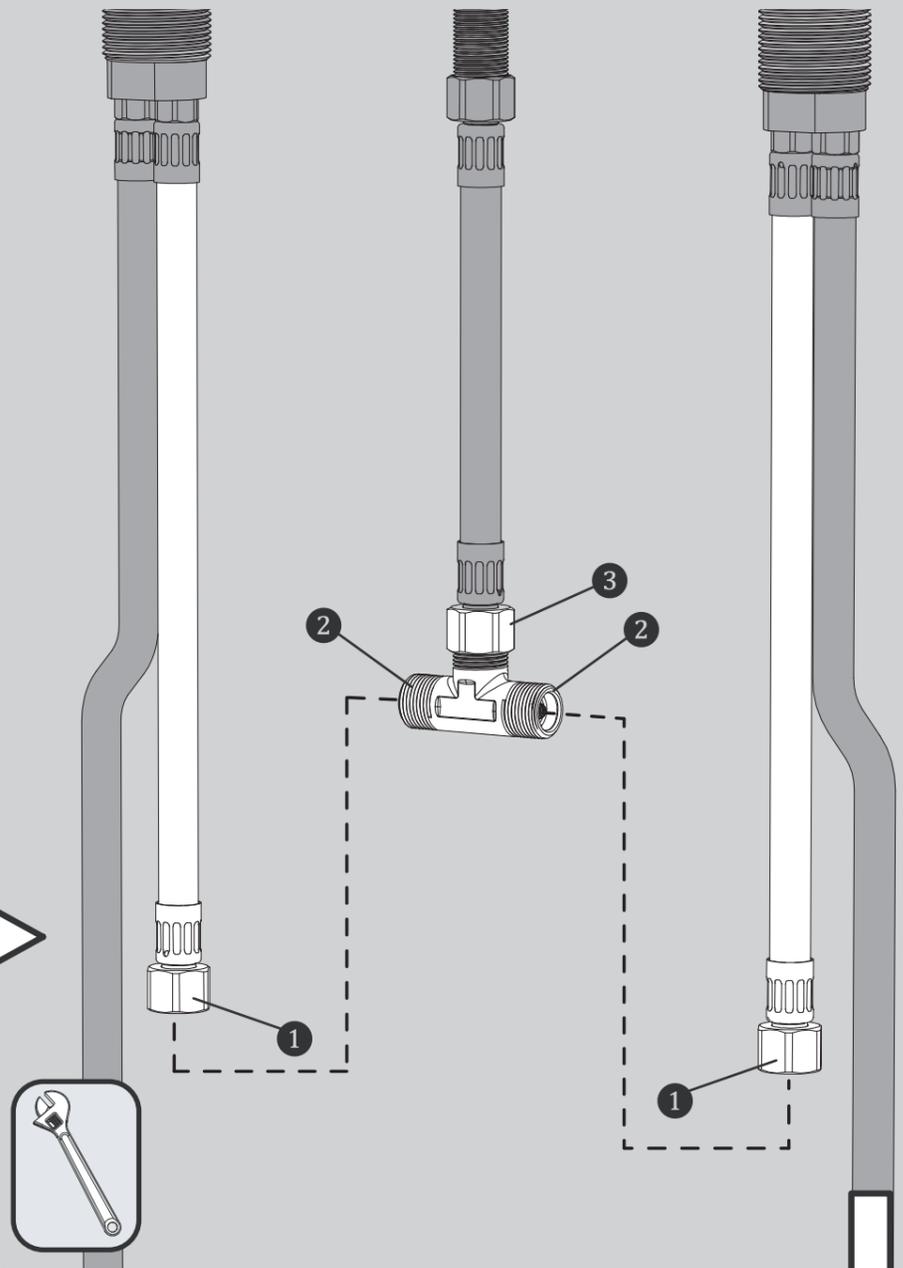

9 Make connections to water supplies. The inlet threads of the faucet are 9/16"-24 UNEF and will accept a 3/8" Compression Fitting. Wrench Tighten.

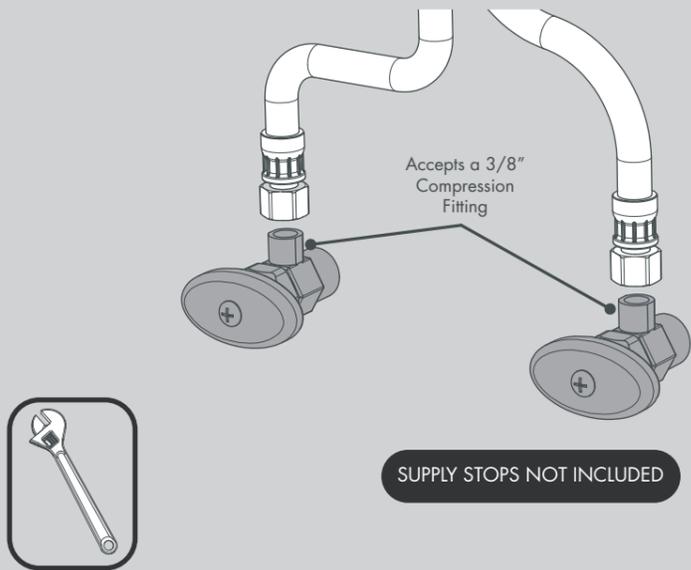

10 Insert Lift Rod (1) down into the hole in the flange in the back of the Spout. Orient Lift Rod as shown below.

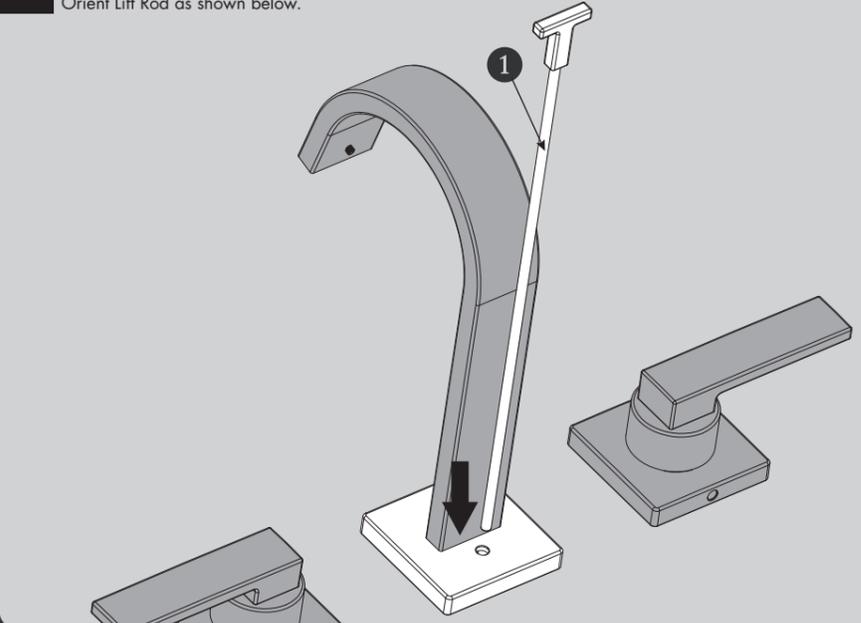

11 Remove Stopper **1**, Flange Nut **2**, and Flange Washer **3** from Drain Assembly.

12 From beneath, insert Drain Assembly through drain hole in sink. Attach supplied Flange Washer **1** or plumber's putty to the underside of the Flange **2**. Secure Flange **2** to the Drain Assembly. Align the Drain Assembly as shown below.

13 From beneath, secure Rubber Washer **1**, Plastic Washer **2**, and Mounting Nut **3**. Wrench tighten.

14 Remove Pivot Nut **1**, from Drain Assembly. Install Outer Pivot Washer **2**, and Pivot Rod **3**. Ensure that Inner Pivot Washer **4** is retained in Drain Assembly. Insert Pivot Rod into Drain Assembly and install Stopper **5** as non-removable. Secure Pivot Rod to Drain Assembly by tightening Pivot Nut **1**.


15 Place one end of Spring Clip **1**, on Pivot Rod **2**. Insert Pivot Rod **2** through a hole in the Lift Rod Strap **3**. Secure with Spring Clip **1**.

16 Place Drain into the open position by pressing downward on the Pivot Rod **1**. Insert Lift Rod **2** into Strap **3**. Adjust height of Lift Rod **2**, and tighten Thumb Screw **4**.

17 Additional adjustments can be made to ensure a proper seal between the Drain Stopper **1** and Drain Assembly. Remove Pivot Nut **2**, from Drain Assembly. Slide out Pivot Rod Assembly **3**. Remove Drain Stopper **1**. Additional adjustments can be made by either threading in or out the eyelet portion of the Drain Stopper **1**.

18 Turn on water supplies and flush both COLD and HOT cartridges for one minute, while checking for leaks. Return Handles to closed position when complete.

19 Align threaded hole of Aerator towards the rear as shown above. Install Aerator and secure into position using the included Hex Wrench.

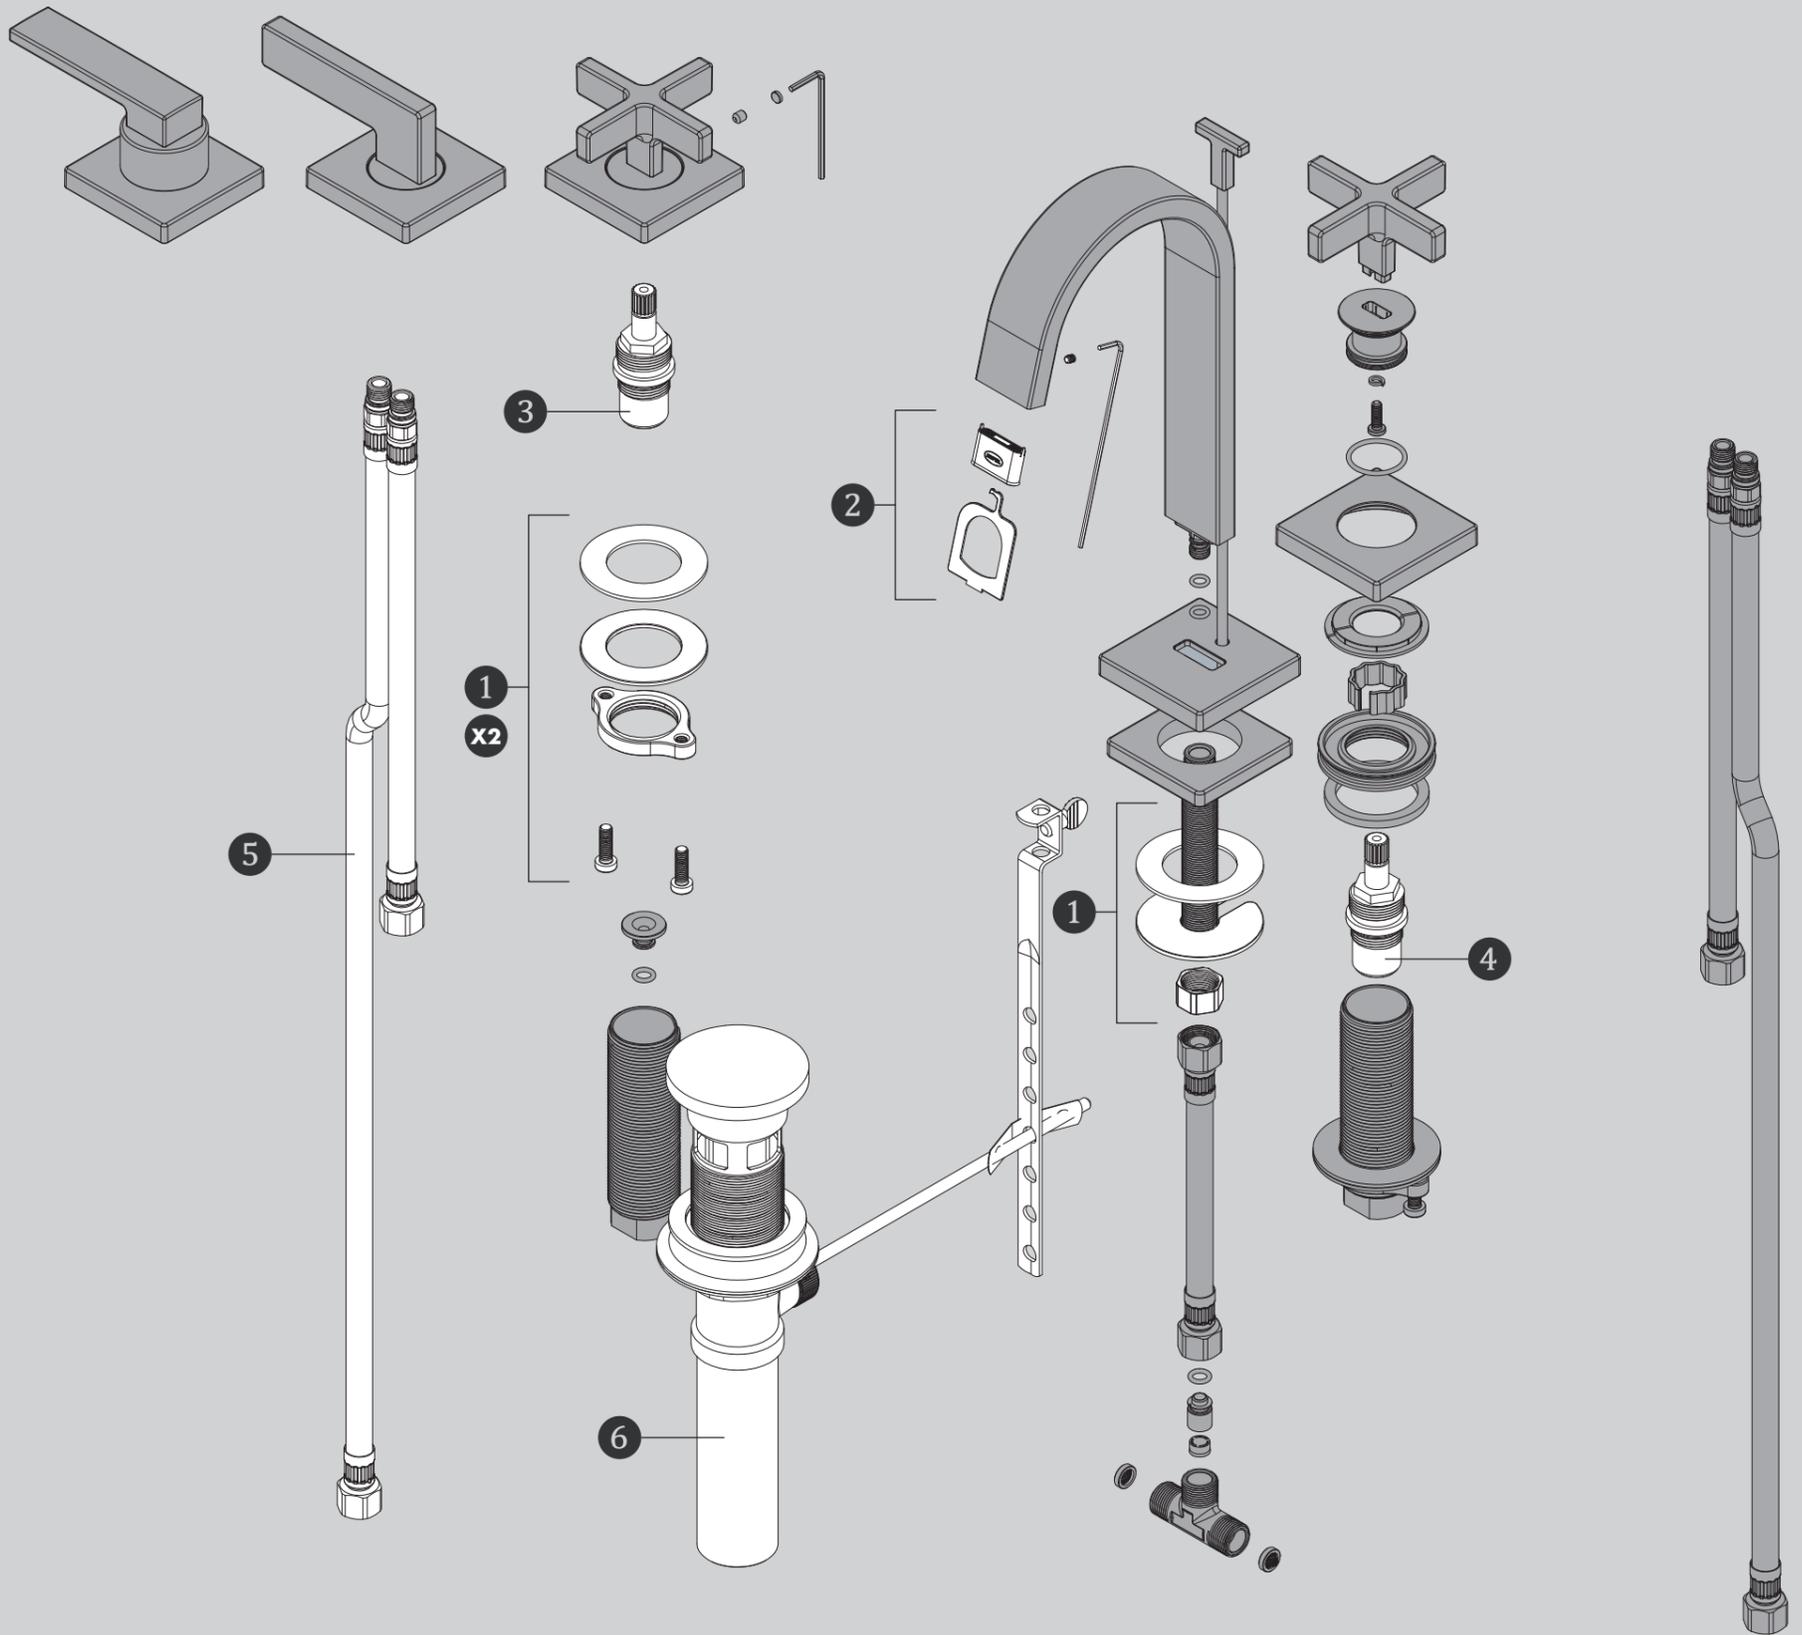

ITEM NO.	PART NO.	DESCRIPTION
1	RPG05-106848	MOUNTING HARDWARE
2	RPG05-106849	AERATOR BAG GROUP
3	RPG05-106850	HOT WATER REPLACEMENT CARTRIDGE
4	RPG05-106851	COLD WATER REPLACEMENT CARTRIDGE
5	RPG63-106852	S/S BRAIDED SUPPLY HOSE REPLACEMENT GROUP
6	S-3357-XX (XX = FINISH)	REPLACEMENT "LIFT ROD" DRAIN ASSEMBLY

CD521 ROUGH-IN DIAGRAM

SPEAKMAN®

NOTES:

COMPLIANCE:

ASME A112.18.1/CSA B 125.1
 AB1953
 NSF 372
 NSF 61

FLOW:


Flow Rate: 1.2 gpm
 Flow Type: Aerated

CONNECTIONS:


For flexible hose connection
 Hot Supply- 9/16-24UNEF-2B
 Cold Supply- 9/16-24UNEF-2B

Contractor to supply necessary connections to the inlets of the end bodies.


LAVATORY ROUGH-IN

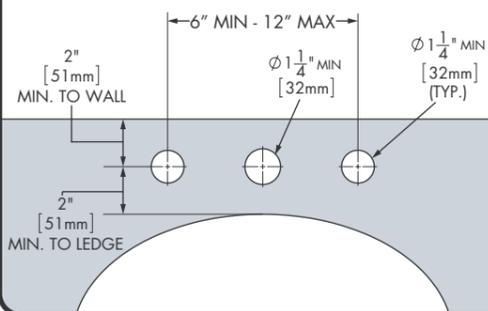

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE.

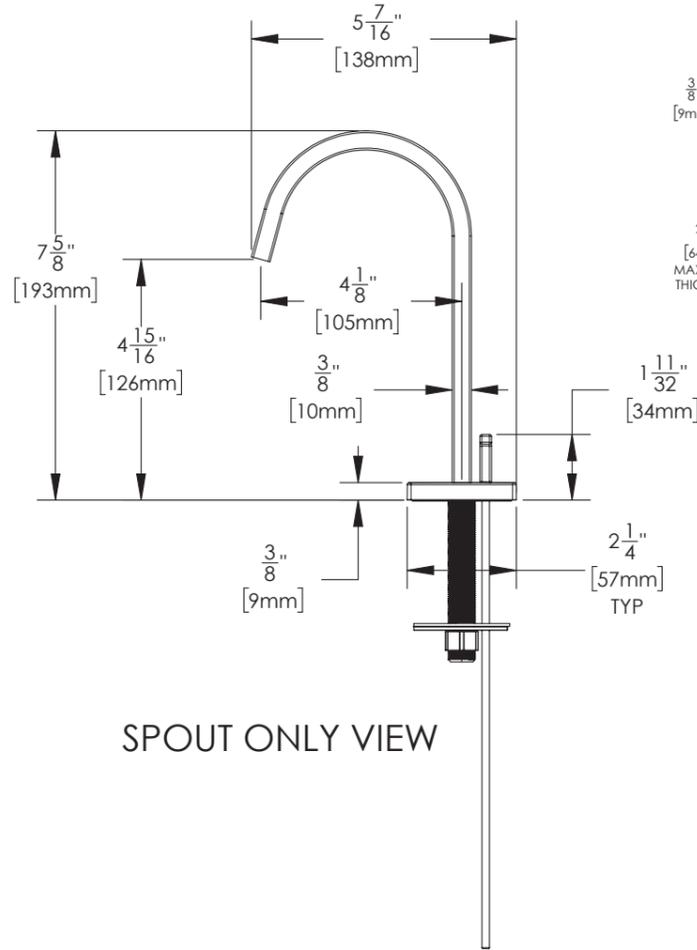

SPOUT ONLY VIEW

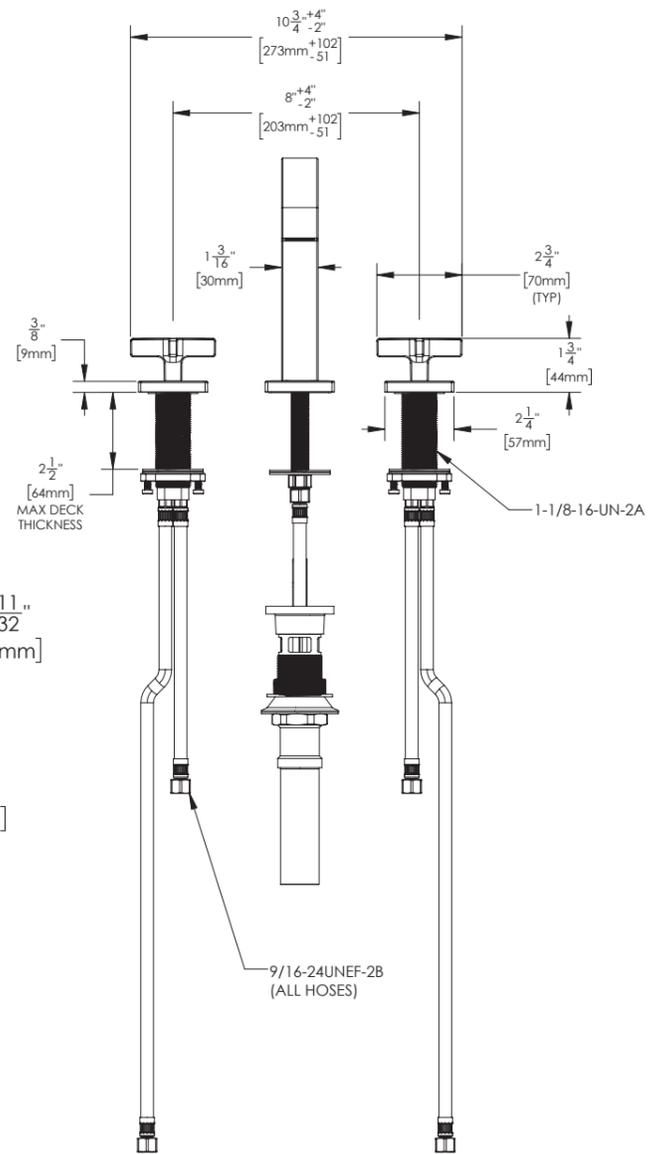

CD522 ROUGH-IN DIAGRAM

SPEAKMAN®

NOTES:

COMPLIANCE:

ASME A112.18.1/CSA B 125.1
 AB1953
 NSF 372
 NSF 61
 ADA Compliant ♿

FLOW:


Flow Rate: 1.2 gpm
 Flow Type: Aerated

CONNECTIONS:


For flexible hose connection
 Hot Supply- 9/16-24UNEF-2B
 Cold Supply- 9/16-24UNEF-2B

Contractor to supply necessary connections to the inlets of the end bodies.


LAVATORY ROUGH-IN

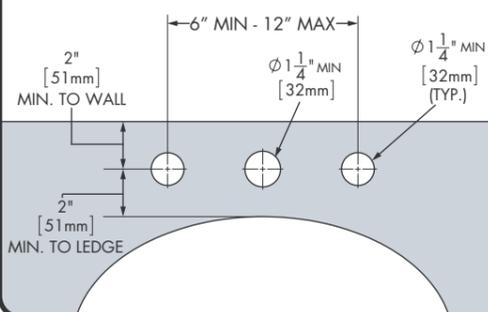

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE.

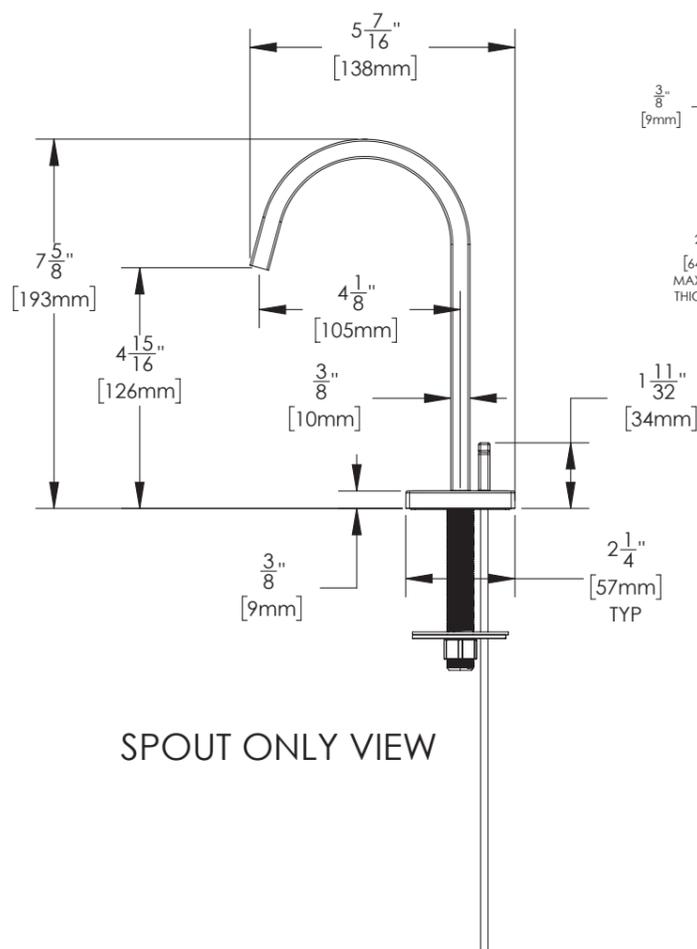

SPOUT ONLY VIEW

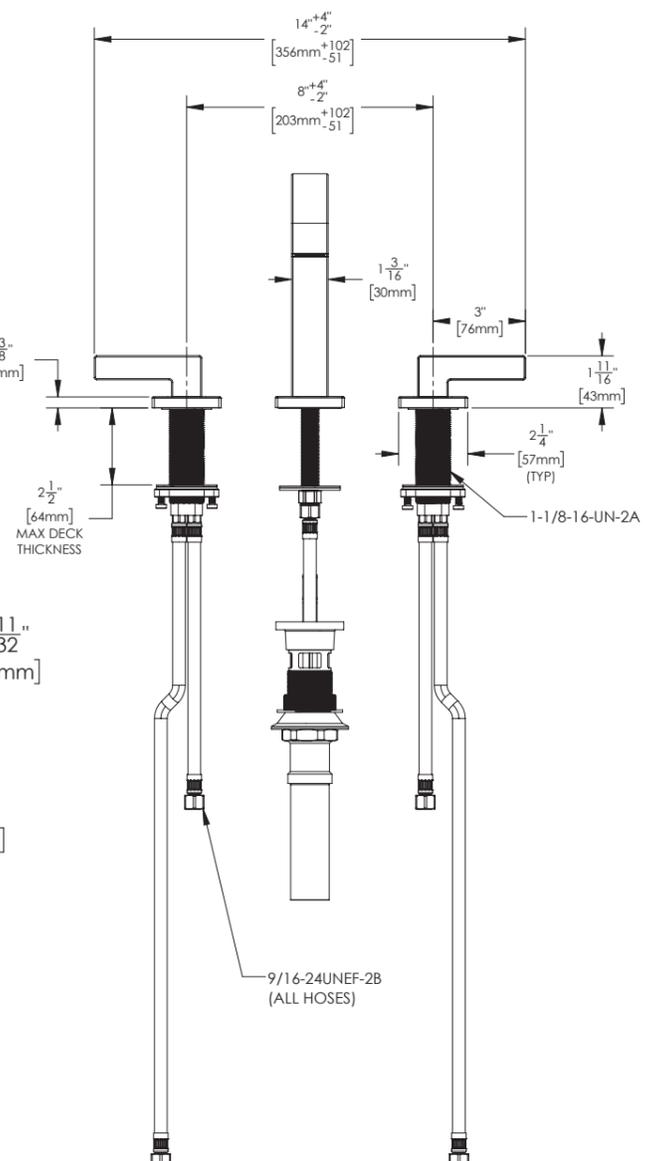

NOTES:

COMPLIANCE:

ASME A112.18.1/CSA B 125.1
 AB1953
 NSF 372
 NSF 61
 ADA Compliant ♿

FLOW:


Flow Rate: 1.2 gpm
 Flow Type: Aerated

CONNECTIONS:


For flexible hose connection
 Hot Supply- 9/16-24UNEF-2B
 Cold Supply- 9/16-24UNEF-2B

Contractor to supply necessary connections to the inlets of the end bodies.

LAVATORY ROUGH-IN

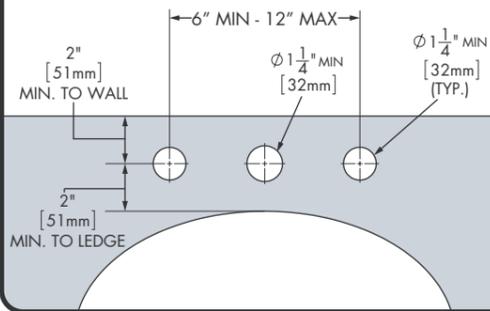

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE.

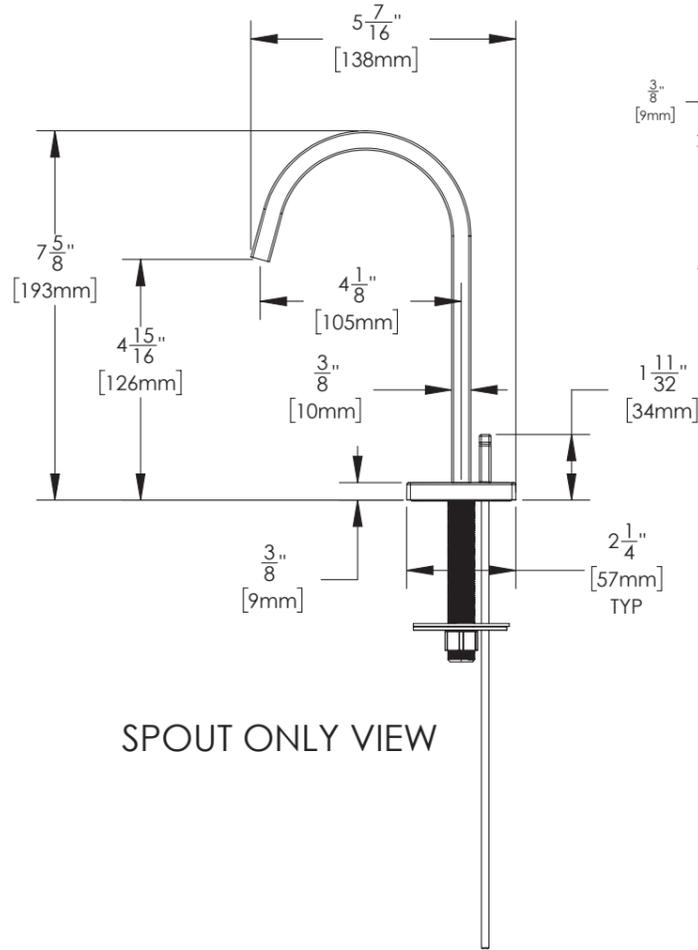

SPOUT ONLY VIEW

