homestyles[®]

4514-95

Kitchen Cart


IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



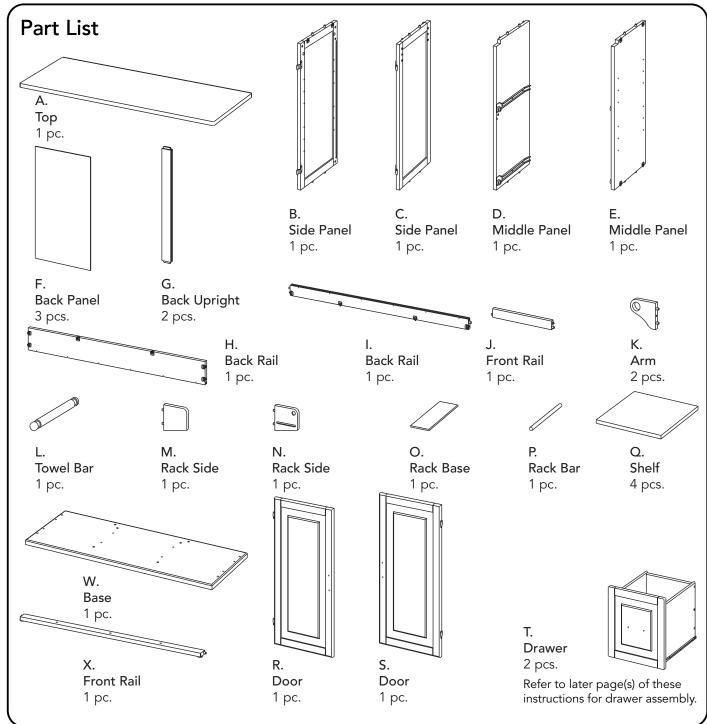

Tool(s) required for assembly: Phillips screwdriver

Assembly Instructions 2/9

Hardware List



Hex Wrench 1 pc.



Small Hex Wrench 1 pc.



01 Head Cap Bolt 4 pcs. (+1 extra)



02 Head Cap Bolt (long) 4 pcs. (+1 extra)



03 Locking Caster 2 pcs.



Non-Locking Caster 2 pcs.



05 Head Cap Bolt for Caster 16 pcs. (+1 extra)



06 Magnet 2 pcs.



07 Wood Screw for Magnet 4 pcs. (+1 extra)



08 Handle 4 pcs.



09 Machine Screw 8 pcs.



10 Wood Screw (long) 24 pcs. (+1 extra)



11 Wood Screw (short) 20 pcs. (+1 extra)



12 Flat Head Screw 3 pcs. (+1 extra)



13 Adjustable Pin 16pcs. (+1 extra)

Assembly Instructions 3/9


IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

STEP 1


Assemble Rack Sides (M), (N), Rack Base (O) and Rack Bar (P).


Note: Spice Rack and Towel Bar are interchangeable and may be installed on either side of the unit.

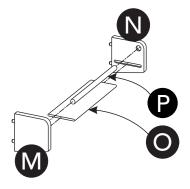

STEP 2

Attach unit to Side Panel (C) with 2 pcs. of 01.

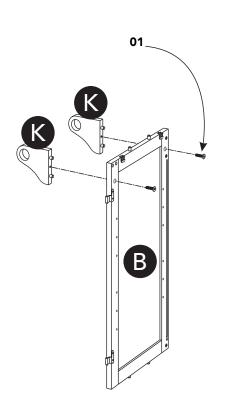


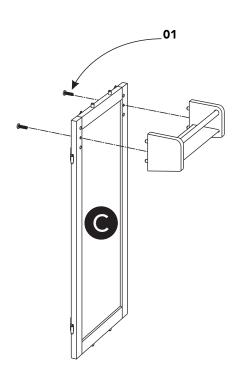

STEP 3

Attach Arms (K) to Side Panel (B) with 2 pcs. of **01**.

Assembly Instructions 4/9

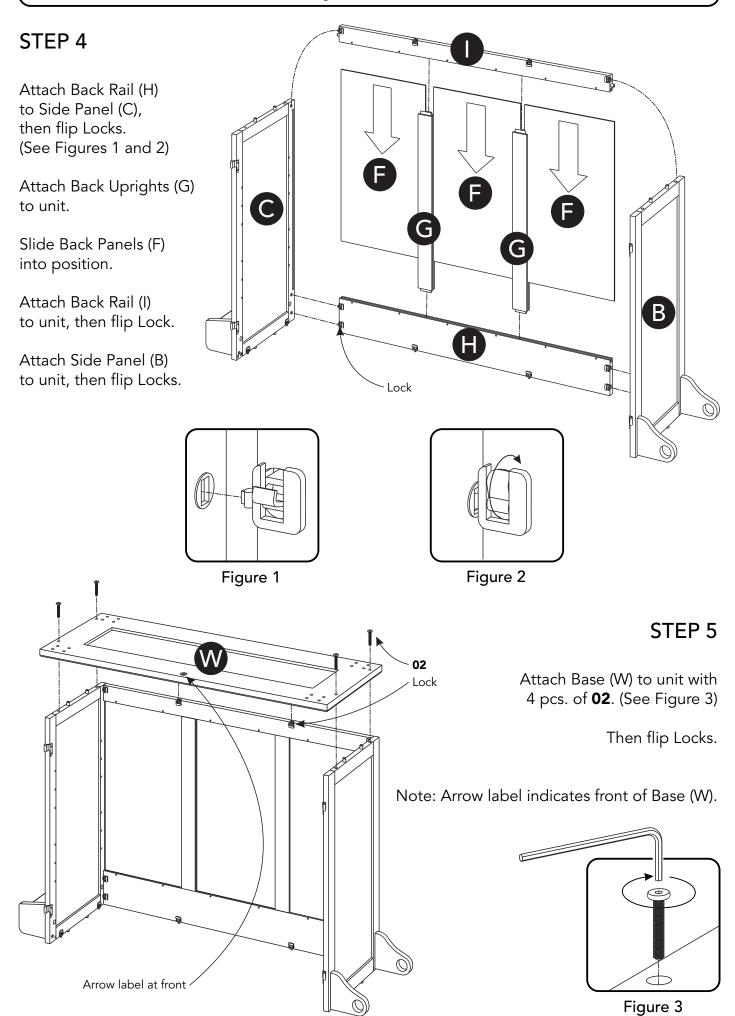

Assembly Instructions 5/9

STEP 6

Attach 2 pcs. of **03** and 2 pcs. of **04** to unit with 16 pcs. of **05**.

Attach **03** at front. (See Figure 4)

Note: Arrow label indicates front of unit.



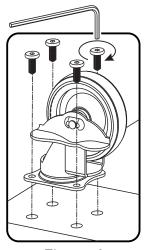


Figure 4

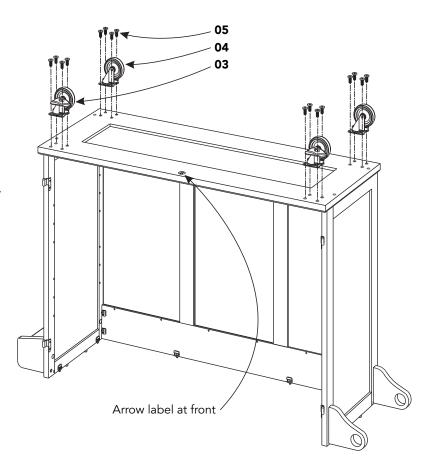

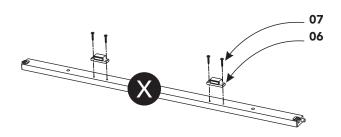

STEP 7

Attach 2 pcs. of **06** to Front Rail (X) by inserting 4 pcs. of **07** into pre-drilled holes, then tighten. (See Figure 5)




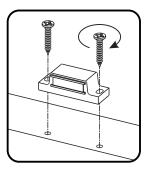


Figure 5

Assembly Instructions 6/9

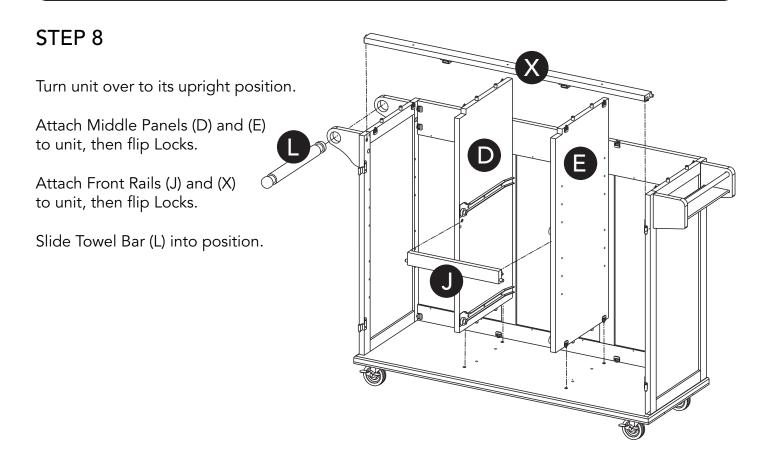

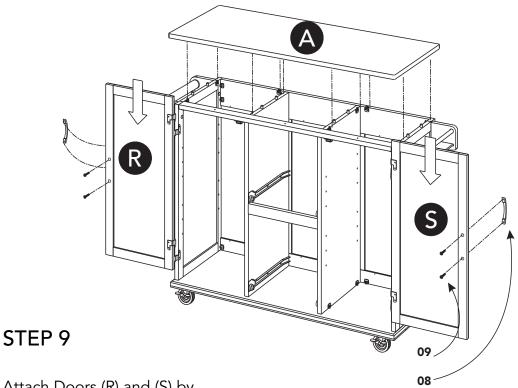

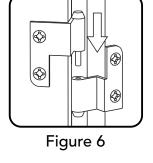

Attach Doors (R) and (S) by sliding door hinges into side panels hinges. (See Figure 6)


Attach 2 pcs. of **08** to Doors (R) and (S) with 4 pcs. of **09**. (See Figure 7)


Figure 7

Attach Top (A) to unit, then flip Locks.

Assembly Instructions 7/9

Drawer (T)

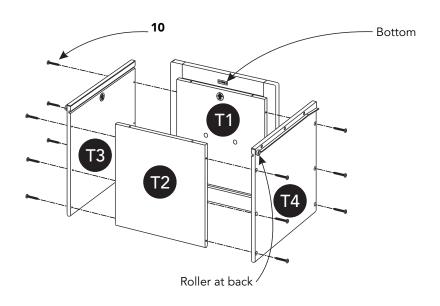

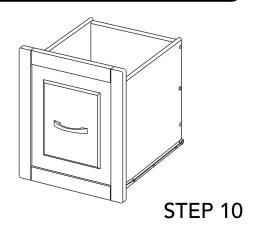


Attach Drawer Front (T1) and Drawer Back (T2) to Drawer Side (T3) with 6 pcs. of **10**.


Attach Drawer Side (T4) to unit with 6 pcs. of **10**.

STEP 11

Slide Drawer Bottom (T5) into groove.


Attach Drawer Bottom (T5) to unit with 4 pcs. of **11**.

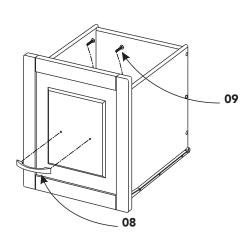

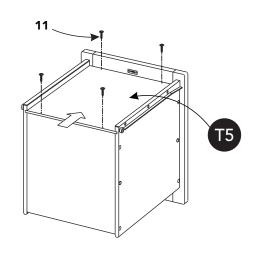

STEP 12

Attach **08** with 2 pcs. of **09**.

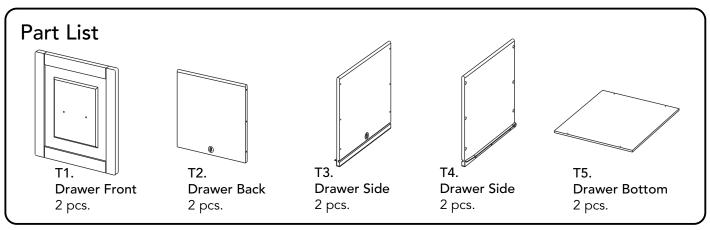

Assembly Instructions 8/9

STEP 13

Close the doors, then adjust doors gaps look proportional by move the unit (See Figure 8)

Open the doors slowly.

Insert 12 pcs. of **11** into pre-drilled holes in unit, then tighten.



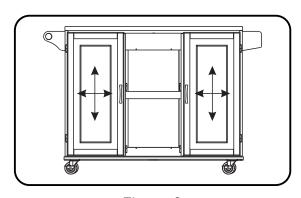


Figure 8

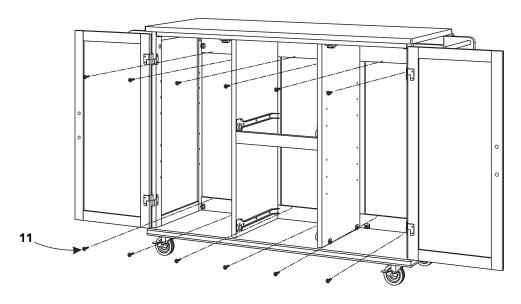


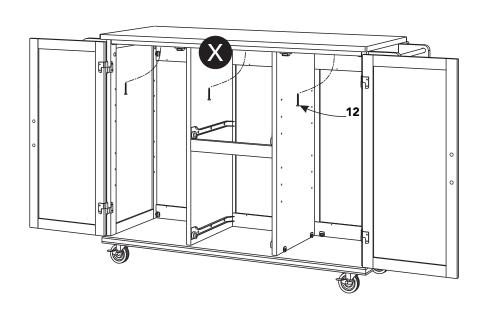

STEP 14

Insert 3 pcs. of **12** into pre-drilled holes of Front Rail (W), then tighten.

Assembly Instructions 9/9

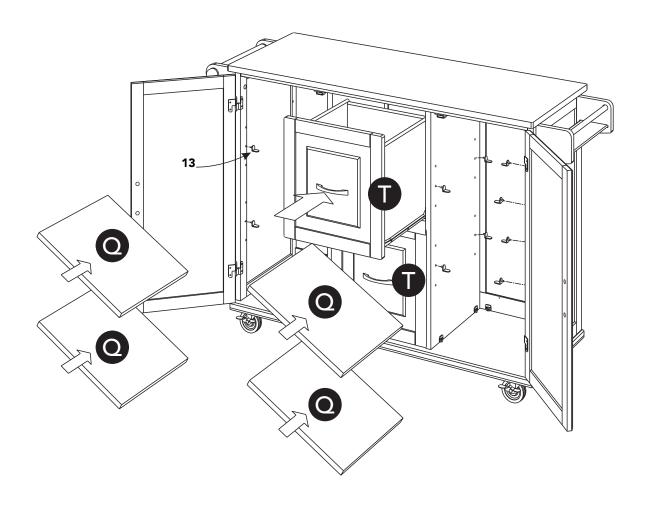

STEP 15

Insert 16 pcs. of **13** into side panel and middle panel at desired level. (See Figure 9)

Place Shelves (Q) into position.

Slide Drawers (T) into position.

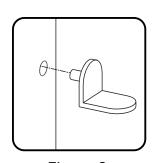


Figure 9

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



homestyles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.