

Carpet Extraction is a restorative process intended for removal of built-up soil from the carpet fiber and carpet backing. When incorporated with a proper interim maintenance schedule, carpet extraction should be preformed once or twice a year.



People

- Team: 1 2 People
- Safety Equipment Gloves, eye protection, please refer to product Safety Data Sheets. Wet Floor Signs.
- Pre-Training Since carpet renovation (extraction) is performed at a very low frequency and can involve the moving of heavy furniture, it is important to review the proper procedures and safety measures before proceeding with this maintenance activity.



Product and/or Equipment

- Vacuum Upright vacuum preferred
- Vacuum Detail Tool
- Wet Floor Signs
- Trident Carpet Extractor
- Hillyard Cleaning Companion®
- Trident Carpet Fan(s)
- Hillyard Spotting Kit
- Hillyard Carpet Pre-Spray
- Hillyard Extraction pH Rinse or Carpet pH Rinse
- Hillyard Defoamer II



Procedures

Remove furniture and walk-off mats.

Preferably with an upright vacuum thoroughly vacuum carpet, using the detail tool to vacuum all floor to wall junctions.











Restorative Extraction - Two Step Method, Preferred

Place Wet Floor Signs at all carpet to hard floor junctions.

Use the Hillyard Spotting kit and Spotting chart to address any obvious discolored stains in the carpet.

Dilute Hillyard Extraction pH Rinse into the extractor solution tank at a rate of 2 oz. / gallon of water or dispense Hillyard Carpet pH Rinse from an Arsenal dispenser into the solution tank.

Dispense 4 – 6 oz of Hillyard Defoamer II into the recovery tank.

Using a Hillyard Cleaning Companion (CC17 or C3XP) pre-spray the carpet with Hillyard Carpet Pre-Spray at a rate of 600 – 1000 sq. ft. per diluted gallon. Allow the cleaning solution to dwell for five minutes.

Run extractor over carpet, engaging the solution supply, brushes and vacuum; using a 25 – 50% overlap with each pass of the extractor.

Position carpet fan(s) to allow sufficient airflow to promote quick drying of carpet.

Empty solution tank and recovery tanks, thoroughly rinse out recovery, also remove and rinse extractor spray nozzles.

Once carpet is dry, remove wet floor signs.







