


OWNER'S MANUAL

12" OSCILLATING TABLE FAN

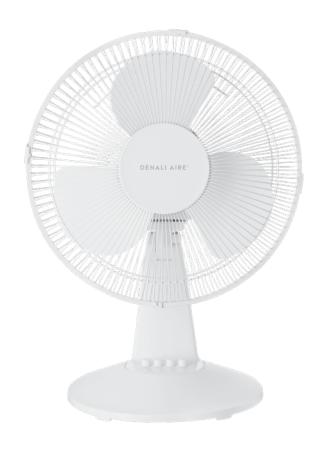

SAFETY

SAFETY GUIDELINES

When using any electrical appliances, basic safety precautions should always be followed. Failure to follow these safety guidelines may result in personal injury, property damage, fire or shock.

A WARNING

- Do not use this fan with any solid state speed control device.
- This unit has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to bypass this safety feature.
- Use only a dedicated, grounded 115-120V AC outlet, making sure this unit is plugged in firmly and completely. Plug and unplug the unit with dry hands only.
- This fan is not intended to be used by children or persons with reduced physical, sensory or mental capabilities, without adult instructions or supervision.
- · Do not leave the fan running unattended.


READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFETY INFORMATION

- Important information about the cord and plug below:
 - This fan employs an overload protection fuse in the plug. A blown fuse indicates an overload or short-circuit. If the fuse blows, unplug the fan from the outlet. Replace the fuse according to the User Servicing Instructions (on page 3), plug the unit back in and turn it on. If the fuse blows again, the fan may have a short-circuit; leave it unplugged and contact Customer Service.
 - Check the power cord and plug for damage. If the cord or plug are damaged, contact Customer Service before using the unit.
 - Do not cover the cord with carpeting, throw rugs, runners, or similar coverings. Do not run the cord under furniture or appliances. Keep the cord away from any areas where it can be stepped on or tripped over.
- 2. The fan should only be operated under the rated voltage.
- 3. The fan must be assembled before plugging it into the wall outlet.
- 4. Never insert fingers, pencils, or any other objects through the guard when the fan is running.
- 5. Unplug the fan when moving it from one place to another, before removing the guards for cleaning, and when it's not in use.
- **6.** Position the fan on a stable, level surface to avoid overturning during operation.
- 7. Do not use fan in window; rain may create an electric shock hazard.

PARTS / OPERATION

PARTS DIAGRAM

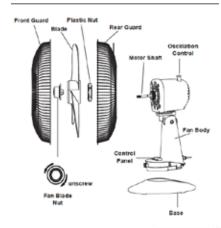

BASE ASSEMBLY



- 1. Match the locking tab to the base, clicking it into position.
- 2. Turn the lock bolt clockwise (to the right) to secure the base (Fig. 1).

ASSEMBLY OF BLADE AND GUARD

- Take the fan blade nut out of the bag, then remove the plastic nut by turning it counterclockwise (to the left).
- Set the rear guard into the proper position with the handle up.
- 3. Screw the plastic nut clockwise, until the guard is securely attached.
- 4. Install the blade onto the shaft until the retaining pin fits into the notch on the blade.
- 5. Screw the fan blade nut onto the motor shaft counterclockwise.
- **6.** Mount the front guard and join both guards together using the clips.

OPERATION INSTRUCTIONS

Speed Control: Change the speed using the button switches on the Control Panel. (0-Off 1-Low 2-Medium 3-High)

Oscillation Control: To make the fan oscillate, push down the knob located on top of the motor housing. To stop the oscillation, pull up on the knob once the desired position is reached.

Tilting Control: Tilt the fan head forward or backward to adjust the vertical angle of airflow. A clicking noise will sound when adjusting the tilt, this is normal.

USER SERVICING INSTRUCTIONS

 Grip the plug and remove it from the outlet. Never pull on the cord to remove it.



- Open the fuse cover by sliding the access cover found on top of the plug towards the blades.
- Remove the fuse carefully by pushing the fuse from one side to the other, or turning the fuse holder over.
- 4. Risk of fire: Use only 2.5 Amp, 125 Volt fuses (provided) as replacements.
- 5. Close fuse cover by sliding the access cover on top of the plug to hide it.
- Risk of fire: Do not replace the plug as it contains a safety device (fuse) that should not be removed. Contact customer service if the plug, or cord, is damaged.

Notice: To avoid the risk of damage or personal injury, when replacing a fuse, don't plug in or turn on the unit until the access cover has been closed.

If you're unable to insert the fuse into the plug, make sure it's being inserted the correct way.

MAINTENANCE INSTRUCTIONS

The fan contains no serviceable parts. To reduce the risk of electrical shock, do not attempt to open the motor.

- Before cleaning and assembling, make sure the fan is unplugged.
- To ensure adequate air flow to the motor, keep the vents on the motor housing free from dust, dander, etc. Once unplugged, use a vacuum to clean these vents. Do not disassemble the fan to remove any dust.
- Clean the outer surfaces using a mild detergent or solvents to avoid damage to the surface. Do not use the following cleansers: gasoline, alcohol, thinner.
- Do not allow water or other liquids to get into the motor housing or interior parts.

CLEANING

- Turn off and unplug the unit from the wall outlet before cleaning.
- Clean plastic parts with mild soap and water using a soft cloth or sponge, gently removing all soap film with clean water.
- Do not allow water or other liquids to get inside the motor or interior parts.
- Dry all parts completely before reassembling the fan and plugging it back in.

NOTE: Proof of purchase is required for all warranty claims.

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.



5401 Dansher Road Countryside, IL 60525



THANK YOU FOR YOUR PURCHASE!

As a small business, reviews are everything!