 


Bunk Bed

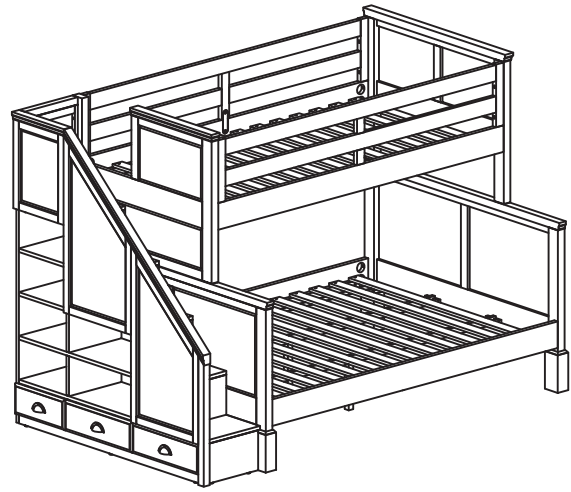

 
IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.


Part List




L1.
Stair
1 pc.

 


L2.
Stair
1 pc.

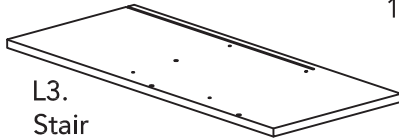 


L3.
Stair
1 pc.

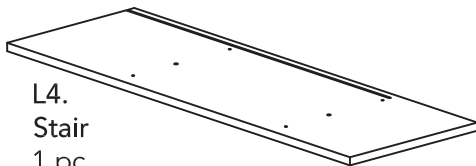 


L4.
Stair
1 pc.

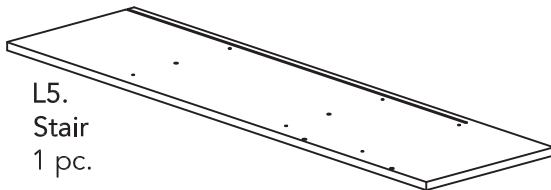 


L5.
Stair
1 pc.

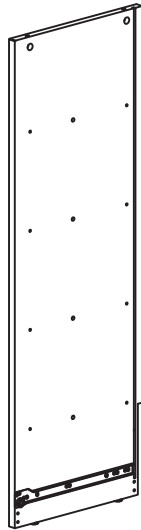 

 
M.
Side Panel
1 pc.

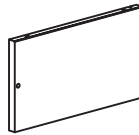


N1.
Riser
2 pcs.

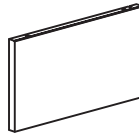 


N2.
Riser
2 pcs.

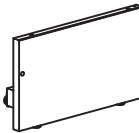 

N3.
Riser
1 pc.

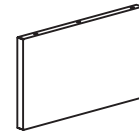 

 
O.
Divider
4 pcs.

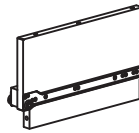


P.
Middle Panel
2 pcs.



 
Q1.
Back Panel
1 pc.

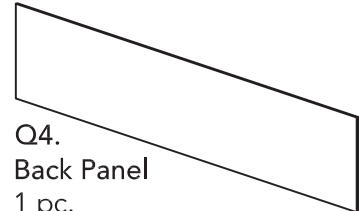


Q4.
Back Panel
1 pc.

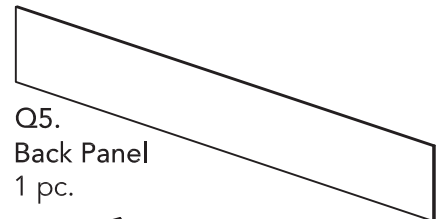 


Q5.
Back Panel
1 pc.

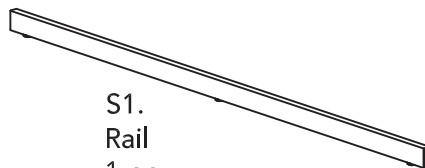 

S1.
Rail
1 pc.

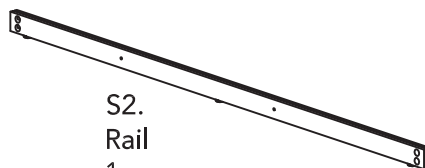 

S2.
Rail
1 pc.

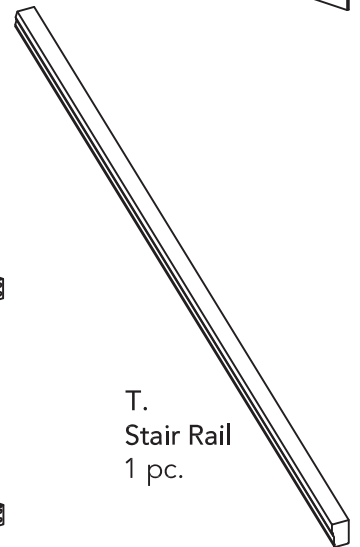 

T.
Stair Rail
1 pc.

For assembly see instructions in carton 20 05520 0565.

Home Styles Customer Service: www.homestyles-furniture.com,
 servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319