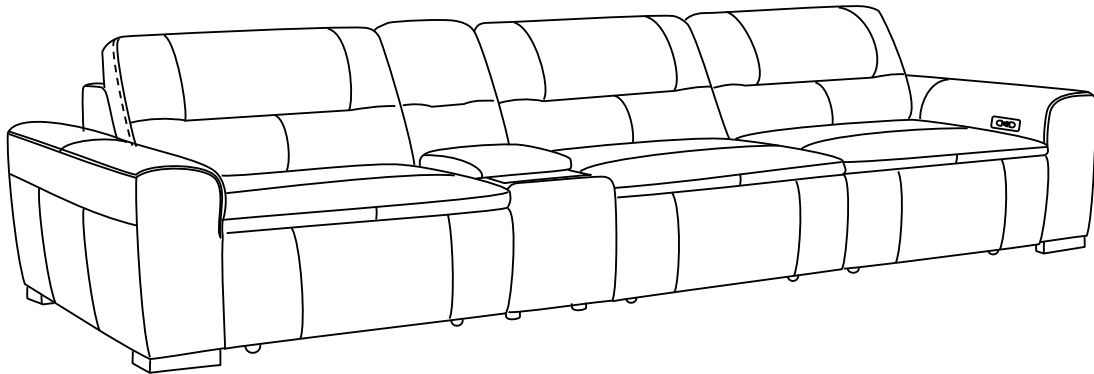 


FLEXSTEEL®

Graham 1318 - Flexsteel Power Slider Sectional

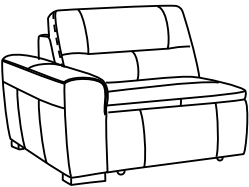 
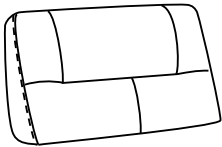 
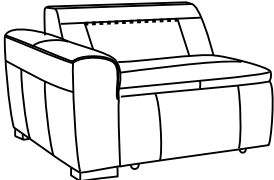 
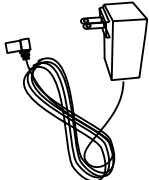 
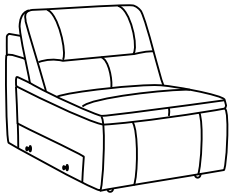 
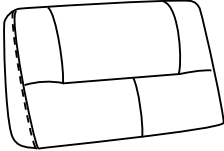 
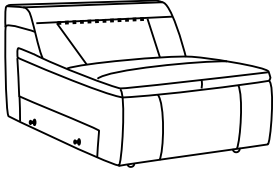 
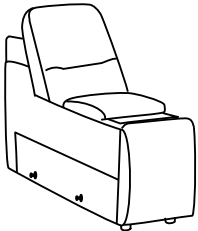 
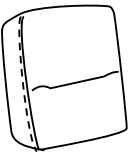 
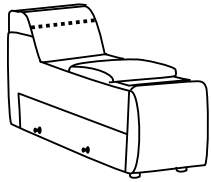 
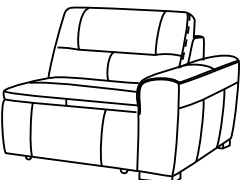 
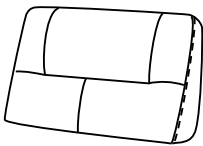 
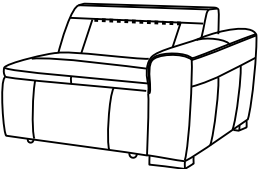 
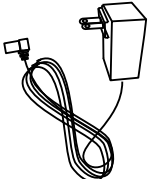 


IMPORTANT NOTE

Read these instructions carefully, and familiarize yourself with each procedure before assembling the furniture. Check that you have all the component parts, and familiarize yourself with each part before proceeding.


Take all the fittings out of the plastic bags and separate them into groups. Ensure you have enough space to lay out all the parts before assembly. To prevent damage to the parts, we recommend that you assemble the units on a soft, level surface.

LIST OF PARTS


Item.	Description	Model	Parts		
A	Left arm power sliding chair		1 x Back cushion 	1 x Seat cushion 	1 x Adapter 
B	Armless Power Sliding Chair		1 x Back cushion 	1 x Seat cushion 	
C	Straight Console		1 x Back cushion 	1 x Console base 	
D	Right arm power sliding chair		1 x Back cushion 	1 x Seat cushion 	1 x Adapter 

Assembly Instructions

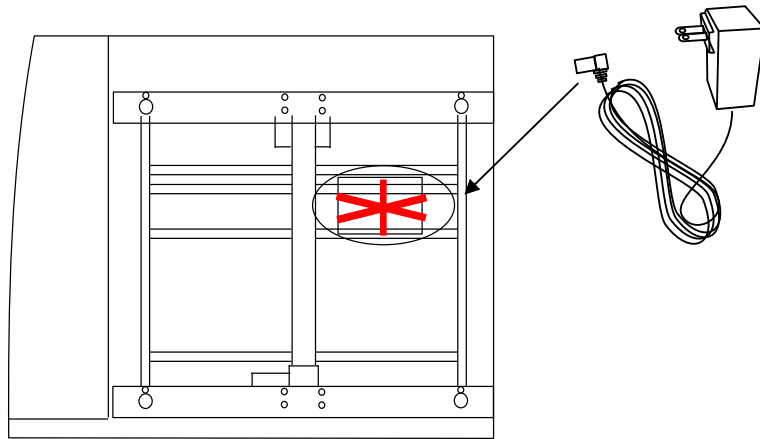 
STEP 1: Detach the adapter from the bottom Seat of left arm/right arm recliners (A , D).



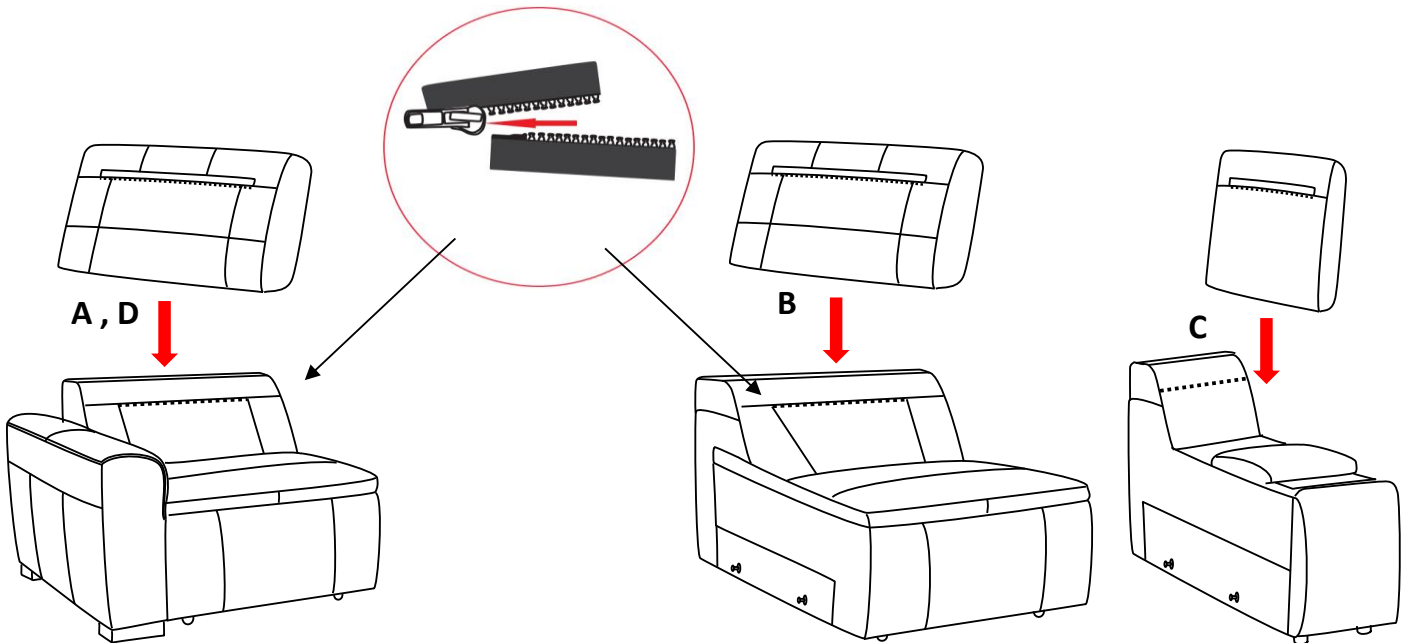 STEP 2: Zip all the inside back cushions to outside back of the seatrests (A, B, C, D)




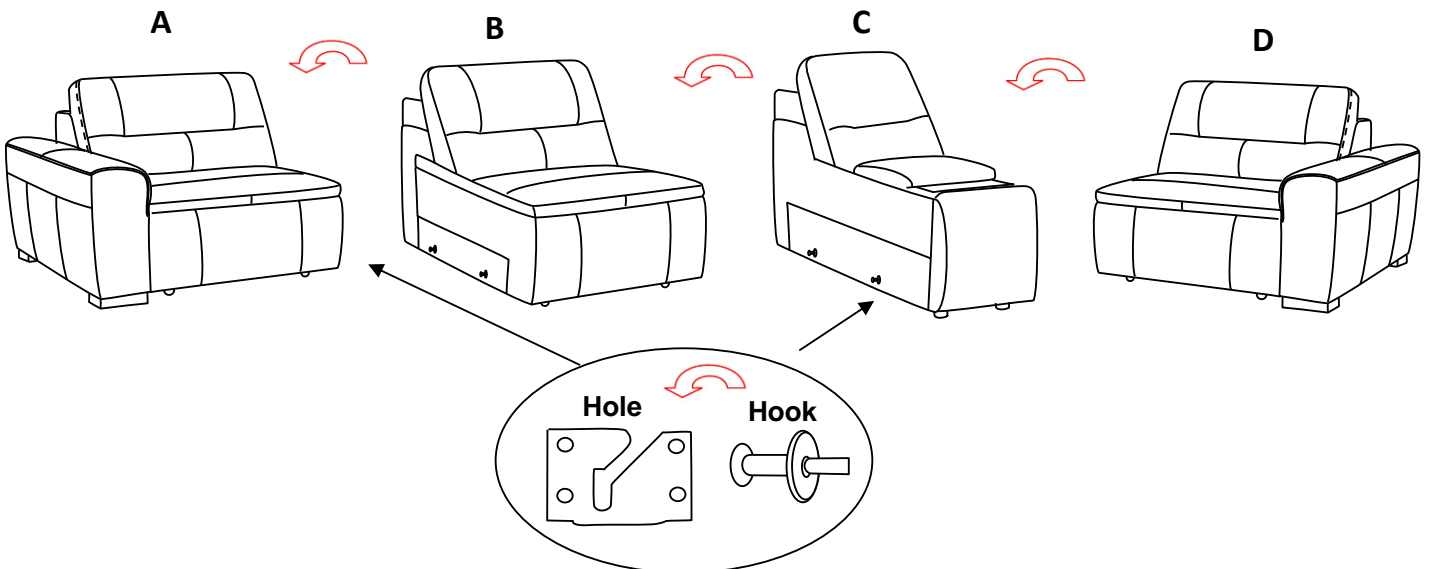 STEP 3: Position your product in the area of its intended use and connect together using the sectional connectors




Assembly Instructions

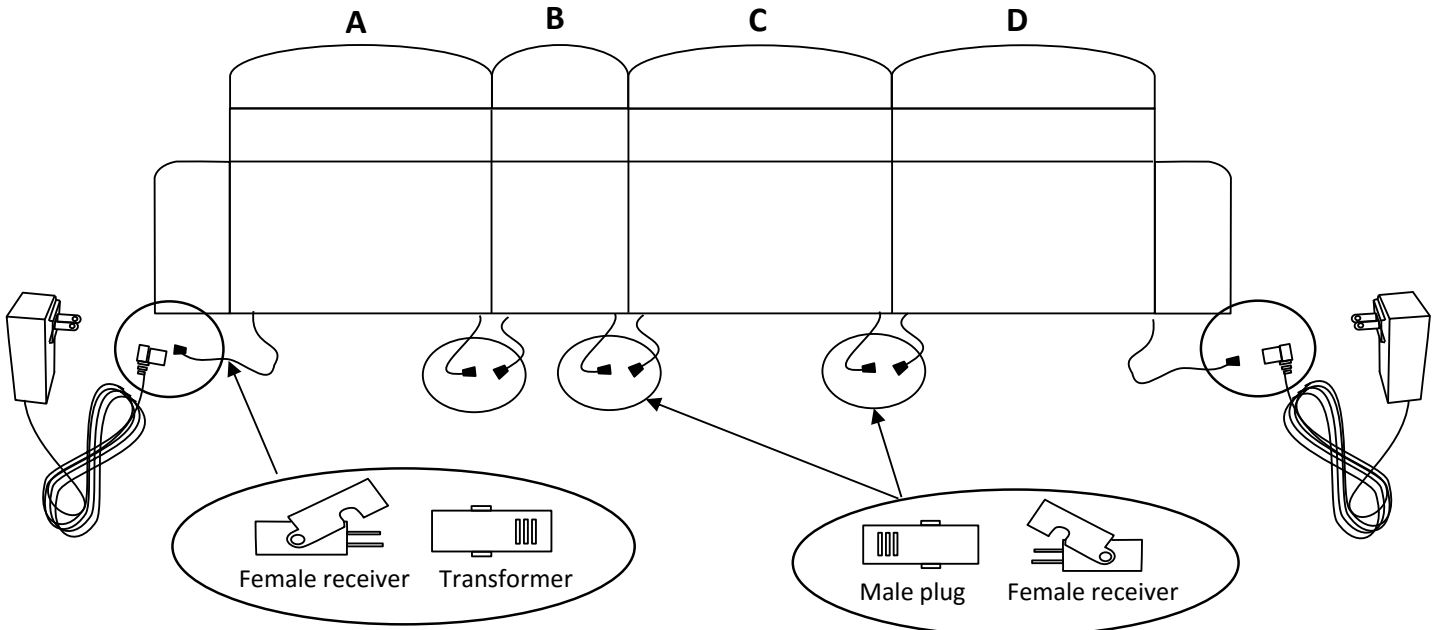 STEP 4: Connect the power cords of all power recliners as well as attach the power transformer cord to the connector pin at the bottom rear of the left arm and right arm power recliners (A, D).



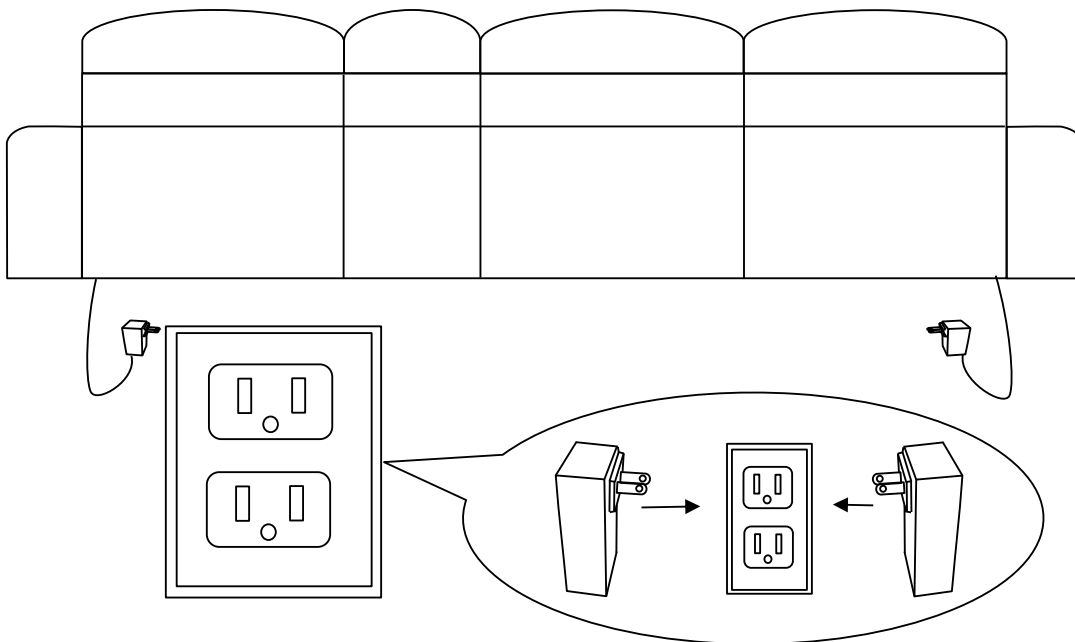 STEP 5: Connect wall plug transformers into a nearby outlet, still making sure it is clear of the metal base.



CARE INSTRUCTION

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.
- If the reclining functions are not working properly, check for loose cable connections before contacting the retailer.