



Glass Washer Gears

INSTALLATION INSTRUCTIONS

GP-11-Series
GER-9-Series

1. Turn Glass Washer off, unplug unit from power source, and remove from sink.
2. Remove all brushes by twisting each brush by lining up brush pin with slot and pulling straight up.
3. Carefully remove black rubber band from around the base of the Glass Washer.
4. Place the Glass Washer on its side on a flat stable surface.
5. Using a large flat screwdriver, remove the nine large screws on the bottom of the machine.
6. Carefully lift the bottom plate away from the Glass Washer.
7. Remove the damaged or unwanted gears and replace with the same type. Remember that the brush holder goes through the top plate, and the gear without the brush holder goes closest to the motor.
8. Replace the bottom plate (remember the feet go down) and then replace the nine screws.
9. Replace the rubber band and brushes.

