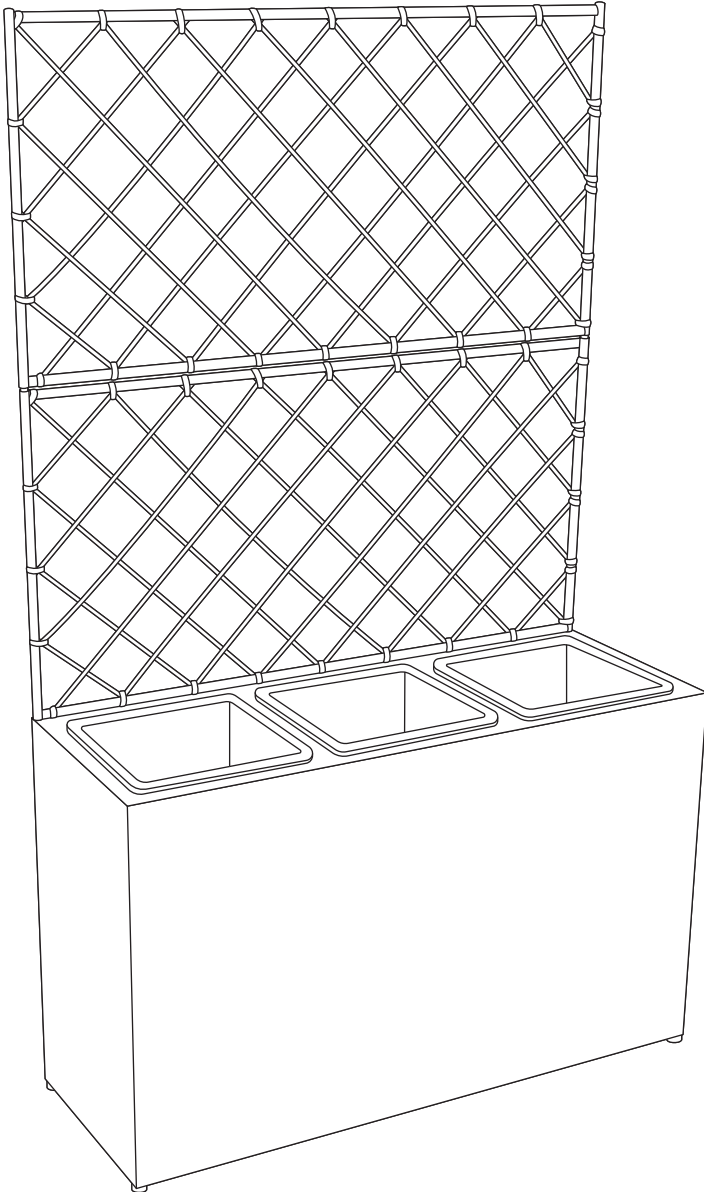 


3-SECTION PLANTER BOX WITH TRELLIS

NHU-8711

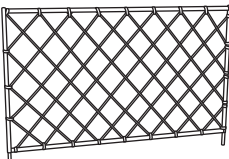
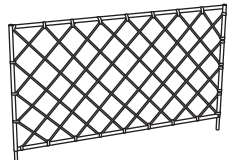
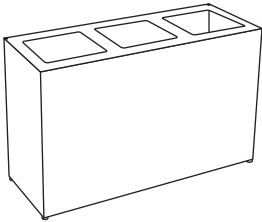

Review all assembly and care information before using this product. Save this manual for future reference.

Assemble components on a soft, clean surface to avoid damaging the finish.



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

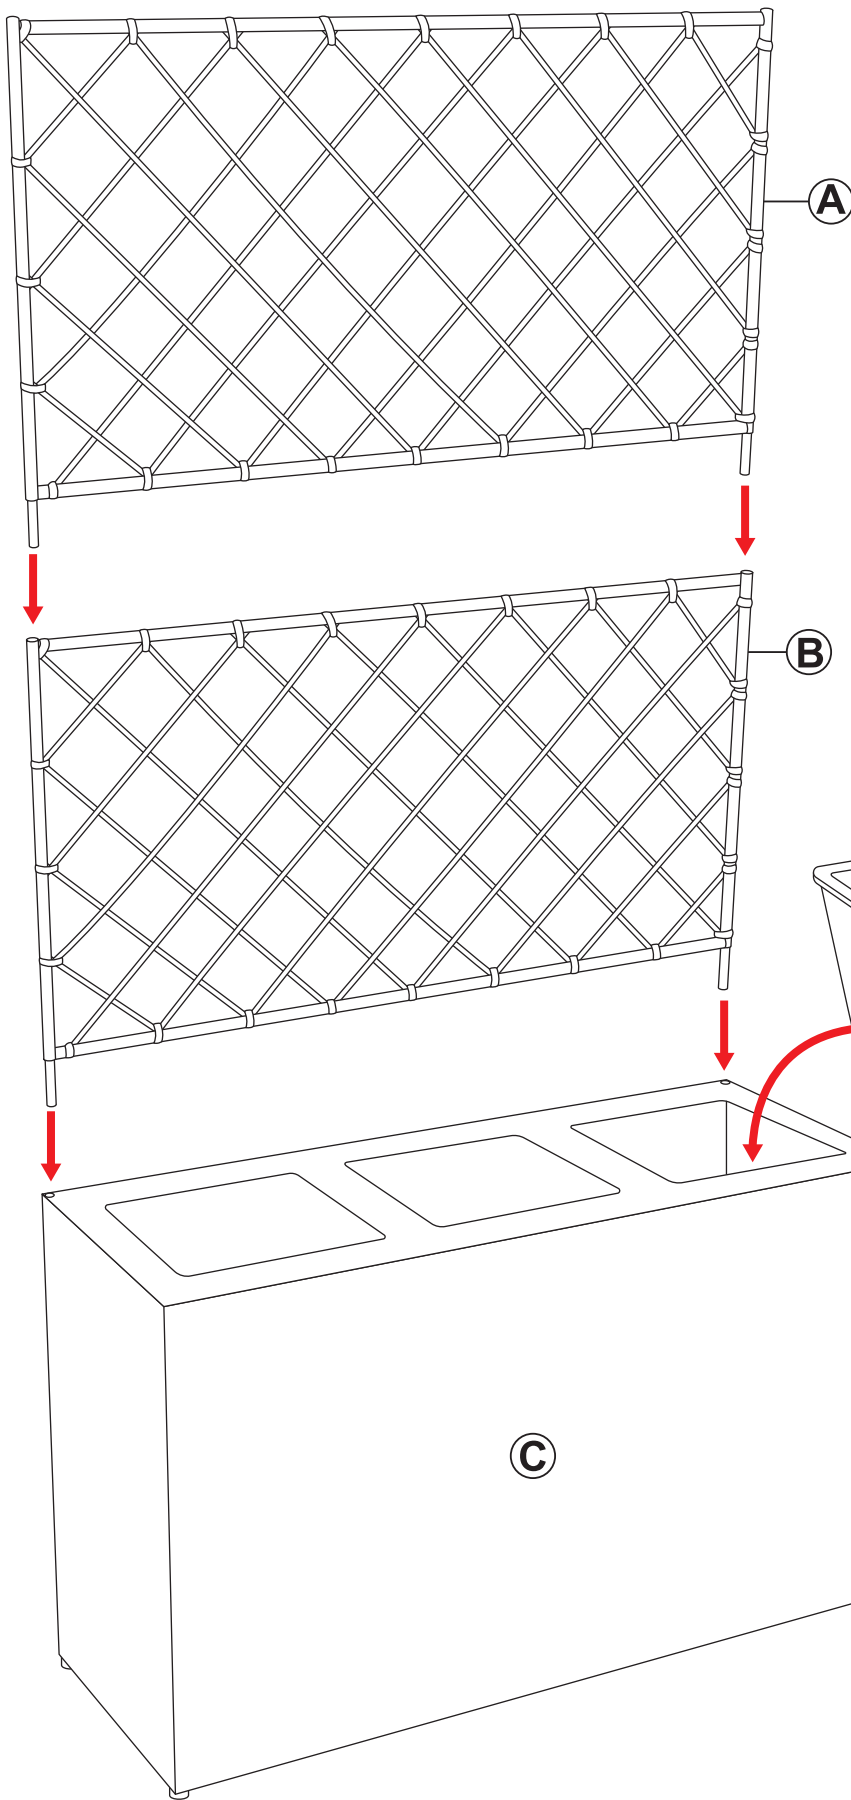 
 Save the packing slip.

No.	HARDWARE	QTY.
A	 Trellis Top	1
B	 Trellis Bottom	1
C	 Planter Box with Leveling Feet	1
D	 Liner	3

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

ASSEMBLY



1. Insert Trellis Bottom (B) into Planter Box (C).
2. Insert Trellis Top (A) into the trellis bottom.
3. Install three Liners (D) into the planter box.

IMPORTANT: Only use the planter box on a flat, level surface. Ensure it is level before filling the liners.

To compensate for slightly uneven surfaces, adjust the leveling feet on the bottom of the planter box. Simply loosen or tighten the threaded feet. If the planter box is still uneven, consider selecting an alternate location.

Care & Maintenance

LOCATION: For indoor & outdoor use. Select the desired location before filling the liners.

Be mindful when placing outdoors, the plastic liners do not have drainage holes; soil could quickly become waterlogged during heavy rain. Leaks and/or run-off from planters could cause damage to surfaces.

FILLING & WATERING: Lightweight potting soil is recommended for filling the liners. Take care when watering. The plastic liners do not have drainage holes. If using the planter outdoors, ensure it is in a location that will not receive too much rain, such as a covered porch or under an awning.

CLEANING:

Polyrattan: Brush, vacuum or use a garden hose to remove loose dirt and debris. If using a hose with a spray nozzle, use gentle or medium pressure settings; high-pressure sprayer settings may damage the construction of the planter and void the product warranty.

Mix 1/4 cup of soap or a mild detergent with 1 gallon of warm water. Using a soft-bristle brush, gently scrub the dirt and grime from the polyrattan.

Thoroughly rinse, ensuring all soap residue has been removed and allow to air dry.

Plastic Liner: Mix 1 part distilled vinegar with 4 or 5 parts warm water. Wash the liner with the mixture and a soft cloth. Rinse thoroughly and dry.

EXPOSURE: Over time, sunlight and weather elements may degrade and change the color of this product.

STORAGE: Store in a dry, indoor location. Cover to prevent dust build-up.

SAFETY STATEMENTS & WARNINGS

- Only use this unit on a flat, level surface.
- Do not exceed the capacity of the unit.
- Never stand or climb on the unit.
- Never use chemical cleaning products or polishes as doing so may damage the finish.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.