 



ASSEMBLY INSTRUCTION

Outdoor Dining Chair

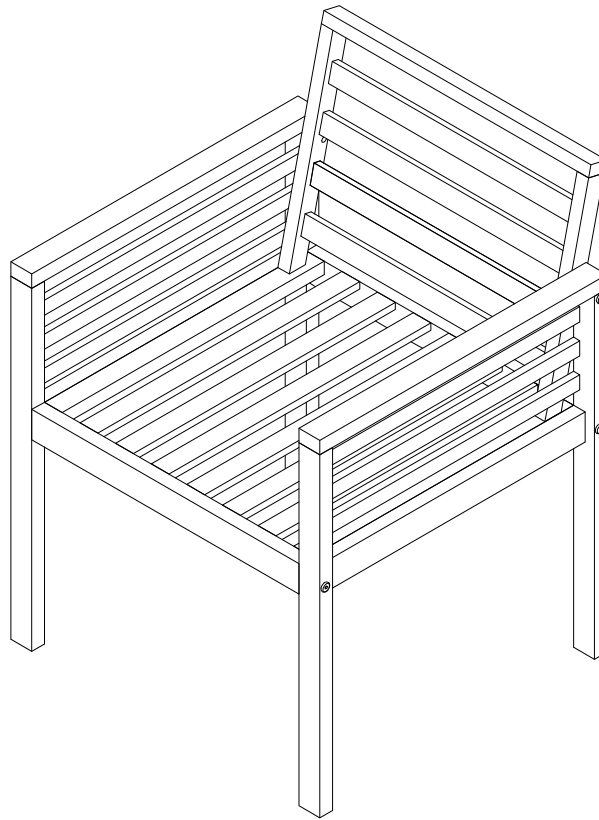



REPLACEMENT PARTS

 Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "


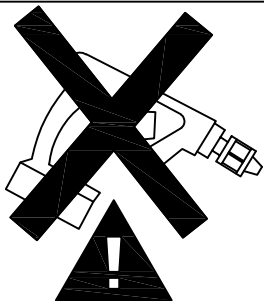


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!

  . Please assemble on a clean soft surface to avoid damage.

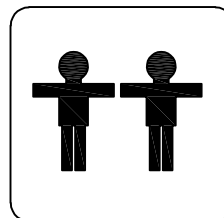


Tools Required

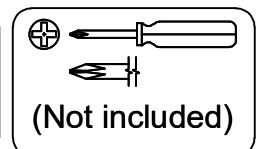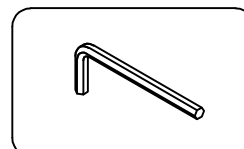  

www.boltonfurniture.com

 Part list - Outdoor Dining Chair

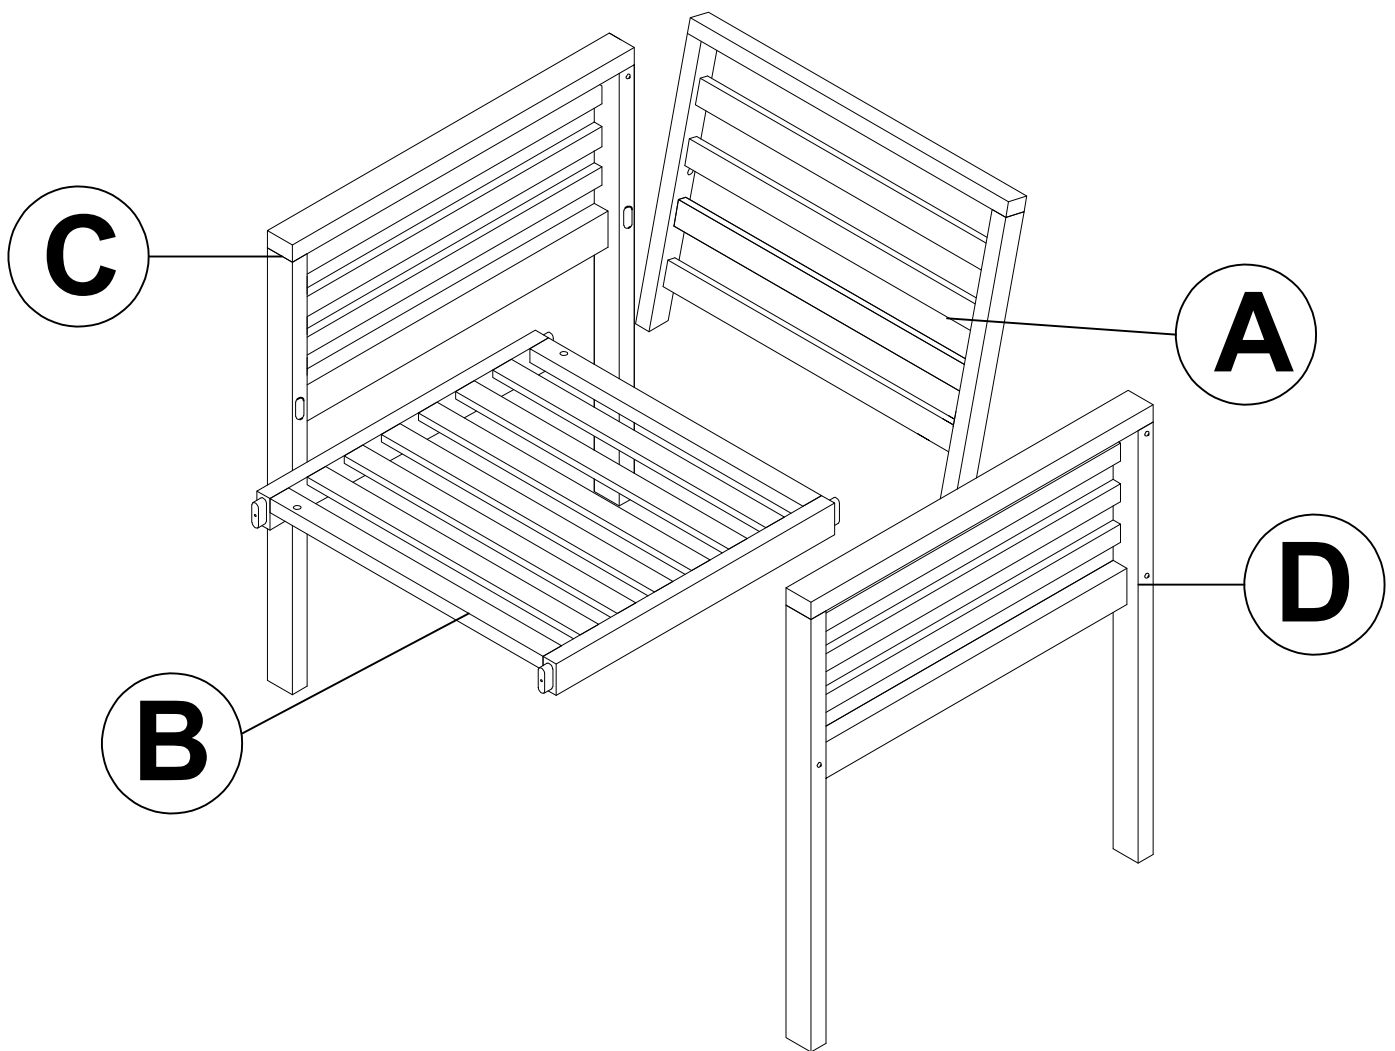

Identifying the hardware-Identify the hardware using the illustrations below

①  04
M7*90mm Bolt

②  02
M7*60mm Bolt


③  02
M8*55mm Bolt

④  02


⑤  02

Step 01

 
- 1



04
- 5




01

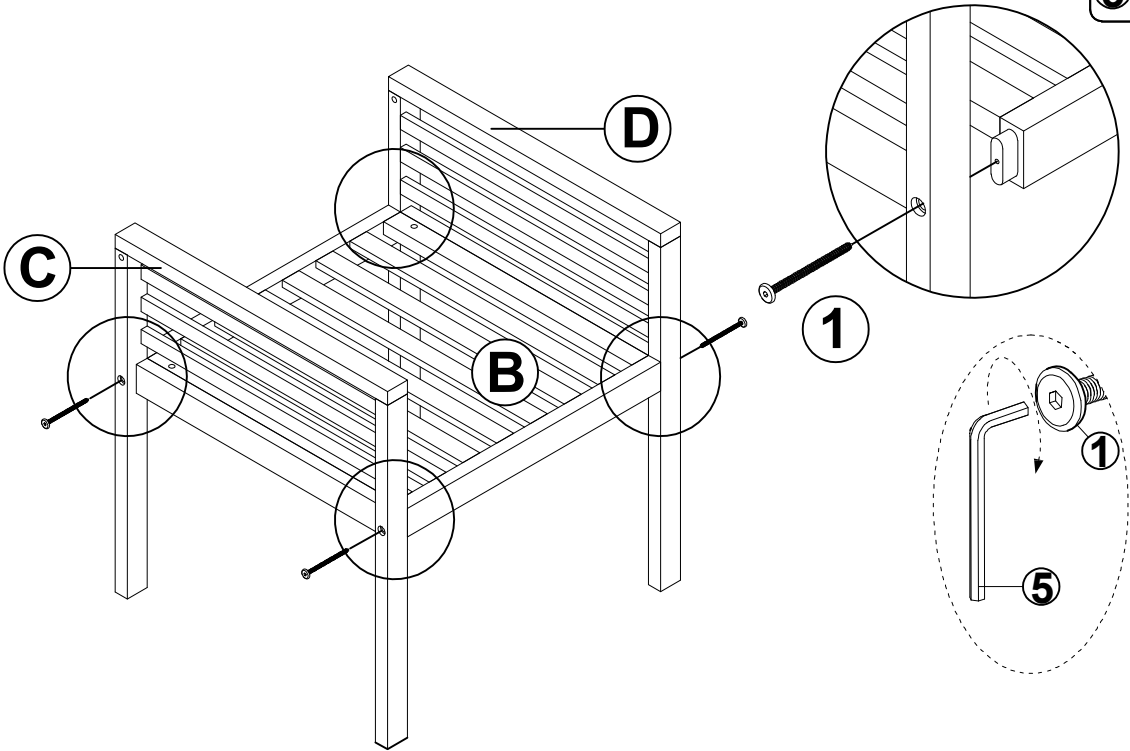


Step 02


- 3



 
02
- 4



02
- 5



01

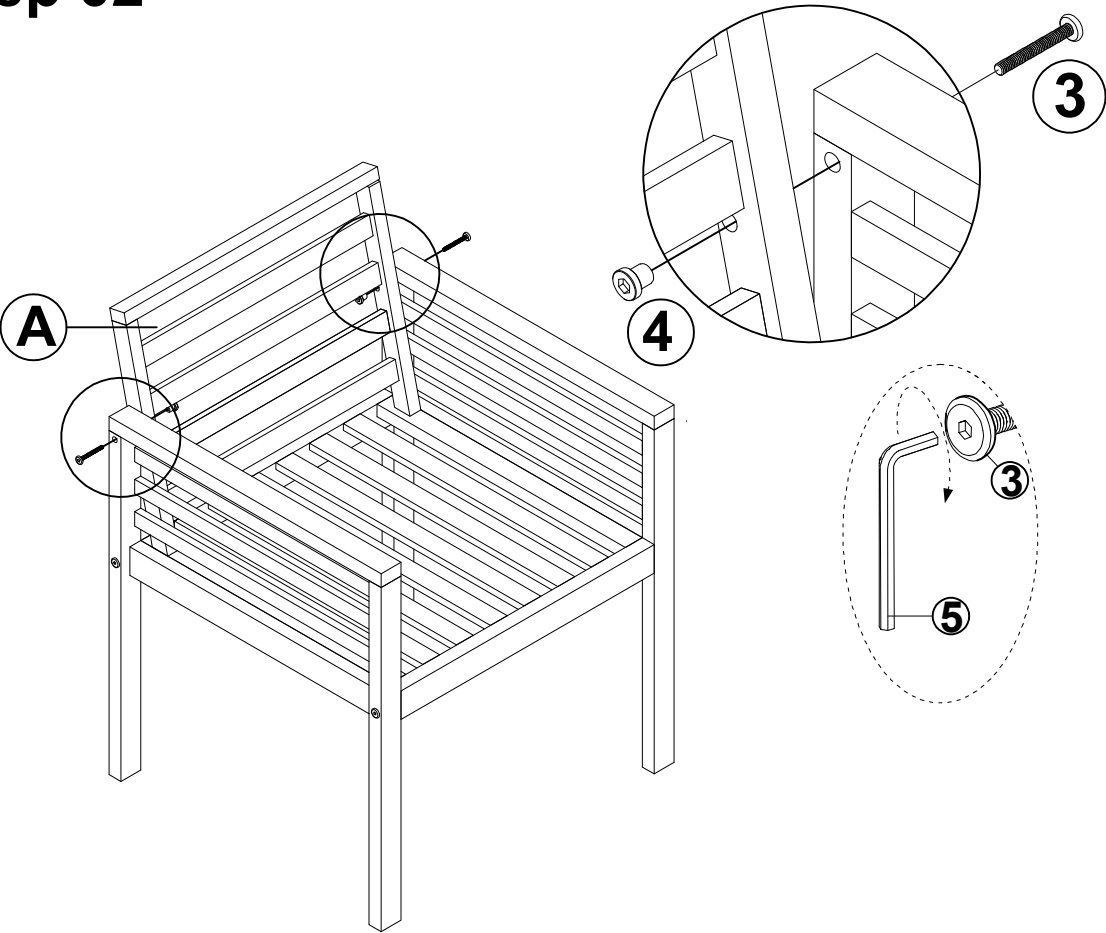

Step 03

 
 
 
2

M7x60MM BOLT


02

5

01

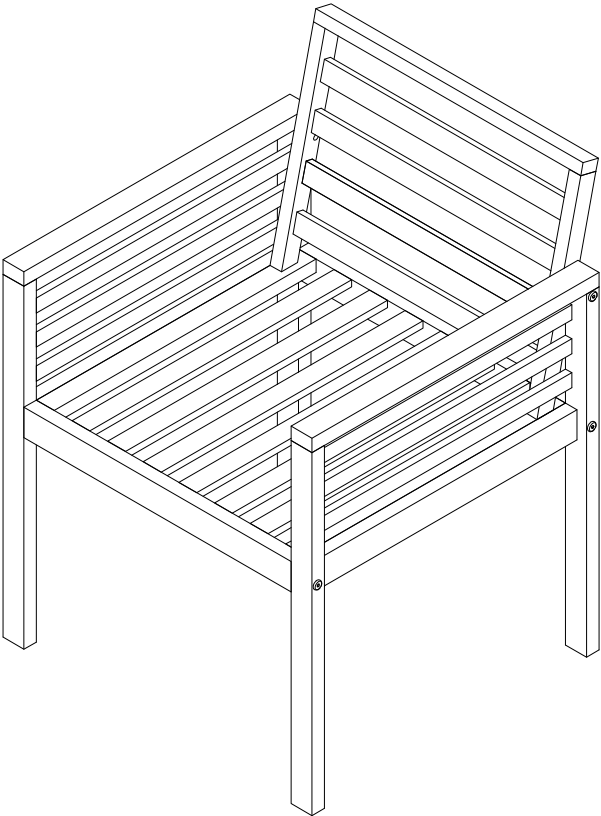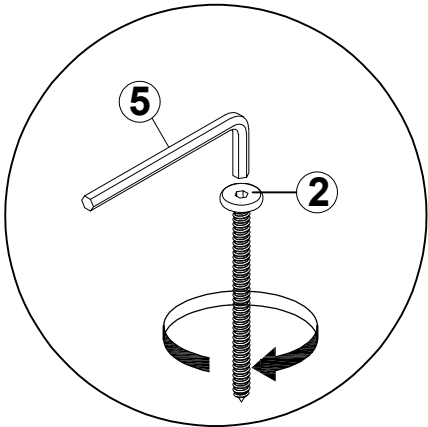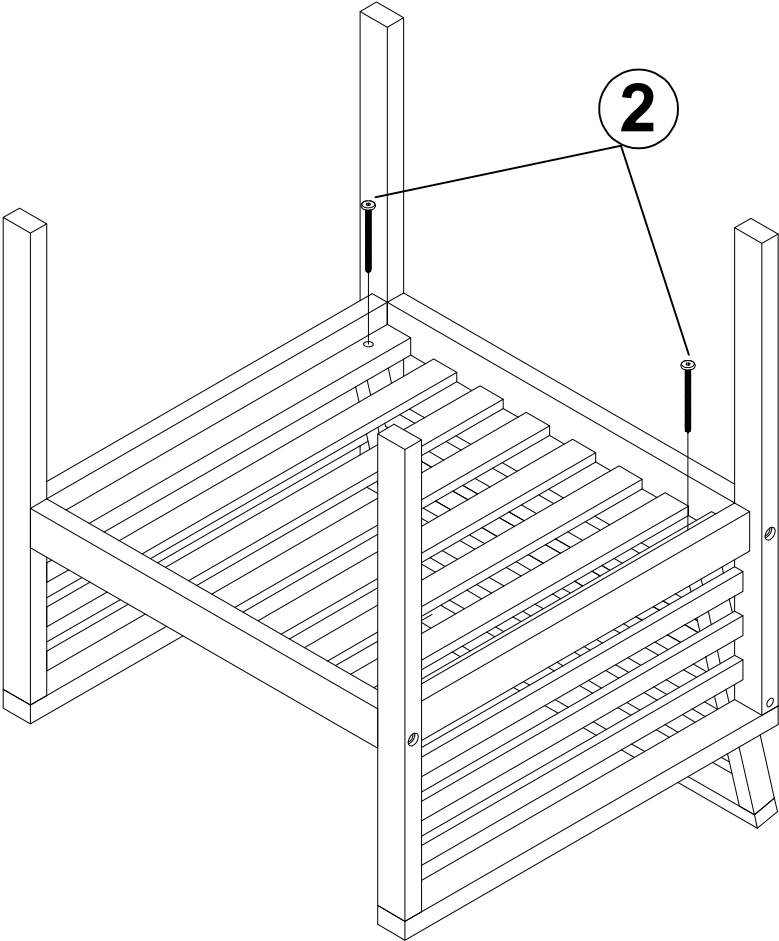

 Step 04

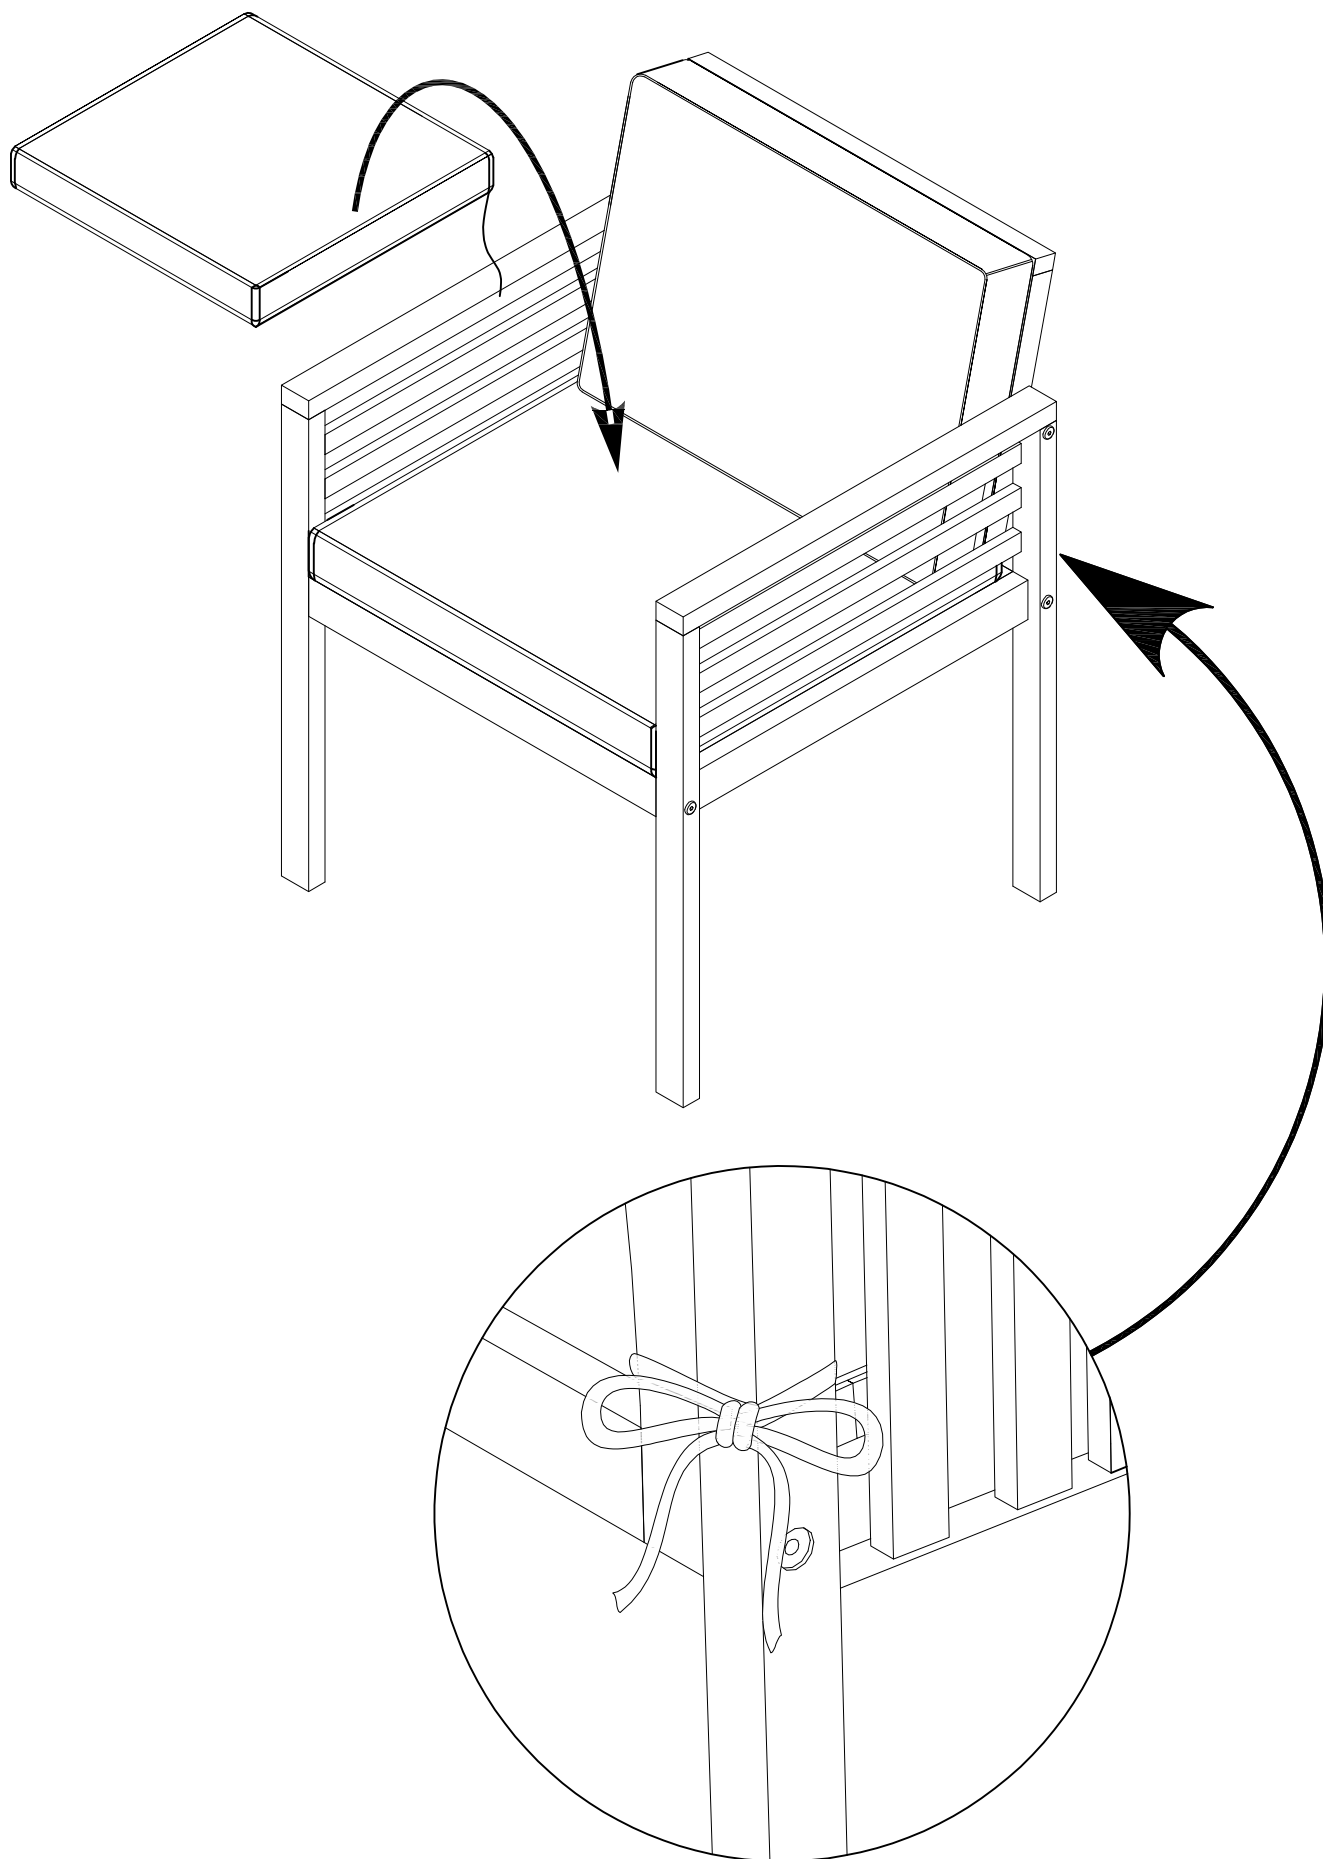

Care & Maintenance

While weathering and color variation over time is natural for outdoor wood furniture, we recommend the following care and maintenance for best results:

- . Store wood furniture indoors out of season. Make sure furniture is completely dry before storage.
- . Cover wood furniture with outdoor covers when left outside during inclement weather or when not in use.
- . Wipe spills with a clean dry cloth.
- . Avoid the use of harsh cleaners and abrasives. Do not power wash.
- . Use Teak Oil to protect from sun and weather exposure. This will require light sanding. Use a natural bristle brush or lint free cloth to apply the oil. Usually, oil should be reapplied every two to three months. Before each application, clean thoroughly and make sure your furniture is completely dry.
- . Inspect your furniture every three to six months. Tighten any loose fittings or bolts as required.

IMPORTANT! RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE