



# WaterLev™ Garden Fountain AutoFil FF-211



Made In USA

## Instructions Easy To Install:

- 1) Establish water source. Fittings are provided for hose connection or 1/2" threaded irrigation connection. Insert hose into coupling at the back of float assembly. Push in drip hose 1/4" into coupling.
- 2) Insert other end of drip hose 1/4" into either hose connection or 1/2" threaded Sprinkler riser connection. Water source must have an approved double check valve or Anti-siphon valve.
- 3) Set float assembly into Basin of fountain keep assembly level and free of falling water. Run hose over the side or out the back of fountain.
- 4) Turn on water. Float is preset for approximately 3 1/2" of water depth. For more depth use 5" Extension Arm provided for 2 more inches of water Depth "Float should always be level" When using Extension arm. Float should not be more than 15 degrees incline. If the autofill does not shut off lower degree of float arm. ALWAYS KEEP UNIT LEVEL IF POSSIBLE.

**Regular service and maintenance required.**

**Works excellent  
on both:**

## Wall Fountains



## Garden Fountains



Customer agrees that it will be solely responsible for monitoring the use of the Product. Under no circumstances shall Stetson Development, Inc. be liable for any costs or damages arising from wasted or excess water usage. Customer agrees that Stetson Development, Inc. maximum liability for any claims brought by customer against Stetson Development, Inc. whether arising in contract, tort, or otherwise, shall be limited to the amount actually paid by Customer for the Product.

**Customer service [www.waterlev.com](http://www.waterlev.com)**