

Item No: TD-11708A

Teamson Kids - BurlyWood
Kitchen with Accessories

WARNING:

Small parts and sharp points may be present prior to assembly.


Care Instructions

To clean your product, use mild soap and water on adamp cloth. Do not use window cleaners or cleaning abrasives as they will scratch the surface and could damage the protective coating.

Customer Service


For questions regarding this product, or to receive replacement or missing parts, please contact customer service based on your location. Please have ready the model number and part number(s) located in this assembly instruction sheet when you contact us.

www.teamsonkids.com

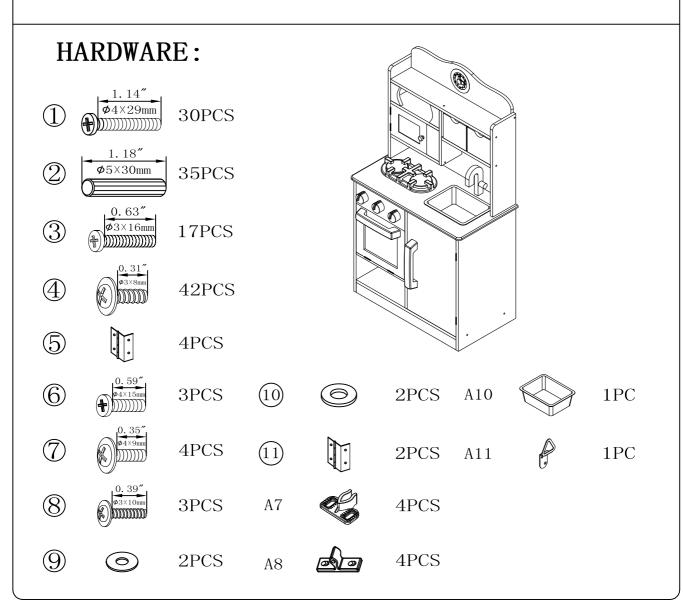


PRODUCT PARTS:

A	В	С	D	Е	F
6000					
1PC	1PC	1PC	1PC	1PC	1PC
G	Н	I	J	K	L
0 0					
2PCS	1PC	1PC	1PC	1PC	1PC
M	N	0	Р	Q	R
1PC	1PC	1PC	1PC	1PC	1PC
S	Т	U	V	W	X
1PC	1PC	1PC	1PC	1PC	1PC
Y	Z	AB	AC	AD	A1
2PCS	2PCS	4PCS	2PCS	2PCS	3PCS
A2	A3	A4	A5	A6	A9
1PC	1PC	1PC	2PCS	1PC	1PC

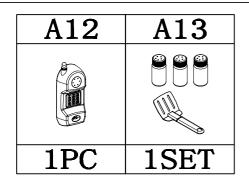


Step 1



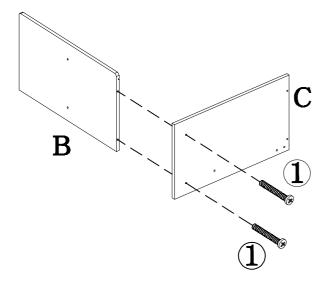


Step 2

1 0 1PC 0 1PC 0 1PC 0 1PC 0 1PC 0 1PC

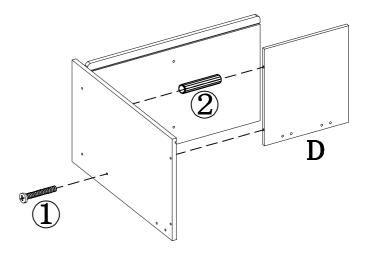

Step 3

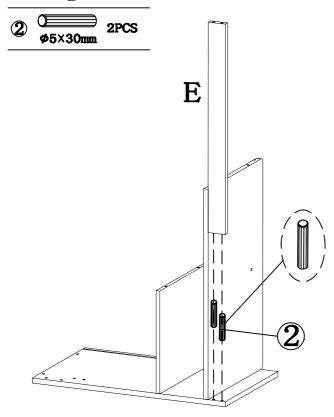

Step 4

