

CLASSIC PORCH ROCKING CHAIR

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

https://westintrends.com/welcome



OUESTIONS OR COMMENTS?

If you have questions reach out to cs@westintrends.com

FOLLOW, SHARE, & LEARN













PRODUCT REGISTRATION


https://westintrends.com/apps/product-registration




(!) CARE & MAINTENANCE

Do not overtighten screws. (Insert all screws before tightening screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Please use a hammer for help when assembling the mortise and tenon joint.

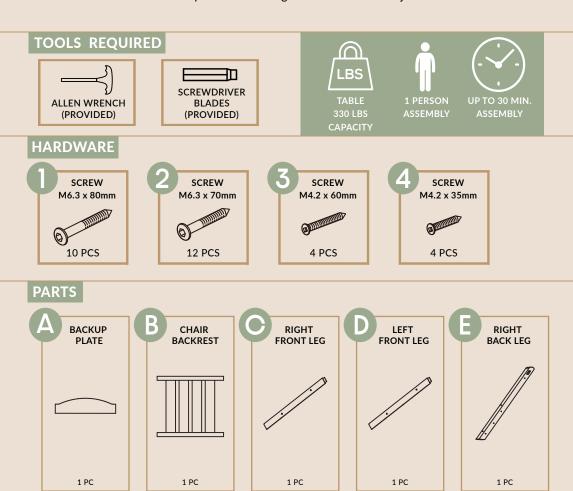

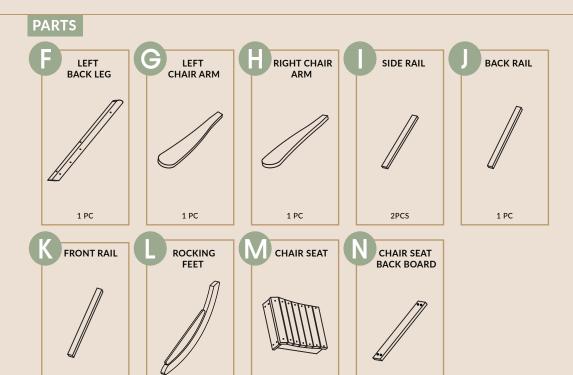

PRODUCT ASSEMBLY - OVERALL VIEW


2PCS

1 PC

Look at following overall view of this chair and learn the exact position of each part to be assembled.

1 PC

1 PC

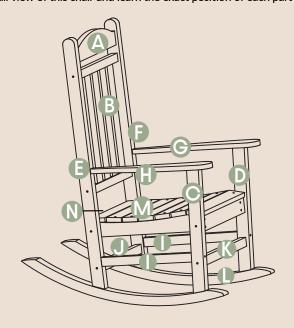

PRODUCT ASSEMBLY




Attach Part G Left Chair Arm and Part I Side Rail to Part F Left Back Leg with 2pcs of Hardware #1 Screw.

Attach Part G Left Chair Arm to Part D Left Front Leg with 2 pcs of Hardware #3 Screw.

(Both Allen wrenches and screwdrive blades can be used for screwdriving.)

Attach Part I Side Rail to Part D Left Front Leg with 1pc of Hardware #1 Screw.

Please use a hammer for help when assembling the mortise and tenon joint.

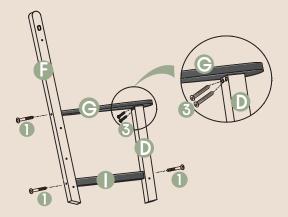

2


Attach Part H Right Chair Arm and Part I Side Rail to Part E Right Back Leg with 2 pcs of Hardware #1 Screw.

Attach Part H Right Chair Arm to Part C Right Front Leg with 2 pcs of Hardware #3 Screw.

(Both Allen wrenches and screwdriver blades can be used for screwdriving.)

Attach Part I Side Rail to Part C Right Front Leg with I pc of Hardware #1 Screw.

Please use a hammer for help when assembling the mortise and tenon joint.

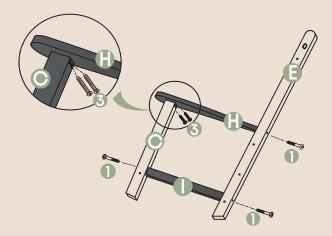


PRODUCT ASSEMBLY




Attach Part L Rocking Feet to Part E Right Back Leg and Part C Right Front Leg with 2 pcs of Hardware #1 Screw.

Attach Part L Rocking Feet to Part F Left Back Leg and Part D Left Front Leg with 2 pcs of Hardware #1 Screw.

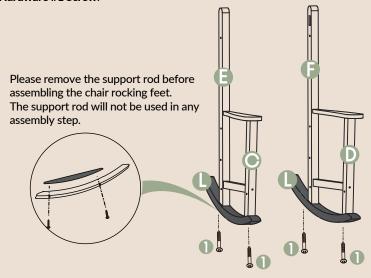



Attach Part N Chair Seat Back Board to Part M Chair Seat with 4 pcs of Hardware #4 Screw.

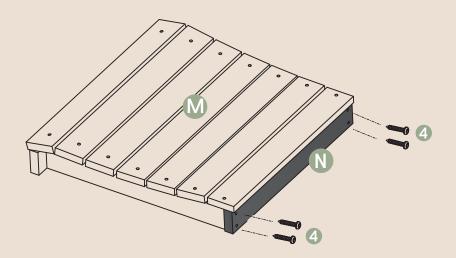




Attach Part A Backup Plate and Part B Chair Backrest to Part E Right Back Leg with 2 pcs of Hardware #2 Screw.

Attach Part M Chair Seat to Part E Right Back Leg and Part C Right Front Leg with 2 pcs of Hardware #2 Screw.

Attach Part K Front Rail to Part C Right Front Leg and attach Part J Back Rail to Part E Right Back Leg with 2 pcs of Hardware #2 Screw. Please use a hammer for help when assembling the mortise and tenon joint.

(Remark: **Part B Chair Backrest** have 2 different sides. The front side is the side without the Prop 65 warning label.)

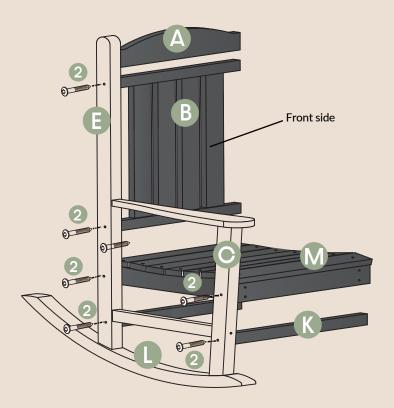

PRODUCT ASSEMBLY




Attach Part A Backup Plate and Part B Chair Backrest to Part F Left Back Leg with 2 pcs of Hardware #2 Screw.

Attach Part M Chair Seat to Part F Left Back Leg and Part D Left Front Leg with 2 pcs of Hardware #2 Screw.

Attach Part K Front Rail to Part D Left Front Leg and attach Part J Back Rail to Part F Left Back Leg with 2 pcs of Hardware #2 Screw. Please use a hammer for help when assembling the mortise and tenon joint.

Check and tighten all the bolts and screws again to finish the assembly.

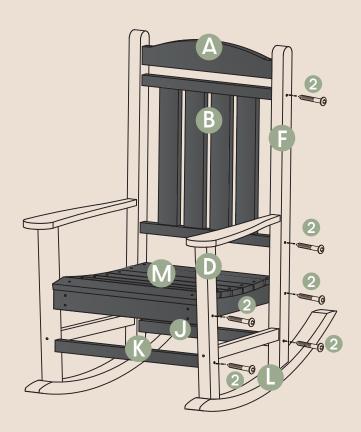

REGISTRATION & REFUND POLICY

https://westintrends.com/apps/product-registration



https://westintrends.com/policies/refund-policy



HAVING TROUBLE

• Not sure how to assemble or missing pieces?
Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #. Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - DO NOT exceed 1500 PSI - this will remove any debris and dirt.