

 
 
WOODEN WISHING WELL GARDEN PLANTER DSL-116


Review all assembly and care information before using this product. Save this manual for future reference.
Assemble components on a soft, clean surface to avoid damaging the finish.



 Inspect packaging to ensure all parts are accounted for before disposing of packing materials.
 Save the packing slip.



No.	PARTS		QTY.
A		Well Block	40
B		Roof	1
C		Bucket Planter	1
D		Handle	1
E		Spindle	1
F		Gable	2
G		Roof Support	2

 No.	HARDWARE		QTY.
H		M3.5x25mm Screw	4
I		M3.5x40mm Screw	10
J		M3.5x30mm Screw	6

TOOLS REQUIRED (not included)	
	Phillips Screwdriver

WARNING


CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children and pets away during assembly.

NOTE: Wood is a natural product. Checking (splits in the wood) is a normal feature of wooden products, it is part of what gives wood decor an authentic appearance.

ASSEMBLY

STEP 1

A: 40

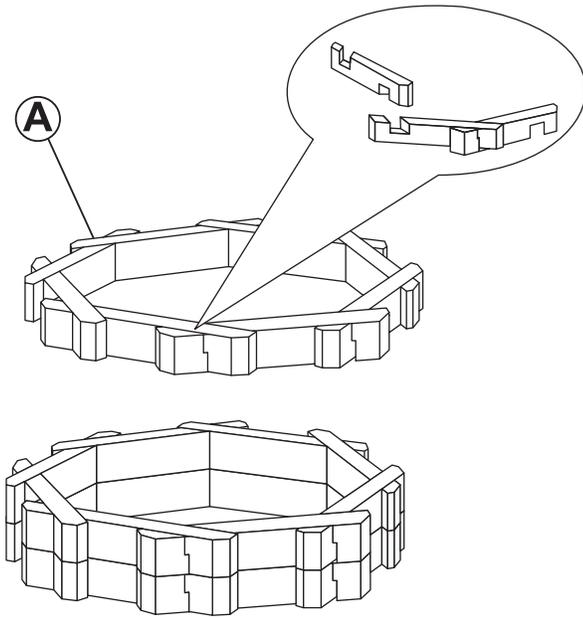

Interlock eight pieces of Well Blocks (A) as shown.
Repeat five times stacking the layers as you go.


STEP 2

F: 2

G: 2

H: 4

I: 10

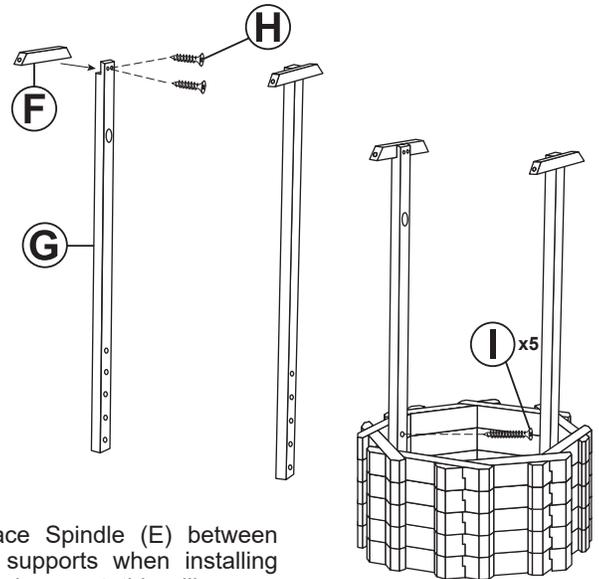

TIP: Place Spindle (E) between the roof supports when installing the second support, this will ensure they are properly aligned.


Fasten one Gable (F) to Roof Support (G) using two M3.5x25mm Screws (H). Repeat for the opposite side.

Fasten each roof support to the well using five M3.5x40mm Screws (I).

STEP 3

C: 1

E: 1

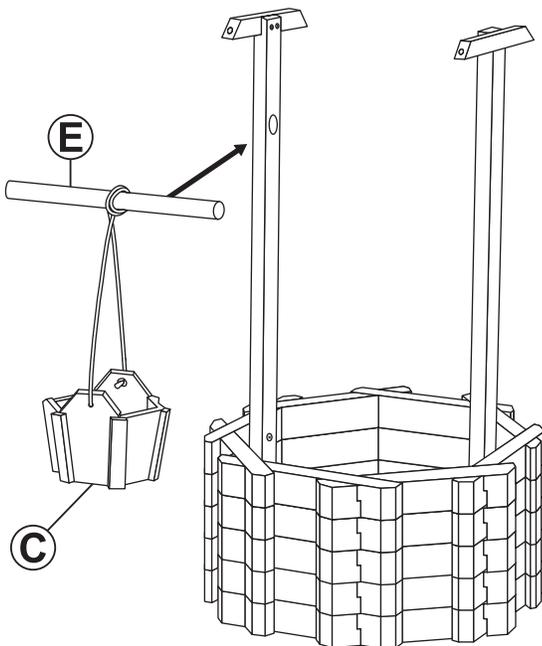


Loop the rope on Bucket Planter (C) around Spindle (E).
Place bucket and spindle between the roof supports.

STEP 4

B: 1

D: 1

J: 6

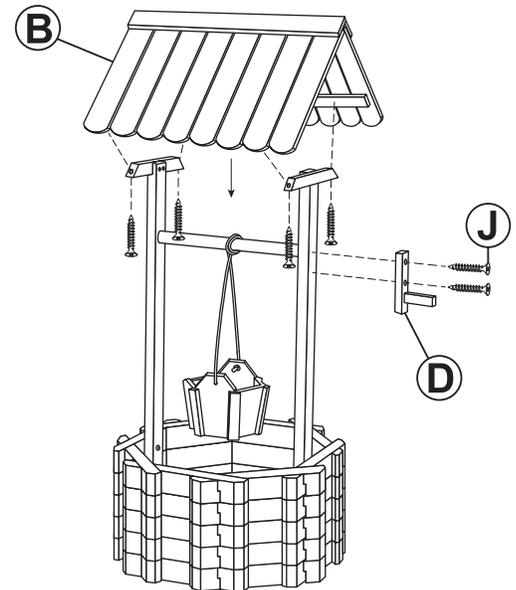

Align Handle (D) with the spindle and secure it to the roof support using two M3.5x30mm Screws (J).

Place Roof (B) on the top of the gables, ensuring the roof is centered. Secure the gables to the support board on the underside of the roof using two M3.5x30mm Screws (J) on each side.

Care & Maintenance

EXPOSURE: Over time, sunlight and weather elements will fade and degrade outdoor decor. Additionally, long-term exposure to sun, rain, and high humidity causes wood swelling. Resulting damage includes, but is not limited to, assembly points becoming loose, wood cracking, mold and mildew growth, and hardware rust. Maintenance is required to keep wood decor in tip-top condition.

INSPECT: Periodically check hardware and tighten as necessary.

CLEANING: Follow the woodgrain with a soft brush or cloth to remove dust, dirt and debris. Do not use chemicals or abrasive materials as they will damage the wood and/or finish.

CARE & STORAGE: Maintain the appearance and prevent damage by covering and storing this unit when not in use.

MAINTENANCE: Left untreated, the wood may weather. To maintain the appearance, apply a suitable penetrating wood oil (not included) yearly, or when the wood looks particularly dry.

Clean the unit and bring it into a dry, warm, indoor location. Allow the unit to thoroughly dry before applying oil; drying may take several days. Only apply oil to wooden surfaces. Apply oil as directed by the wood oil manufacturer.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, OR CLEANING PRODUCTS.

SAFETY STATEMENTS & WARNINGS

- For decorative purposes only; not intended for use as a well — empty bucket before attempting to move the planter.
- Inspect hardware often and tighten loose hardware as necessary.
- Do not step or climb on any part of this unit.
- Do not allow children to use this product.
- Keep this unit a safe distance from heat sources such as, but not limited to, fire pits, patio heaters, and grills.
- Do not use harsh chemicals or abrasive materials to clean the unit.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.