9100-001 Kitchen Cart

IMPORTANT


homestyles[®]

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



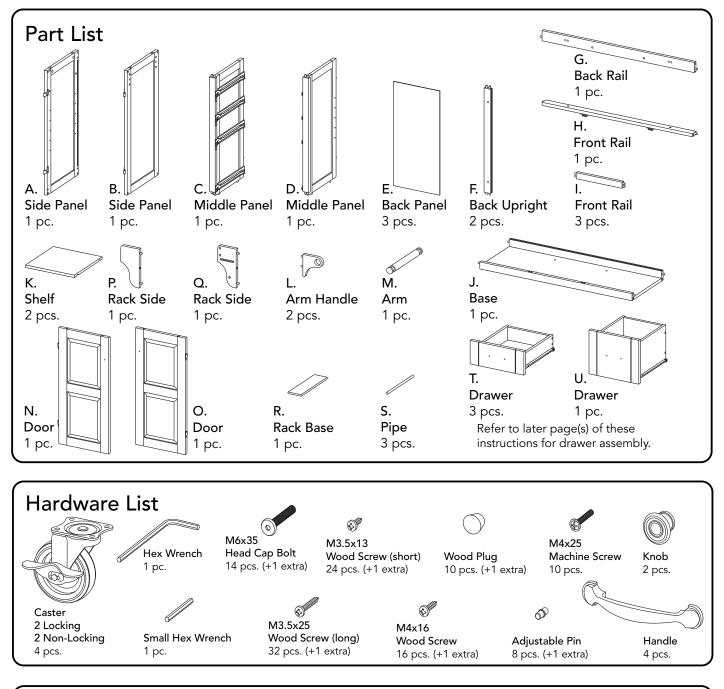

9100 Top carton is also needed for assembly.

Tool(s) required for assembly: Phillips screwdriver

homestyles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460

Assembly Instructions 2/8

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

STEP 1


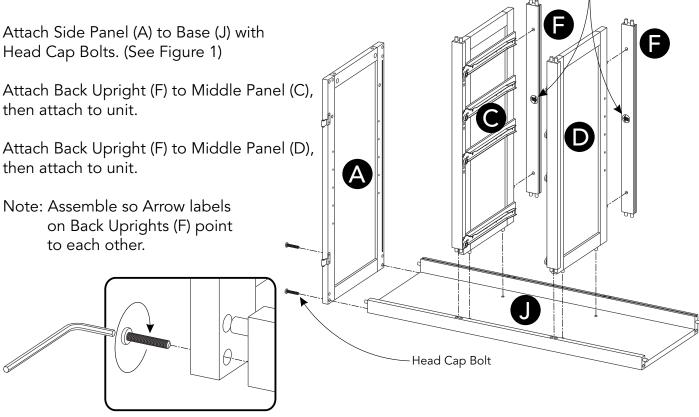


Figure 1

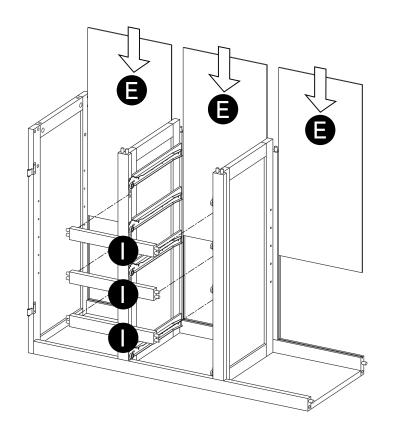


STEP 2


Attach lower Front Rail (I) to unit. Attach middle Front Rail (I) to unit. Attach upper Front Rail (I) to unit. Slide Back Panels (E) into position.

Arrow labels point to each other


Assembly Instructions 3/8

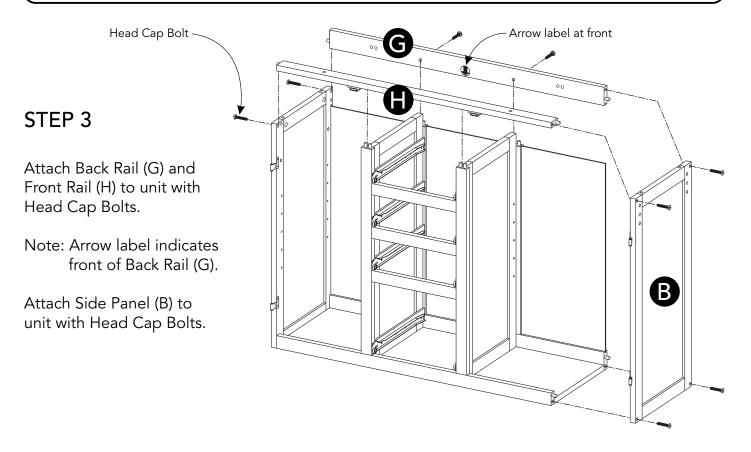

STEP 4

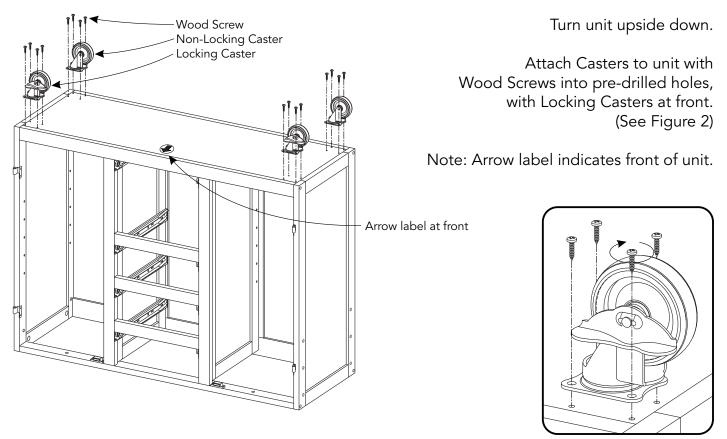

Assembly Instructions 4/8

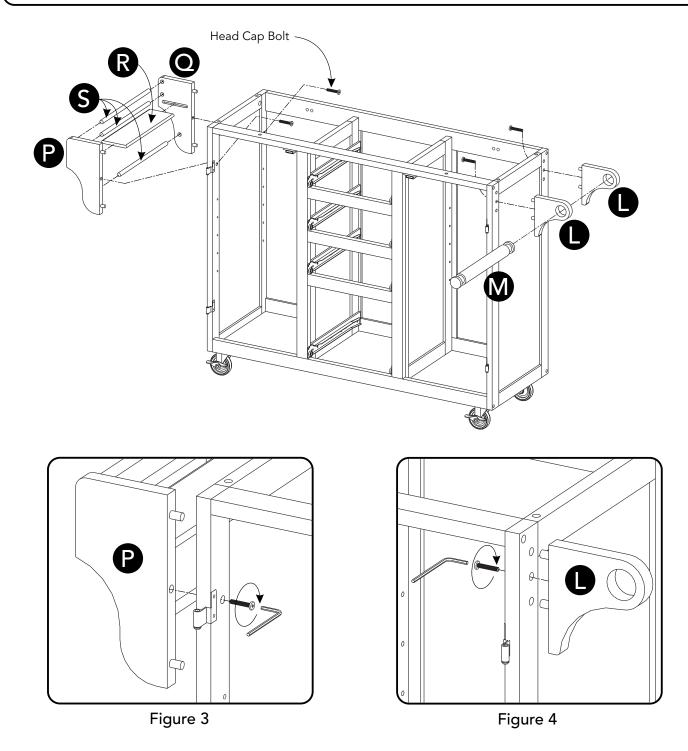

STEP 5

Turn unit over to its upright position.

Attach Rack Side (P) to unit with Head Cap Bolt. (See Figure 3)


Slide Rack Base (R) and Pipes (S) into Rack Side (P).

Attach Rack Side (Q) to unit with Head Cap Bolt.

Attach Arm Handles (L) to unit with Head Cap Bolts. (See Figure 4)

Slide Arm (M) into position.

Assembly Instructions 5/8

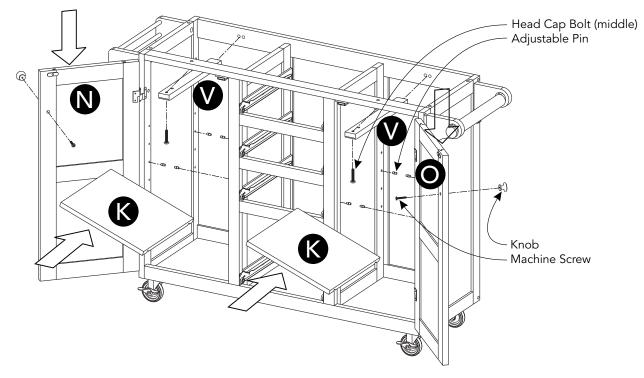

STEP 6

Insert Adjustable Pins into side panels and middle panels at desired level. (See Figure 5)


Place Shelves (K) into position.


Attach Doors (N) and (O) to unit by sliding door hinges into side panel hinges. (See Figure 6)

Attach Knobs to Doors (N) and (O) with Machine Screws. (See Figure 7)

Attach Supports (V) to unit with Head Cap Bolts (middle).

Note: Supports (V) and Head Cap Bolts (middle) are in 9100 Top carton.

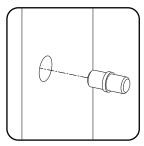

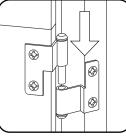

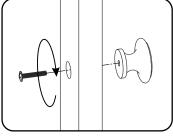



Figure 7


Figure 5

Figure 6

Assembly Instructions 6/8

Drawer (T)

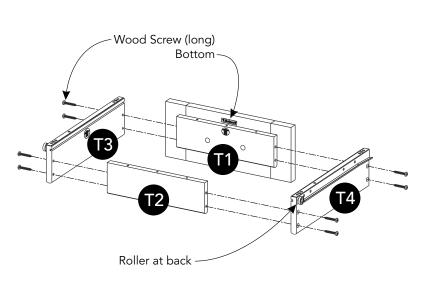

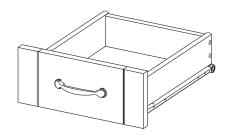

STEP 7


Attach Drawer Front (T1) and Drawer Back (T2) to Drawer Side (T3) with Wood Screws (long).


Attach Drawer Side (T4) to unit with Wood Screws (long).

STEP 8

Slide Drawer Bottom (T5) into groove.


Attach Drawer Bottom (T5) to unit with Wood Screws (short).

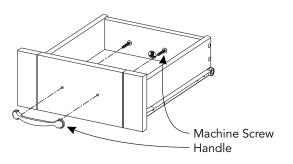

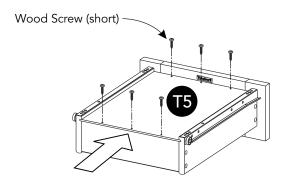


STEP 9


Attach Handle with Machine Screws.

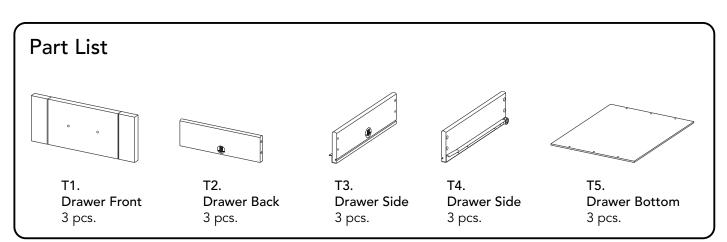

Assembly Instructions 7/8

Drawer (U)

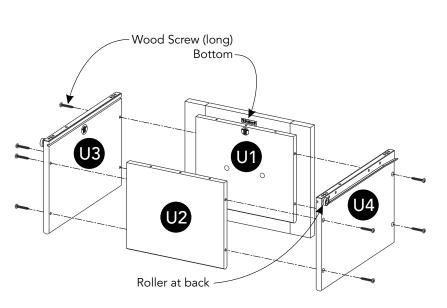

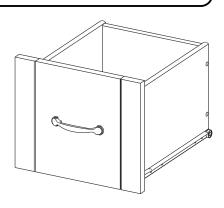

STEP 10


Attach Drawer Front (U1) and Drawer Back (U2) to Drawer Side (U3) with Wood Screws (long).


Attach Drawer Side (U4) to unit with Wood Screws (long).

STEP 11

Slide Drawer Bottom (U5) into groove.


Attach Drawer Bottom (U5) to unit with Wood Screws (short).

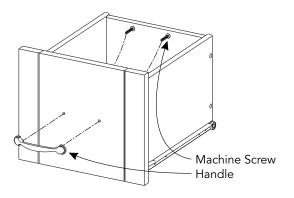

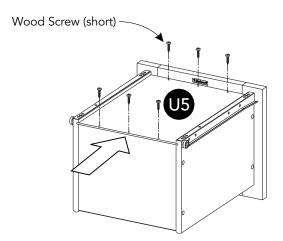


STEP 12

Attach Handle with Machine Screws.

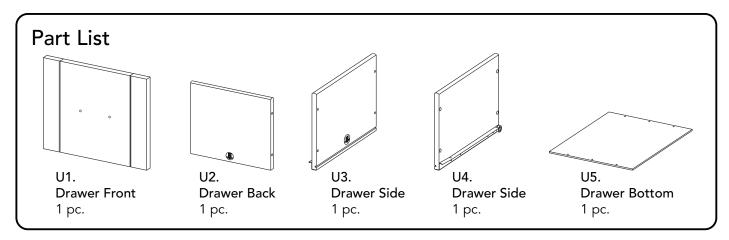


Assembly Instructions 8/8

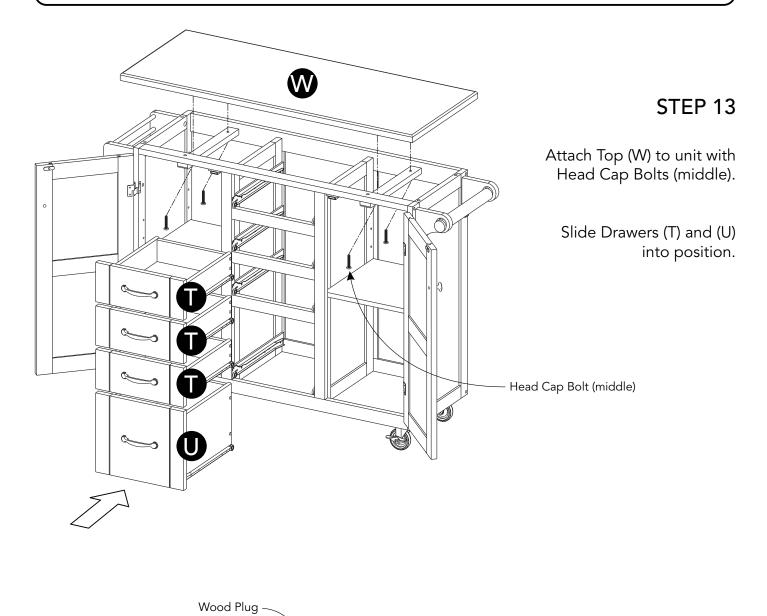



Cover all holes with Wood Plugs. (See Figure 8)

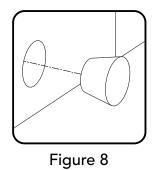

9100-106 Solid Wood Top


IMPORTANT


homestyles[®]

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

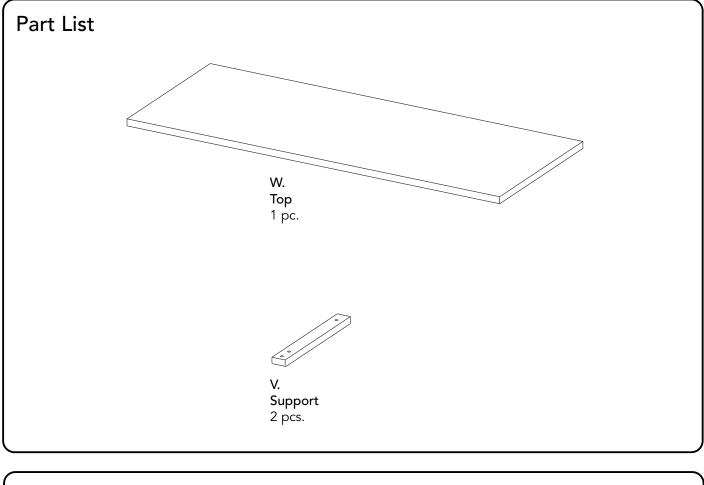

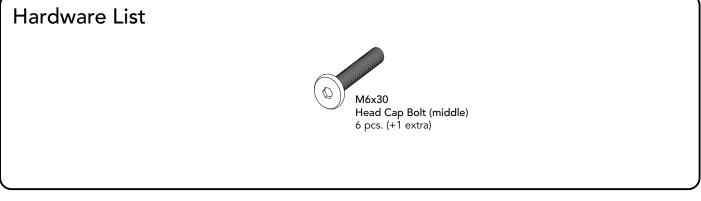

For assembly see instructions in Cart carton.

 homestyles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460



CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



homestyles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

homestyles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460