

homestyles®

20 08002 0692

 
Pantry

IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

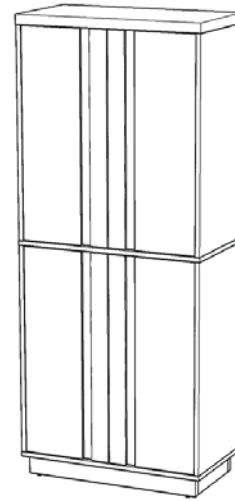


Part List

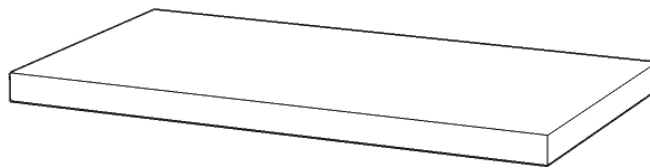 

A.
Top
1 pc.



 B.
Middle Panel
1 pc.

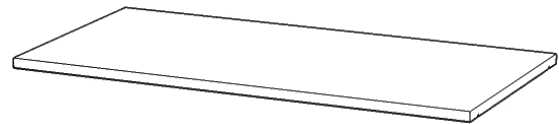

D.
Shelf
4 pcs.



C.
Rail
2 pcs.



E.
Base
1 pc.

For assembly see instructions in carton 20 08002 0691.

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319