

Purchase Date:	/ /	Order/Customer Reference	Number


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at https://tiny.cc/SunnydazeWarranty If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email:

customerservice@sunnydazedecor.com, or via our contact us page at https://tiny.cc/SunnydazeContact

DORIAN 5-FOOT RECTANGULAR DINING TABLE BWD-818

Carefully read all assembly and information in this manual before using this product. Save this manual for future reference.

Assemble components on a soft, clean surface to avoid damaging the finish.

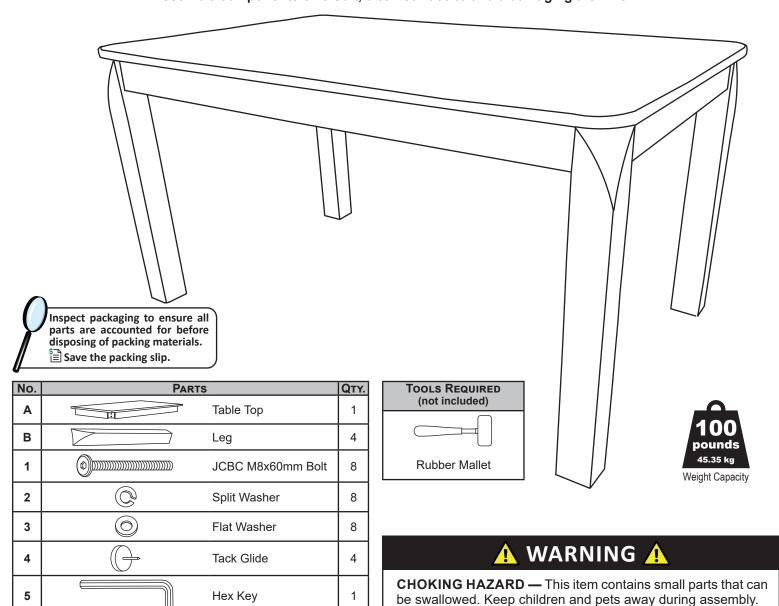


NOTE: Over time and with use, the bolts may become loose. Save the included tool for tightening loosened hardware.

! HELPFUL HINT


Sunnydaze Decor advises reading this manual fully, and assembling the item soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.

Sunnydaze Decor •••• Sunnydaze Decor.com

ASSEMBLY

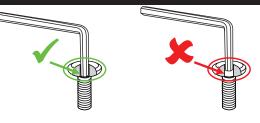

Tip: Always fully insert the hex key inside the designated notch of the bolt. If the hex key is not entirely inside the notch, the hex key could slip out, causing damage to the bolt head. In addition, repeated hex key slipping will cause the notch to become rounded, making it difficult or impossible to tighten the bolt.

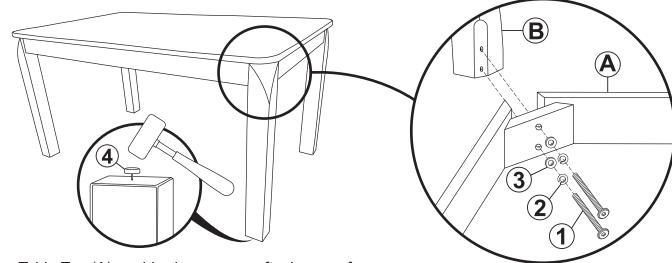

Place Table Top (A) upside-down on a soft, clean surface.

Align Leg (B) with the corner of the table top. Use two sets of Flat Washer (3), Split Washer (2), and JCBC M8x60mm Bolt (1) to secure the leg as shown. Repeat until all legs have been securely fastened.

Use a rubber mallet to install one Tack Glide (4) into the bottom, center of each leg.

Care & Maintenance



Clean the furniture using a dry, soft cloth or clean feather duster.



Remove stains with a slightly damp cloth and mild soap. Dry with a soft cloth to prevent water damage.



Do not clean with harsh cleansers or polish.



Do not put hot items or any liquids directly on the furniture surface.

🛕 SAFETY STATEMENTS & WARNINGS 🛕

- For indoor use only.
- This product is for residential use only; institutional or commercial use will automatically void the product warranty.
- Ensure fittings are tight before use. Periodically check fitting to ensure they are tight.
- · Do not exceed the weight capacity of this item.
- · Do not place liquids or hot items directly on the unit.
- · Never use chemical cleaning products or polishes as they may damage the finish.
- Avoid long-term exposure to sunlight.
- · Avoid placing near heating or cooling vents as forced air is be very drying and could damage the wood.
- Use a padded barrier to protect the table surface when using writing utensils.

Any modification to the product or failure to follow recommended care will void the product warranty.

⚠WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.