

User's Manual

**728CA**  
MP3-COMPATIBLE  
IN-DASH CD RECEIVER



**728CA**  
MP3-COMPATIBLE IN-DASH CD RECEIVER  
01.2011  
tech support: [www.bosssaudio.com/support](http://www.bosssaudio.com/support)

   10 R - 02 1397


**BOSS**<sup>®</sup>  
AUDIO SYSTEMS

BOSS Audio Systems • 3451 Lunar Court • Oxnard, CA 93030  
[www.bosssaudio.com](http://www.bosssaudio.com)  
800.999.1236

**BOSS**<sup>®</sup>  
AUDIO SYSTEMS


# 1. INSTALLATION

The following illustration shows a typical installation. If you have any questions or require information regarding installation kits, consult your customer car audio dealer or a company supplying kits. If you are not sure how to install this unit correctly, have it installed by a qualified technician.

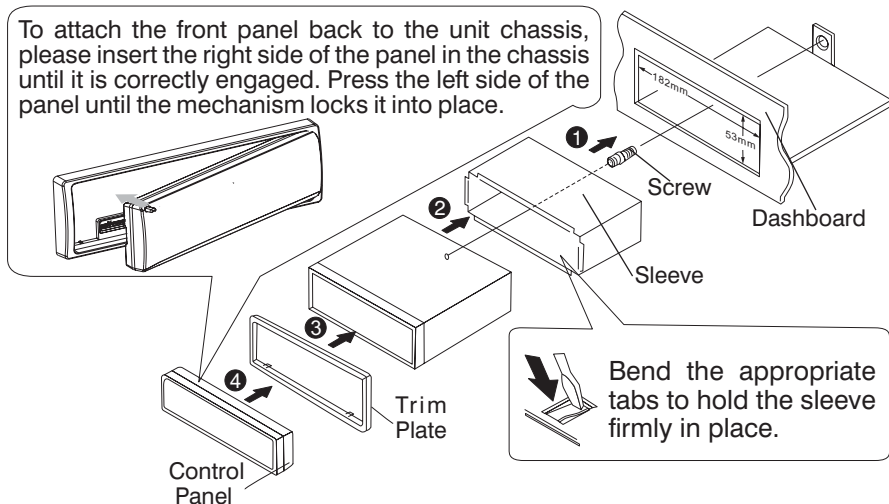 

## Remove the unit

1. Press the Panel Release button.
2. Push the left side of the panel rightward
3. Pull the panel towards you to disengage it from the chassis.

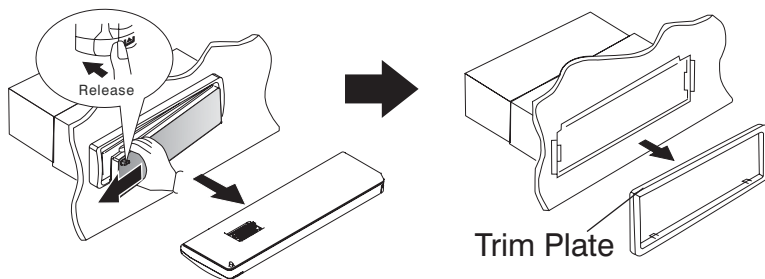

## 2. CONNECTING THE SYSTEM


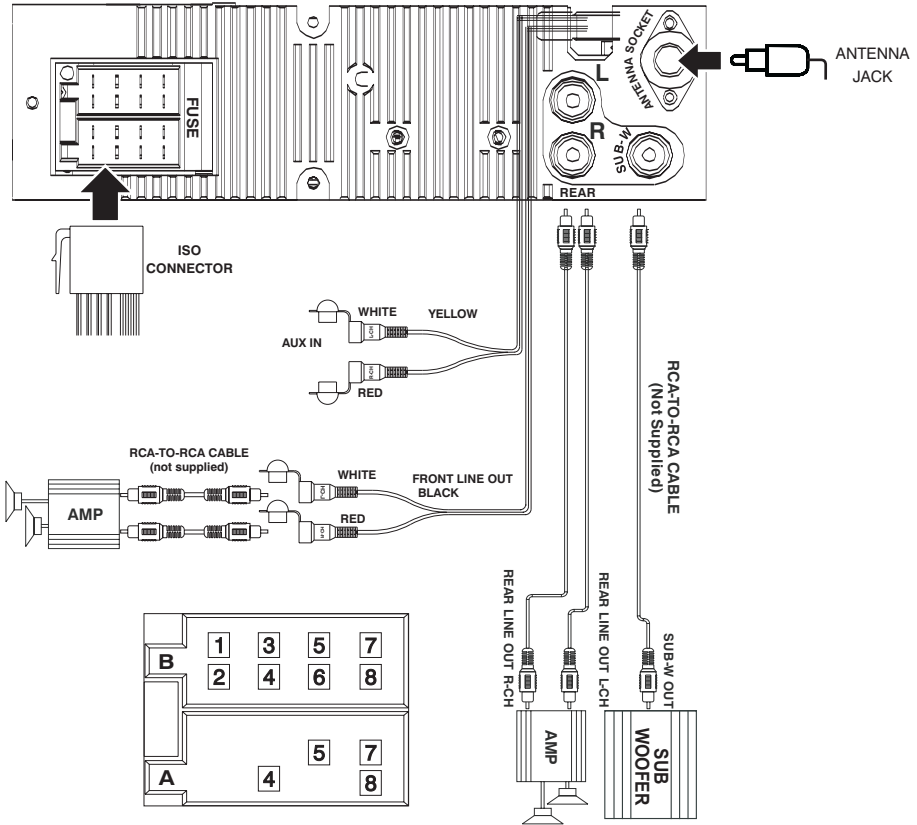


FIGURE 2

### ISO CONNECTOR WIRING CHART

PIN	WIRE COLOR	FUNCTION/LABEL
A4	YELLOW	BATTERY(+)
A5	BLUE	CONNECT TO SYSTEM CONTROL TERMINAL OF THE POWER AMP OR AUTO ANTENNA RELAYCONTROL TERMINAL(max 150mA 12VDC)
A7	RED	IGNITION(ACC)
A8	BLACK	GROUND
B1	VIOLET	RIGHT REAR SPEAKER (+)
B2	VIOLET/BLACK	RIGHT REAR SPEAKER (-)
B3	GREY	RIGHT FRONT SPEAKER (+)
B4	GREY/BLACK	RIGHT FRONT SPEAKER (-)
B5	WHITE	LEFT FRONT SPEAKER (+)
B6	WHITE/BLACK	LEFT FRONT SPEAKER (-)
B7	GREEN	LEFT REAR SPEAKER (+)
B8	GREEN/BLACK	LEFT REAR SPEAKER (-)

### 3. THE MAJOR FUNCTION OF THIS UNIT

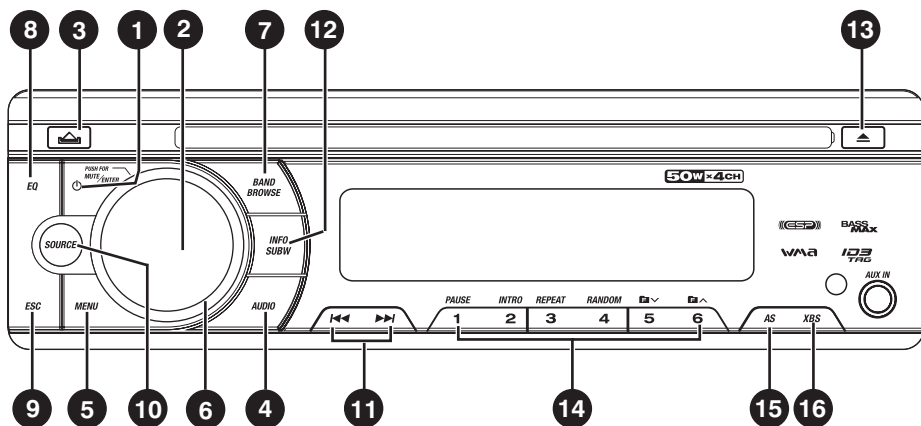

No.	Item	Descriptions
1	(Power)	▶ Press this button or any other button on the front panel (except Release/Eject) to turn the unit on. Press this button again to turn the unit off.
2	MUTE	▶ Press this button to turn the Mute On/Off.
	ENTER	▶ Under Disc media playback mode, press this button to confirm the selection.
3	(Release)	▶ Press this button to open the control panel.
4	AUDIO(Audio Menu)	▶ Press this button is access into the Audio Menu mode: <b>VOL-&gt;BAS-&gt;TRB-&gt;BAL-&gt;FAD.</b>
5	MENU(System Menu)	▶ Press this button access into the System Menu.
6	VOLUME KNOB	▶ Rotate the encoder volume to increase and decrease the volume.
	BAND	▶ Short press this button to change between BAND FM1,FM2,FM3, AM1(MW1) or AM2 (MW2).
7	BROWSE	▶ Under Disc media playback mode, short press this button to access into the Music Folder/File searching mode. Rotate the encoder knob to navigate thru Folder and File list. Once the desire file appearing on the LCD, press the ENTER button to confirm and start file play.
8	EQ	▶ Press this button to select the preset Equalizer setting: <b>FLAT -&gt; POP -&gt; ROCK-&gt;CLASSIC-&gt; EQ OFF</b>
9	ESC	▶ Press this button to quick return previous menu or mode.
10	SOURCE	▶ Press SOURCE button to select a different mode of playback mode: Radio, CD play, and Aux In.

11	<b>TUNE UP /DOWN</b>	▶ Under tuner mode, press this button to enter into the Auto Seek mode, press and hold this button to enter into the Manual Seek mode.																					
	<b>FILE UP /DOWN</b>	▶ Under Disc media playback mode, press these buttons to skip a song / file.																					
	<b>FAST FORWARD /BACKWARD</b>	▶ Under Disc media playback mode, press and hold momentarily to fast forward/backward.																					
12	<b>INFO</b>	▶ Under Tuner mode, press this button briefly to display the Clock time. ▶ Under Disc media playback mode, press this button repeatedly to display ID3 information: Track number and play time ->folder ->file ->title ->artist ->album ->clock.																					
	<b>SUBW(Subwoofer)</b>	▶ Press and hold this button to turn On / Off the Subwoofer function.																					
13	<b>EJECT</b>	▶ Press this button to eject the Disc.																					
14	<b>PRESET NUMERIC BUTTONS</b>	▶ Under Tuner mode, short press the Numeric buttons to recall the preset stations. Hold press the Numeric buttons to store the listening station. ▶ Under Disc media playback mode,press the Numeric buttons to perform the below operation:																					
		<table border="1"> <thead> <tr> <th>No.</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> </tr> </thead> <tbody> <tr> <td><b>Short press</b></td> <td>Pause/Play</td> <td>Intro</td> <td>Repeat</td> <td>Random</td> <td>Folder Down</td> <td>Folder UP</td> </tr> <tr> <td><b>Long press</b></td> <td></td> <td>Folder Intro</td> <td>Folder Repeat</td> <td>Folder Random</td> <td></td> <td></td> </tr> </tbody> </table>	No.	1	2	3	4	5	6	<b>Short press</b>	Pause/Play	Intro	Repeat	Random	Folder Down	Folder UP	<b>Long press</b>		Folder Intro	Folder Repeat	Folder Random		
No.	1	2	3	4	5	6																	
<b>Short press</b>	Pause/Play	Intro	Repeat	Random	Folder Down	Folder UP																	
<b>Long press</b>		Folder Intro	Folder Repeat	Folder Random																			
15	<b>AS (Auto Store)</b>	▶ Press this button to automatically select six strongest stations and store them in current band.																					
16	<b>XBS</b>	▶ Press this button to turn On / Off the iX-BASS booster function.																					

## 4. ADJUST SYSTEM MENU SETTING

Press MENU button to access into the System Menu. User can select the below functions:

### ▶ **AREA (Tuner Frequency Spacing)**

This option allows the selection of the frequency spacing appropriate for your area. "AREA U.S.A" is the default setting. Rotate the Encoder Volume Konb to select the EUROPE, U.S.A, OIRT (Russia), LATIN, ASIA (Asia Pacific) or MID-EAST (Middle East) options.

### ▶ **TIME SET (CLK)**

The time on the clock is set to "12:00" by default, Rotate the encoder volume knob to adjust the minutes and hours. Press MENU button to select the hour or minutes.

### ▶ **BEEP ON/OFF (Beep Tone)**

The beep tone feature allows the selection of an audible beep tone to be heard each time a button is pressed on the face of the radio. "Beep On" is the default display. Rotate Encoder Volume Konb to select the "Beep Off" option.


### ▶ **LOC ON/OFF (Local/Distance Select)**

This feature is used to designate the strength of the signals at which the radio will stop during automatic tuning. "LOC OFF" is the default, allowing the radio to stop at a broader range of signals. To set the unit to select only strong local stations during automatic tuning, rotate the Encoder Volume Knob until "LOC ON" appears in the display.

## 5. EXTERNAL CONNECTION AND MEDIA PLAYER

### CONNECT THE AUX-IN


Connect the external signal to AUX in jack located at the front of the panel, then press Mode button to select Aux mode. Press Mode Button again to cancel Aux Mode and return to previous mode.

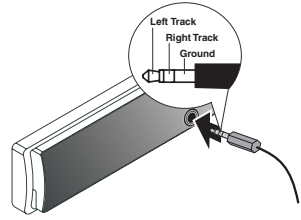


### RESET THE UNIT

You can reset the unit to its default setting.

- The RESET button is located on the main unit (as shown on the diagram). To press it vertically with a ballpoint pen or metal object will activate it.
- The reset button is to be activated for the following reasons:
  1. Initial installation of the unit when all wiring is completed.
  2. All the function buttons do not operate.
  3. Error symbol on the display.

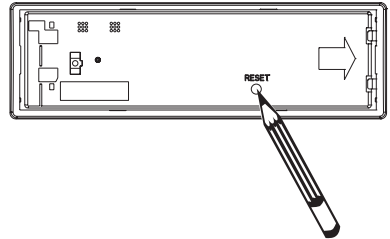



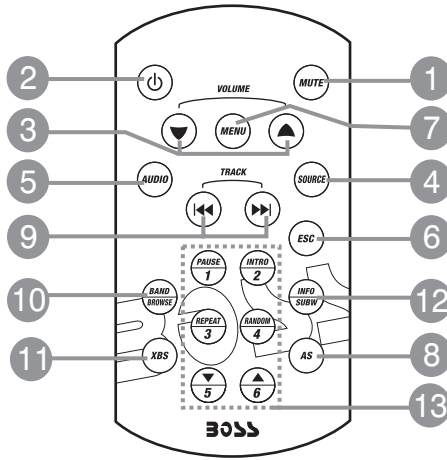






## 6. THE FUNCTIONS OF REMOTE CONTROL



No.	Button	Item	Decriptions
1		<b>MUTE</b>	▶ Press this button to turn the mute On/Off.
2		<b>POWER ON/OFF</b>	▶ When the unit is power on, press this button to turn Off the unit. Once the unit power off, press this button to turn On the unit.
3		<b>VOLUME KNOB</b>	▶ Press this button to increase / decrease the volume.
4		<b>SOURCE</b>	▶ Press this button to select different source playback mode: RADIO, CD PLAY, TUNER, AUX IN.
5		<b>AUDIO MENU</b>	▶ Press this button to enter into the Audio Menu mode.
6		<b>ESC</b>	▶ Press this button to quick return previous menu or mode.
7		<b>SYSTEM MENU</b>	▶ Press this button to enter into the System Menu mode.
8		<b>AUTO STORE</b>	▶ Press this button to automatically select six strongest stations and store them in current band.
9		<b>TUNE UP / DOWN</b>	▶ Under the tuner mode, press this button to enter into the Auto seek mode, press and hold this button to enter into the Manual Seek mode.
		<b>FILE UP / DOWN</b>	▶ Under Disc media playback mode, press these buttons to skip to the next or previous song / file.
		<b>FAST FORWARD / BACKWARD</b>	▶ Under Disc/USB/SD media playback mode, press and hold momentarily to fast forward / backward.



10		<b>BAND</b>	▶ Press this button to change between BAND FM1,FM2,FM3, AM1 (MW1) or AM2 (Mw2).																		
		<b>BROWSE</b>	▶ Under the Disc/USB/SD media playback mode, short press this button is access into the Music Folder/File searching mode. Rotate the encoder knob to navigate thru Folder and File list. Once the desire file appearing on the LCD. Press 'MENU' button to confirm and start file play.																		
11		<b>XBS</b>	▶ Press this button to turn On/Off the iX-BASS booster function.																		
12		<b>INFO</b>	▶ Under Tuner mode, press this button briefly to display the Clock time. ▶ Under Disc / USB / SD media playback mode, press this button repeatedly to display ID3 information: Track number and play time -> folder ->file ->title ->artist ->album ->clock.																		
		<b>SUBW (Subwoofer)</b>	▶ Press and hold this button to turn On / Off the Subwoofer function.																		
13	     	<b>PRESET NUMERIC BUTTONS</b>	▶ Under Tuner mode, short press the Numeric buttons to recall the preset stations. Hold press the Numeric buttons to store the listening station. ▶ Under Disc media playback mode, press the Numeric buttons to perform the below operation:																		
		<table border="1"> <thead> <tr> <th>No.</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> </tr> </thead> <tbody> <tr> <td><b>Short press</b></td> <td>Pause/Play</td> <td>Intro</td> <td>Repeat</td> <td>Random</td> <td>Folder Down</td> <td>Folder UP</td> </tr> <tr> <td><b>Long press</b></td> <td></td> <td>Folder Intro</td> <td>Folder Repeat</td> <td>Folder Random</td> <td></td> <td></td> </tr> </tbody> </table>	No.	1	2	3	4	5	6	<b>Short press</b>	Pause/Play	Intro	Repeat	Random	Folder Down	Folder UP	<b>Long press</b>		Folder Intro	Folder Repeat	Folder Random
No.	1	2	3	4	5	6															
<b>Short press</b>	Pause/Play	Intro	Repeat	Random	Folder Down	Folder UP															
<b>Long press</b>		Folder Intro	Folder Repeat	Folder Random																	

## 7. TROUBLE SHOOTING

Before going through the check list, check wiring connection. If any of the problems persist after check list has been made, consult your nearest service dealer.

### No power or no sound

- Car engine is not on. Turn the car engine on.
- Cable is not correctly connected. Check connections.
- Fuse is burnt. Replace fuse.
- Volume is in minimum. Adjust volume to a desired level.
- If the above solutions cannot help, press the RESET button.
- Ensure that the track played is of a compatible format.

### Noise in broadcasts

- Signals are too weak. Select other stations with stronger signals.
- Check the connection of the car antenna.
- Change broadcast from Stereo to mono.

### Cannot play disc

- Ensure that the disc label is inserted with the printed side facing up.
- Wipe the disc with fibre cleaning cloth from the centre to the edge in a straight line.
- This disc may be defective. Play another disc.
- Ensure that the CD is a finalised CD/CD-R/CD-RW.
- Ensure that the CD is not encoded with copyright protection technologies.

### The CD Skips tracks

- Ensure that the CD is not damaged or dirty.
- Ensure that random mode is deactivated.

### Preset stations lost

- Battery cable is not correctly connected. Connect the battery cable to the terminal that is always live.

## 8. PRODUCT INFORMATION

Power Supply	12 V DC (11-14 V), Negative Ground
Fuse	7.5A
Suitable Speaker Impedance	4 - 8Ω
Power output	50W x 4 channels
Pre-AMP output voltage	2.0 V
Aux-In level	≥ 300mV

### Radio

#### -FM

Frequency Range	87.5 - 107.9MHz(American) 87.5 - 108MHz(Europe) (100KHz per step in auto search and 50KHz per step in manual search)
Usable Sensitivity	Better than 15dB at S/N 30dB

#### -AM(MW)

Frequency Range	530 - 1710 KHz(American) 522 -1620KHz(Europe)
Usable Sensitivity	Better than 45dB

### Supported formats:

MPEG1/2/2.5/	Layer 2/3
WMA Version	7/8/9
Sampling frequency	
MPEG1	32/44.1/48 KHz
MPEG2	16/22.05/24 KHz
MPEG2.5	8/11.025/12KHz
WMA	22/32/44/48KHz
Sampling But rate	
MP3/WMA	32~320Kbps & VBR
CDROM Mode	1 / 2
ISO9660 Level	1 / 2 & Joliet(unicode)
Max File/DIR. Count	999
Max DIR. Depth	255
Sorting Method	Tree sorting
Max File/DIR. Name	64Byte
ID3	V1.0/1.1/2.0/2.3(Max 32Byte)
MP3 directory shown	in this manual as "Directory"
MP3 file shown	"Track".
Maximum length of file name	31 characters.
Maximum length of directory	32 characters.
Supports Multi-Session recording.	
Supports CD, CDR and CDRW.	
Disc written by Packet Write (UDF) is not supported.	

#### NOTE

Product information is subject to change without prior notice.



If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.(Waste Electrical and Electronic Equipment Directive)