

PNEUMATIC SHOP STOOL WITH BACKREST

Item Number W85016

OWNER'S MANUAL



Performance Tool®

▲WARNING: READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE OPERATING THIS TOOL. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

PT®
Performance Tool

SAFETY GUIDELINES / DEFINITIONS

This instruction manual is intended for your benefit. Please read and follow the safety, warnings and assembly steps described within to ensure your safety and satisfaction. The contents of this instruction manual are based upon the latest product information available at the time of publication. The manufacturer reserves the right to make product changes at any time without notice.

▲WARNING: Read and understand this entire instruction manual before attempting to assemble, install, operate or maintain this product. Failure to comply with the instructions may result in serious personal injury and/or property damage!

The following signal words are used to emphasize safety warnings that must be followed when using this product:

▲DANGER: Indicates an imminently hazardous situation that, if not avoided, WILL result in death or serious injury.

▲CAUTION: Indicates a potentially hazardous situation that, if not avoided, MAY result in minor or moderate injury.

▲WARNING: Indicates a potentially hazardous situation that, if not avoided, COULD result in death or serious injury.

▲NOTE: Indicates important information, which if not followed, MAY cause damage to equipment.

UNPACKING AND INSPECTION

After opening the carton, unpack your new product and related parts and accessories. Please inspect it carefully for any damage that may have occurred during transit. Please check it against the photograph on carton. If any parts are missing, please call customer service at 1-800-497-0552 between 6 a.m. and 5 p.m. Pacific time.

▲WARNING: DO NOT operate this product if damaged during shipment, handling or misuse. Do not operate the product until the parts have been replaced or the fault rectified. Failure to do so may result in serious personal injury or property damage. All damaged parts must be repaired or replaced as needed prior to operating this product. Check to see that all nuts, bolts and fittings are secure before putting this product into service.

If you have any questions, or require assistance with damaged or missing parts, please contact our customer service department at 1-800-497-0552. Please have the serial number, model number, and date of purchase available for reference when calling.

GENERAL SAFETY

- This product is not a toy. Do not allow children to play with or near this item.
- Use as intended only.
- Inspect before every use; do not use if parts are loose or damaged.
- Do not exceed weight capacity of 330 lb. Be aware of dynamic loading! Sudden load movement may briefly create excess load causing product failure.
- Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact customer service for a replacement.
- Store idle equipment. When not in use, this product must be stored in a dry location to inhibit rust.
- Replacement parts and accessories. When servicing, use only identical replacement parts.
- The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

ASSEMBLY PRECAUTIONS

- Assemble only according to these instructions. Improper assembly can create hazards.
- Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
- Keep assembly area clean and well lit.
- Keep bystanders out of the area during assembly.
- Do not assemble when tired or when under the influence of alcohol, drugs or medication.
- Weight capacity and other product capabilities apply to properly and completely assembled product only.


SPECIFICATIONS:

Seat Diameter.....	13-1/2 in. (34.3 cm)
Seat Height.....	From 25 to 32 in. (63.5 to 81.3 cm)
Foot Rest to Floor.....	8 in. (20.32 cm)
Weight	13.64 lb. (6.18 kg)
Load Capacity.....	330 lb. (150 kg)

Specifications are subject to change without notice.

CONTENTS

No.	Description	Qty.	No.	Description	Qty.
1	Seat Cushion	1	7	Plastic Washers	4
2	Pneumatic Cylinder.....	1	8	Lock Nuts.....	4
3	Center Spindle	1	9	3/4 in. Screws	4
4	Legs	4	10	Base Cap	1
5	Footrest.....	1	11	Backrest Supports	2
6	2 in. Bolts	4	12	Backrest.....	1

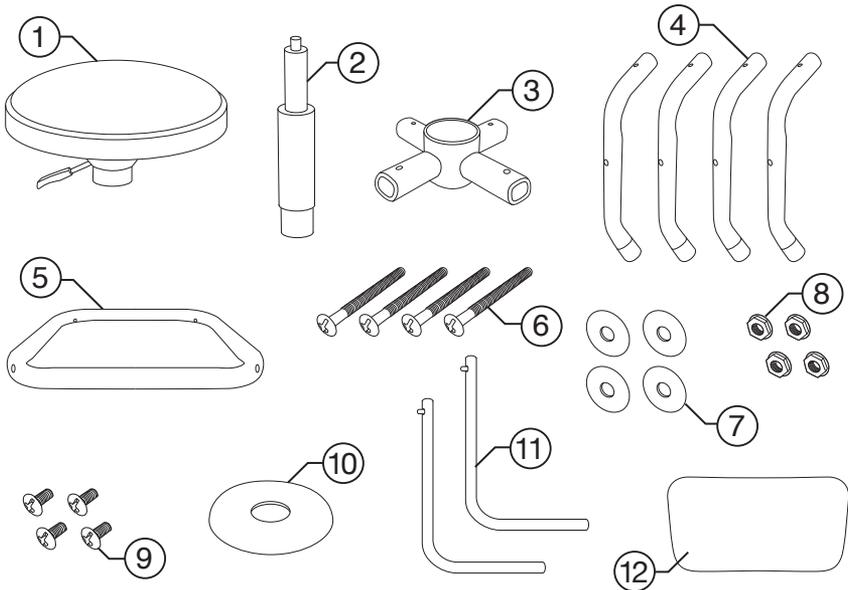


TOOLS REQUIRED

- 5 mm hex key wrench or 5 mm hex bit
- 10 mm socket, wrench, adjustable wrench or pliers


ASSEMBLY INSTRUCTIONS

NOTE: Lay out all contents and be sure nothing is missing.

1. Insert one of the legs (4) onto one end of the center spindle (3) and align the holes in both.
2. Insert a 3/4 in. screw (9) into the aligned holes and hand tighten only. Repeat for all 4 Legs.

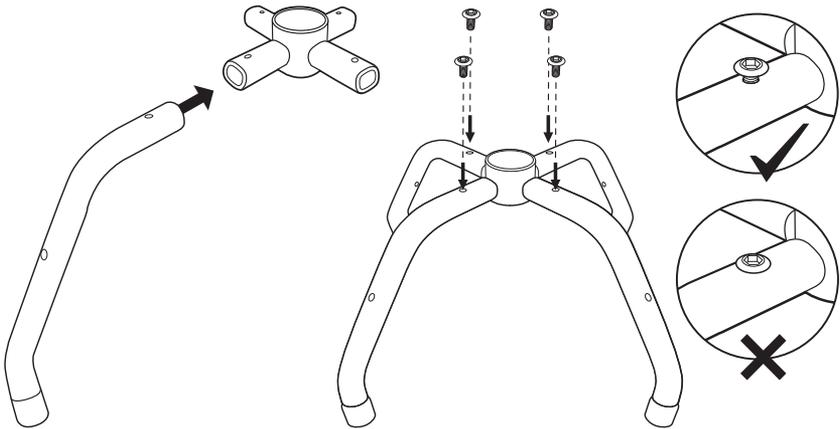

3. Place the base assembly on a flat surface. Position footrest (5) onto base legs, with the holes aligned and facing up and out at each of the corners.
4. Insert a 2 in. bolt (6) partially through the hole at the corner, then place a plastic washer (7) in between the footrest and leg. Push the bolt all the way through and fasten a lock nut (8) on bolt by hand. Repeat for all 4 legs and then securely tighten all bolts and nuts.

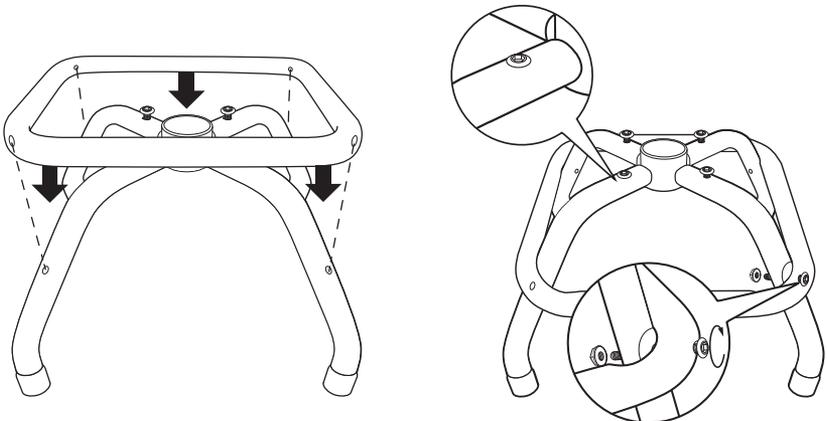


Tip: If any of the holes are difficult to align, loosen another section, to create some "wiggle room" to more easily align the other holes.


ASSEMBLY INSTRUCTIONS

CAUTION: Cylinder is under high pressure.


5. Place base cap (10) over cylinder opening at top of center spindle.

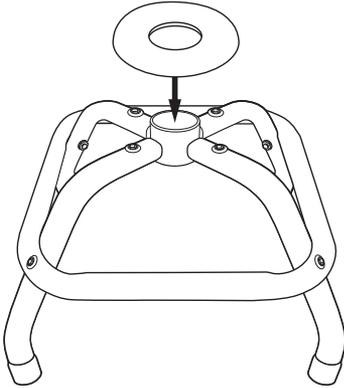


6. Remove the pneumatic cylinder (2) from box, and carefully remove the plastic cap on top of the release button. Insert large end into the opening in the center of the center spindle and leg assembly.

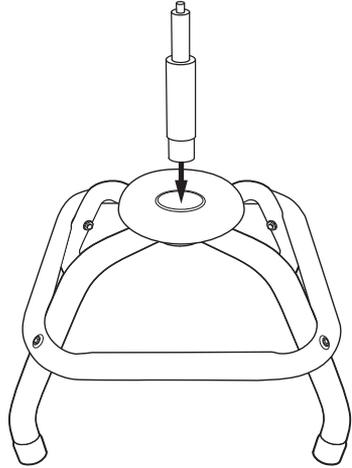

7. Center the seat cushion (1) onto the piston end of the pneumatic cylinder and push down firmly to ensure all pieces have properly seated.

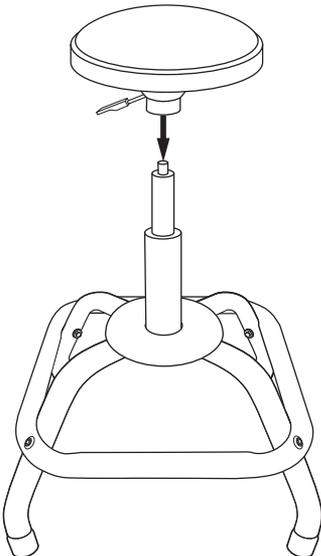


You should now be able to lift the seat up by the cushion without it coming off of the pneumatic cylinder. If the seat comes off, repeat step 7.

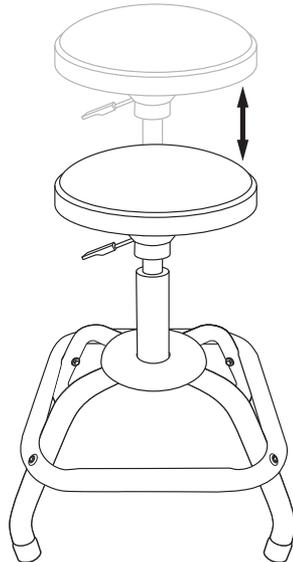


ASSEMBLY INSTRUCTIONS

8. Insert one of the backrest supports (11) into the backrest (12) by pressing the pin lock down, while sliding the support in, until the pin lock releases. Repeat for the other support.

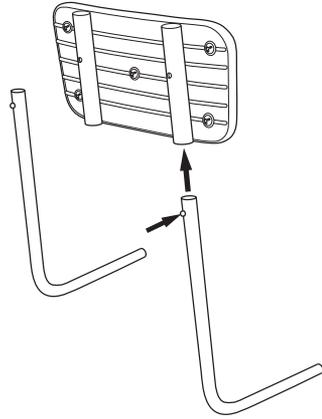


9. Lay assembled stool on its side and loosen the two knobs on the bottom of the seat. Insert the backrest supports, from the backrest assembly, into the seat tubes. Set to desired depth and tighten the knobs to secure the backrest.

WARNING: Be sure the backrest supports are inserted far enough into the seat tubes that the knobs make sufficient contact, and are tight enough to prevent the backrest from sliding out under weight.

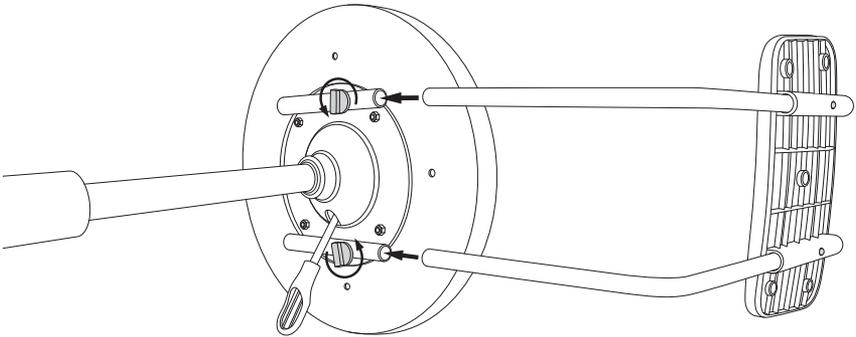

13.5 in. / 34.3 cm

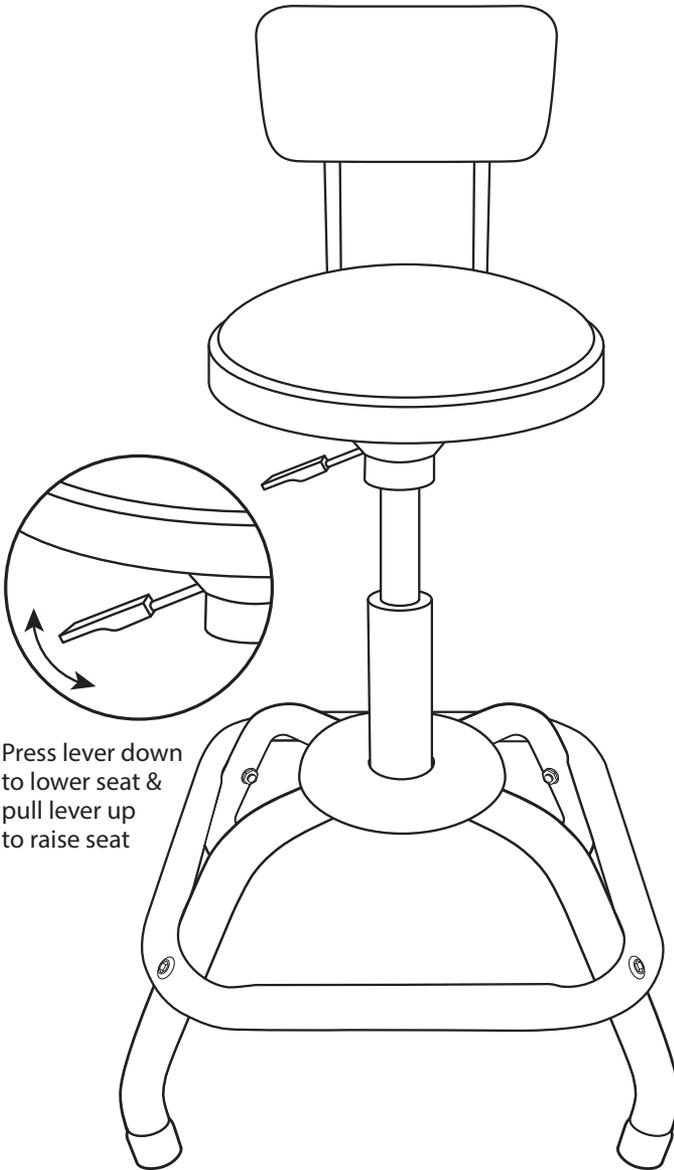

LIMITED WARRANTY

PERFORMANCE TOOL® extends only the following warranties, and only to original retail purchasers. These warranties give specific legal rights. Except where prohibited by local law, the law of the State of Washington governs all warranties and all exclusions and limitations of warranties and remedies. There may be other rights which vary from state to state.

PERFORMANCE TOOL® warrants the product to be free from defects in materials and workmanship under normal use and service. A defective product may be returned for a free replacement within 90 days from the date of purchase, provided that product is returned to place of purchase immediately after discovery of defect. After 90 days PERFORMANCE TOOL® will replace at no charge any parts which our examination shall disclose to be defective and under warranty. These warranties shall be valid only when a sales receipt showing the date of purchase accompanies the defective product or defective part (s) being returned. For part (s) after 90 days, please remit your request, postage prepaid to:

PERFORMANCE TOOL, P.O. Box 88259 Tukwila, WA 98138

These warranties exclude blades, bits, punches, dies, bulbs, fuses, hoses, and other consumables which must be replaced under normal use and service. These warranties shall not apply to any product or part which is used for a purpose for which it is not designed, or which has been repaired or altered in any way so as to affect adversely its performance or reliability, nor shall these warranties apply to any product or part which has been subject to misuse, neglect, accident or wear and tear incident to normal use and service.

PERFORMANCE TOOL® does not authorize any other person to make any warranty or to assume any liability in connection with its products.

Except for warranties of title and the limited express warranties set forth above, PERFORMANCE TOOL® makes no express or implied warranties of any kind with respect to its products. In particular, PERFORMANCE TOOL® makes no implied warranty of merchantability and no implied warranty of fitness for any particular purpose, except that for goods purchased primarily for personal, family or household use and not for commercial or business use, PERFORMANCE TOOL® makes an implied warranty of merchantability (and, if otherwise applicable, an implied warranty of fitness for a particular purpose), but only for the particular qualities or characteristics, and for the duration, expressly warranted above.

The laws on limitation of implied warranties may differ from state to state, so the above limitations may not apply in all cases.

PERFORMANCE TOOL® shall not be liable for consequential, incidental or special damages resulting from or in any manner related to any product, or to the design, use, or any inability to use the product. The sole and exclusive remedy for a defective product or part shall be the repair, or replacement thereof as provided above. The laws on limitation of remedies or on consequential, incidental or special damages may vary from state to state, so the above limitations may not apply in all cases.