


INSTRUCTIONS

Thank you for purchasing this item from Yamazaki USA Inc. Please refer to the following instructions before using the product. Please use it properly, and take good care of it. Keep these instructions after reading them for future reference.

ZK-018 E

HOW TO USE

※ Prepare a screw driver
Attach this upper and lower parts of the frame as shown below, and fasten them securely.

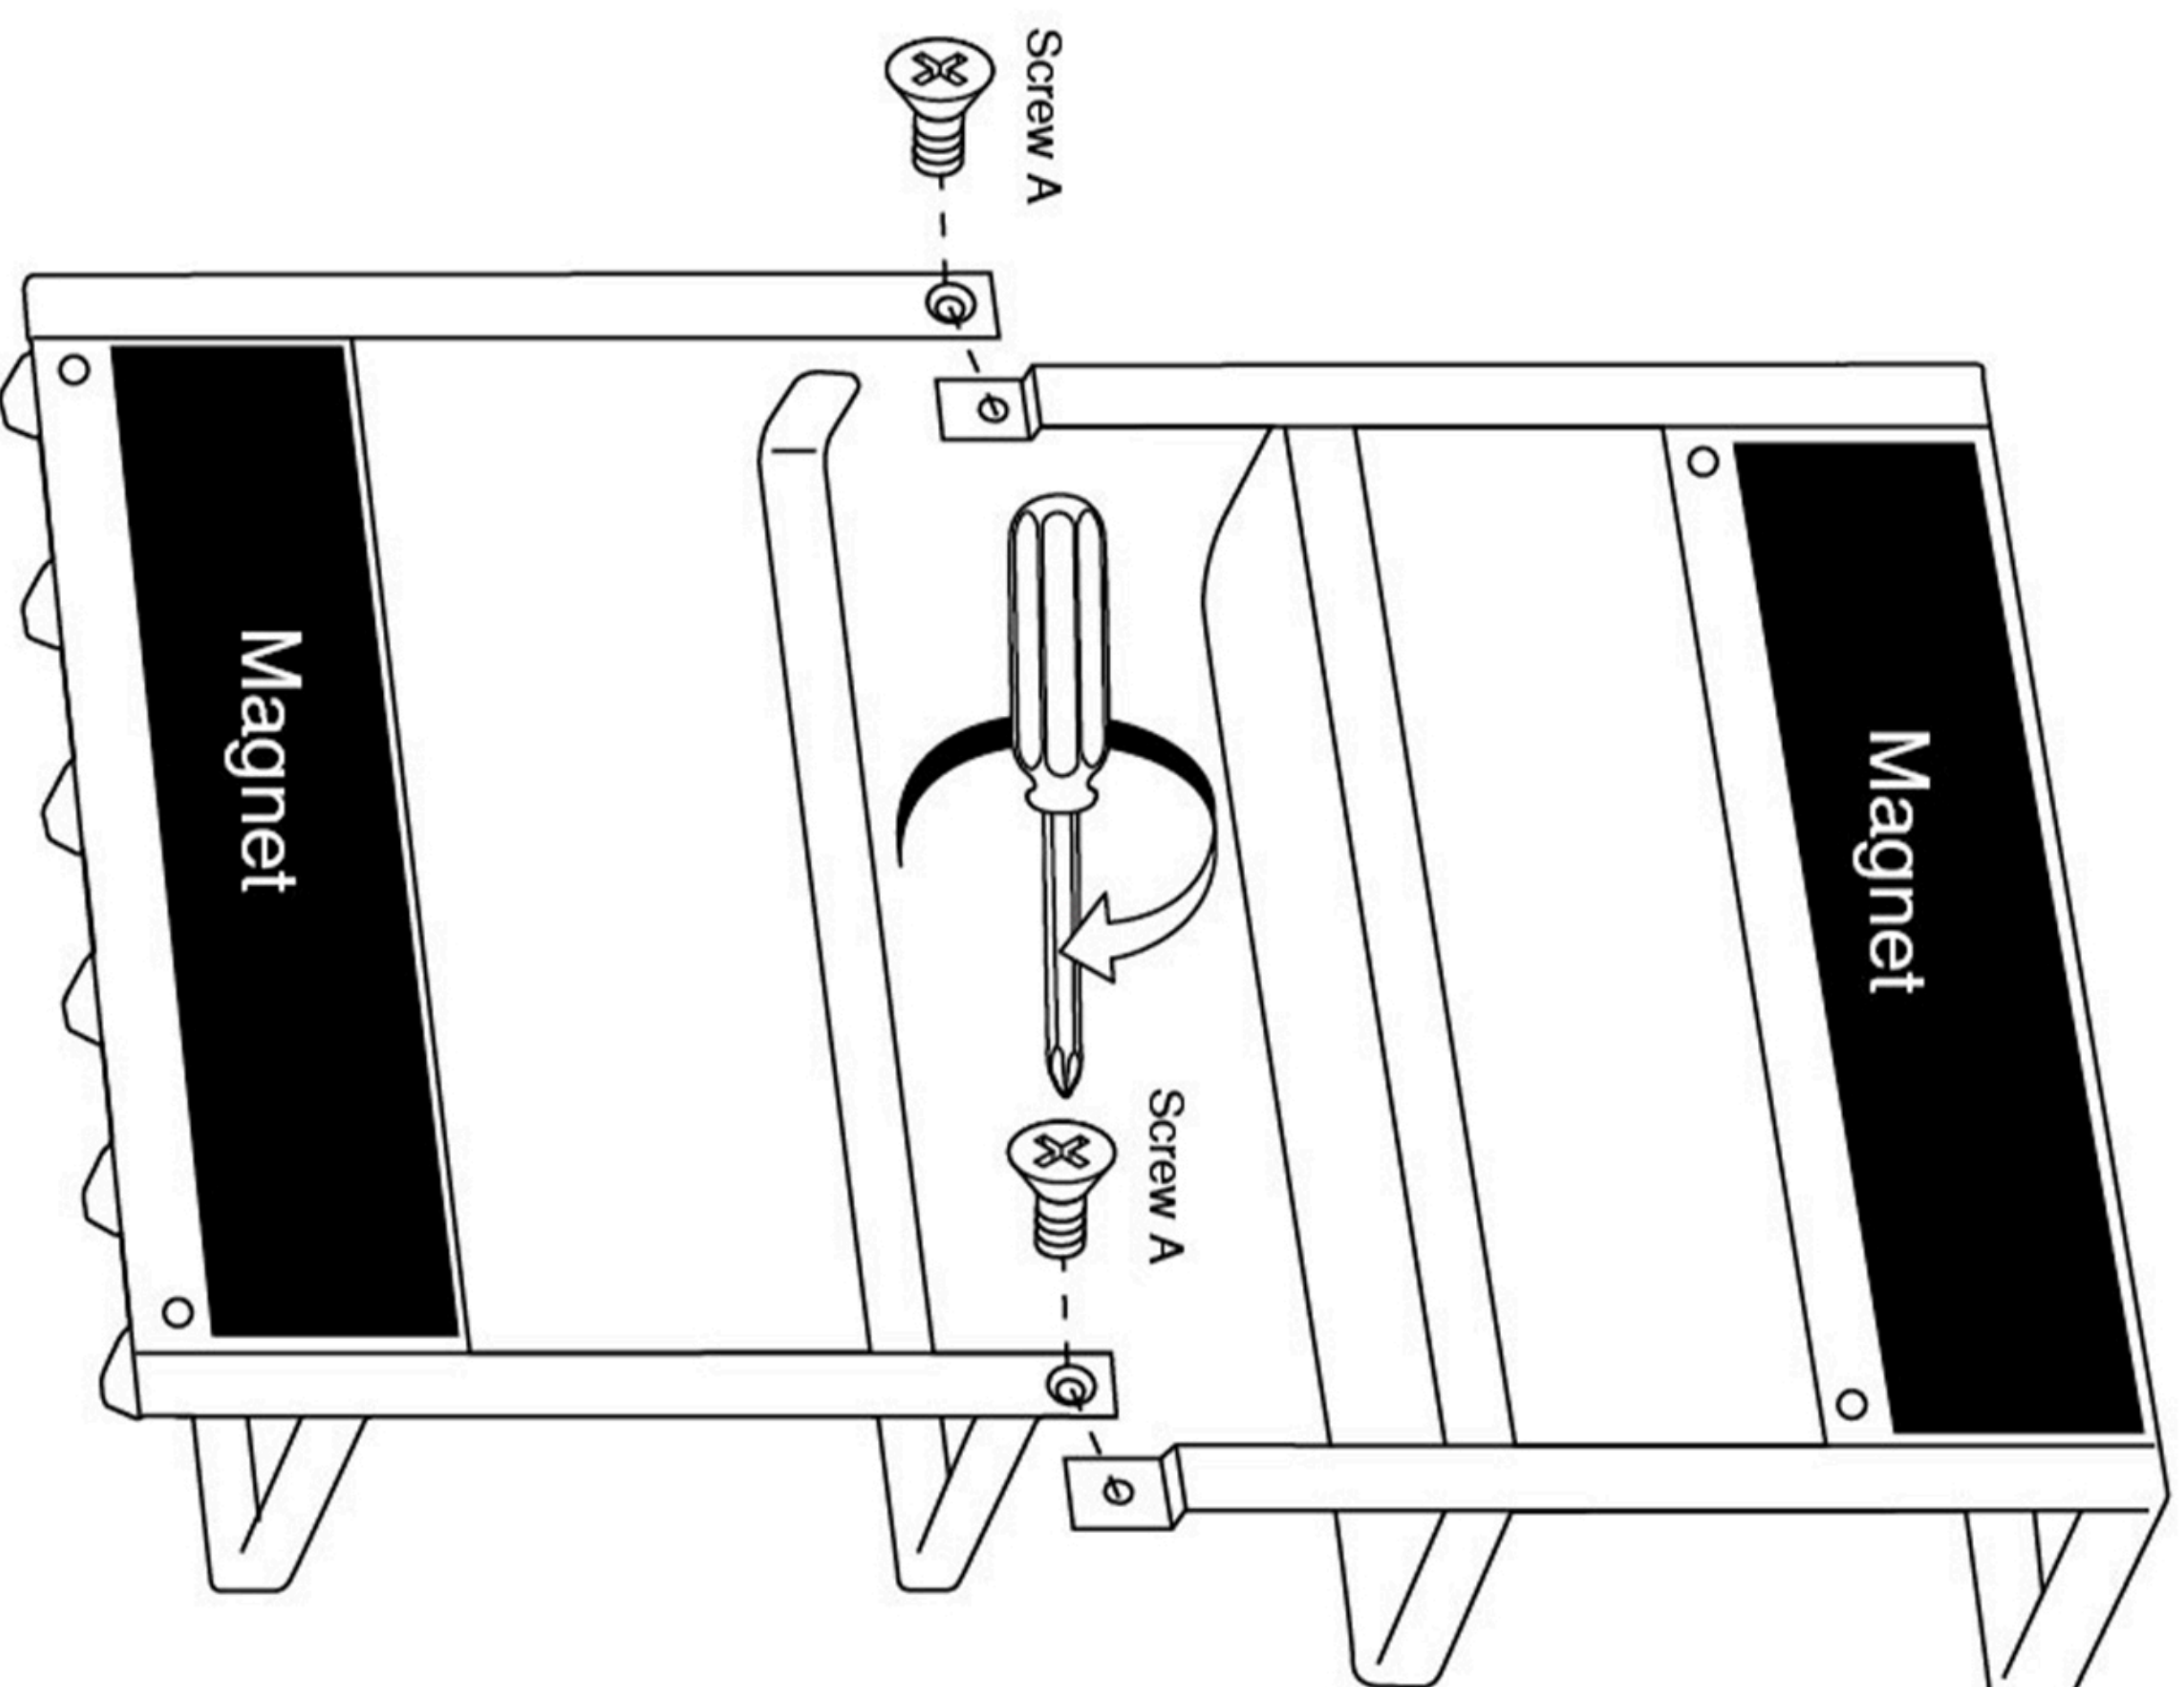


This product can be used in as many ways as you can think of! It will stick easily to the side of the refrigerator.

- Make your daily kitchen experience much more smooth by storing all of your favorite, regularly used kitchen items here! It makes cooking time much shorter.
- Use the upper level for wrap, recipe books, spices or more!
- Use the hangers for paper towels, dish cloths or more!
- The hangers can also be used for hand soap or rubber gloves!
- Use the lower level for bottle openers, rubber bands, oven mitts or scissors! There are 6 hooks available.

Using the screws (Requires a screw driver)

※ Don't try to remove the magnet as they bonded to the body.

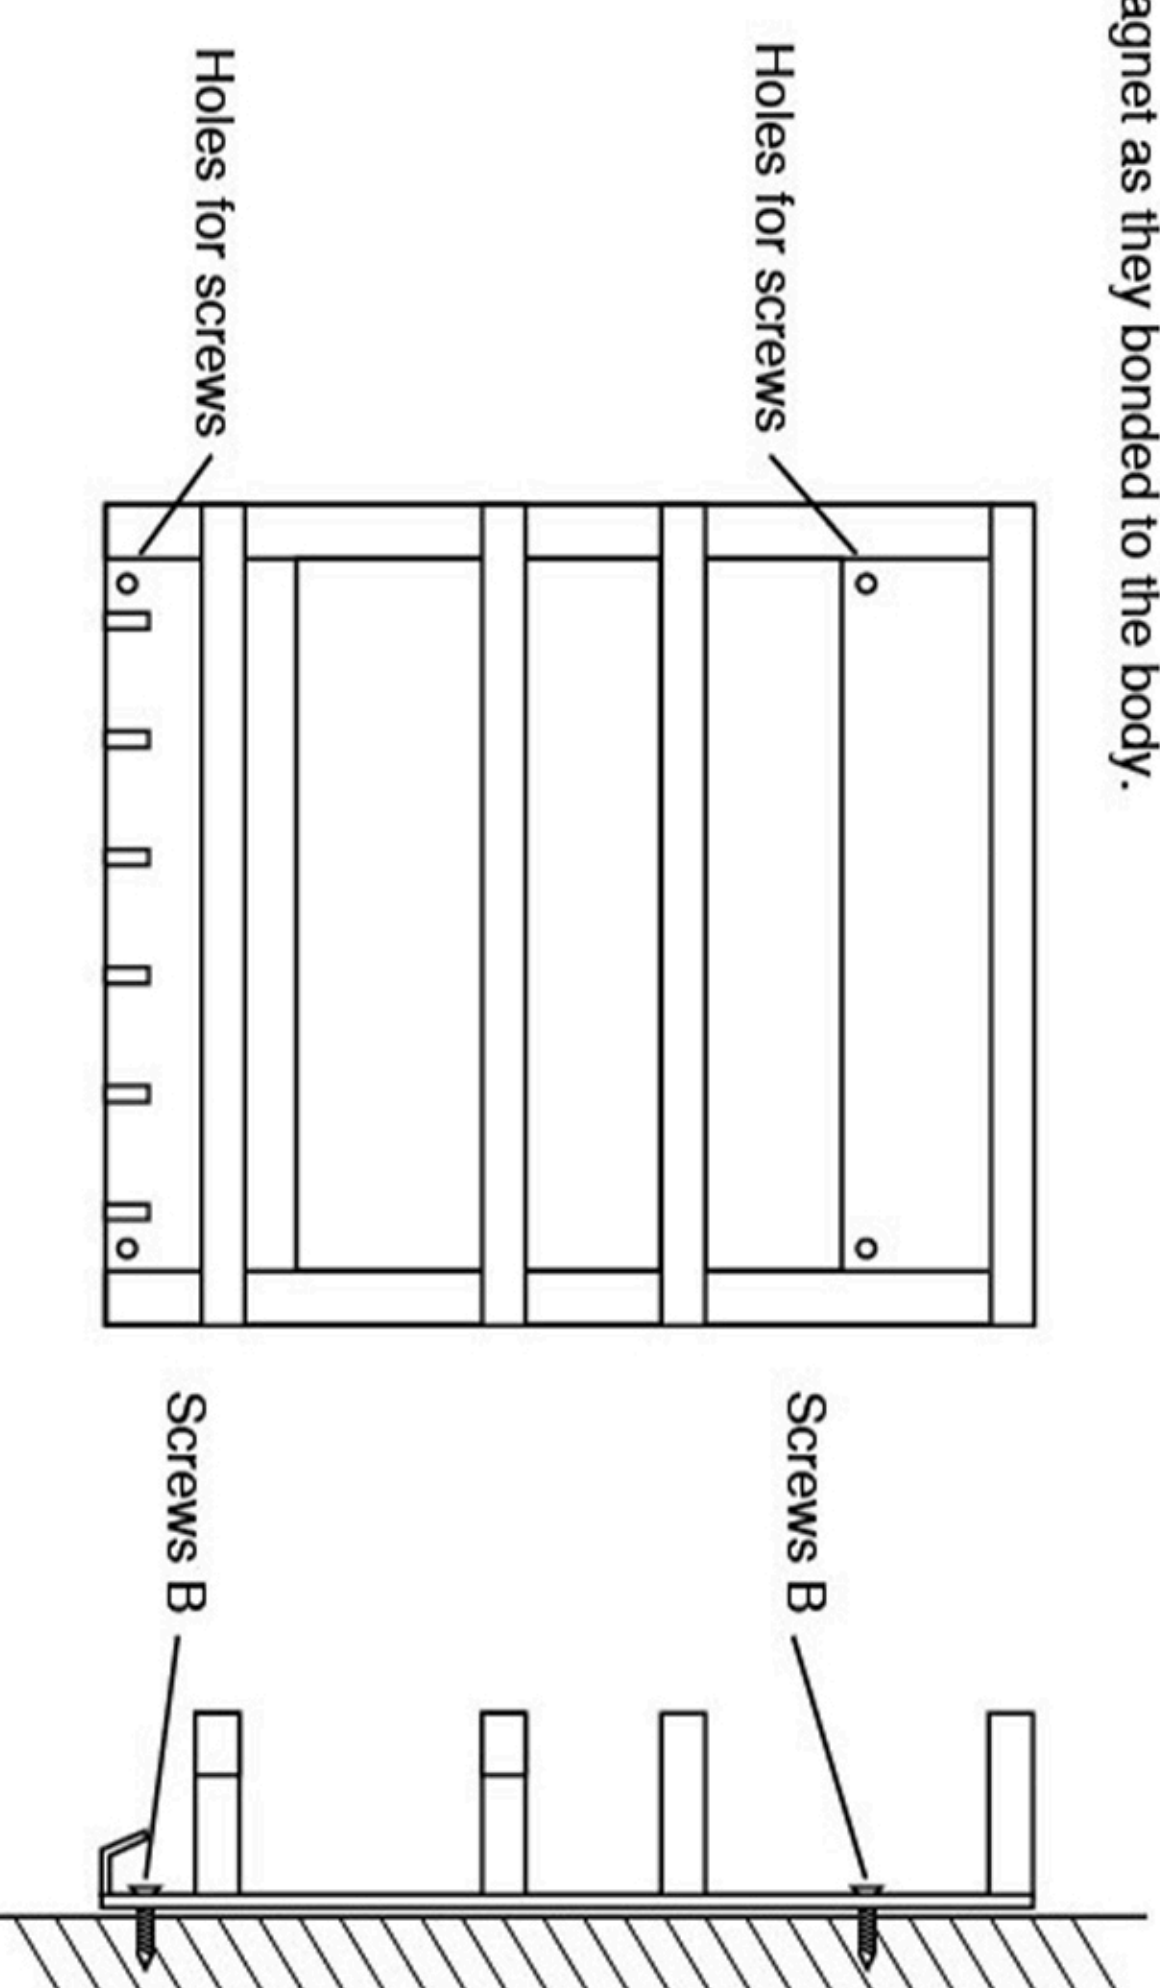

WARNING ! When using the product near a stove, do not store any flammable items. Doing so is a fire hazard.

CAUTION

- Do not use the product for anything other than its intended use.
- Ensure that the magnet is properly attached to prevent fall.
- The maximum weight may vary based on the strength, thickness, and condition of the surface that the product is attached to.
- Do not use the product in direct sunlight or close to heated surfaces.

PRODUCT SPEC

Product Size W11.4"xD3.5"xH14.2" / W29xD8xH36 cm

Product Material Body: Steel Screw A X2 Magnet x 2 Screw B x 4

Maximum Weight 8 lbs / 4 kg