



## GRIP PLUS BALLPOINT PEN



- Grip Plus Ballpoint Pens come equipped with a medium, blue ballpoint refill.
1. Remove the front piece (1) from the barrel (2) by turning the barrel (2) counterclockwise.
  2. Remove the empty ballpoint refill (4) from the front piece (1).
  3. Insert new Faber-Castell Ballpoint Refill (4) into the front piece (1).
  4. Return the front piece (1) to the barrel (2) by turning the barrel (2) clockwise.
  5. Click the push button (3) to advance the ballpoint (4) and begin writing.
  6. To retract the ballpoint (4) click the push button (3).

REFILLS    Ballpoint: #148780 Fine, Black  
#148789 Medium, Black  
#148788 Medium, Blue  
#148742 Broad, Black  
#148743 Broad, Blue  
#148794 Extra Broad, Black  
#148793 Extra Broad, Blue