

MODERN OUTDOOR PLAYSET



Easy step-by-step 3D interactive instructions for this product can be found in BILT[®]. Download today.





OBSTACLE FREE SAFETY ZONE - 30° - $7^{"}$ X 19'- $0^{"}$ X 14'- 7-1/2" (9.3 x 5.8 x 4.1m) area requires Protective Surfacing. See page 4.

MAXIMUM VERTICAL FALL HEIGHT - 8' - 7-1/2" (2.6m).

CAPACITY - 9 Users Maximum, Ages 3 to 10; Weight Limit 110 lbs. (50 kg) per child. RESIDENTAL HOME USE ONLY. Not intended for public areas such as multi-unit residences, schools, churches, nurseries, day cares or parks.



INSTALLATION AND OPERATING INSTRUCTIONS

FOR 24/7 ONLINE PARTS REPLACEMENT 9409510 Rev 12/07/2021 parts.kidkraft.com parts.kidkraft.eu KidKraft, Inc. KidKraft Netherlands BV TWO-PERSON ASSEMBLY ASSEMBLY TIME 10 - 14 HOURS 4630 Olin Road **Olympisch Stadion 8** Dallas, Texas 75244 1076 DE Amsterdam USA The Netherlands customerservice@kidkraft.com europecustomerservice@kidkraft.com 1.800.933.0771 +31 20 305 8620 To reduce the risk of serious injury or death, please read and follow these instructions. Keep and refer to instructions as needed and 972.385.0100 M-F from 09:00 to 17:30 (GMT+1) pass along to any future owners of this item.

Congratulations on purchasing a KidKraft product!

Our items are made of high-quality, durable Cunninghamia Lanceolata wood from the cypress family.

Lumber from these trees are known for their light weight and excellent strength. The porosity of this wood allows the moisture to absorb and evaporate in the fibers, resisting rot and bugs.

Engineered for great play, our products also go through extensive testing for safety.

Plus, our team has developed a series of proprietary methods for a simpler, more organized assembly. Less build time and more play time is our motto!

However, during assembly if you have any questions or concerns, please reach out. Our Customer Service can help with missing parts, instructions or maintenance.



parts.kidkraft.com

Warnings and Safe Play Instructions



CONTINUOUS ADULT SUPERVISION REQUIRED. Most serious injuries and deaths on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.

WARNING

SERIOUS HEAD INJURY HAZARD

Installation over concrete, asphalt, dirt, grass, carpet and other hard surface creates a risk of serious injury or death from falls to the ground. Install and maintain shock absorbing material under and around play-set as recommended on page 3 of these instructions.

COLLISION HAZARD

Place play-set on level ground at least 2m from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires. (See OBSTACLE FREE SAFETY ZONE on cover)

CHOKING HAZARD/SHARP EDGES & POINTS

Adult assembly required. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

WARNING LABEL

Owners shall be responsible for maintaining the legibility of the warning labels.

STRANGULATION HAZARD

- NEVER allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-set or to attach these items to play-set.
- NEVER allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this play-set.
- NEVER allow children to wear bike or sport helmets when using this play-set.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

TIP OVER HAZARD

Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the play-set until the assembly is complete and the unit is properly anchored.

Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).

WARNING – Safe Play Instructions

- ✓ Observe capacity limitations of your play-set. See front cover.
- Dress children with well fitting and full foot enclosing footwear.
- Teach children to sit with their full weight in the center of the swing seat to prevent erratic swing motion or falling off.
- Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing.
- ✓ Verify that suspended climbing ropes, rope ladders, chain or cable are secured at both ends and cannot be looped back on itself as to create an entanglement hazard.
- ✓ On sunny and or hot days, check the slide and other plastic rides to assure that they are not very hot as to cause burns. Cool hot slide and rides with water and wipe dry prior to using.
- ✓ Orientate slide such that it gets the least amount of exposure to the sun.

- ✗ Do not allow children to wear open toe or heel footwear like sandals, flip−flops or clogs.
- Do not allow children to walk, in front, between, behind or close to moving rides.
- Do not let children twist swing chains or ropes or loop them over the top support bar. This may reduce the strength of the chain or rope and cause premature failure.
- > Do not let children get off rides while they are in motion.
- > Do not permit climbing on equipment when it is wet.
- Do not permit rough play or use of equipment in a manner for which it was not intended. Standing on or jumping from the roof, elevated platforms, swings, climbers, ladders or slide can be dangerous.
- ✗ Do not allow children to swing empty rides or seats. ▮
- Do not allow children to go down slide head first or run up slide.



europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)

AProtective Surfacing - Reducing Risk of Serious Head Injury From Falls

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

Loose-Fill Materials

- Maintain a minimum depth of 9 inches (23 cm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet (2.45 m) high; and 9 inches (23 cm) of sand or pea gravel for equipment up to 5 feet (1.5 m) high. NOTE: An initial fill level of 12 inches (31 cm) will compress to about a 9-inch (23 cm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically raked and refilled to maintain at least a 9-inch (23 cm) depth.
- Use a minimum of 6 inches (16 cm) of protective surfacing for play equipment less than 4 feet (1.22 m) in height. If maintained properly, this should be adequate. (At depths less than 6 inches (16 cm), the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are not adequate protective surfacing. Ground level equipment -- such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface -- does not need any protective surfacing.

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Periodically rake, check and maintain the depth of the loose-fill surfacing material. Marking the correct depth on the play equipment support posts will help you to see when the material has settled and needs to be raked and or replenished. Be sure to rake and evenly redistribute the surfacing in heavily used areas.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.


Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles

- You may be interested in using surfacing other than loose-fill materials like rubber tiles or poured-in-place surfaces.
- Installations of these surfaces generally require a professional and are not "do-it yourself" projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 *Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment*. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height vertical distance between a designated play surface (*elevated surface for standing, sitting, or climbing*) and the protective surfacing below of your play equipment.
- Check the protective surfacing frequently for wear.

Placement

Proper placement and maintenance of protective surfacing is essential. Refer to diagram on front cover. Be sure to;

- Extend surfacing at least 6 feet (1.8 m) from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet (1.8 m) in all directions.

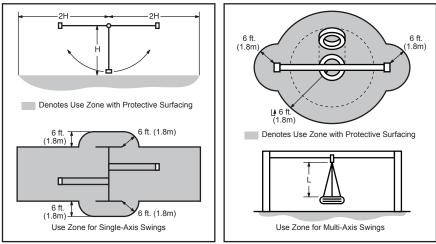

From the CPSC Outdoor Home Playground Safety Handbook. At http://www.playgroundregs.com/resources/CPSC%20324.pdf




parts.kidkraft.com

Instructions for Proper Maintenance

Your KidKraft Play System is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Play Set, it is important that you, the owner, properly maintain it.

Check the following at the beginning of the play season:

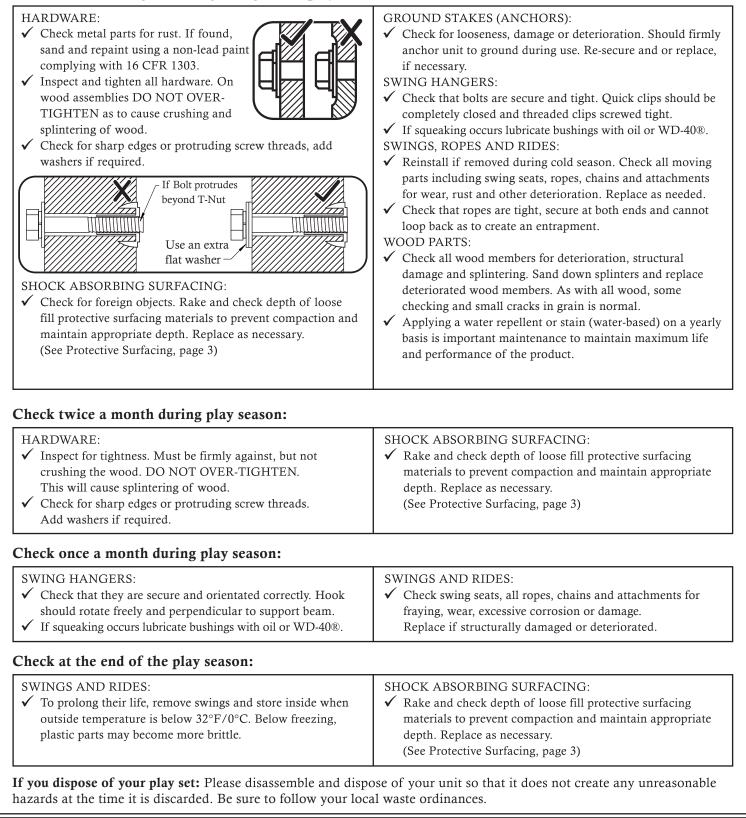

About Our Wood

KidKraft Premium Play Systems uses only premium playset lumber, ensuring the safest product for your children's use. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my Play System?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. **Checking** is surface cracks in the wood along the grain. A post $4" \times 4"$ (101mm x 101mm) will experience more checking than a board 1" x 4" (25mm x 101mm) because the surface and interior moisture content will vary more widely than in

thinner wood.

2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.

3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn a grey over time.

How can I reduce the amount of weathering to my Play System?

At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product).

Most weathering is just the normal result of nature and will not affect safe play and enjoyment for your child. However if you are concerned that a part has experienced a severe weathering problem please call our consumer relations department for further assistance.

Complete and mail registration card to receive important product notifications and assure prompt warranty service.



parts.kidkraft.com

KidKraft Limited Warranty

MISSING OR DAMAGED PARTS:

KidKraft will replace any parts within 90 days from date of purchase found to be missing from or damaged in the original packaging. See Fig.1

Fig. 1Product Age (All Parts)Consumer Pays0-90 Days from date of purchase\$0 for Part + Free Shipping

DEFECTS IN MATERIAL AND WORKMANSHIP:

KidKraft warrants that this product is free from defects in materials and workmanship for a period of one (1) year from the original date of purchase (dated sales receipt and/or product registration is required). This one (1) year warranty covers all parts including wood, hardware, and all accessories (Such as swings, rides, and slides). See Fig. 2

Fig. 2	Product Age (All Parts)	Consumer Pays
	91 Days to 1 Year	\$0 for Part + Free Shipping

WOOD ROT, DECAY, AND INSECT DAMAGE:

All wood carries a five (5) year warranty against rot, decay, and insect damage (dated sales receipt and/or product registration is required). Refer to the schedule below for charges associated with replacement of wood parts under this **Limited Warranty.** See Fig. 3

Fig. 3 <u>Product Age (Wood Parts)</u> 0 Days to 1 Year After 1 Year to 5 Year Over 5 Years <u>Consumer Pays</u> \$0 for Part + Free Shipping \$0 for Part + Shipping & Handling 100% for Part (if available) + Shipping & Handling

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to ensure the integrity of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty.


This Limited Warranty does NOT cover:

- Any inspection cost
- Labor and/or costs for replacement of any defective item(s), including but not limited to, professional installer costs
- Incidental or consequential damages, including but not limited to, as a result of set relocation, move and/or reinstall
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- Vandalism, improper use or installation, or acts of nature, including but not limited to, high winds, fire, and flood
- Minor twisting, warping, checking, or any natural occurring properties of wood that do not affect performance or integrity.
- Any KidKraft product purchased, including but not limited to, a non-approved retailer, auction houses, second-hand, and as-is clearance items.

KidKraft products have been designed for safety and quality. Modifications made to the original product may damage the structural integrity of the unit leading to failure and possible injury. KidKraft cannot assume any responsibility for the modified products. Furthermore, modifications void all warranties.

This product is warranted for **RESIDENTIAL USE ONLY**. Under no circumstance should a KidKraft product be used in public settings such as schools, churches, playgrounds, parks, home and professional day cares and the like. Such use may lead to product failure and potential injury. Public use will void this warranty. KidKraft disclaims all other representations and warranties of any kind, express or implied.



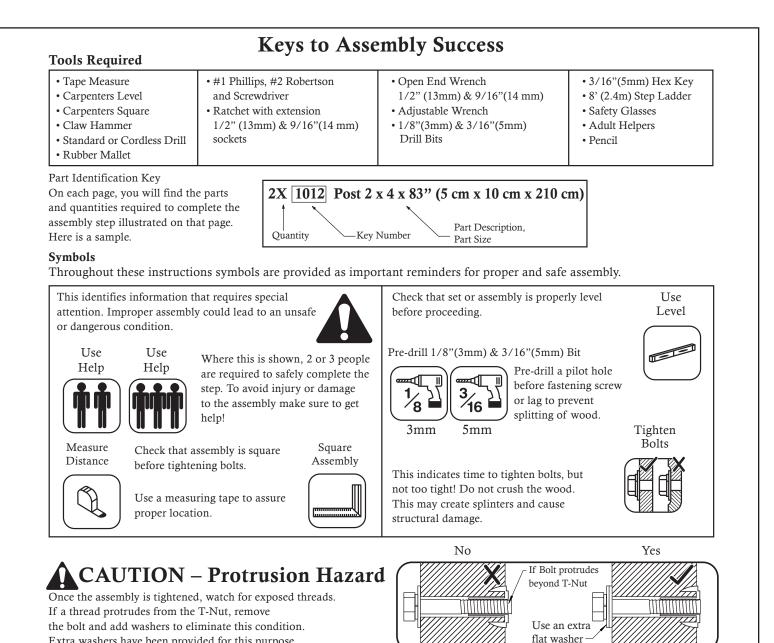

Extra washers have been provided for this purpose. Proper Hardware Assembly Lag screws require drilling pilot holes to avoid splitting wood. Only

a flat washer is required. For ease of installation liquid soap can be used on all lag-type screws.

For bolts, tap T-Nut into hole with hammer. Insert the hex bolt through lock washer first then flat washer then hole. Because the assemblies need to be squared do not completely tighten until instructed. Pay close attention to diameter of the bolts. 5/16" (8mm) is slightly larger than 1/4" (6.4mm).

Note: Wafer head bolts with blue lock tight or a bolt with a Ny-Lok nut do NOT require a lock washer.



parts.kidkraft.com

Lag Assembly

Bolt Assembly

Flat Washer

customerservice@kidkraft.com 1.800.933.0771 972.385.0100

(Hammer into place) Do not crush wood!

Before mounting Lag

(3.2mm) pilot holes

Screw, use factory drilled

_ T-N11t

holes as guides to drill 1/8"

Lag Screw

מממממממן (ממממממ

Hex Bolt

Lock

Washer

Flat

Washe

6x - 10410 - 25.4 x 88.9 x 914.4 mm - 37310410		
. . . 1" X 3 1/2" X 36"		
1x - 10411 - 34.9 x 85.7 x 2336.8 mm - 37310411		1 3/8" X 3 3/8" X 92"
	0	0
1x - 10412 - 34.9 x 85.7 x 2336.8 mm - 37310412		1 3/8" X 3 3/8" X 92"
0 0 0 0	o	o
2x - 10413 - 25.4 x 88.9 x 914.4 mm - 37310413		
1x - [10414] - 25.4 x 88.9 x 779.2 mm - 37310414		
• • • 1" X 3 1/2" X 30 11/16"		
1x - 10415] - 25.4 x 88.9 x 379.9 mm - 37310415		
•		
1x - 10416] - 25.4 x 88.9 x 1633 mm - 37310416		
° ° °	1" X 3	1/2" X 64 5/16"
1x - 10417] - 34.9 x 85.7 x 2336.8 mm - 37310417		1 3/8" X 3 3/8" X 92"
	0	0
1x - 10418] - 34.9 x 85.7 x 2336.8 mm - 37310418		1 3/8" X 3 3/8" X 92"
	0	0
1x - 10419] - 25.4 x 136.5 x 914.4 mm - 37310419		
°°°'''''''''''''''''''''''''''''''''''		
1x - 10420] - 25.4 x 88.9 x 1231.9 mm - 37310420		
. 1" X 3 1/2" X 48 1/	/2"	
europecustomerservice@kidkraft.com		ALL SOMETHIN


KidKraft parts.kidkraft.com	customerservice@kidkraft.com 1.800.933.0771 972.385.0100
. 1" X 3 1/2" X 16 9/16"	
7x - 10430 - 25.4 x 88.9 x 421.3 mm - 37310430	
° 1" X 3 1/2" X 27"	
3x - 10429 - 25.4 x 88.9 x 685.8 mm - 37310429	
• 1 1/4" X 3" X 22"	
1x - [2607] - 31.8 x 76.2 x 558.8 mm - 3732607	
o o o o o	o o
1x - 10428 - 25.4 x 88.9 x 2209.8 mm - 37310428	1" X 3 1/2" X 87"
••	
5/8" X 4 1/4" X 19 1/2"	
1x - 10427] - 15.9 x 108 x 495 mm - 31310427	
() 1 1/4" X 2 3/4" X 6 1/2"	
2x - 10426] - 31.8 x 69.9 x 165.2 mm - 31310426	
2x - 10425 - 15.9 x 82.6 x 505 mm - 31310425	
1x - 10424 - 25.4 x 88.9 x 1231.9 mm - 37310424	
• 1" X 3 1/2" X 41 5/8"	
1x - 10423 - 25.4 x 88.9 x 1057.3 mm - 37310423	
• • • • • • • • • • • • • • • • • • •	
1x - 10422 - 25.4 x 136.9 x 1206.5 mm - 37310422	
° ° ° 1" X 3 1/2" X 49 1/2	"
3x - 10421 - 25.4 x 88.9 x 1257.3 mm - 37310421	


	ING SOMETLE
° ° ° ° 1" X 3 1/2" X 46 7/8"	
1x - 10441 - 25.4 x 88.9 x 1190.6 mm - 37310441	
°. °. °. °. 1" X 3 1/2" X 46 7/8"	
1x - 10440] - 25.4 x 88.9 x 1190.6 mm - 37310440	
. · ·	
1x - 10439] - 15.9 x 85.7 x 576.2 mm - 37310439	
3x - 10438] - 15.9 x 114.3 x 576.2 mm - 31310438	
2x - 10437 - 15.9 x 114.3 x 576.2 mm - 31310437	
5/8" X 4 1/2" X 22 11/16"	
2x - 10436] - 15.9 x 114.3 x 576.2 mm - 31310436	
2x - 10435] - 34.9 x 85.7 x 1249.8 mm - 37310435	
••_	
5/8" X 3 3/8" X 37 3/16"	
5x - 10434] - 15.9 x 85.7 x 944.4 mm - 37310434	
5x - 10432 - 15.9 x 85.7 x 614.4 mm - 37310432	
1 1/4" X 3" X 47 7/16"	
1x - 10431 - 31.8 x 76.2 x 1204.5 mm - 37310431	

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)

1x - 10442] - 15.9 x 82.6 x 552.5 mm - 31310442	
1x - 10443] - 15.9 x 69.9 x 552.5 mm - 31310443	
3x -[0457] - 25.4 x 50.8 x 209.6 mm - 38045713	
1" X 2" X 8 1/4"	
2x - 0461 - 25.4 x 50.8 x 318.9 mm - 38046173	
1" X 2" X 12 9/16"	
1x - 10444] - 15.9 x 34.9 x 552.5 mm - 37310444	
•• 5/8" X 1 3/8" X 21 3/4"	
1x -[0455] - 15.9 x 50.8 x 171.5 mm - 38045513	
5/8" X 2" X 6 3/4"	
2x - 10445 - 15.9 x 85.7 x 251 mm - 31310445	
2x - 10446] - 34.9 x 85.7 x 313.9 mm - 37310446	
1 3/8" X 3 3/8" X 12 3/8"	
1x - 10447] - 31.8 x 88.9 x 1120.5 mm - 31310447	
└────────────────────────────────────	
1x - 10448] - 31.8 x 88.9 x 1120.5 mm - 31310448	
▶ 1 1/4" X 3 1/2" X 44 1/8"	
2x - 10449 - 15.9 x 95 x 1270.1 mm - 31310449	
: 5/8" X 3 3/4" X 50"	
2x - 10450] - 25.4 x 88.9 x 1134.7 mm - 37310450	
1" X 3 1/2" X 44 11/16"	
KidKraft MADE FOR MAKE BELIEVE	customerservice@kidkraft.com 1.800.933.0771 972.385.0100


2x - 10451 - 38.1 x 111 x 353.8 mm - 37310451 1 1/2" X 4 3/8" X 13 15/16" 1x - 10452 - 31.8 x 31.8 x 318 mm - 37310452
1 1/4" X 1 1/4" X 12 1/2"
1x - 2614] - 76.2 x 133.4 x 2235.2 mm - 3732614 3" X 5 1/4" X 88"
1x - 9831] - 76.2 x 76.2 x 1425.8 mm - 3739831
1x - 2616] - 23.8 x 82.6 x 1181.1 mm - 3732616 • • 15/16" X 3 1/4" X 46 1/2"
2x - 9720] - 50.8 x 76.2 x 2063.9 mm - 3739720 2" X 3" X 81 1/4"
() () () ()

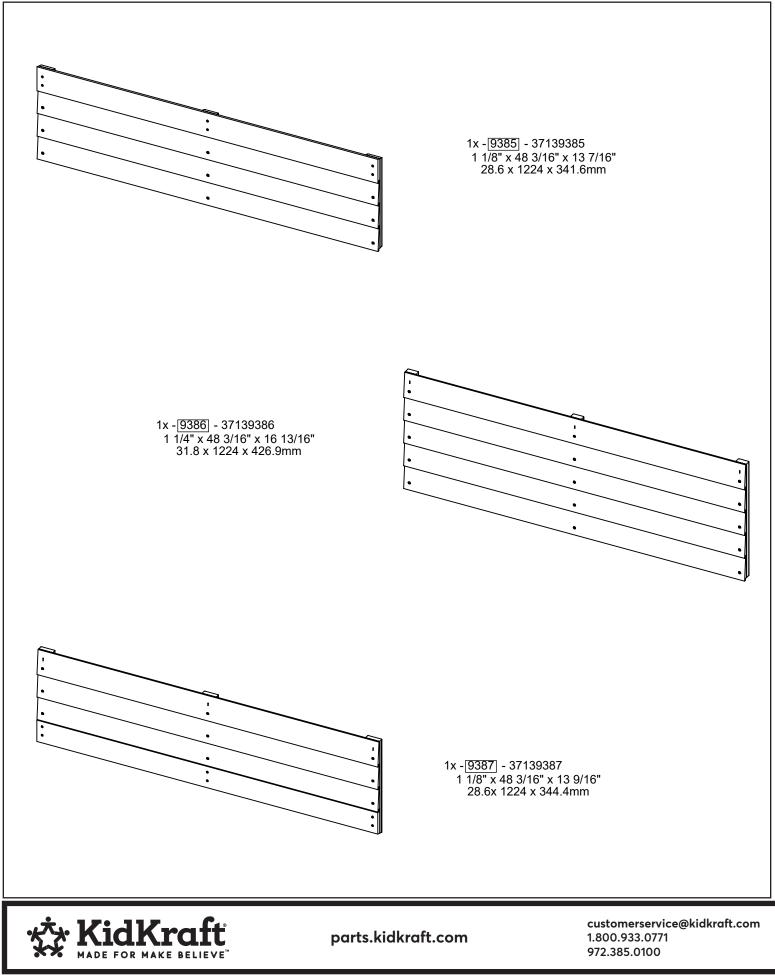

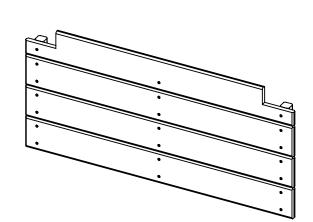

2x - 9388 - 37139388 1 7/8" x 37 15/16" x 18" 47.7 x 963.2 x 457.2mm


1x - [<u>9389</u>] - 37139389 1 7/8" x 37 15/16" x 13 5/16" 47.7 x 963.2 x 338.9mm

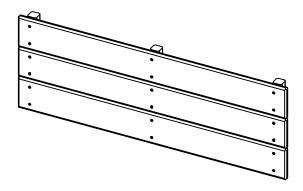








Hardware Identification (Actual Size)

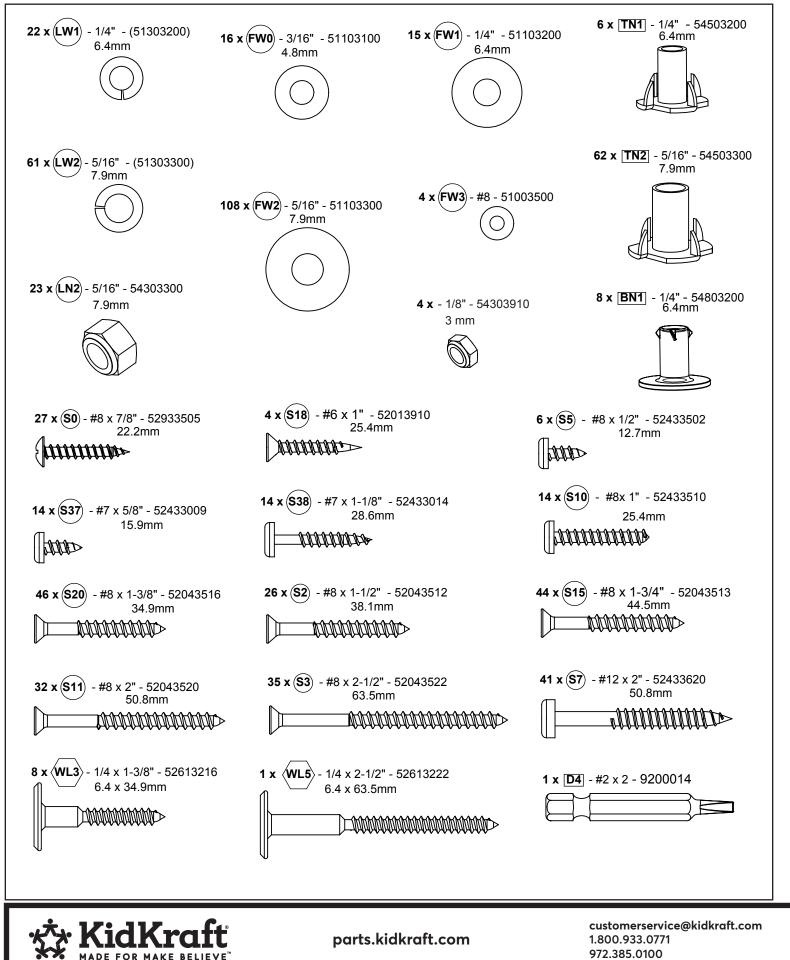

Hardware Identification (Actual Size)

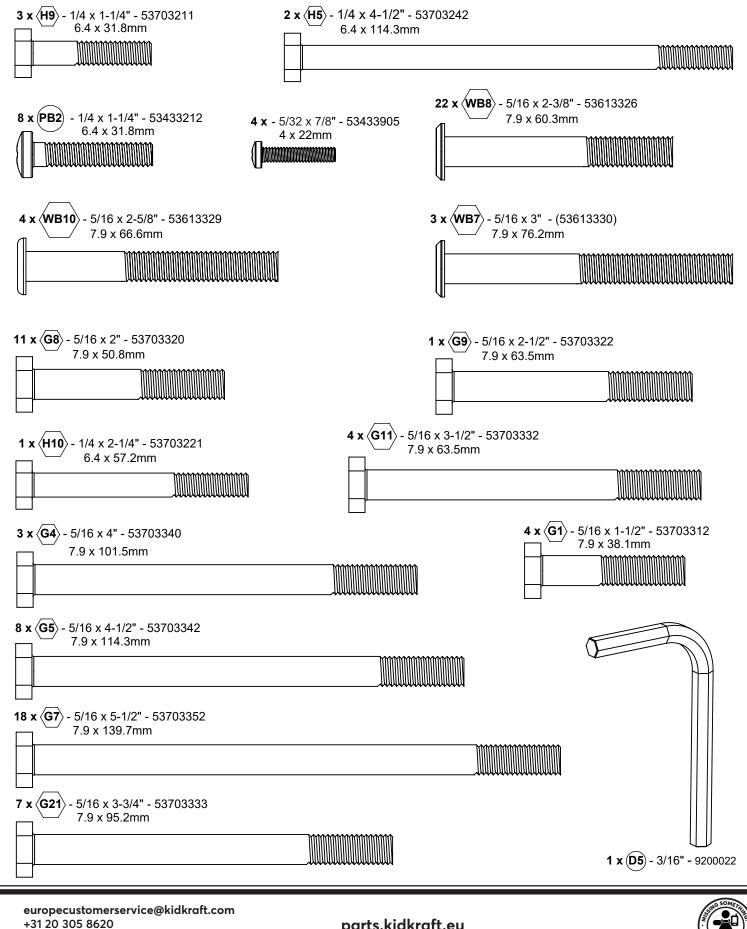

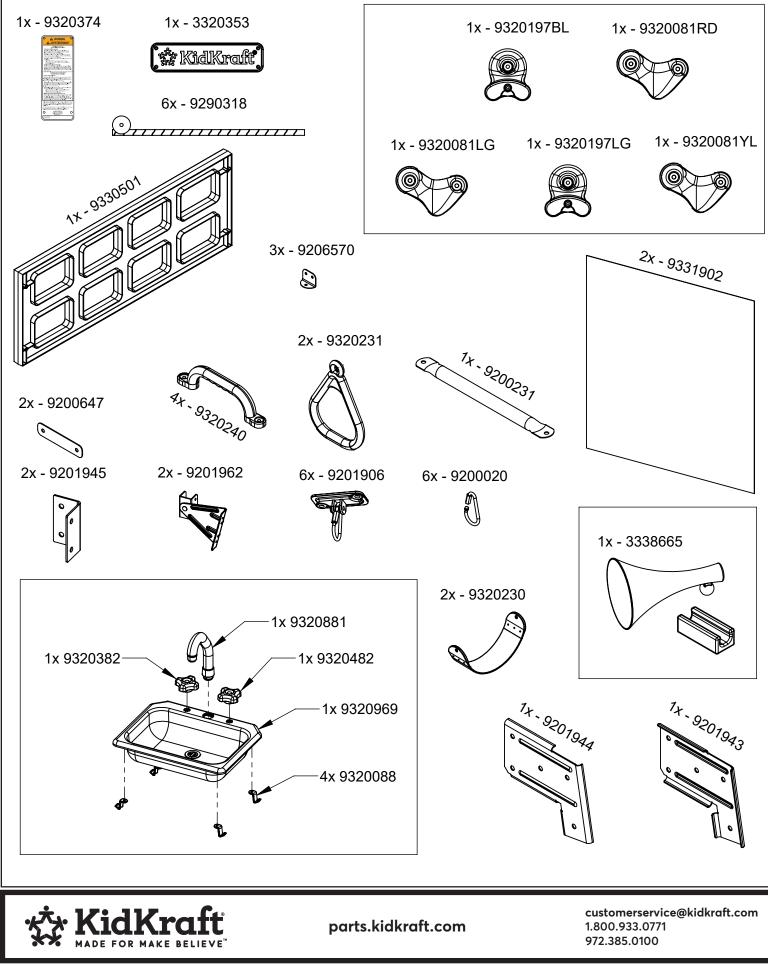


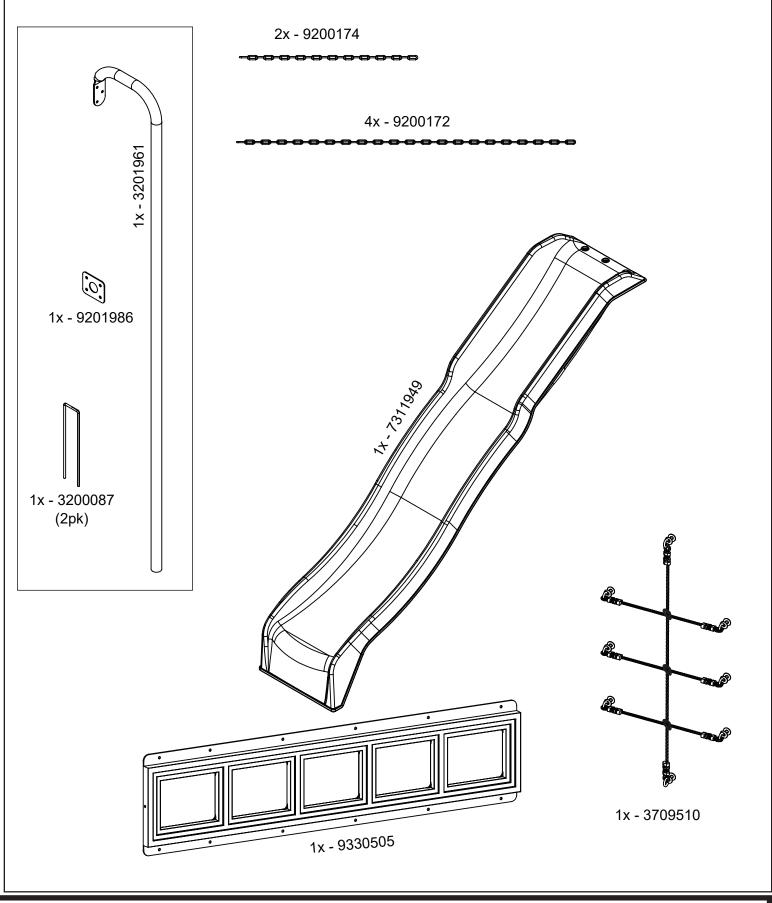

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



1 Inventory Parts - Read This Before Starting Assembly

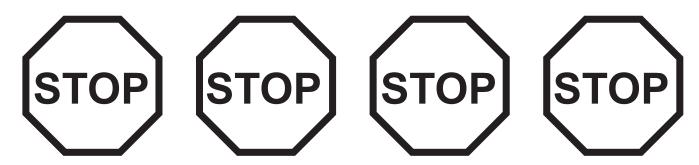

- **A.** This is the time for you to inventory all your hardware, wood and accessories, referencing the parts identification sheets. This will assist you with your assembly.
 - The wood pieces will have the key number stamped on the ends of the boards. Organize the wood pieces by step, as per the key numbering system below.

2X 012 Post 2 x 4	4 x 83"
Quantity Key Num	ber Part Description, Part Size

- Please refer to Page 8 for proper hardware assembly.
- Each step indicates which bolts and/or screws you will need for assembly, as well as any flat washers, lock washers, t-nuts or lock nuts.
- **B.** If there are any missing or damaged pieces or you need assistance with assembly please contact the consumer relations department directly. <u>Call us</u> before going back to the store.


customerservice@kidkraft.com Online Parts Replacement: parts.kidkraft.com To warranty your product: kidkraft.com/warranty/ Customer Service: 1(800) 933-0771 or (972) 385-0100 Europe Customer Service: +31 (0)20 305 8620 europecustomerservice@kidkraft.com EU Online Parts Replacement: parts.kidkraft.eu


- **C.** Read the assembly manual completely, paying special attention to ANSI warnings; notes; and safety/maintenance information on pages 1 8.
- **D.** Before you discard your cartons fill out the form below.
 - The Batch # is located on the end of each carton. The tracking number is located on the KidKraft ID Plaque (9320374).
 - Please retain this information for future reference. You will need this information if you contact the Consumer Relations Department.


MODEL NUMBER: F29510				
BATCH #:	(Box 1)	BATCH #:	(Box 4)	
BATCH #:	(Box 2)	BATCH #:	(Box 5)	
BATCH #:	(Box 3)	BATCH #:	(Box 6)	
	TRACKING NUMBER (from IE	D Plaque):		





parts.kidkraft.com

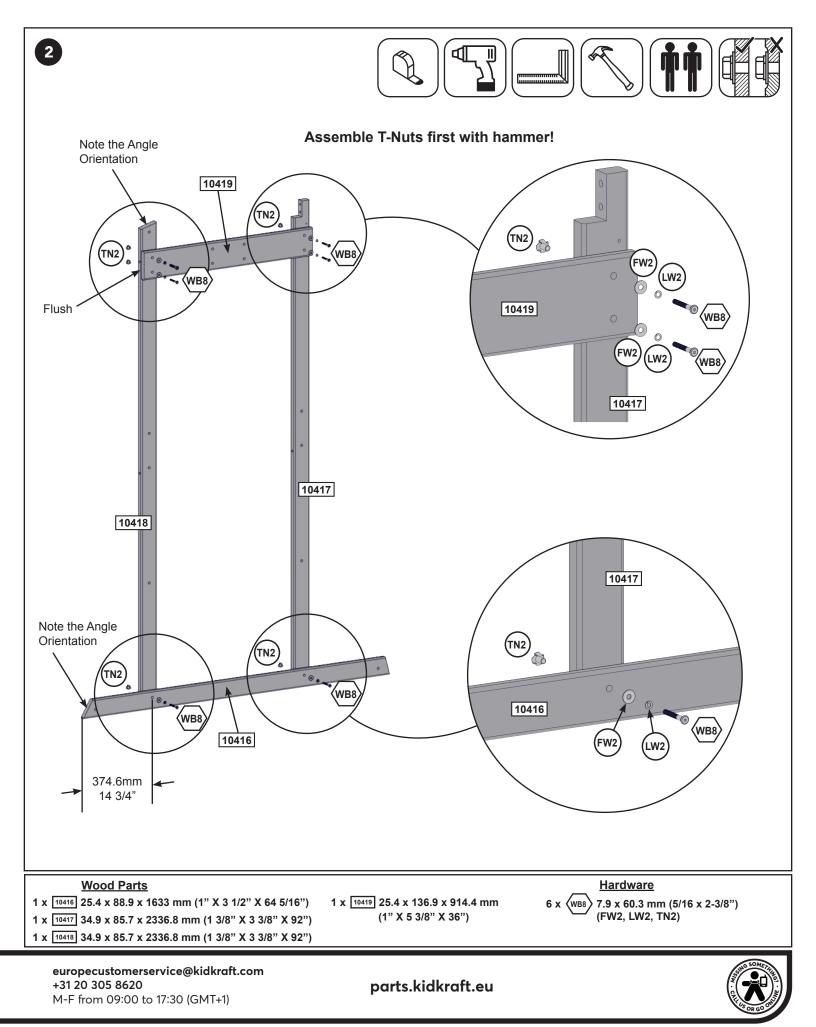

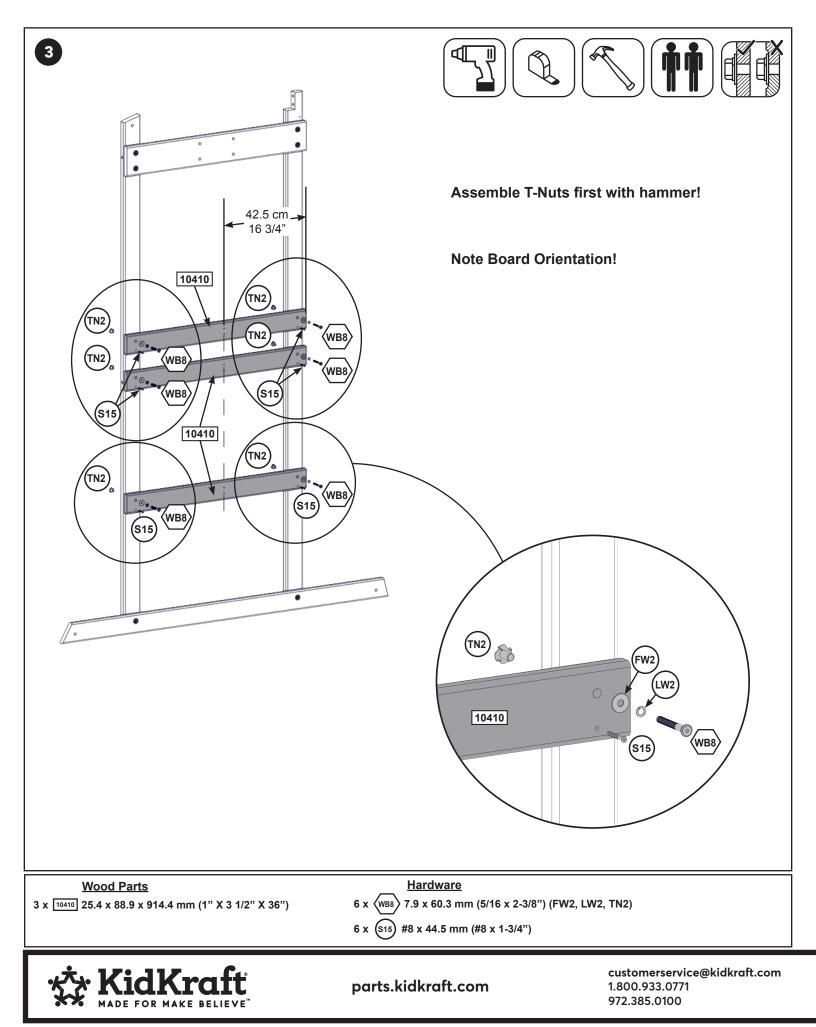


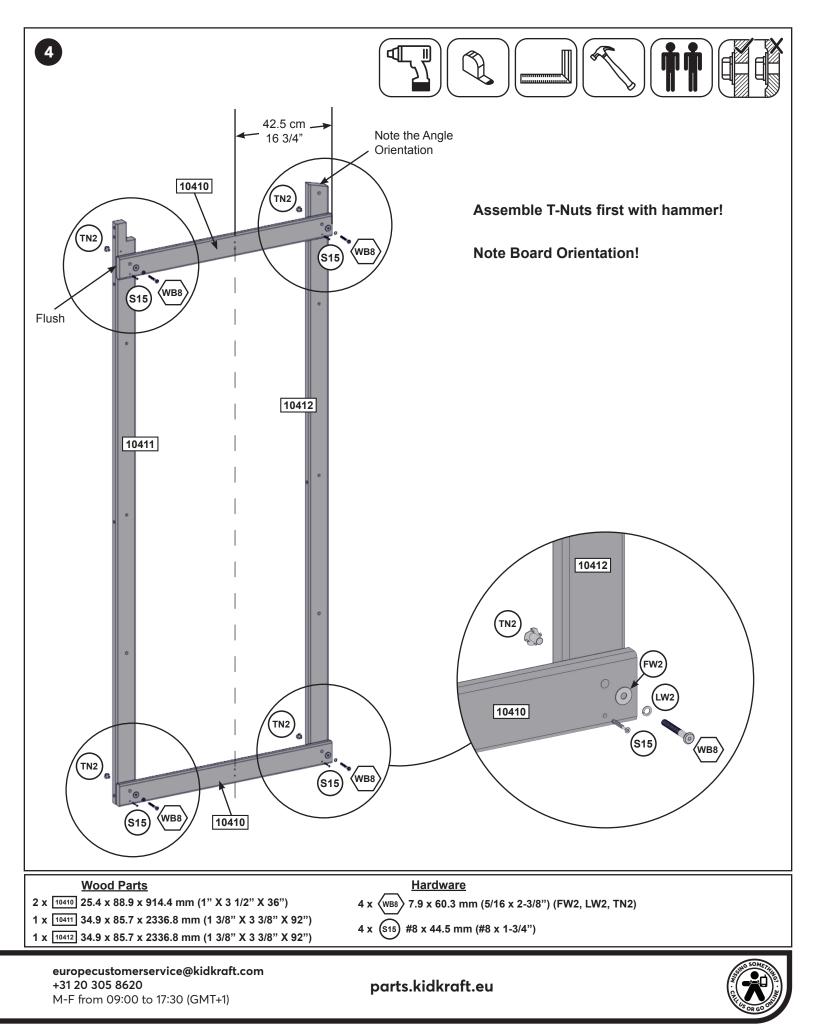


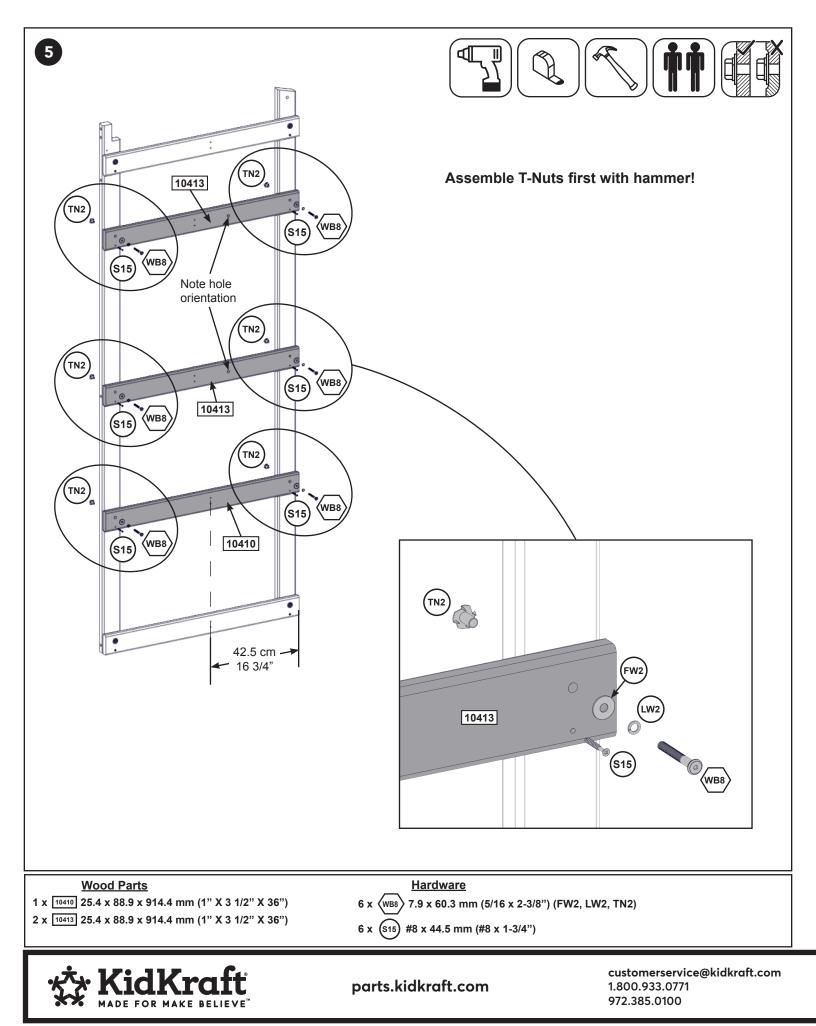

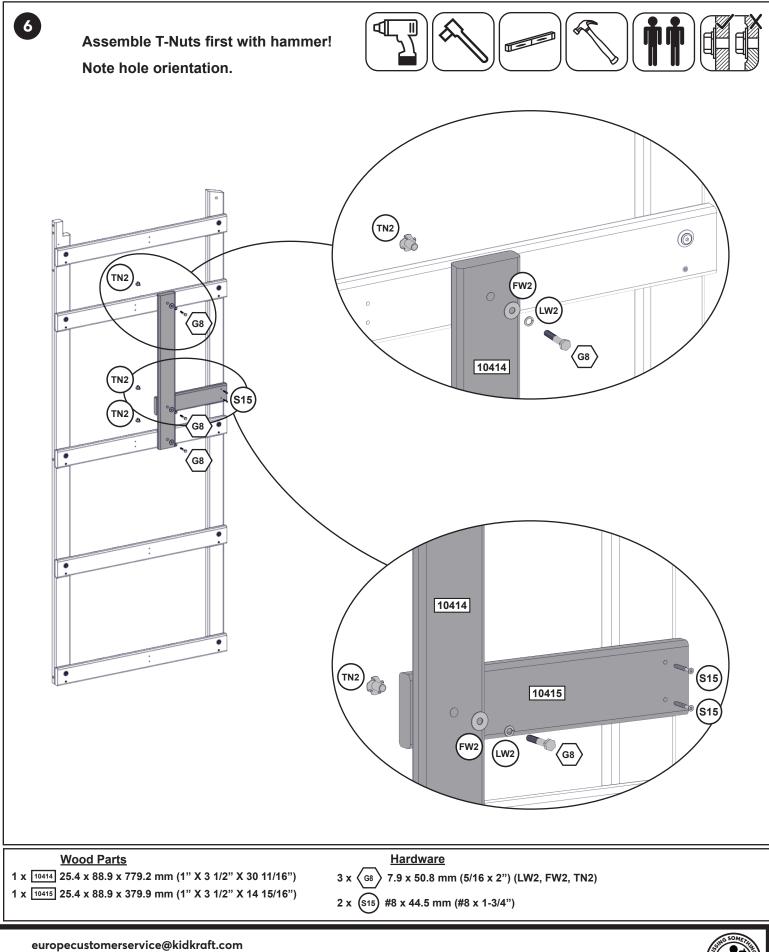


+31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)

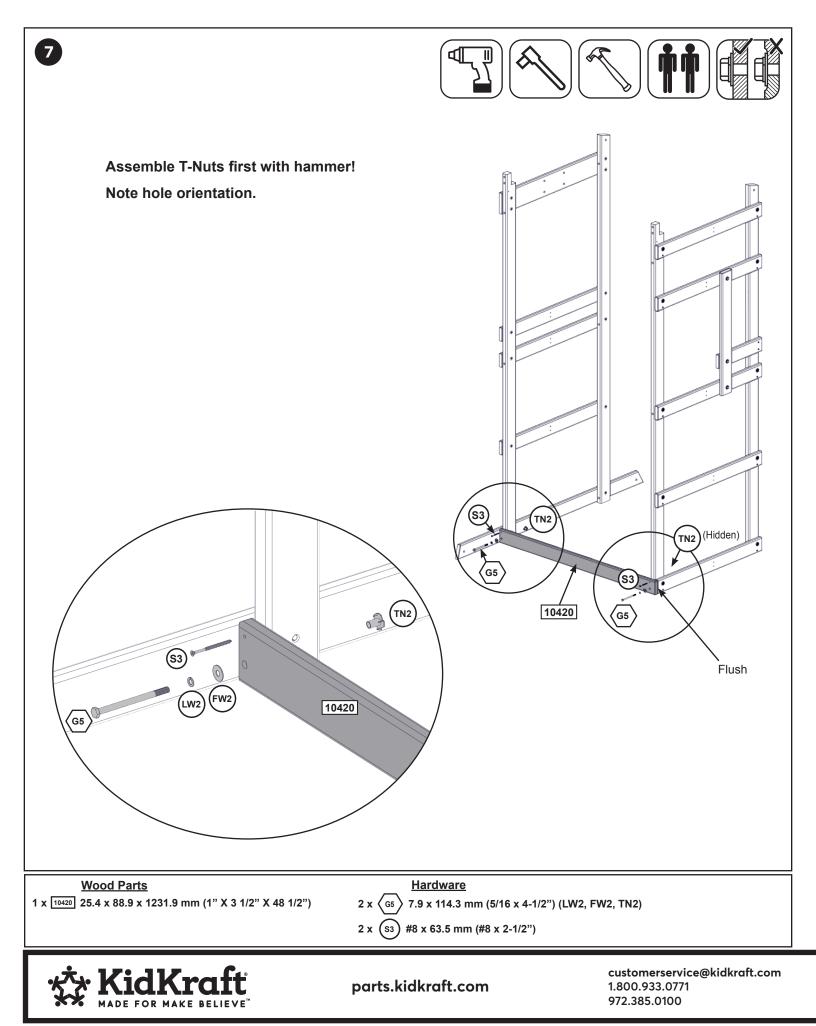

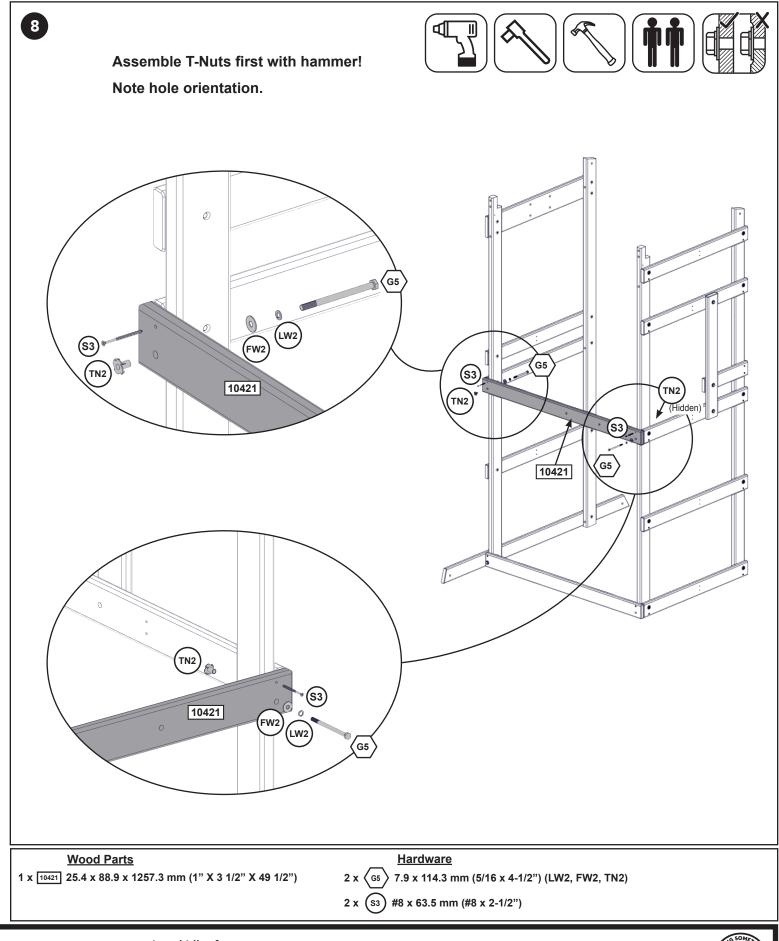


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)

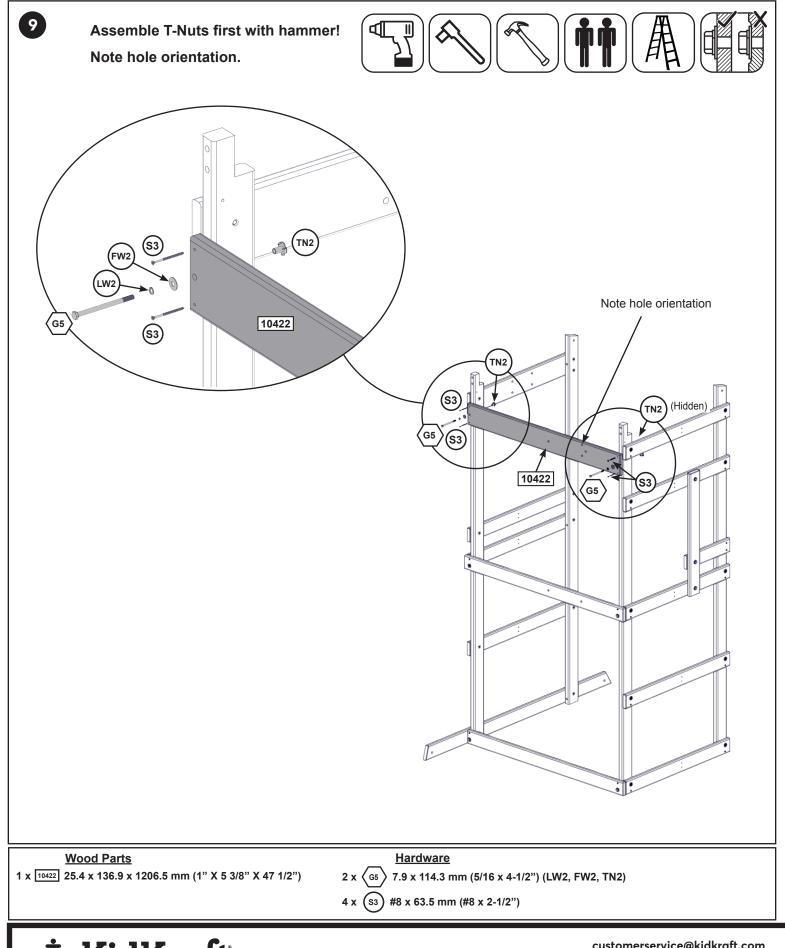



ADE FOR MAKE BELIEVE


parts.kidkraft.com


28

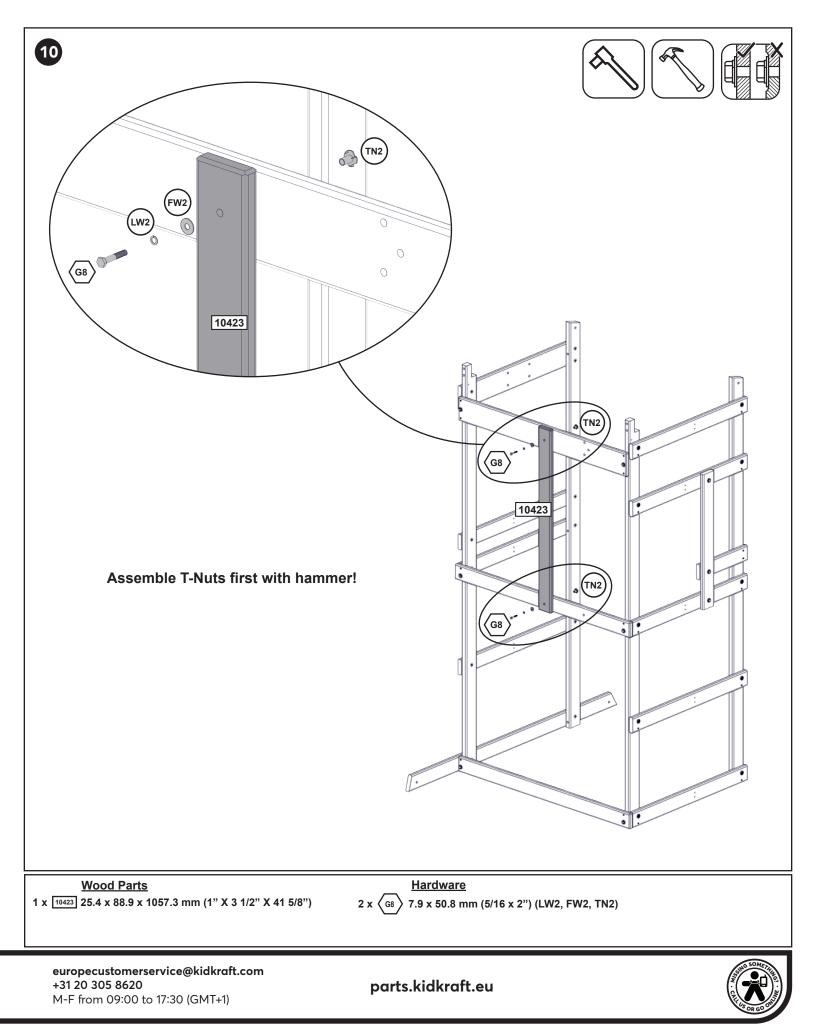


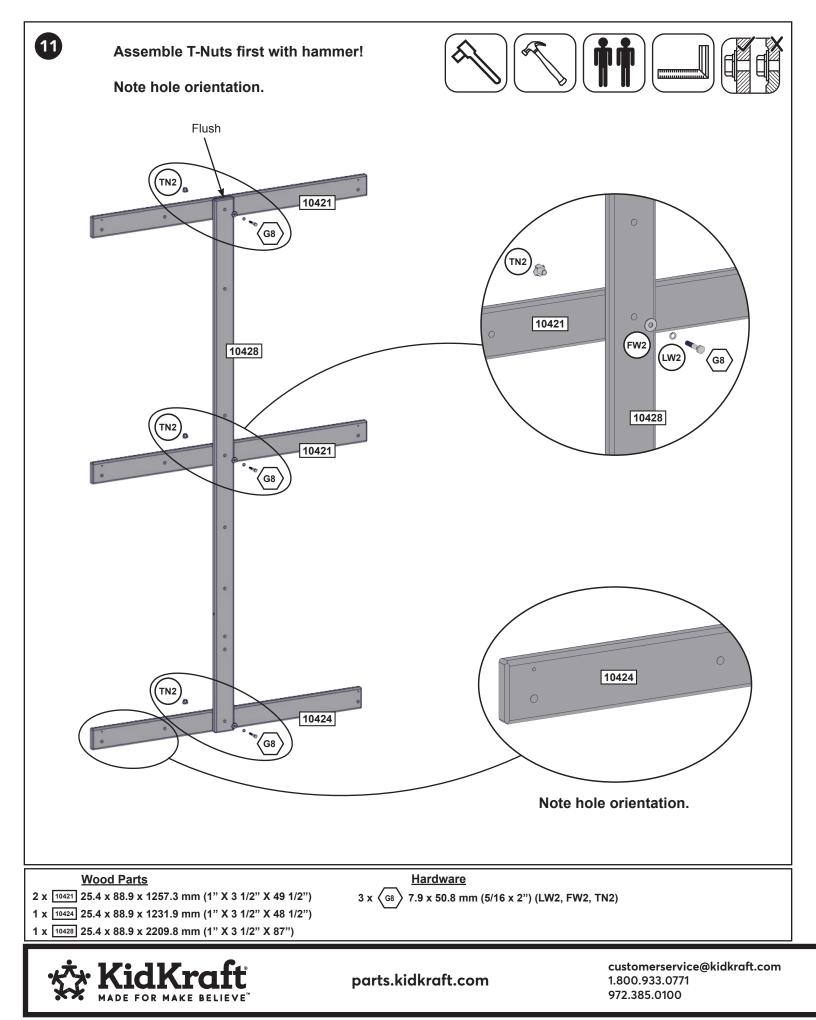


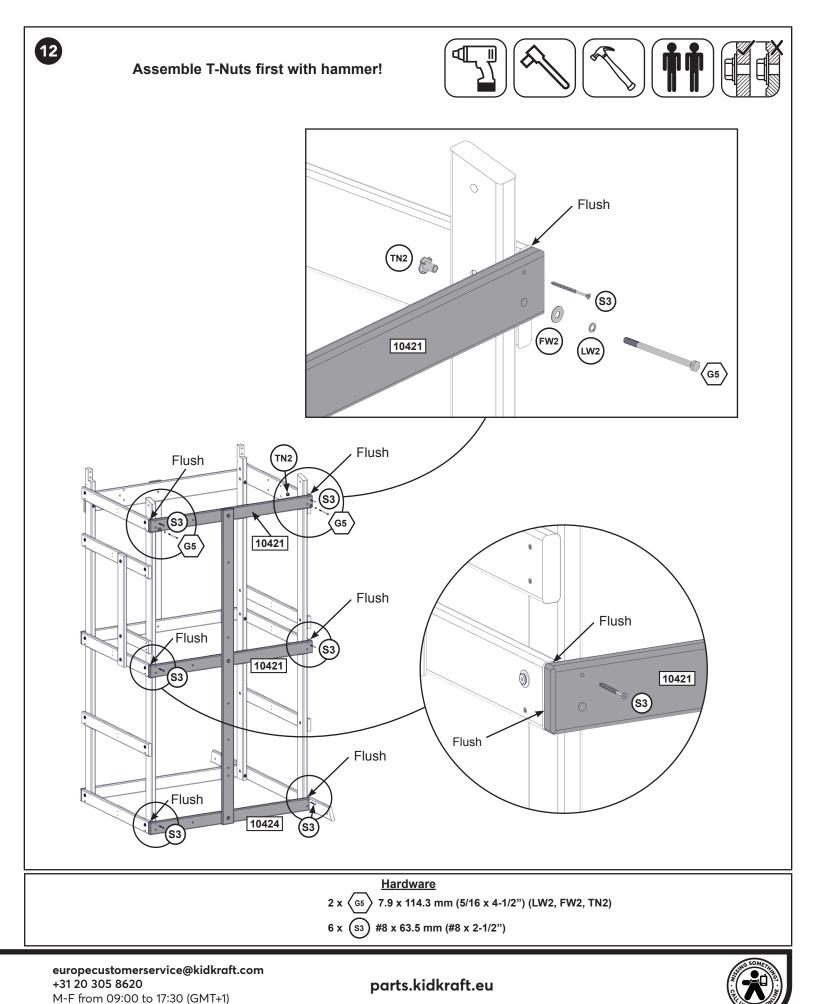

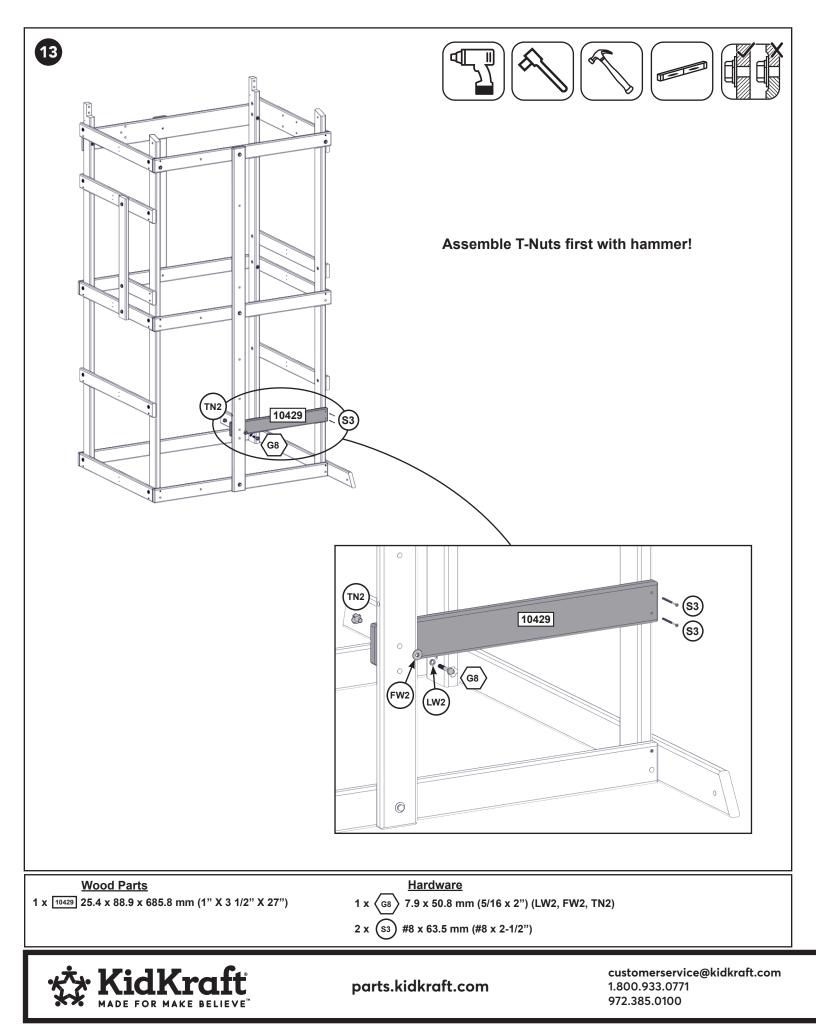

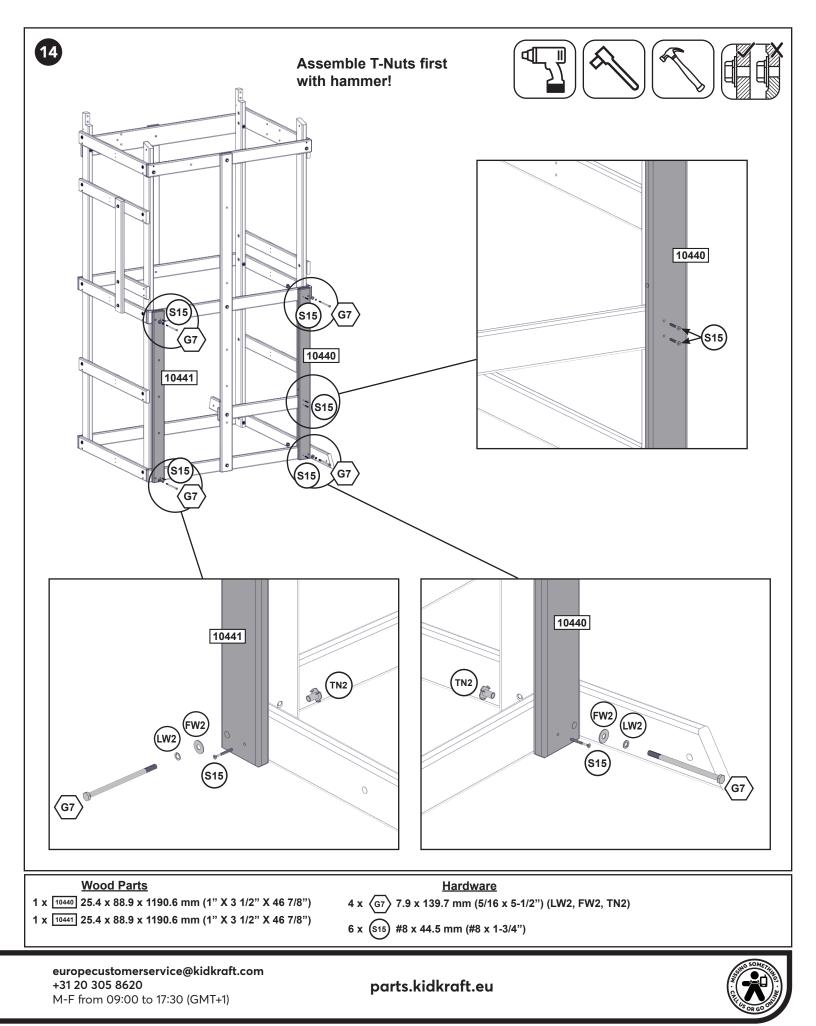


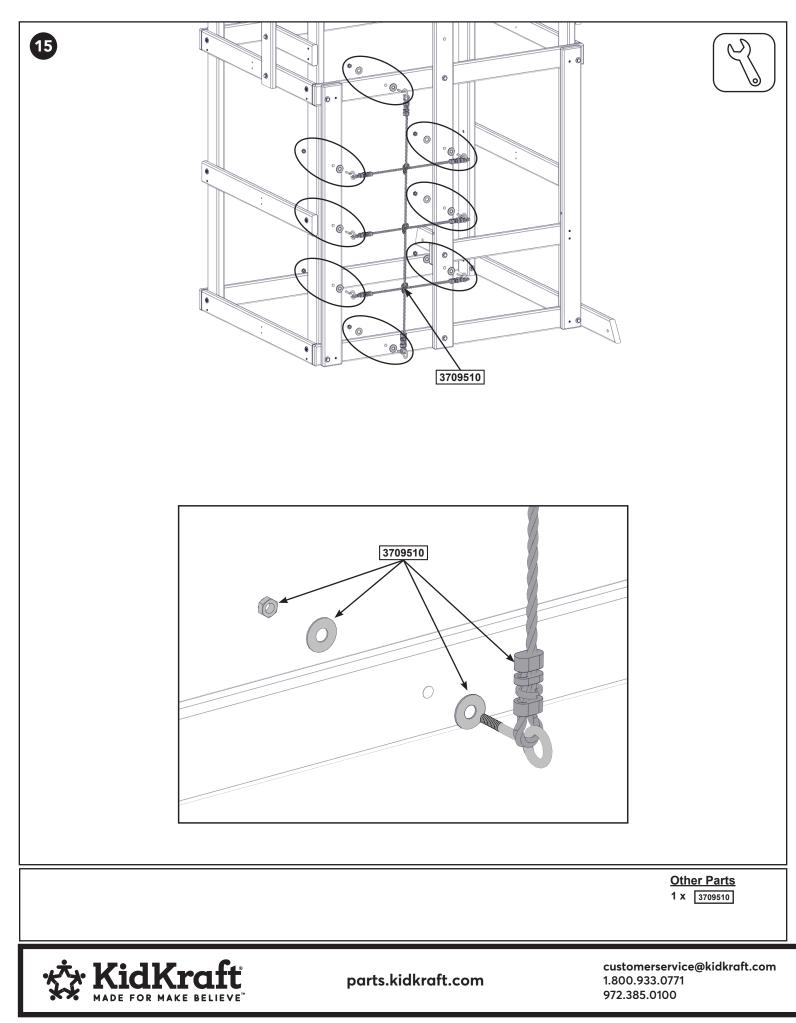


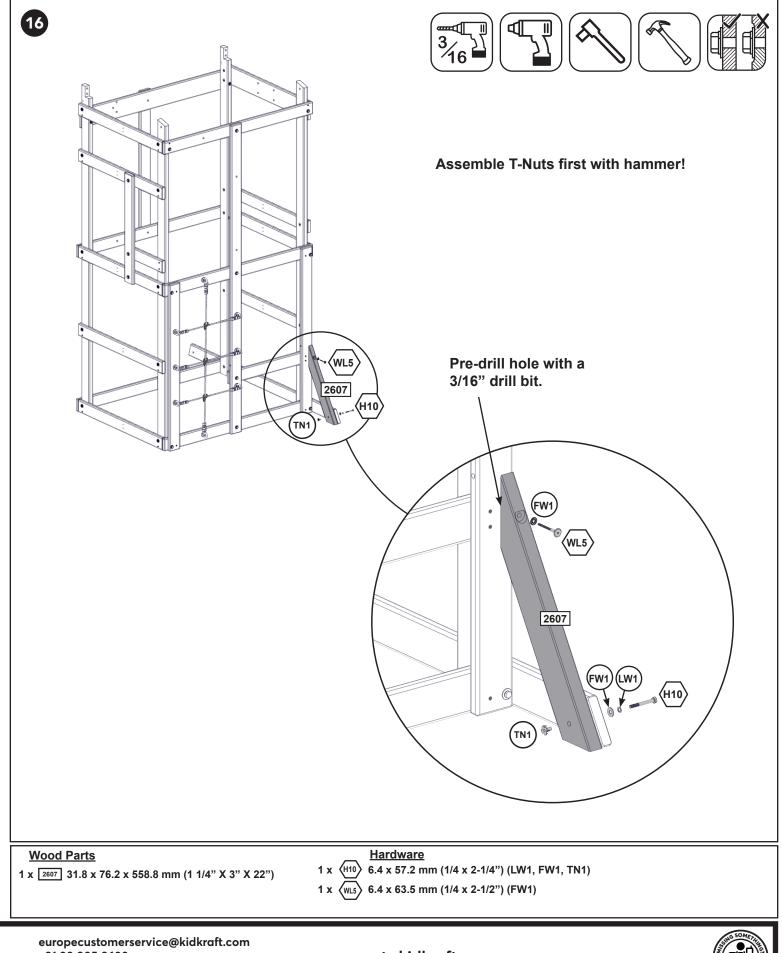


europecustomerservice@kidkraft.co +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)




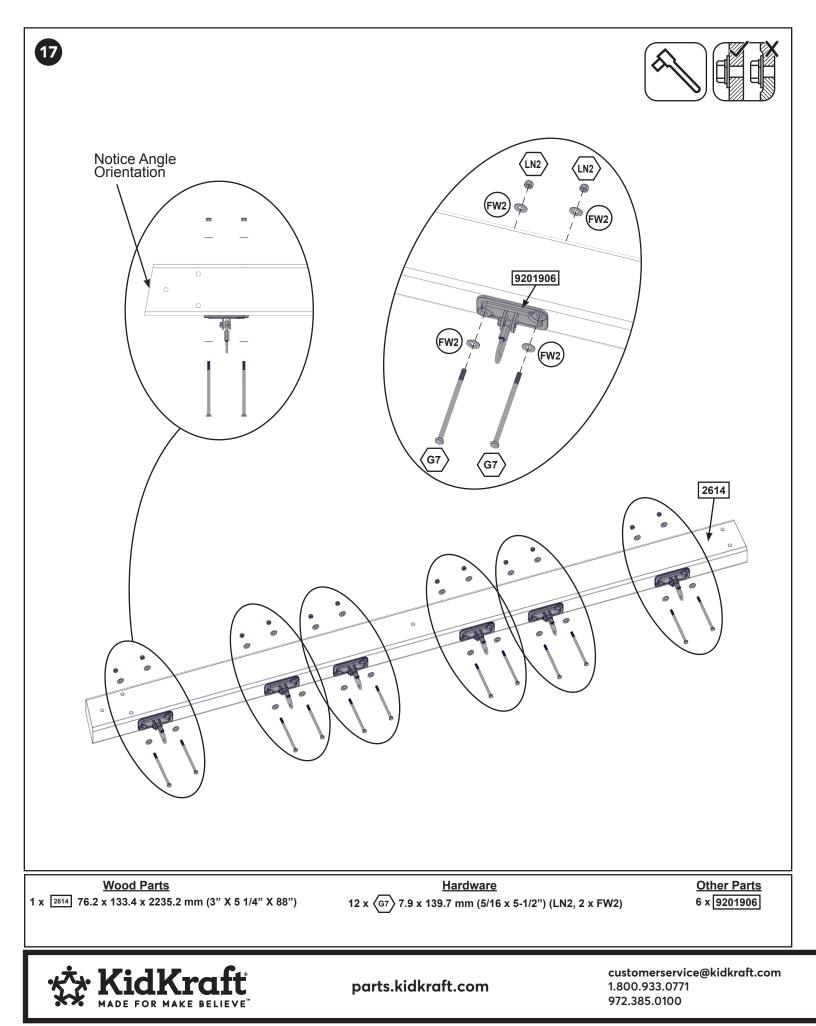


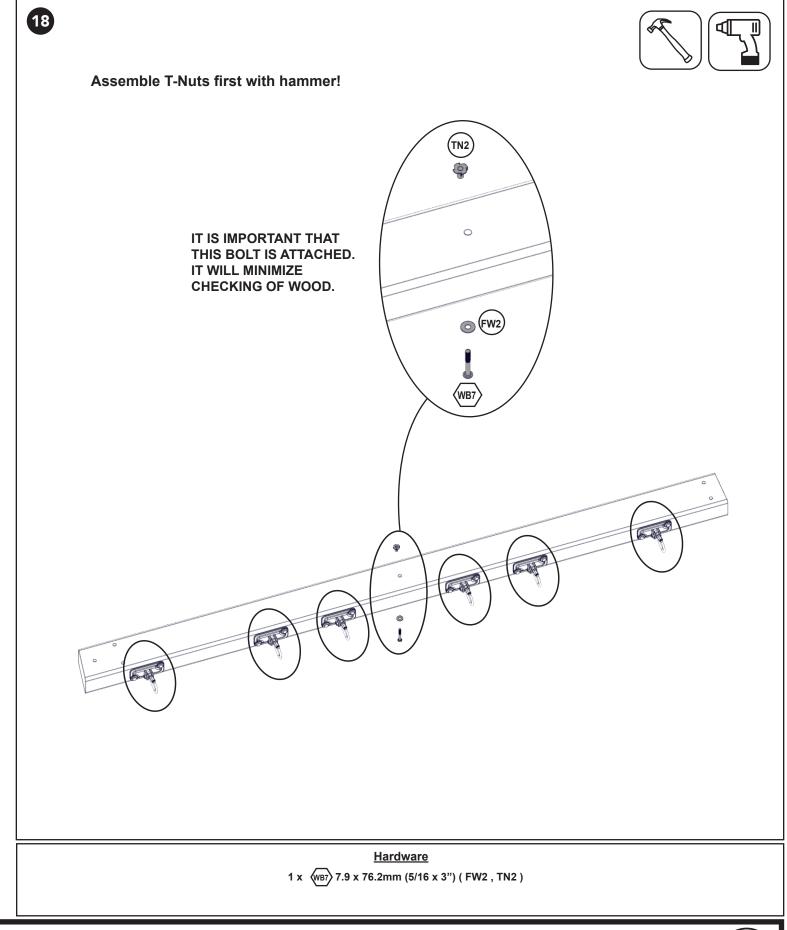





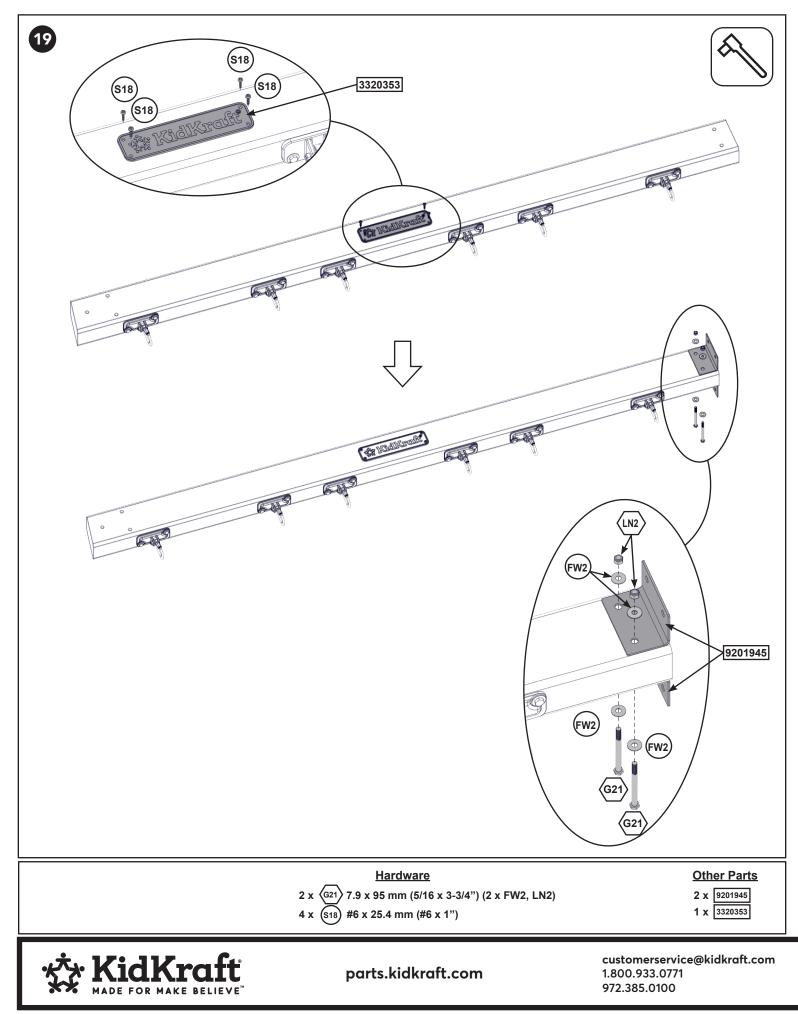


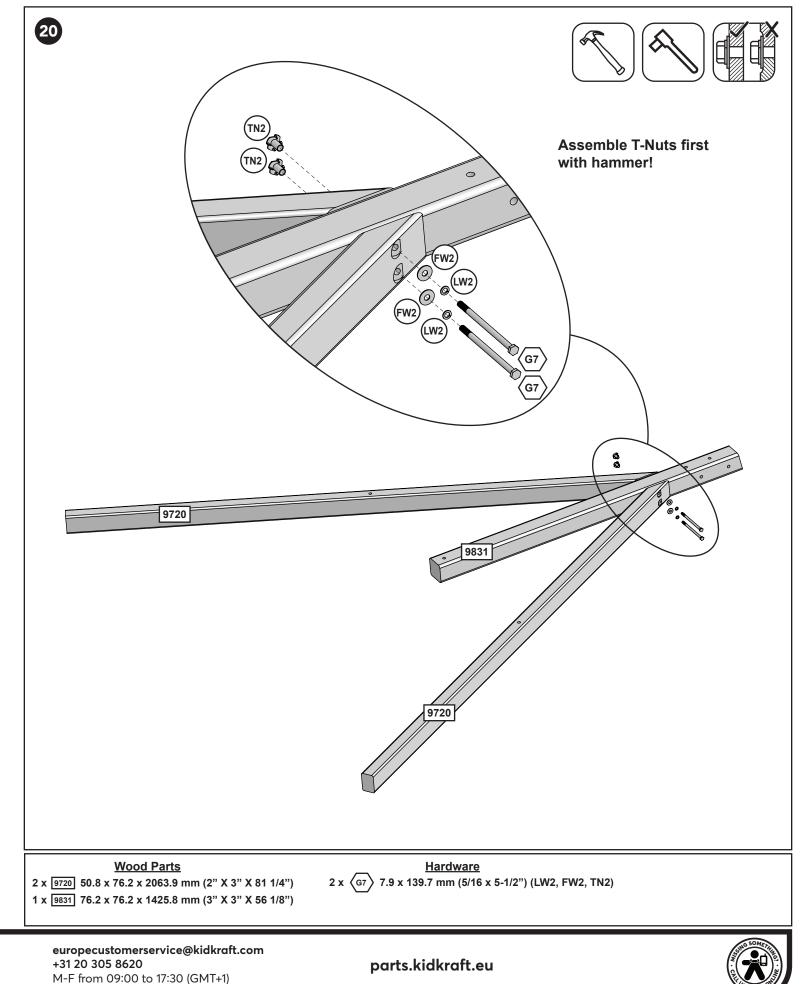

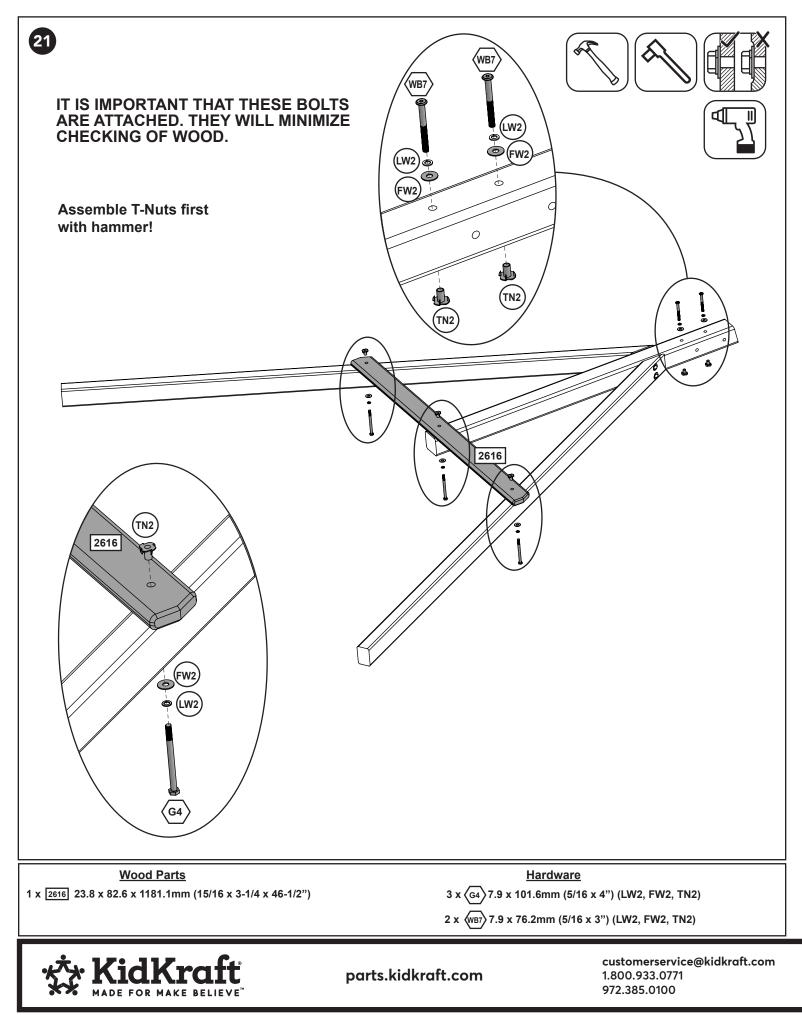


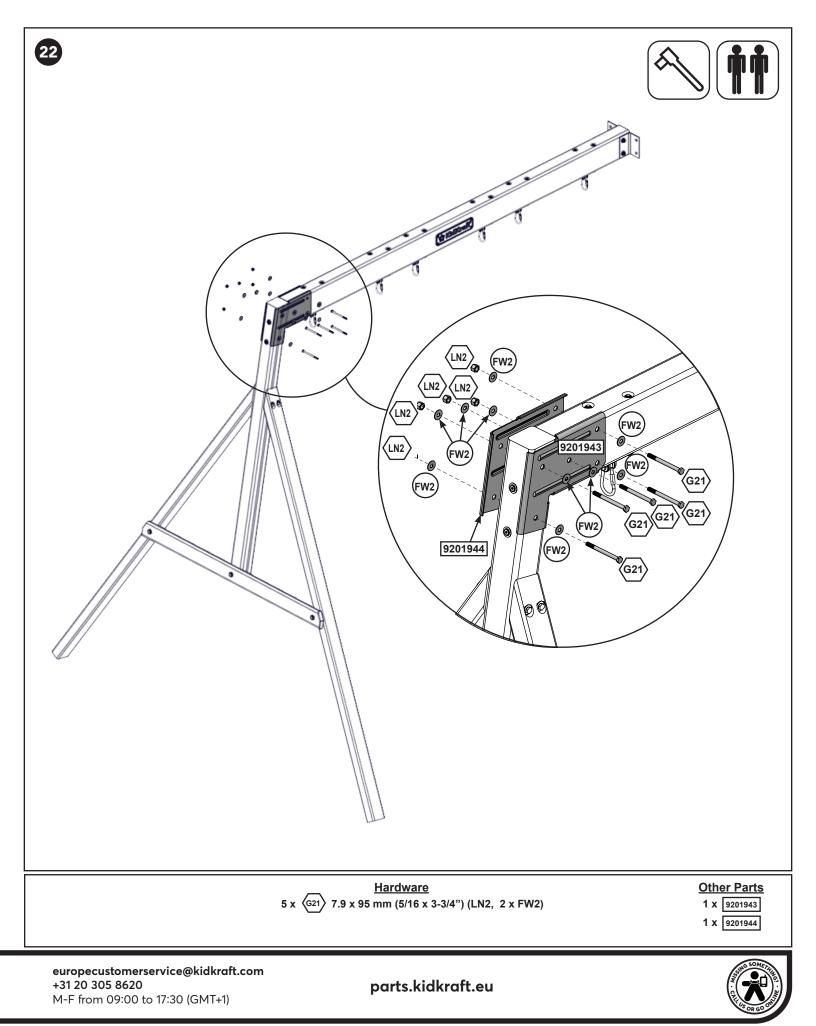


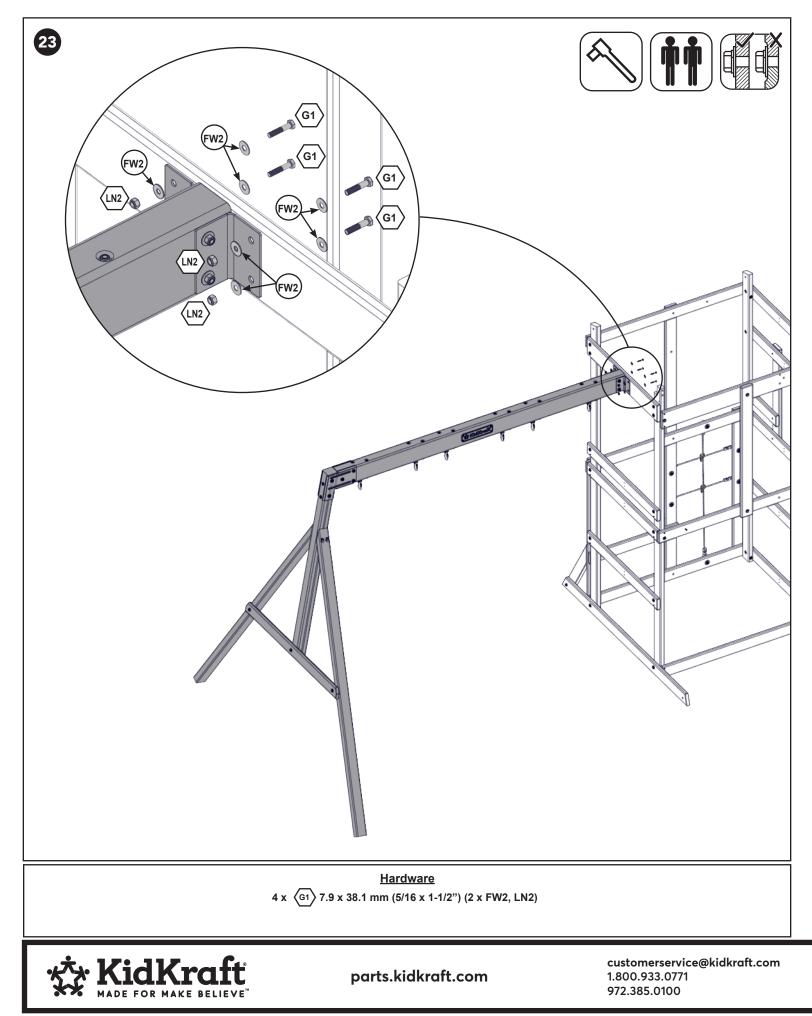

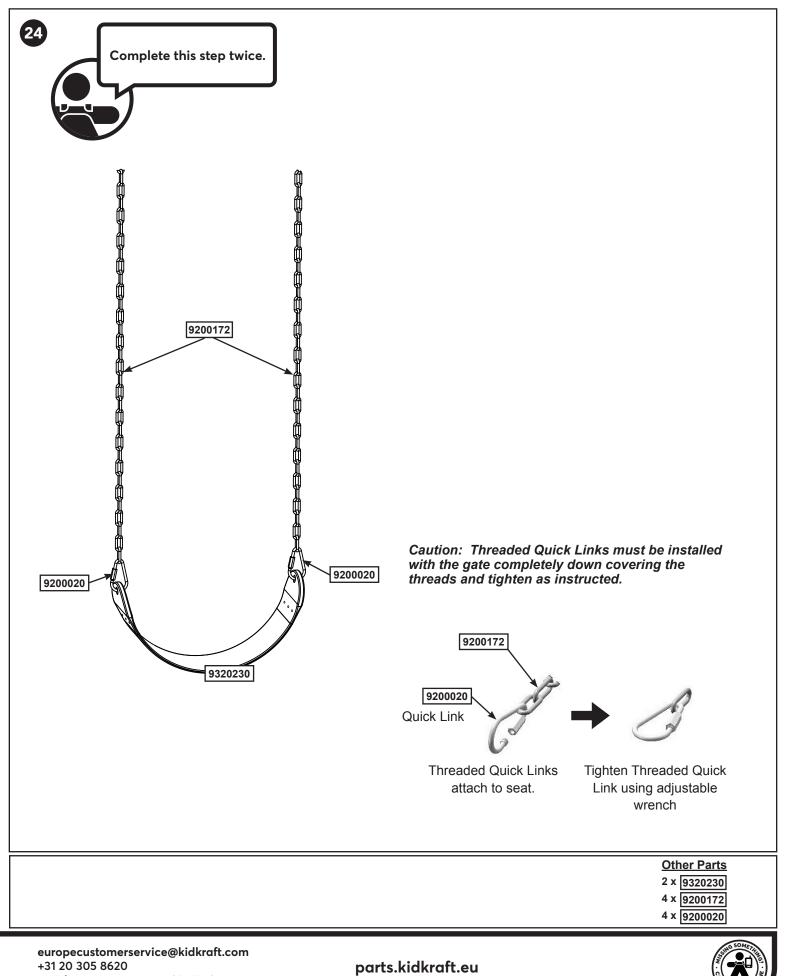


+31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)

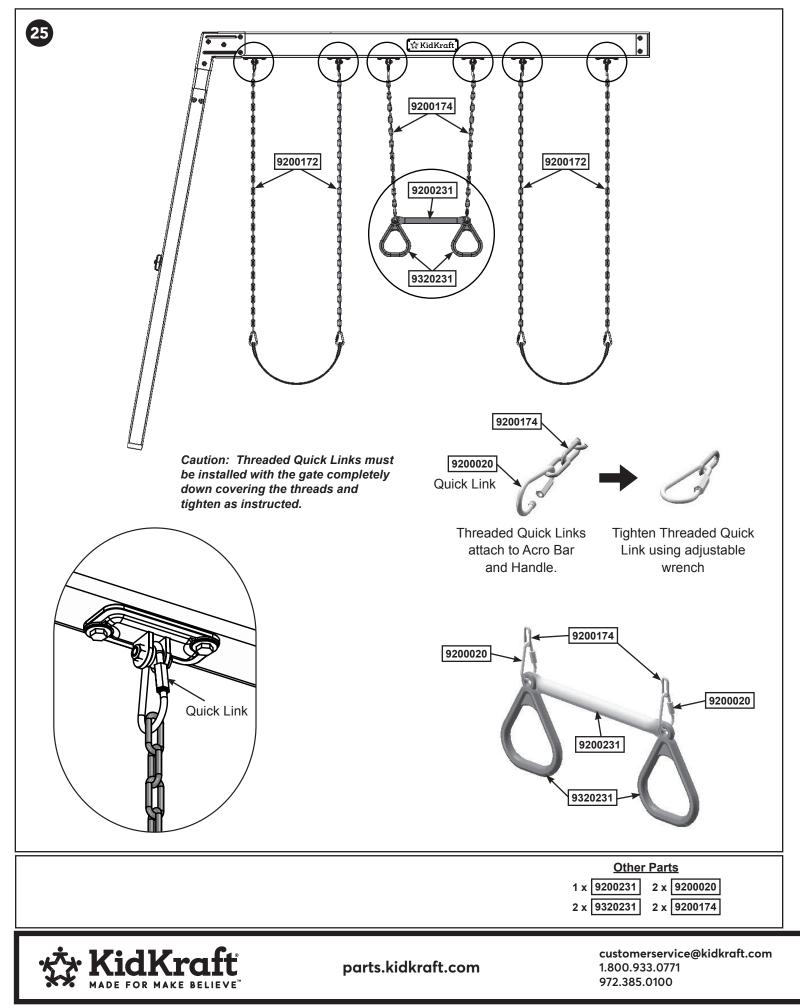


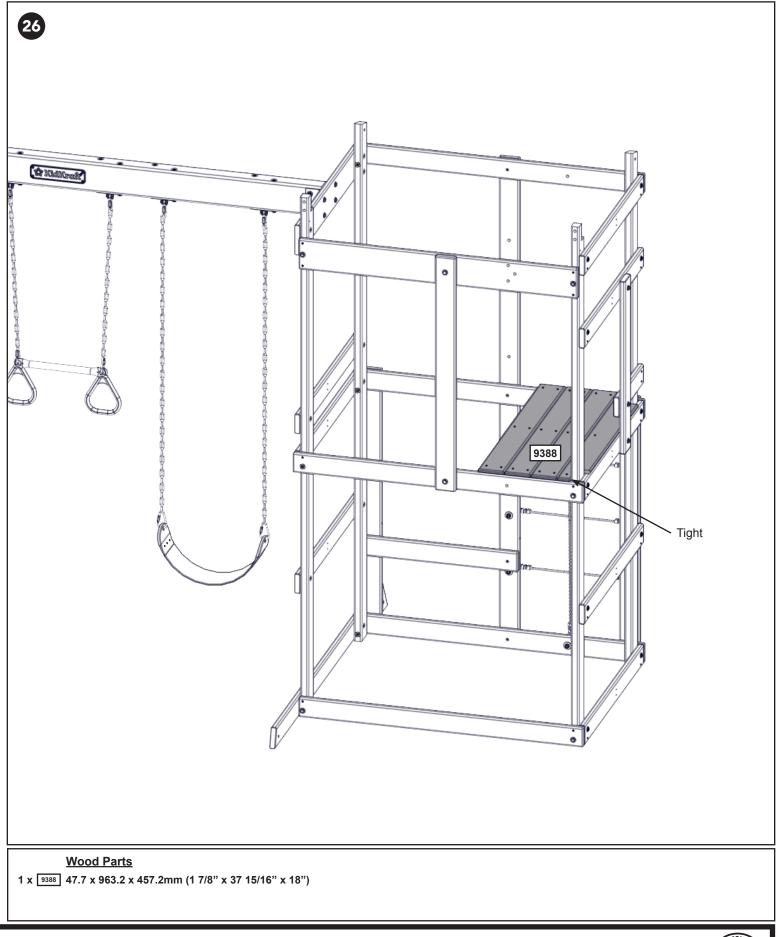


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)




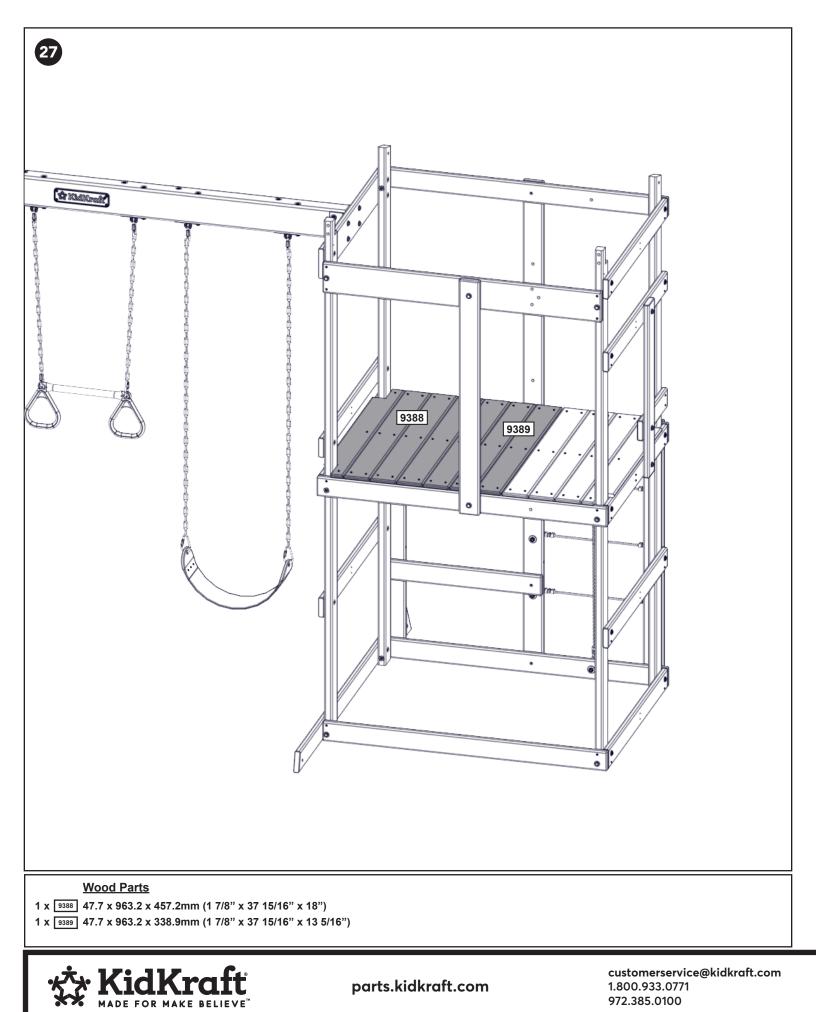

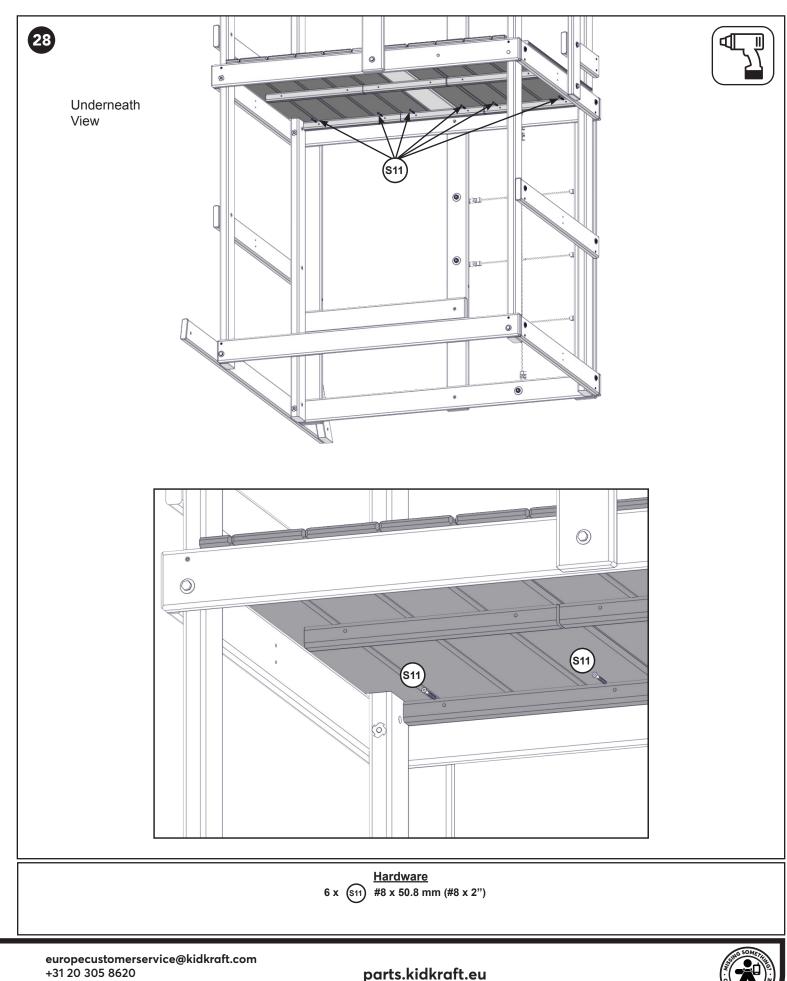





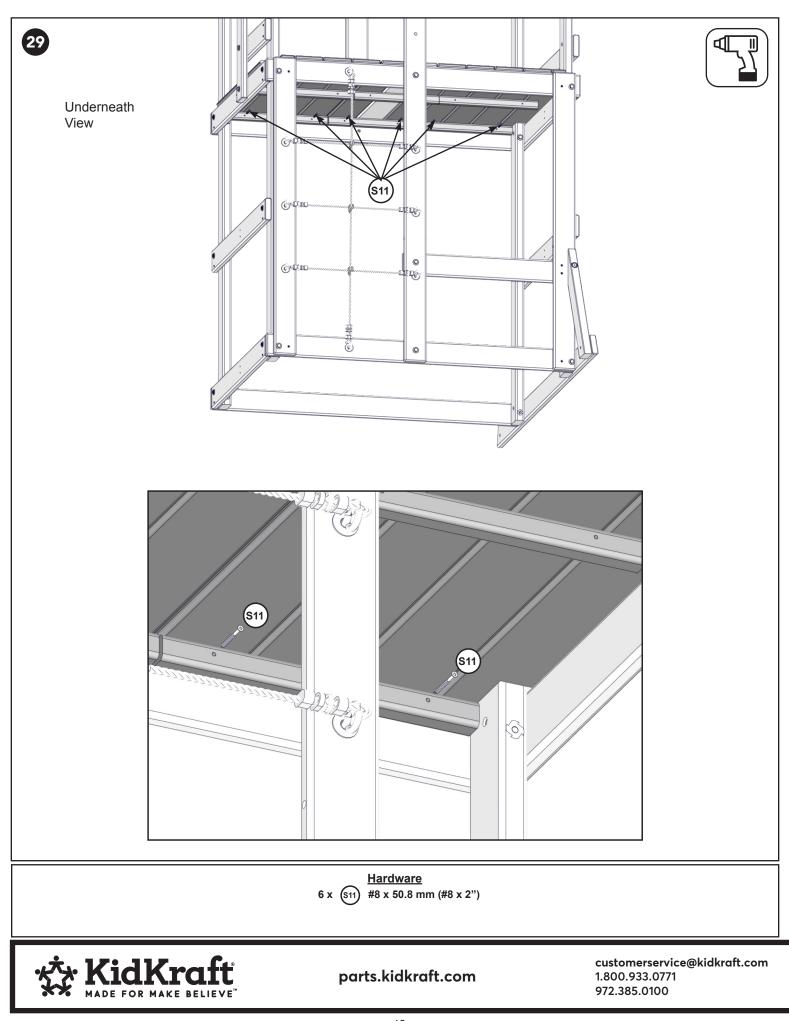


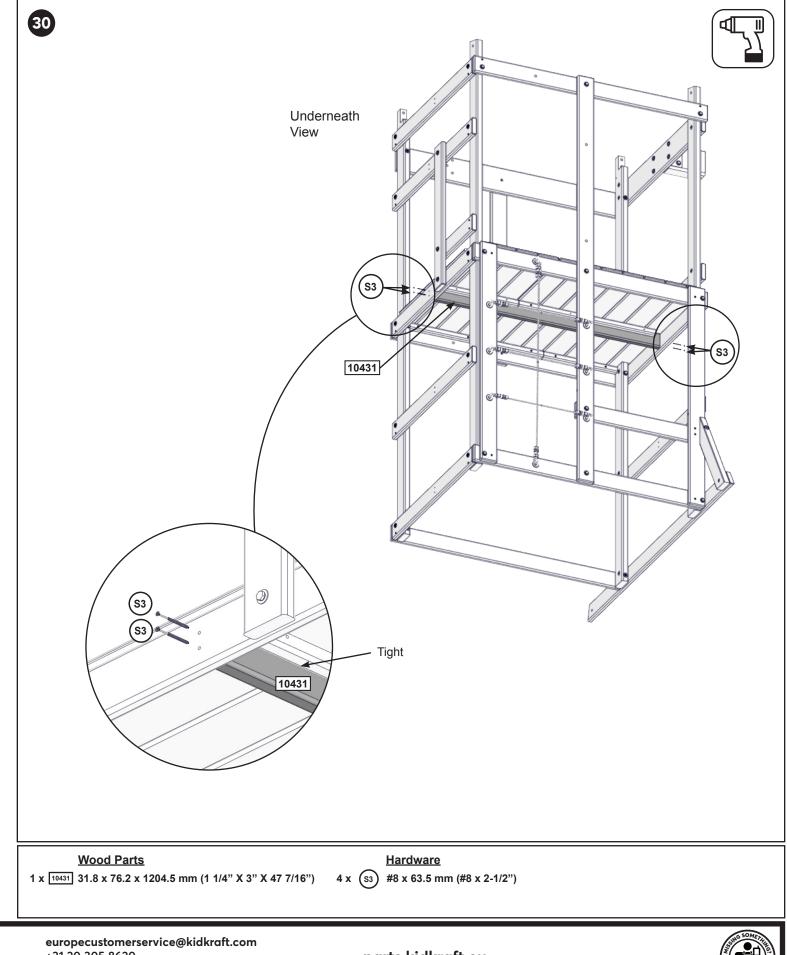



+**31 20 305 8620** M-F from 09:00 to 17:30 (GMT+1)

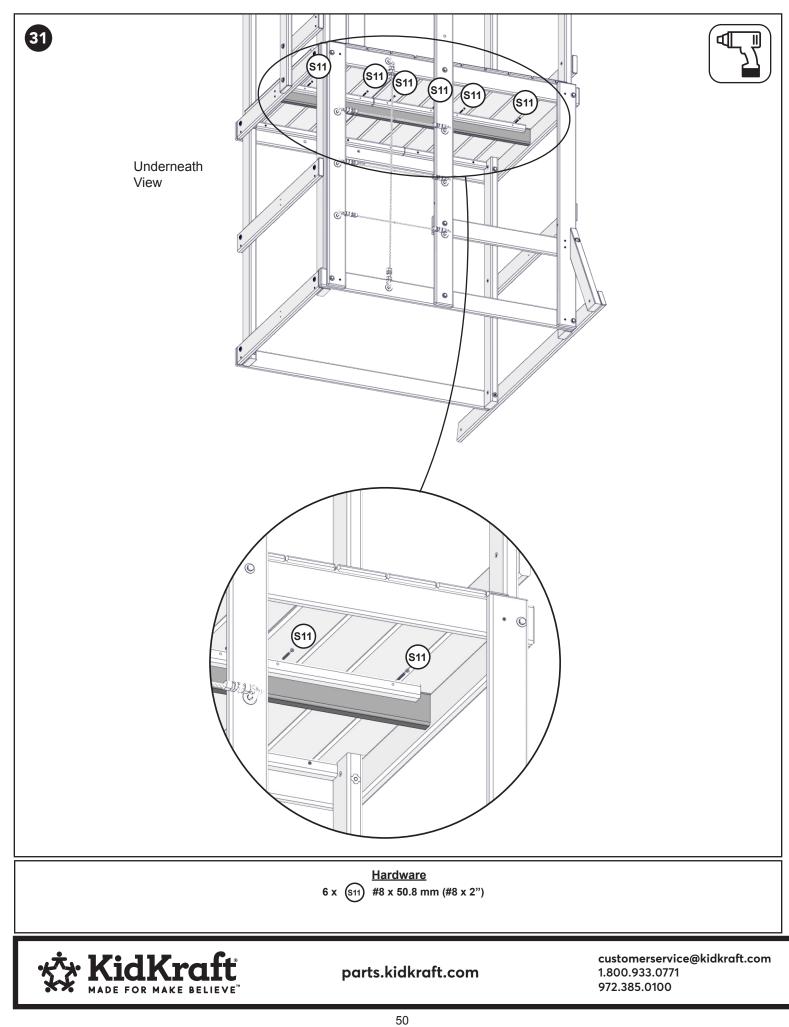

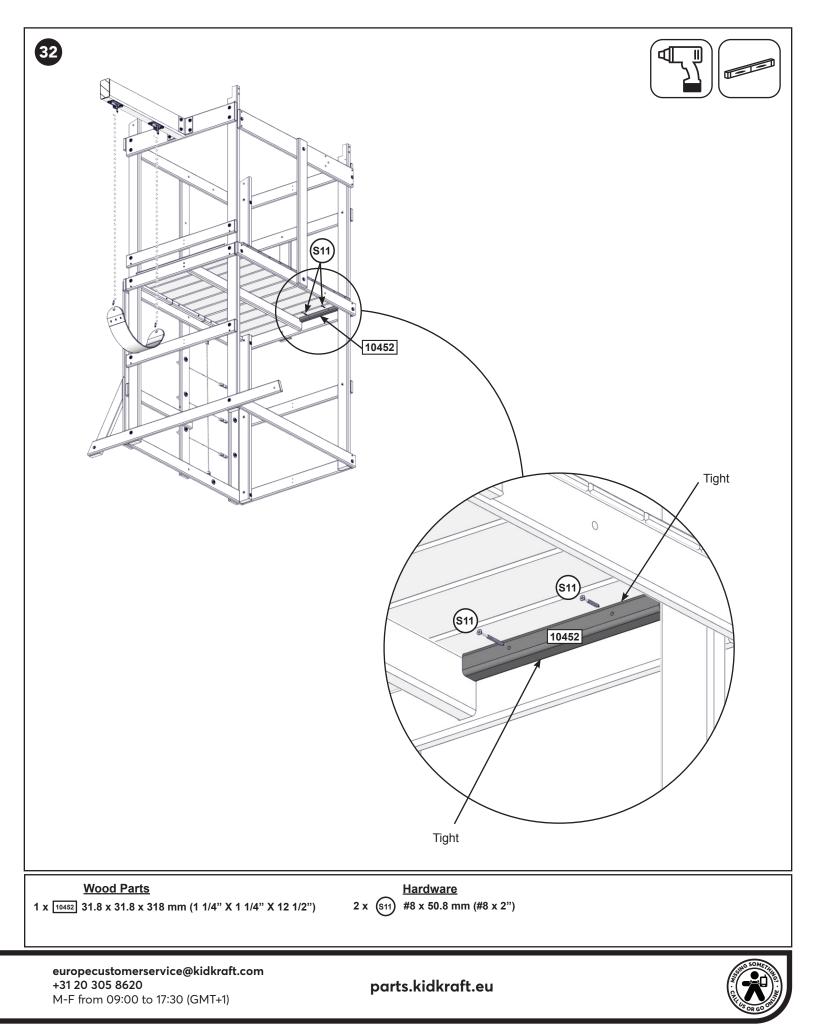

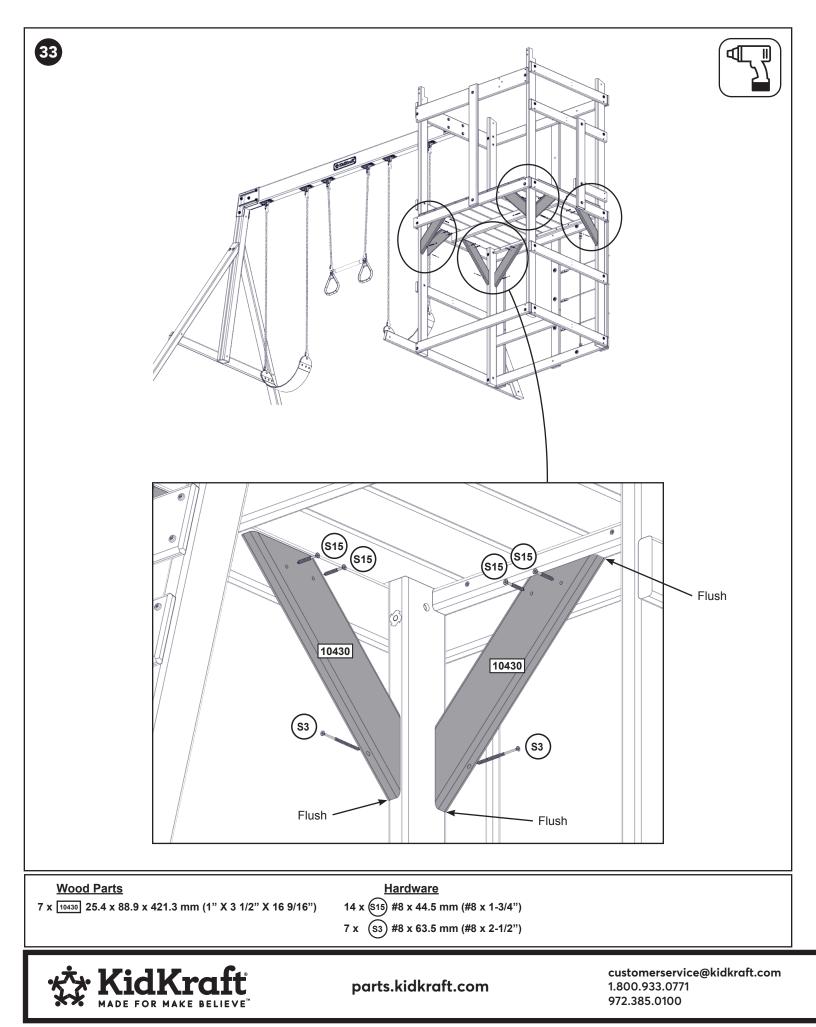


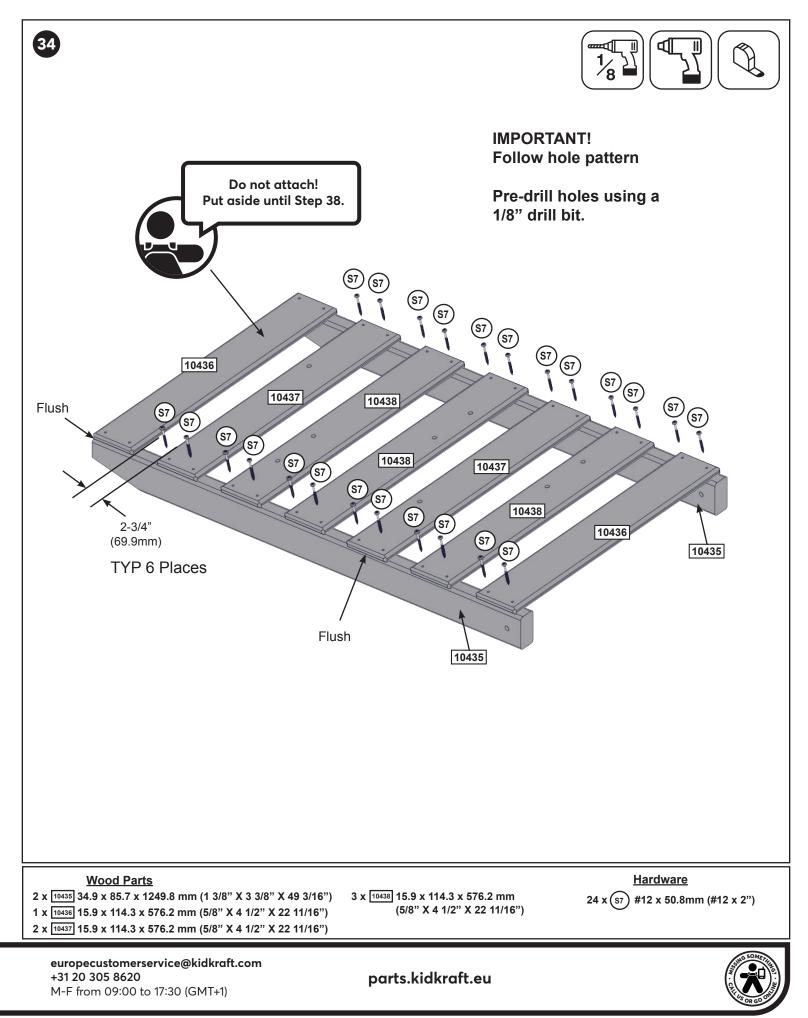

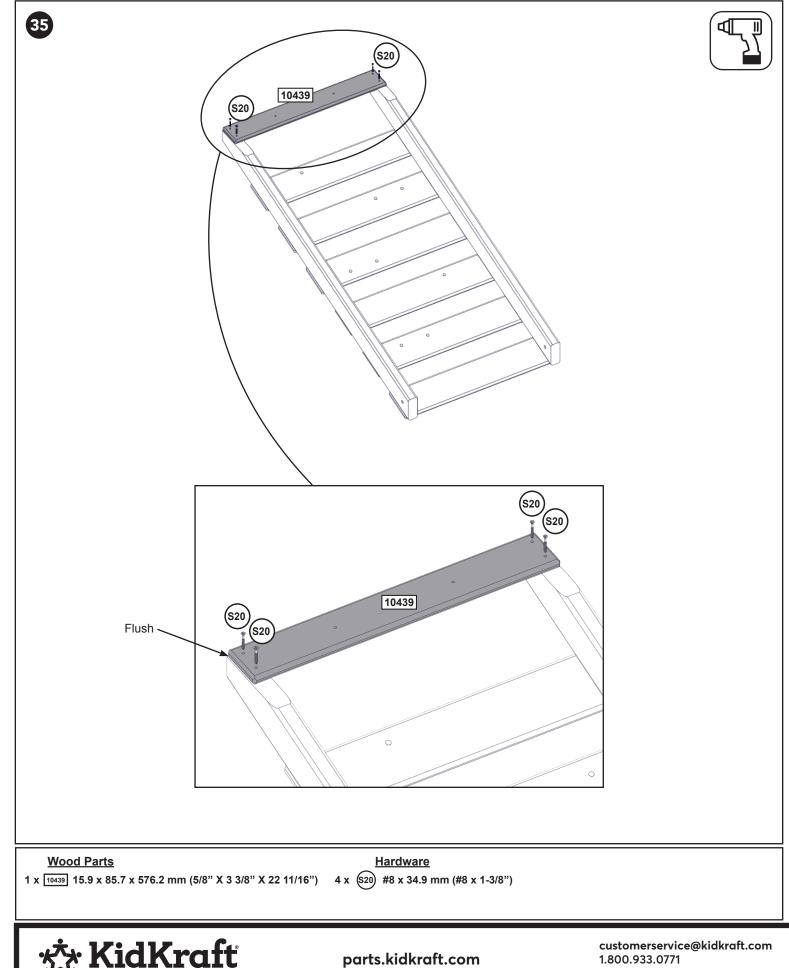



MADE FOR MAKE BELIEVE


1.800.933.0771 972.385.0100

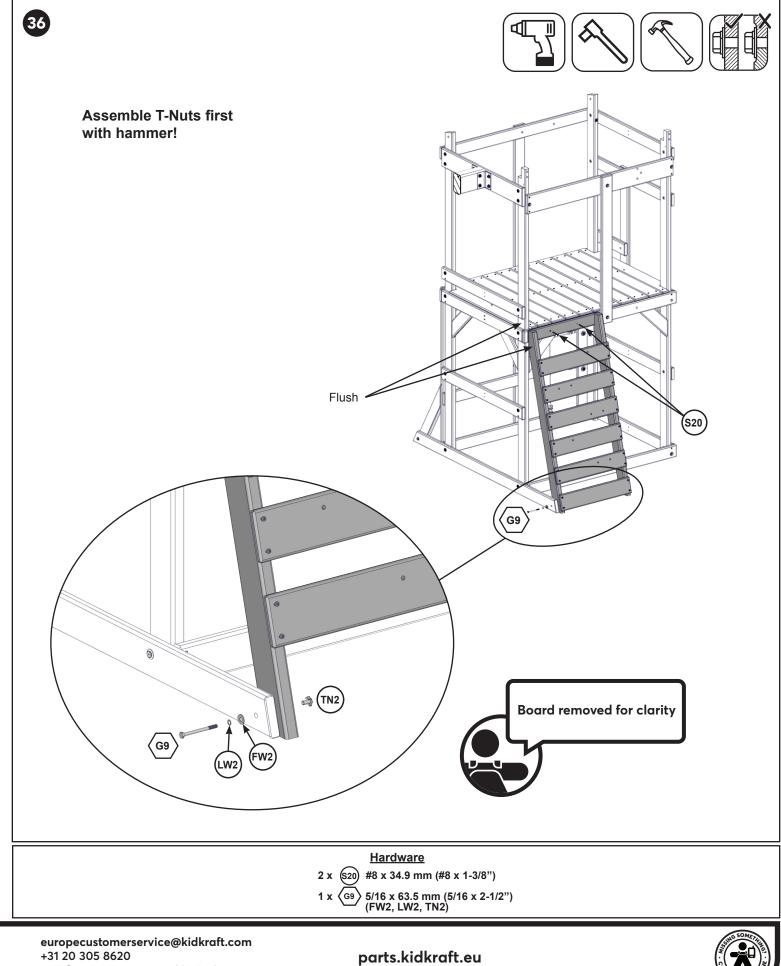



Klakraft.eu

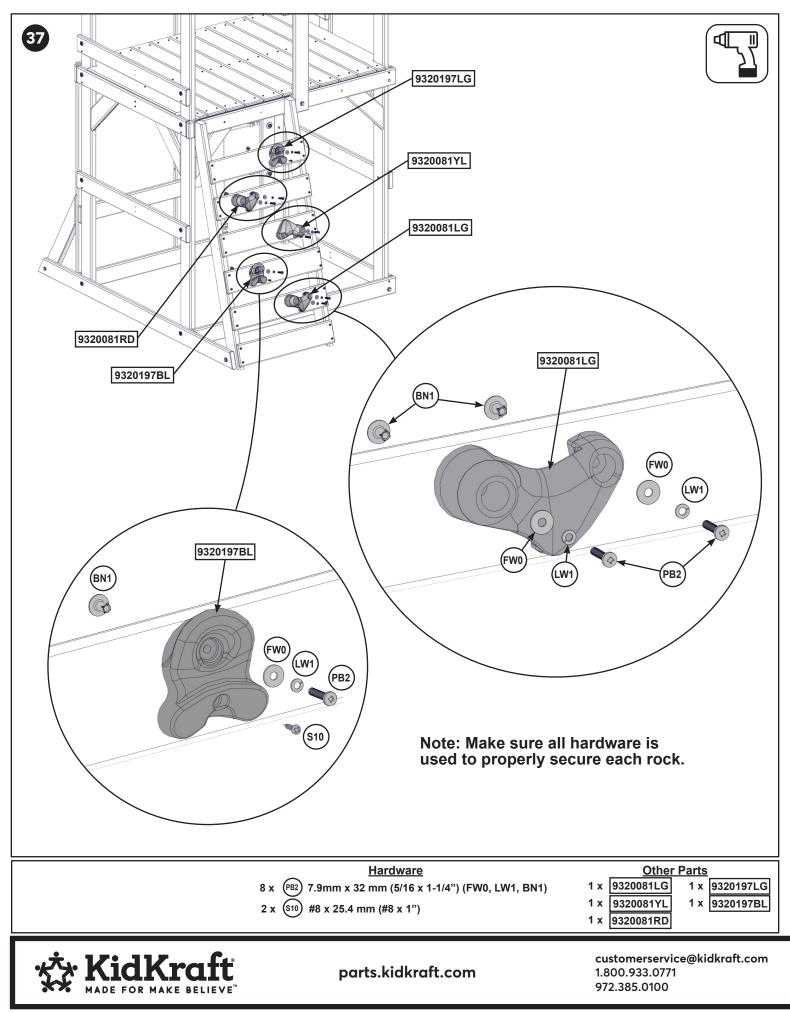

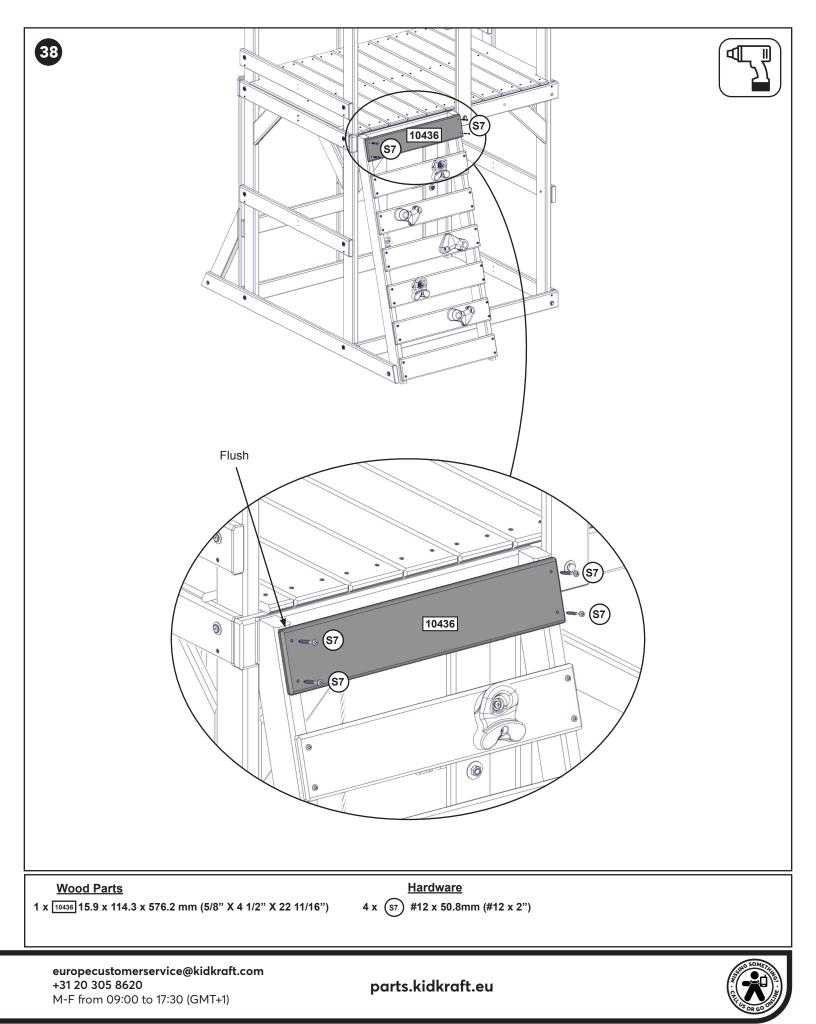

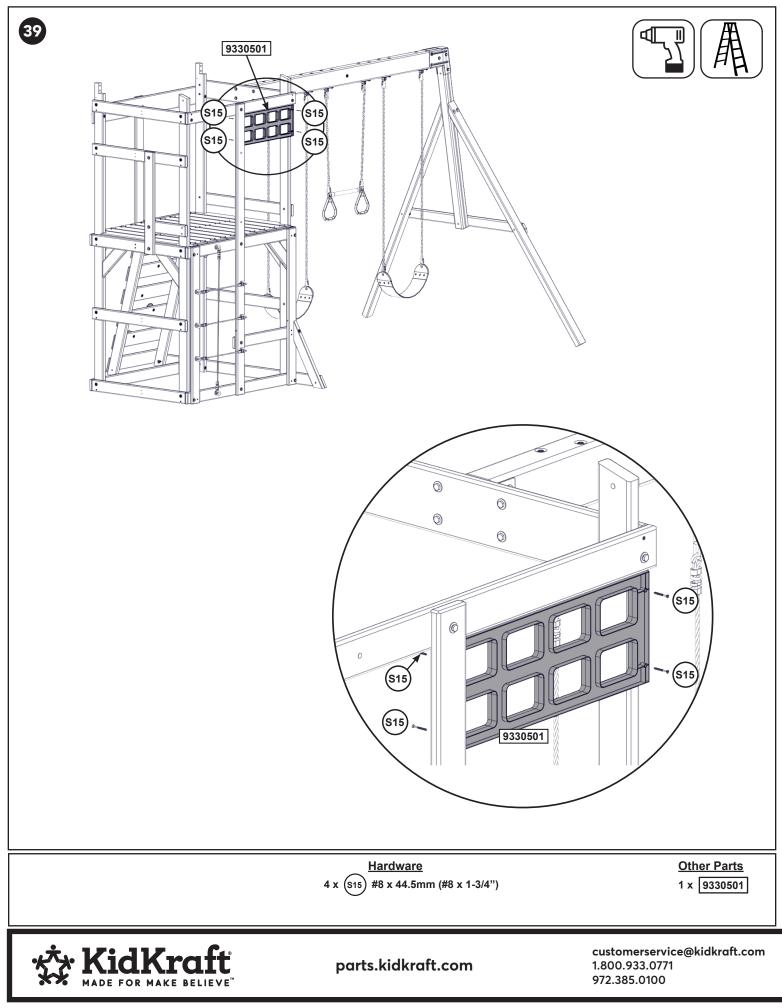


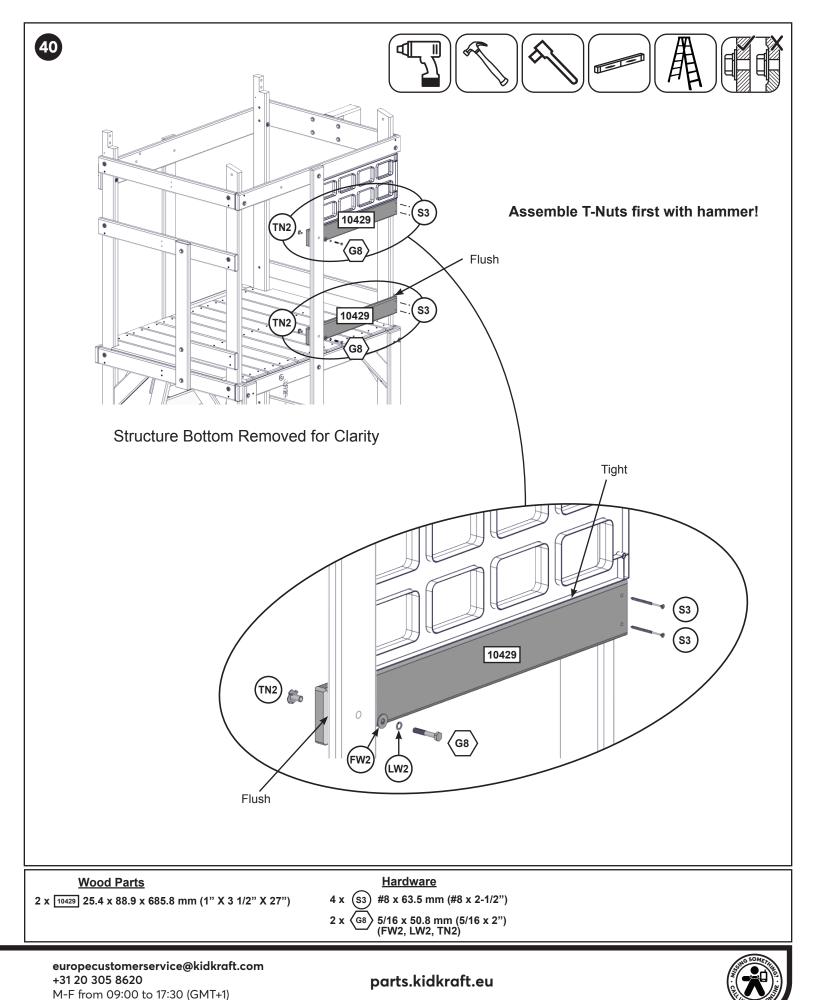

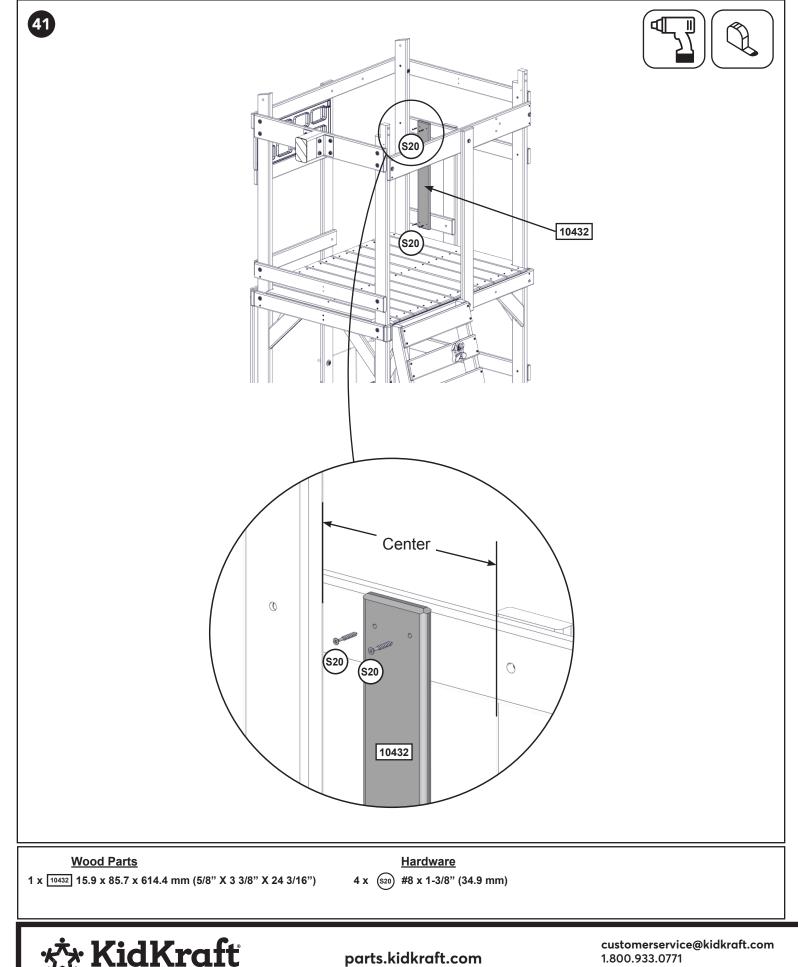


MADE FOR MAKE BELIEVE

1.800.933.0771 972.385.0100

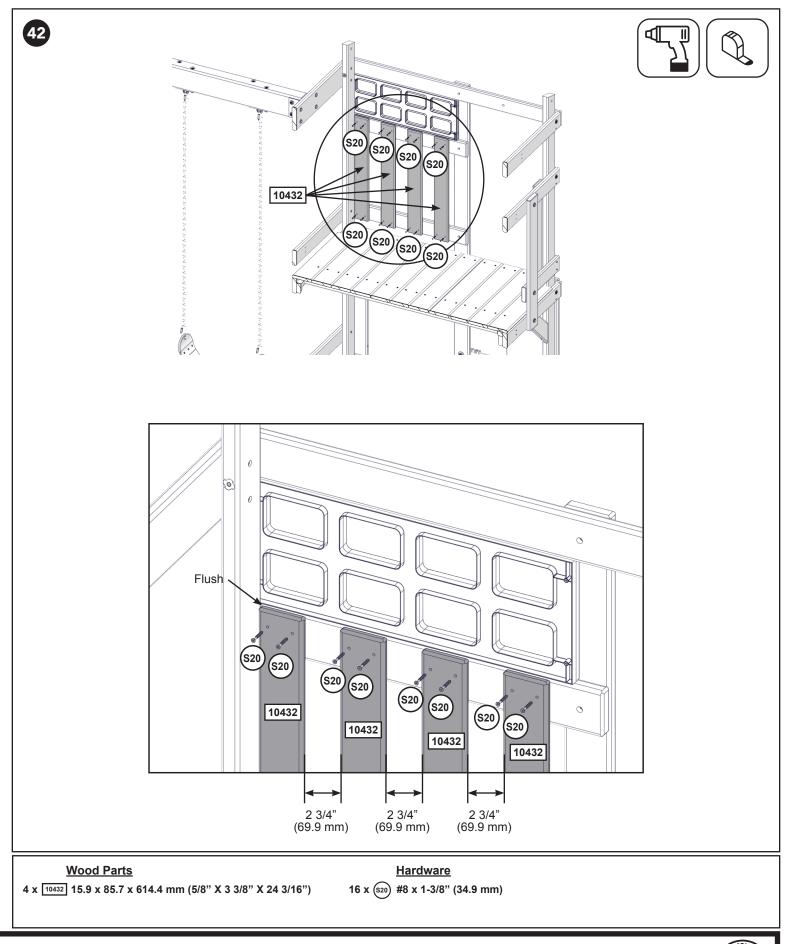

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)




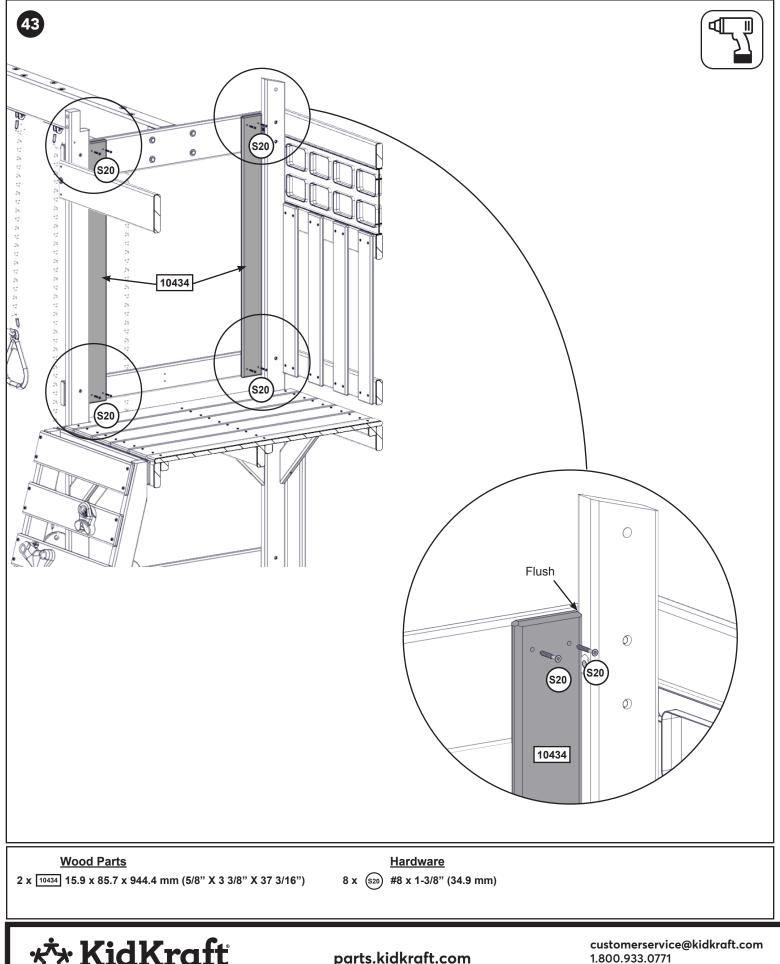


MADE FOR MAKE BELIEVE

parts.kidkraft.com


1.800.933.0771 972.385.0100

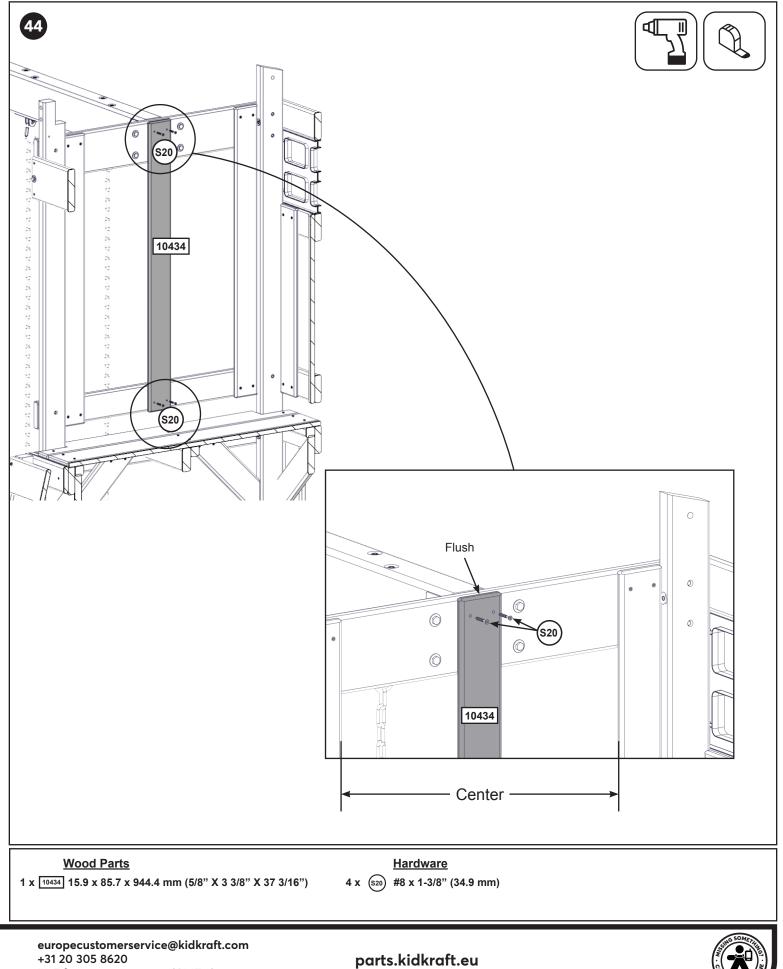


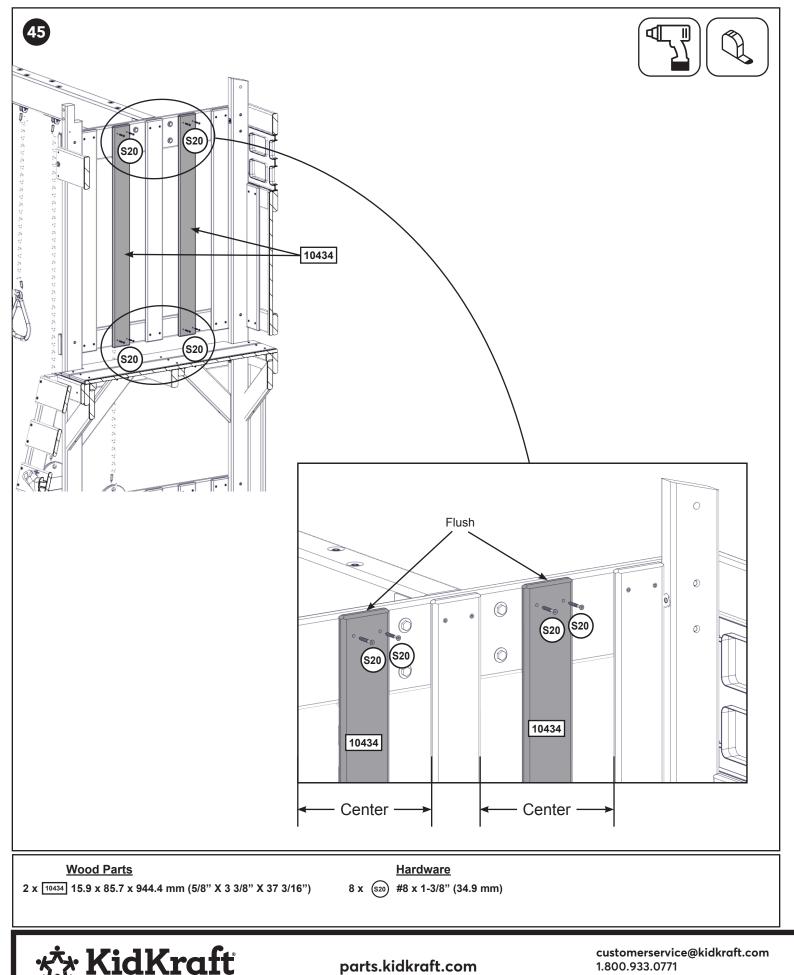


MADE FOR MAKE BELIEVE


972.385.0100

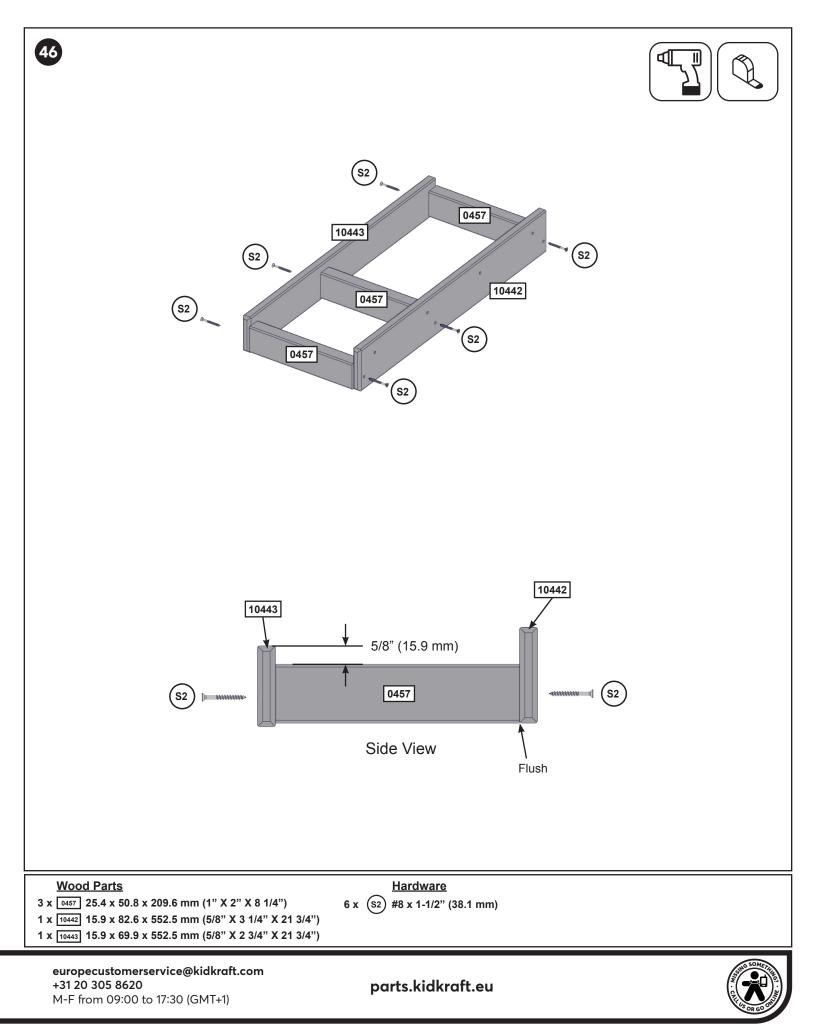


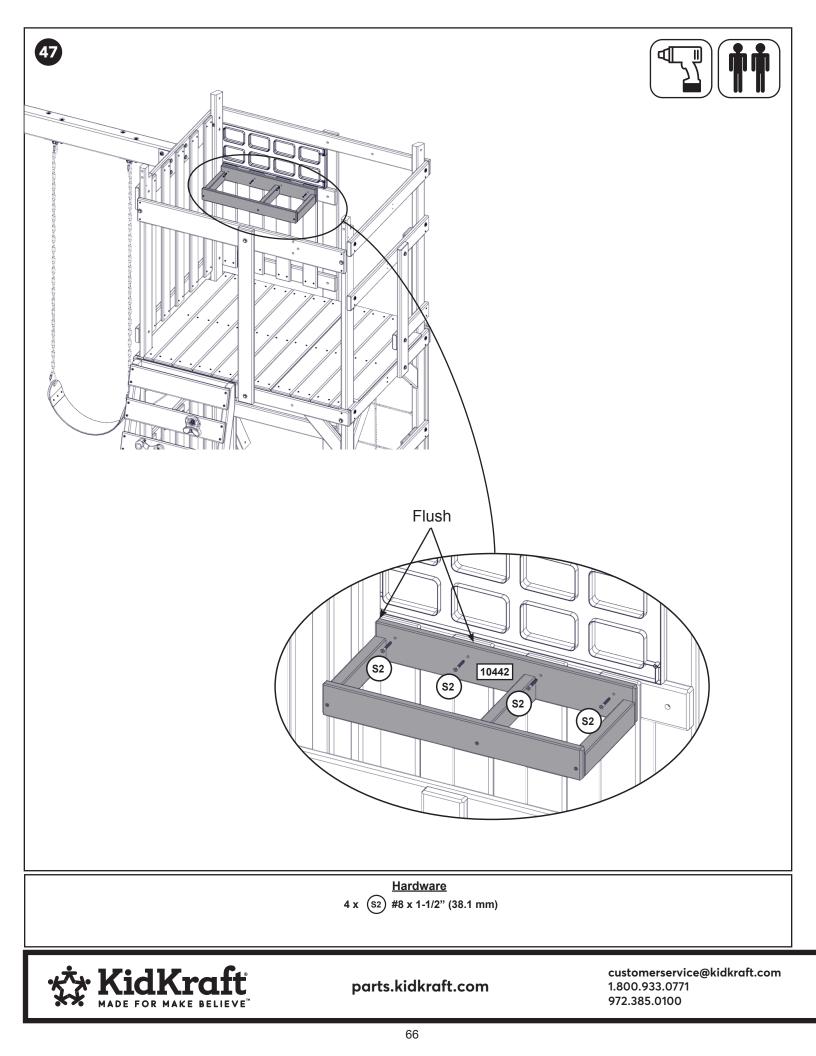


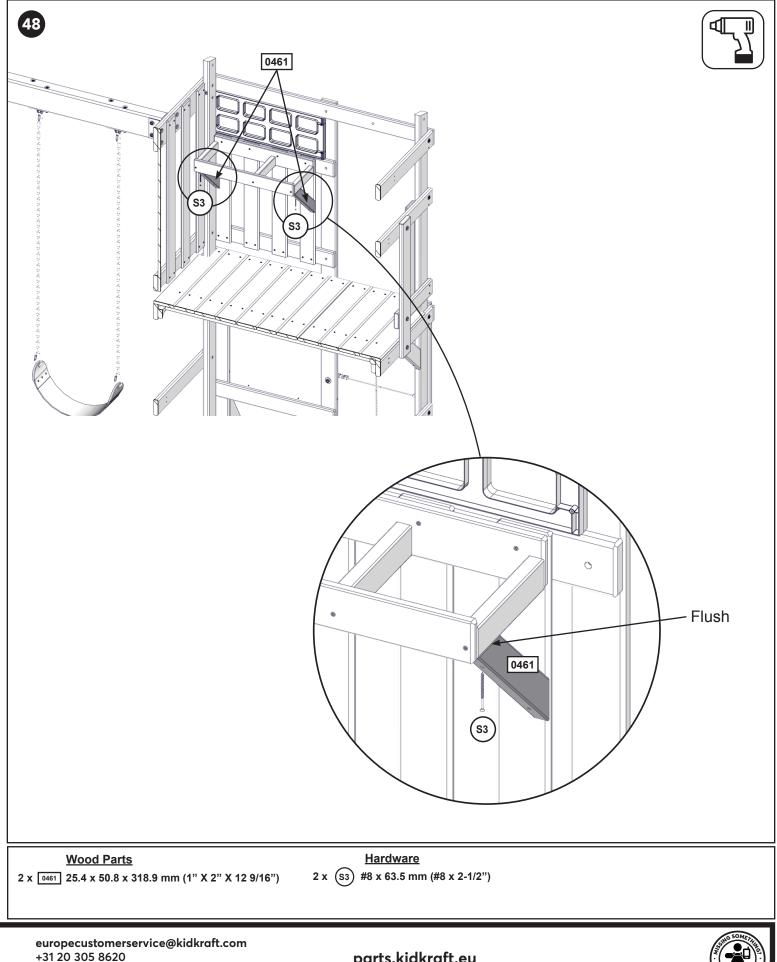



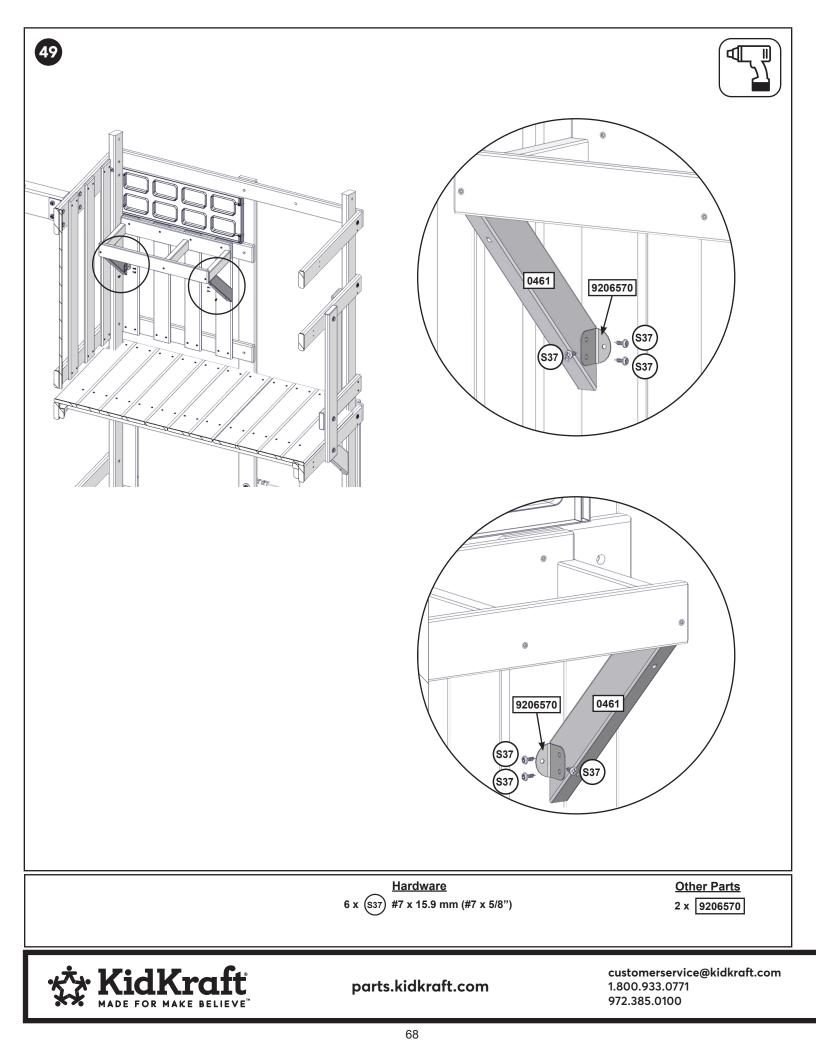


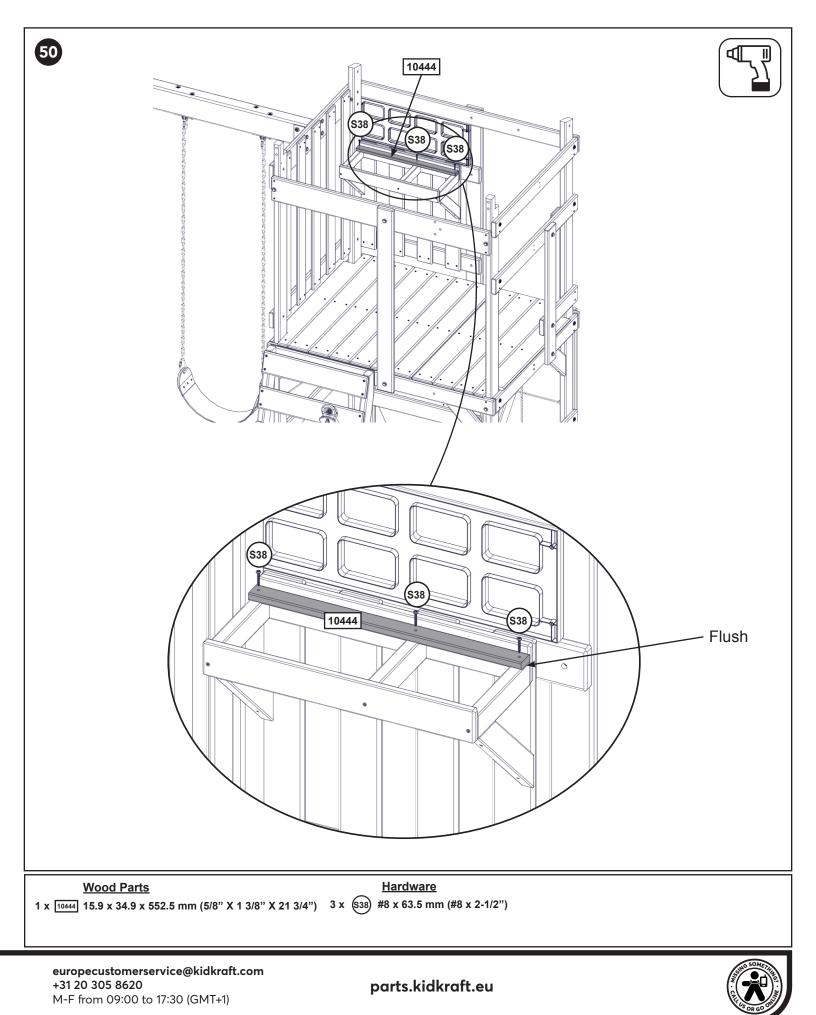


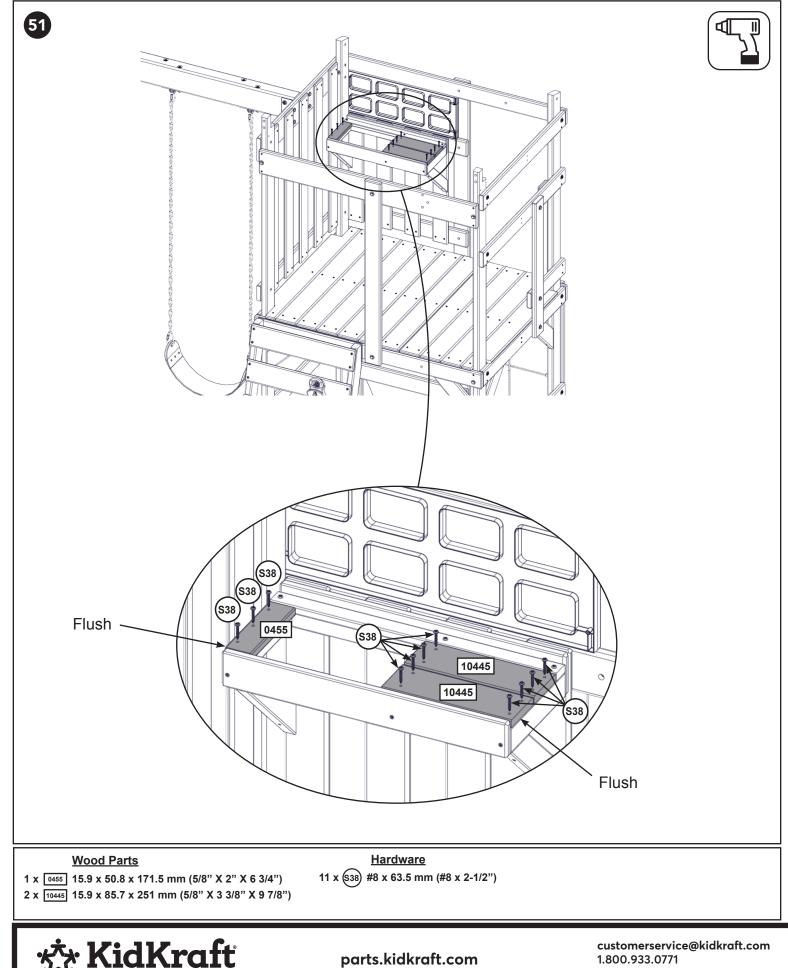


1.800.933.0771 972.385.0100


MADE FOR MAKE BELIEVE

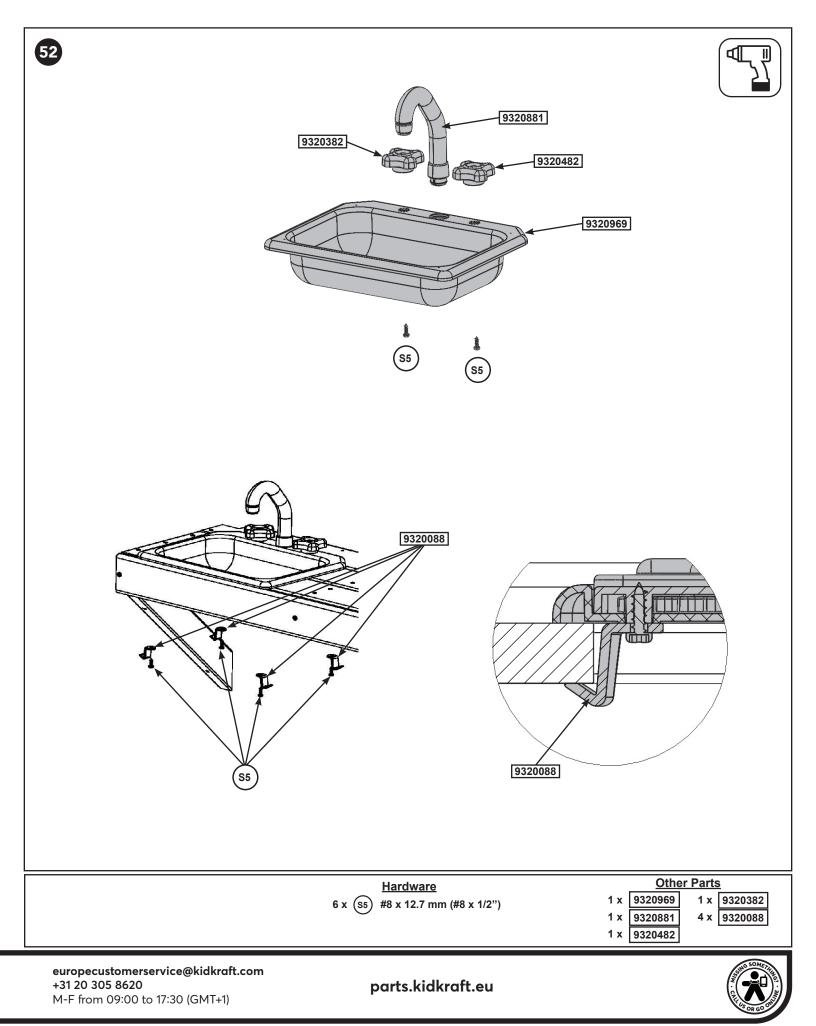


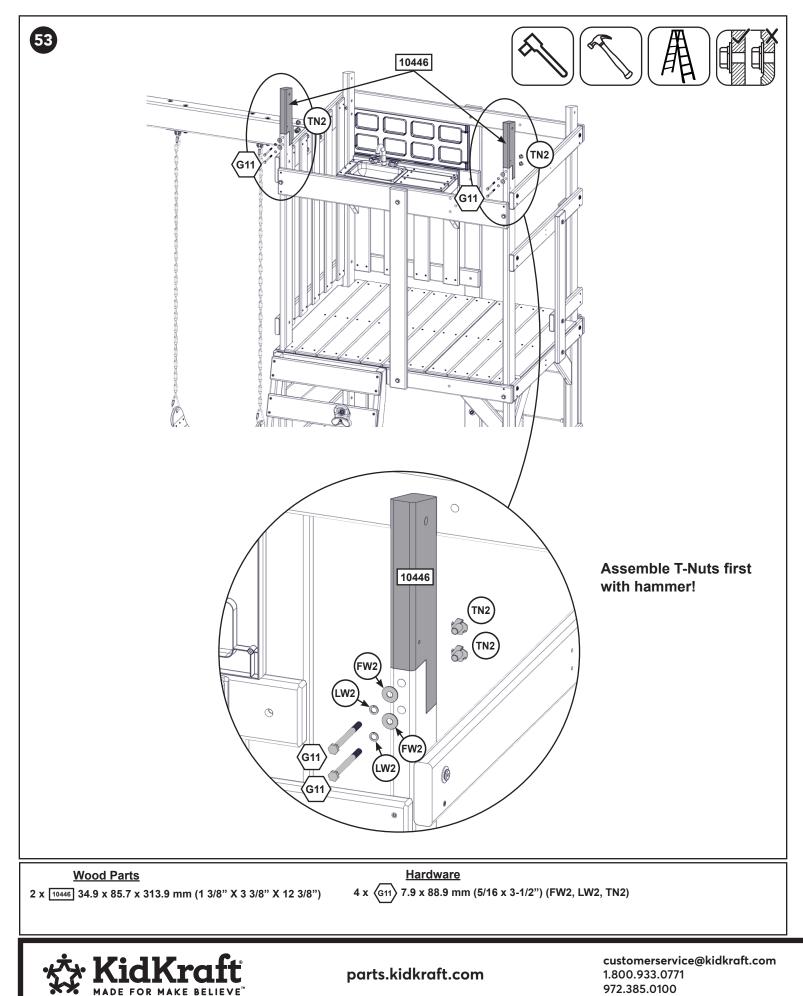



972.385.0100

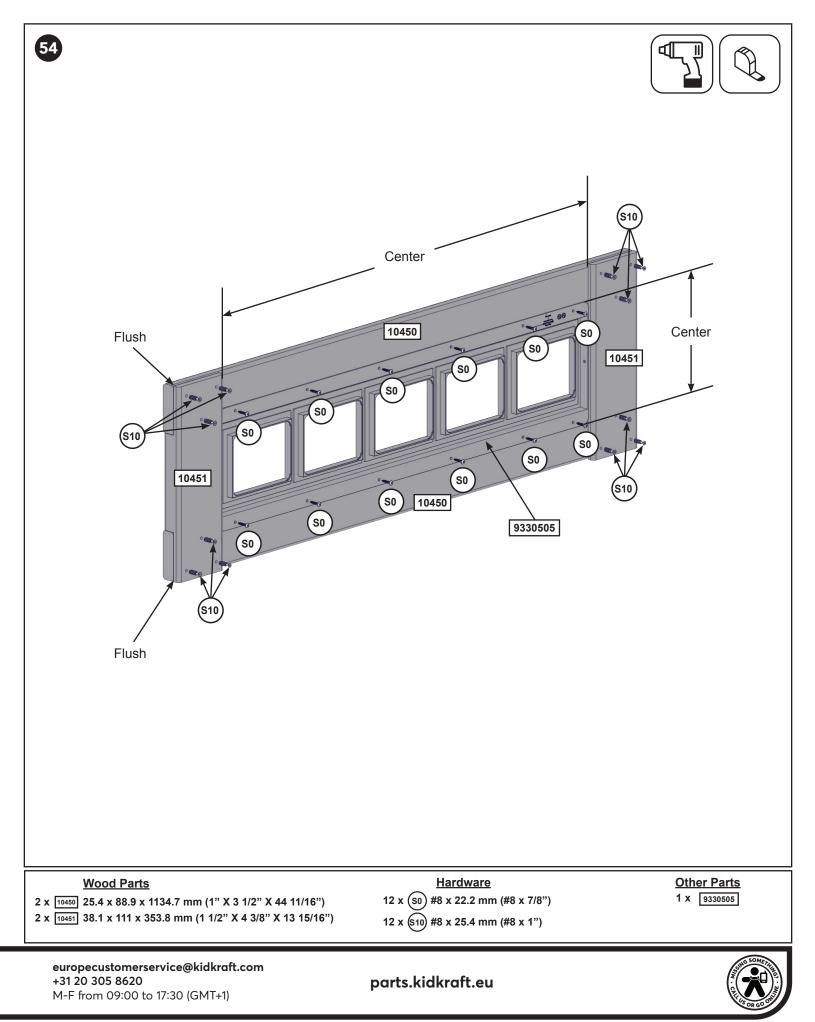


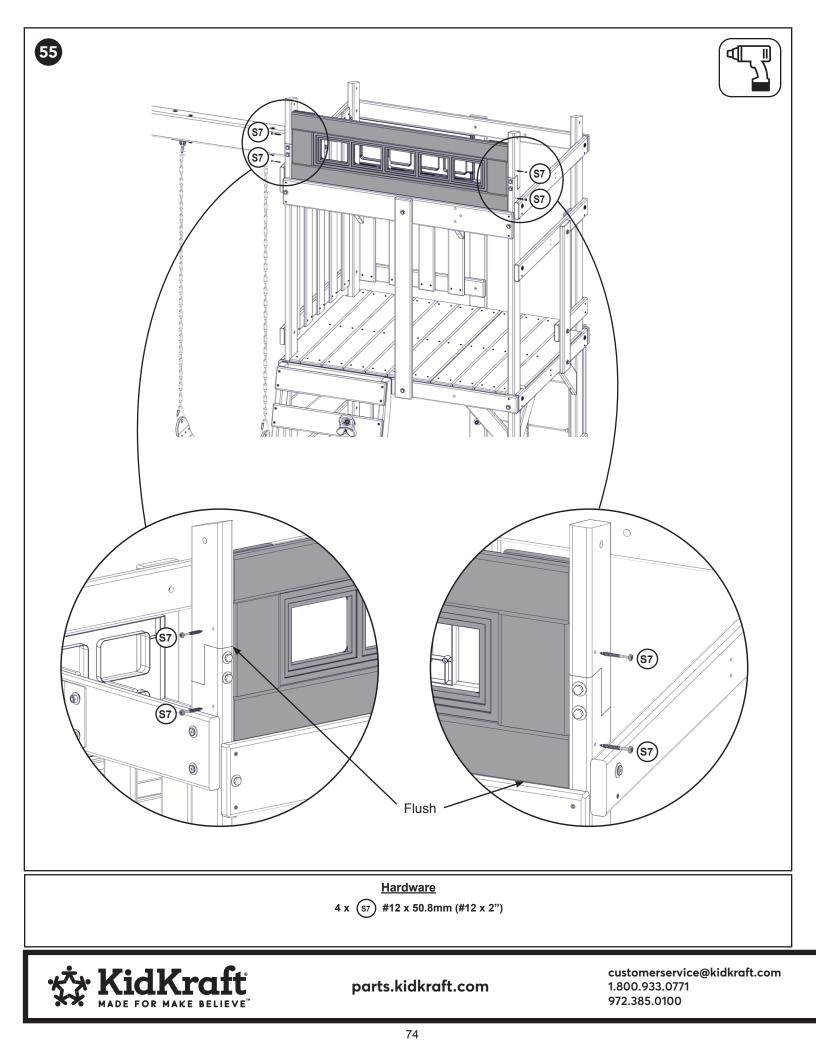

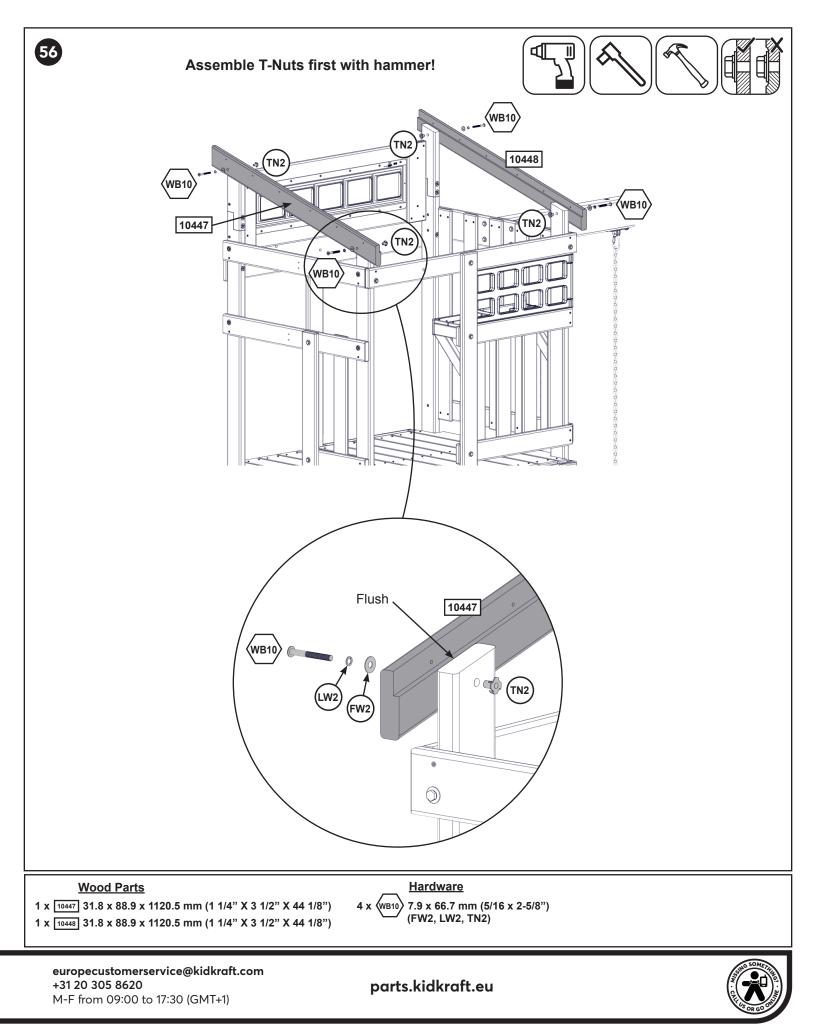

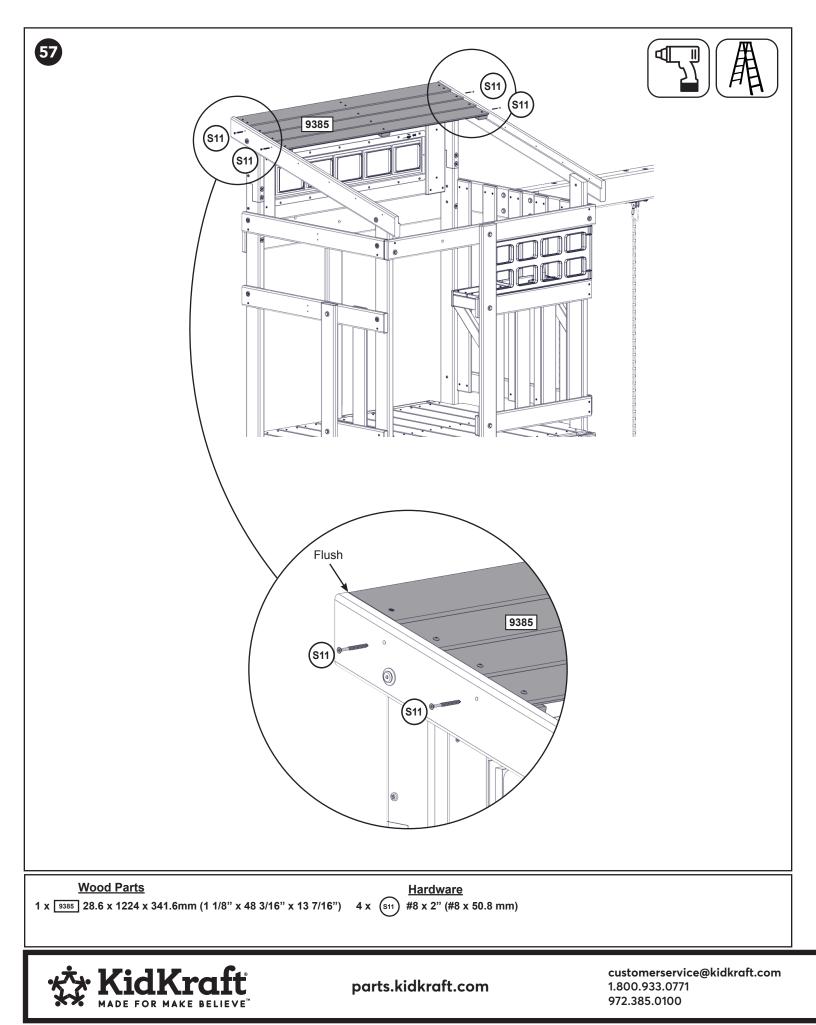


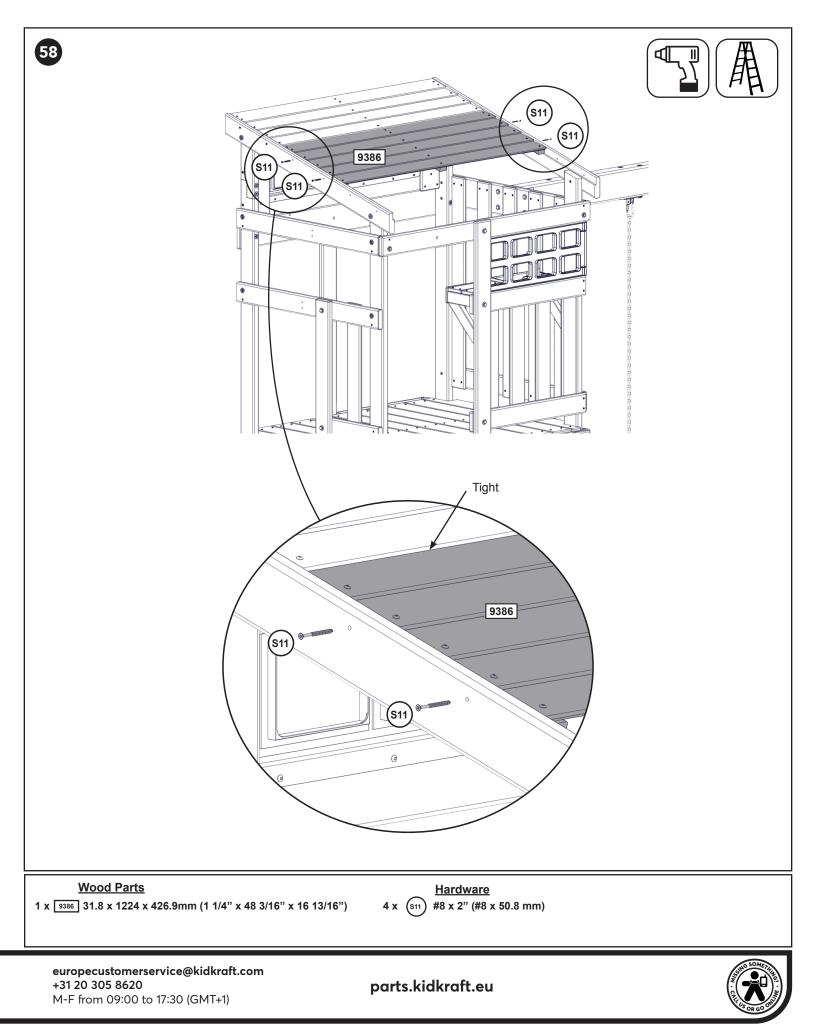


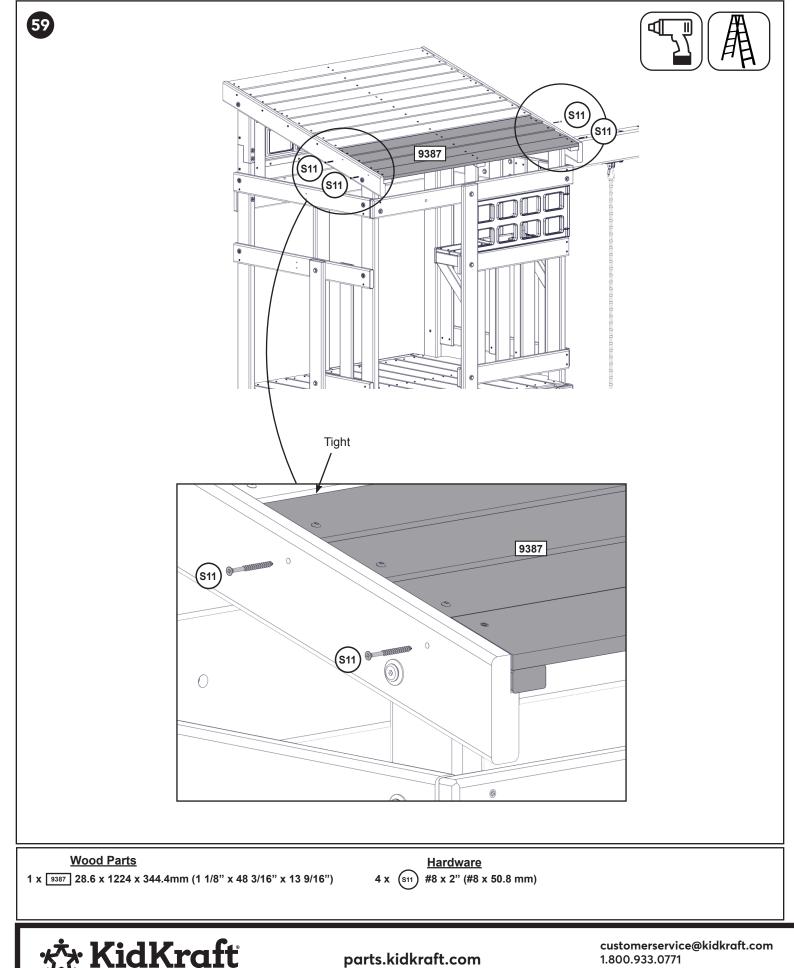



MADE FOR MAKE BELIEVE


1.800.933.0771 972.385.0100

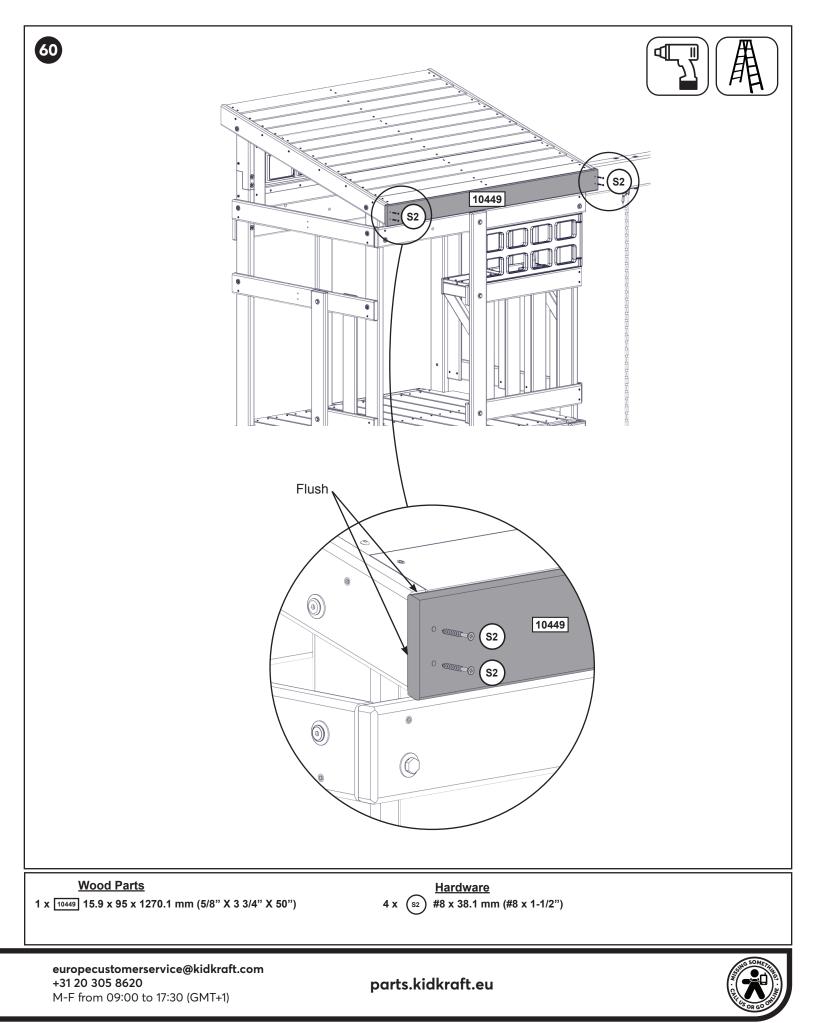


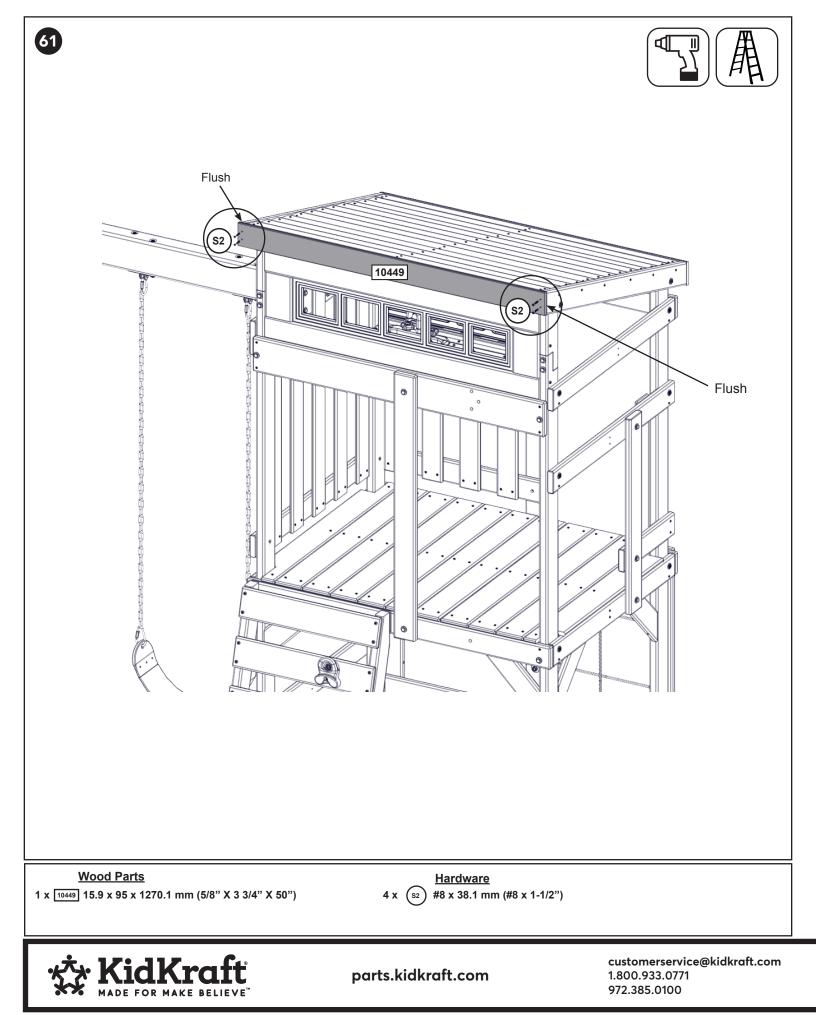


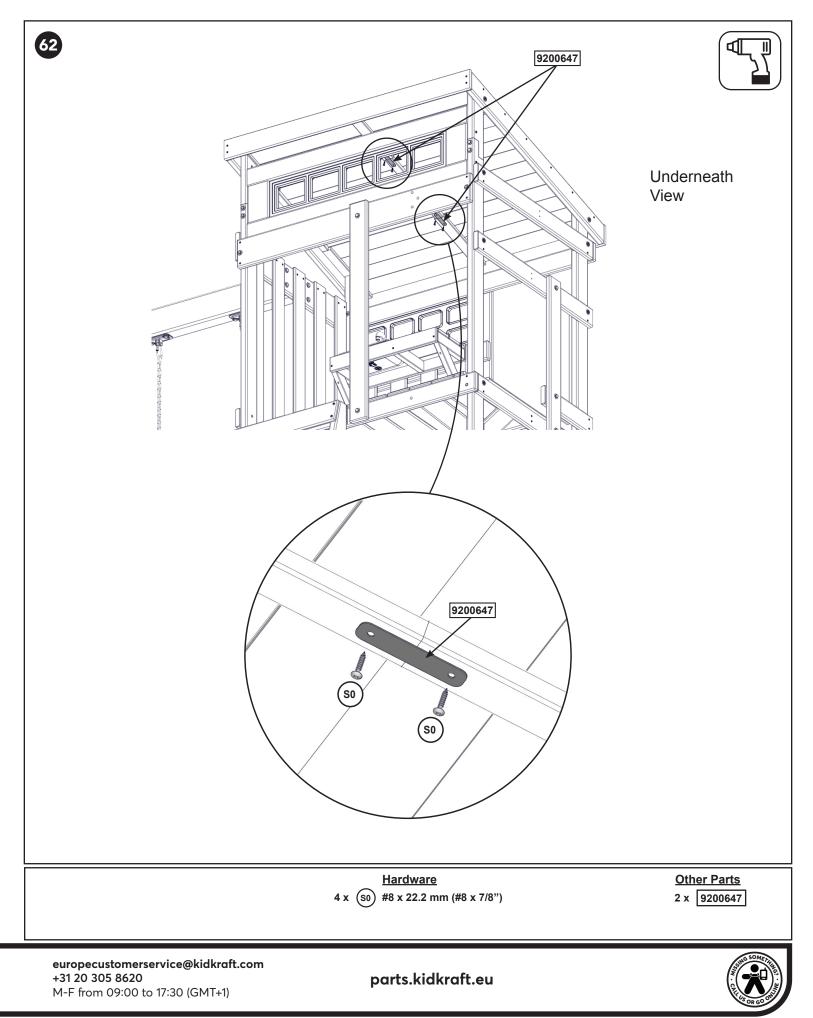


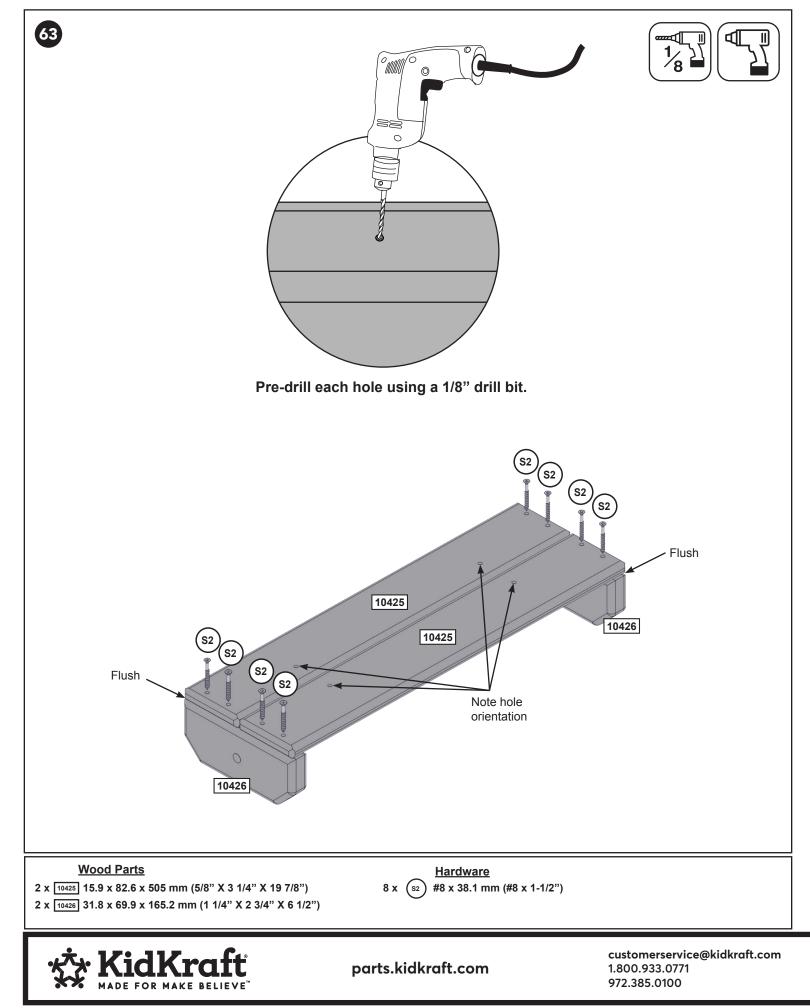


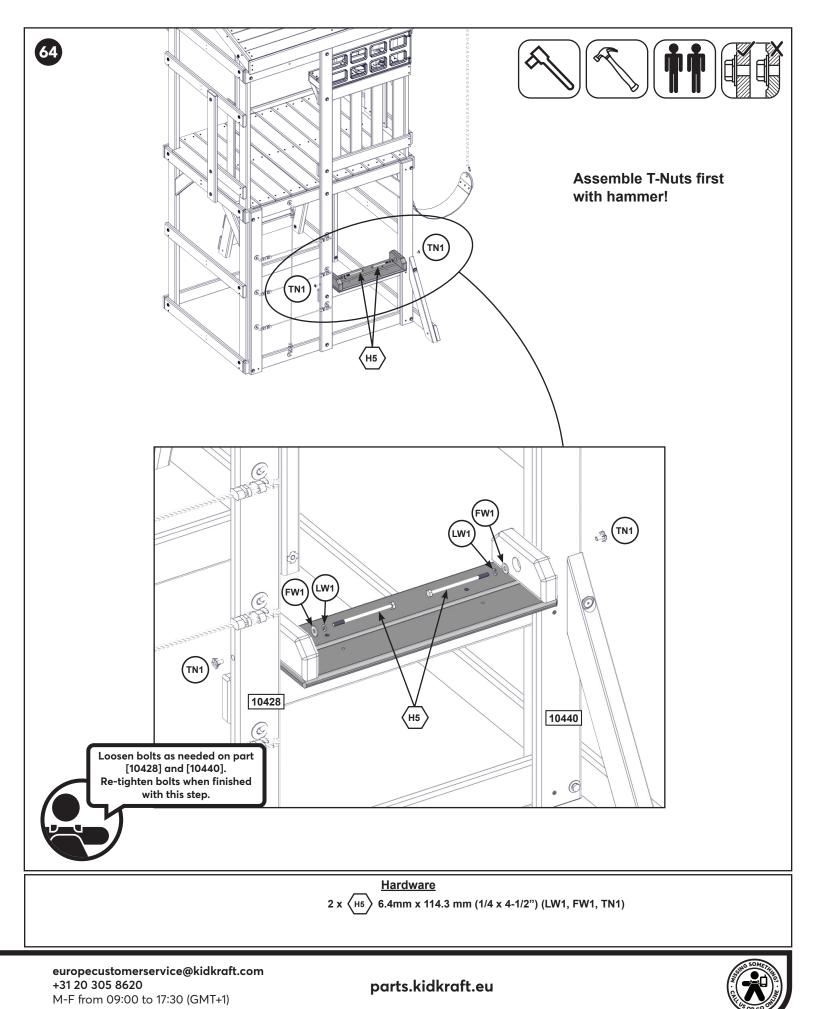


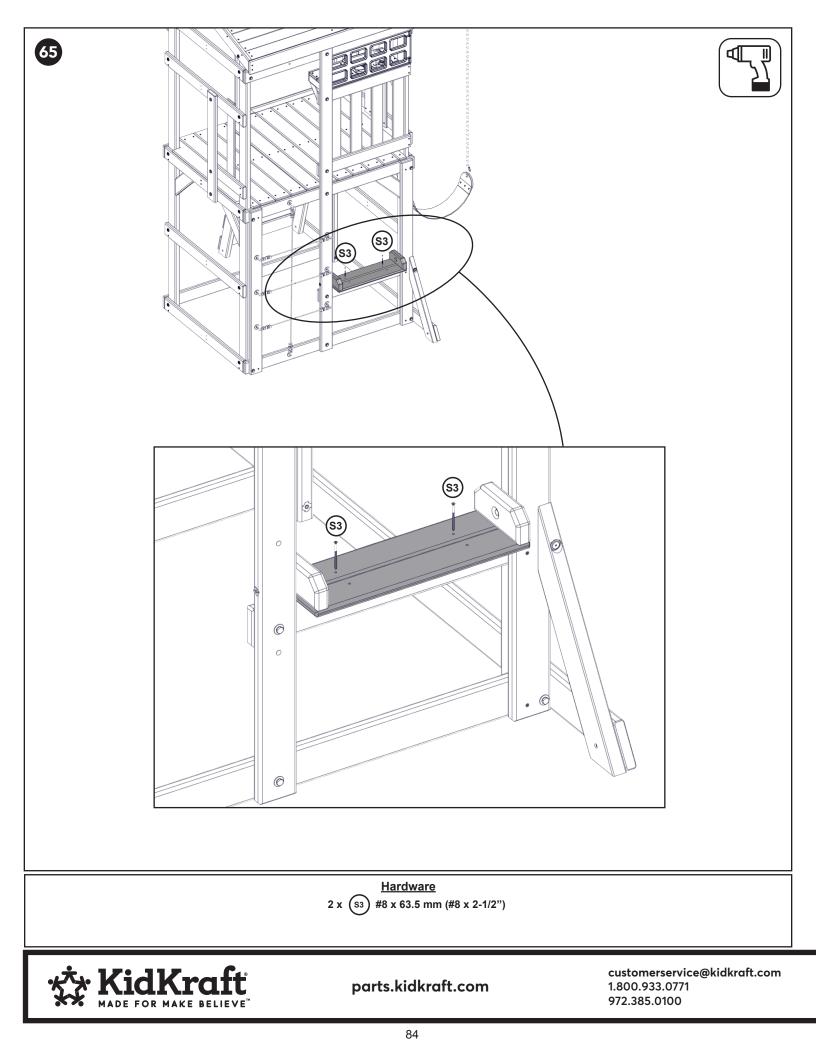


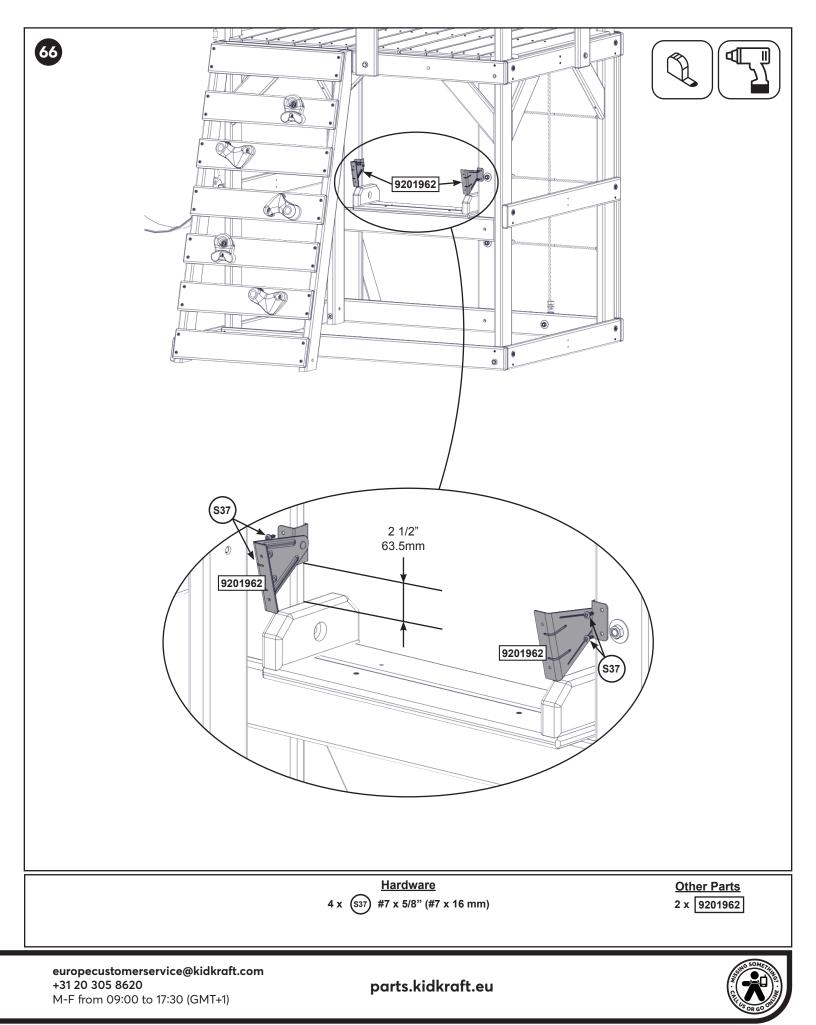


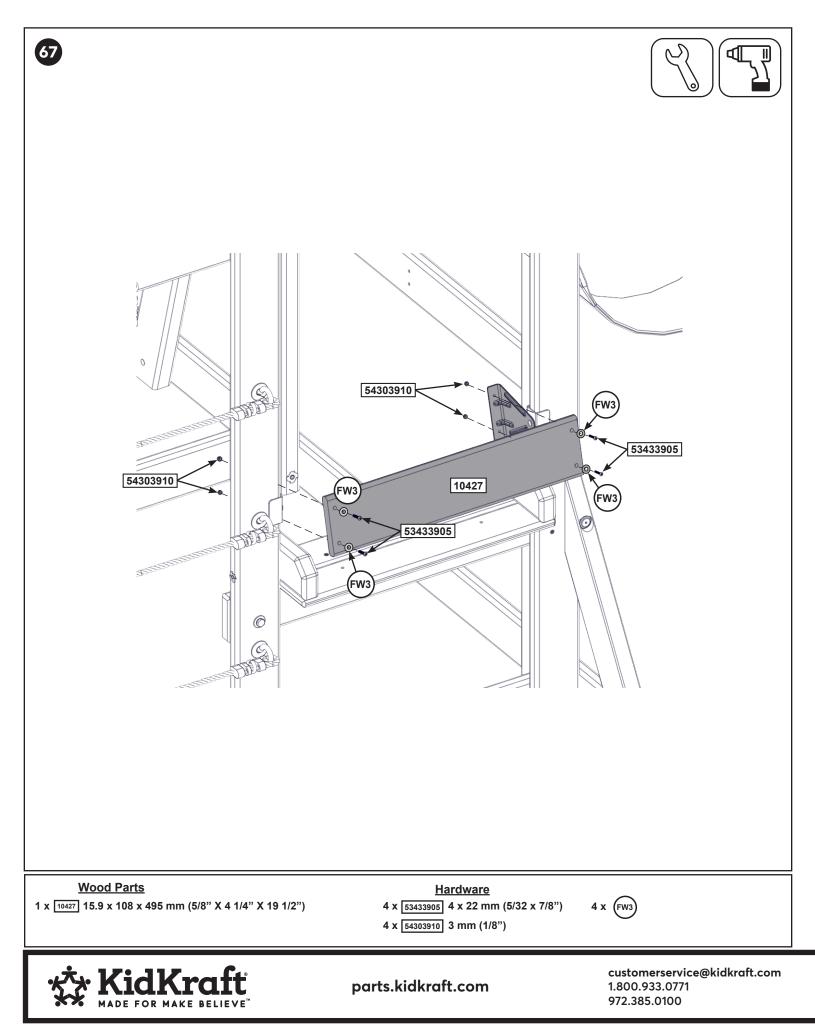


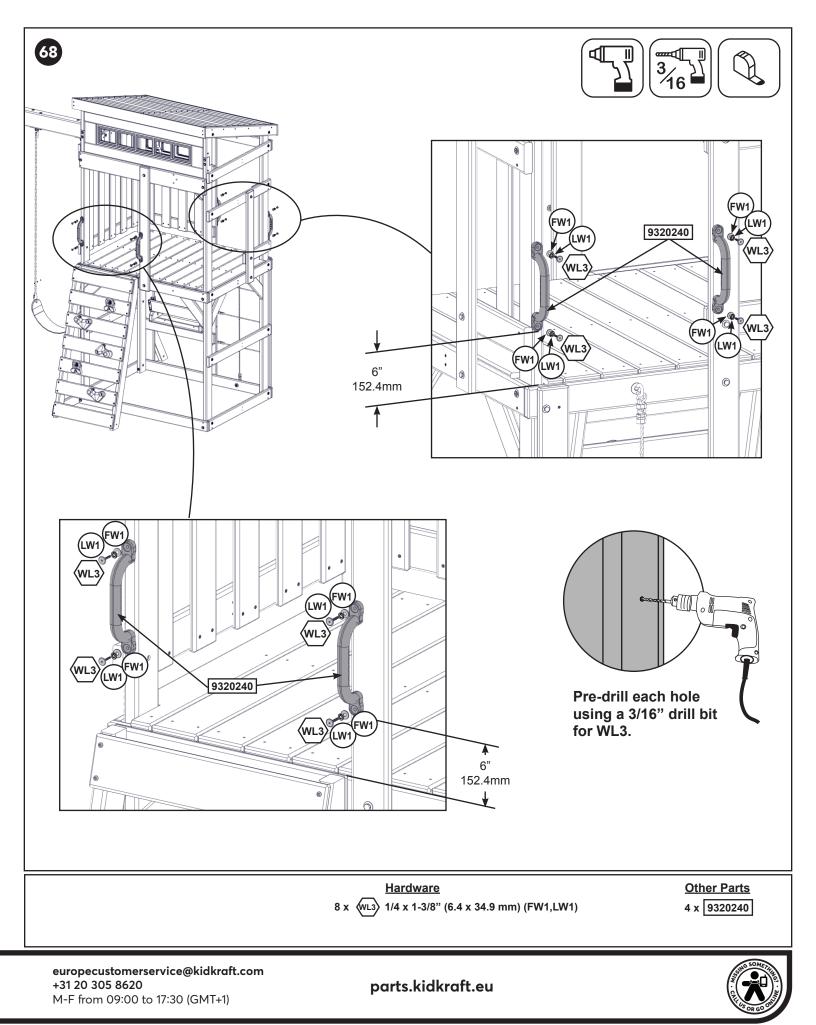


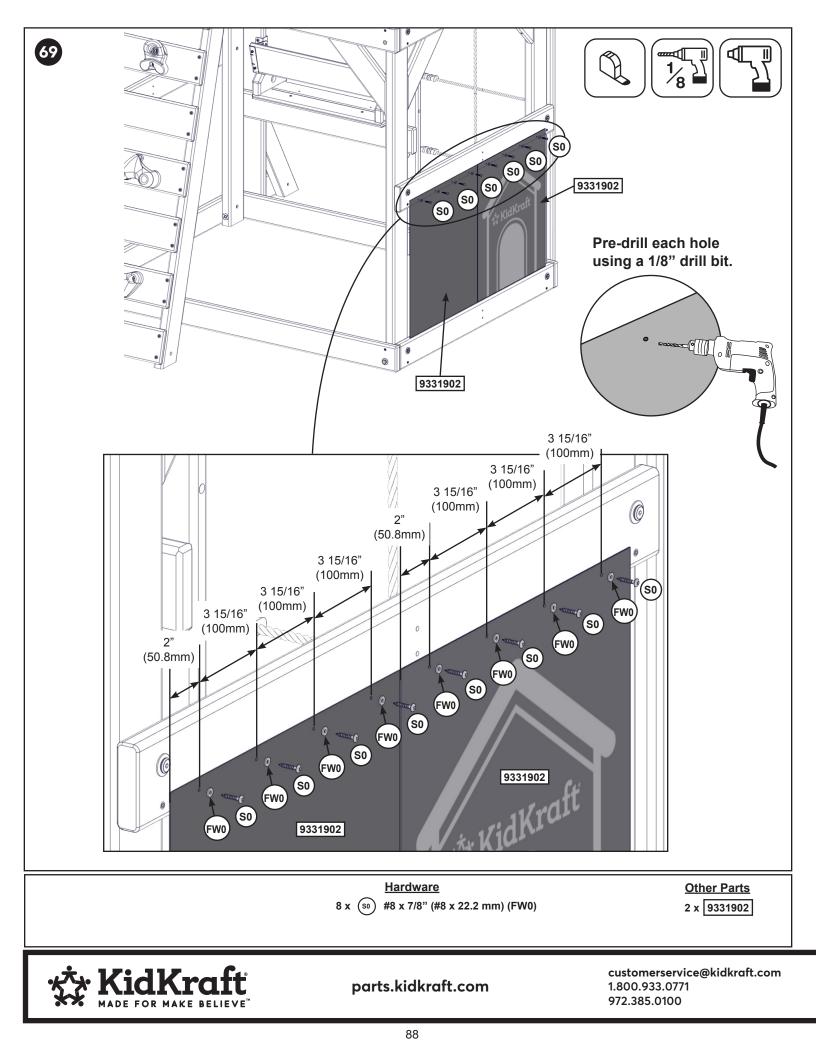


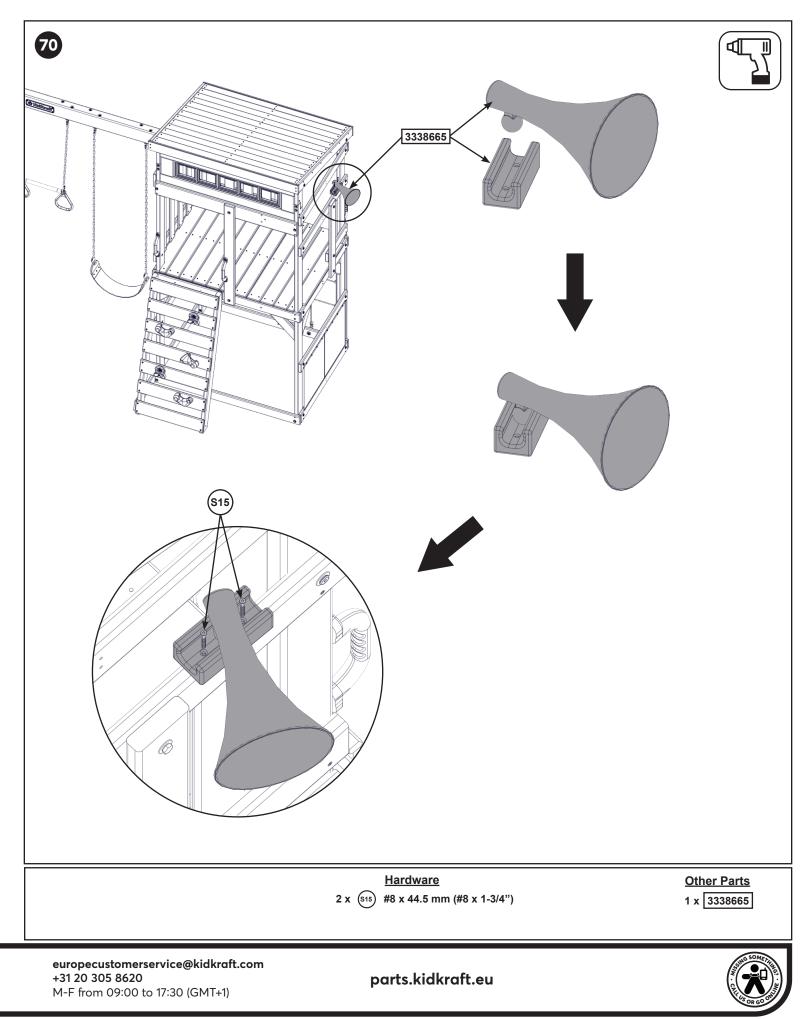

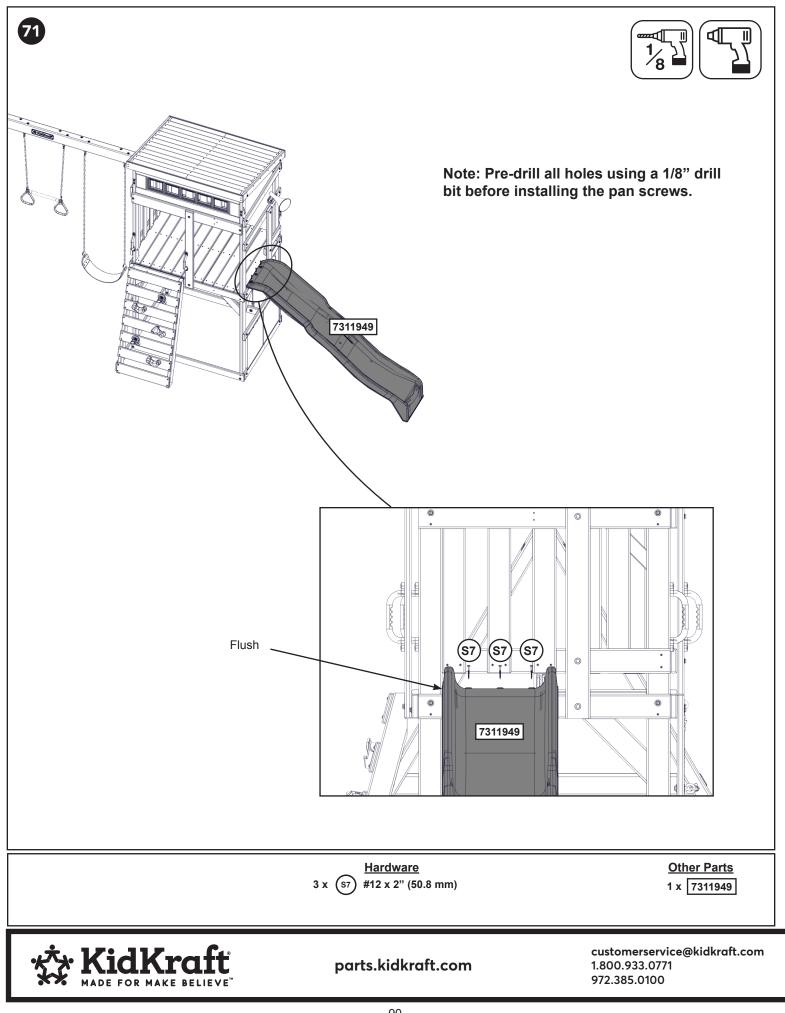

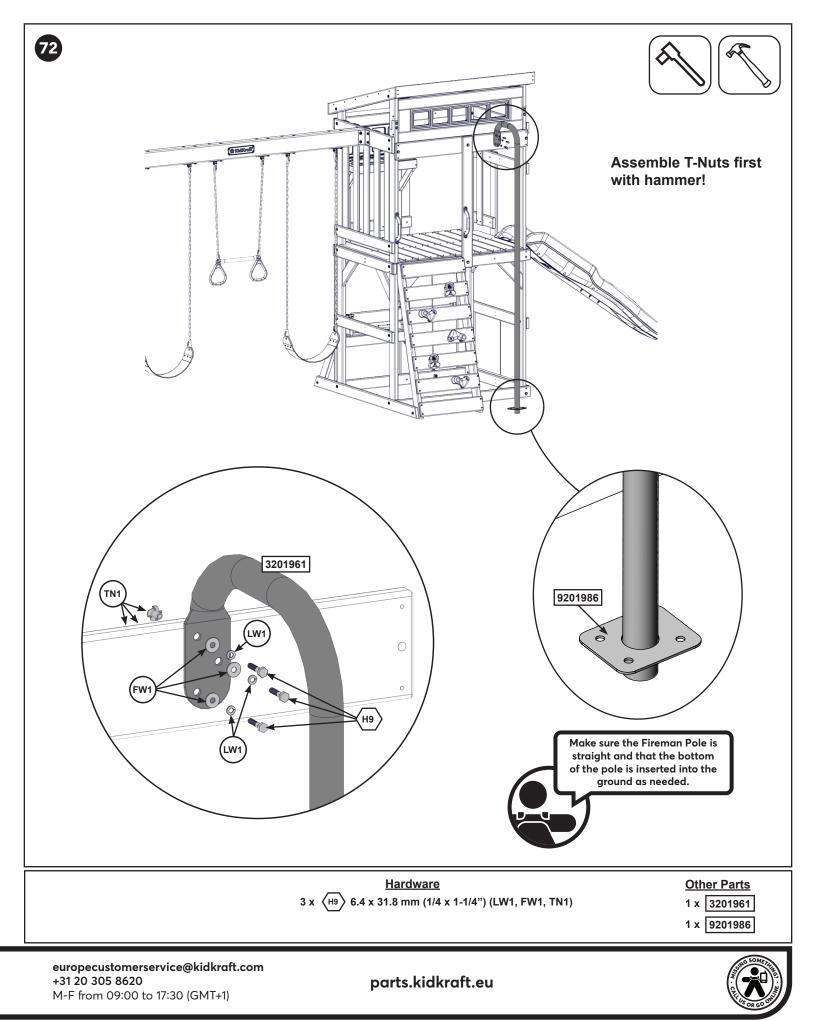


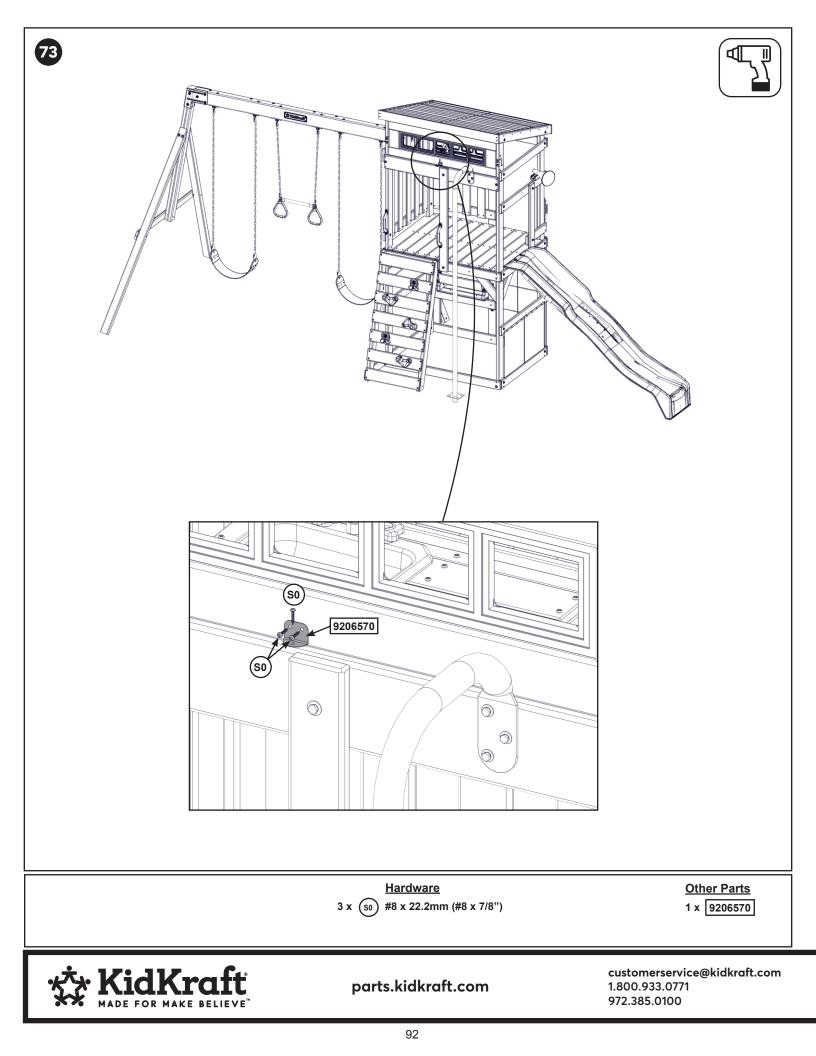


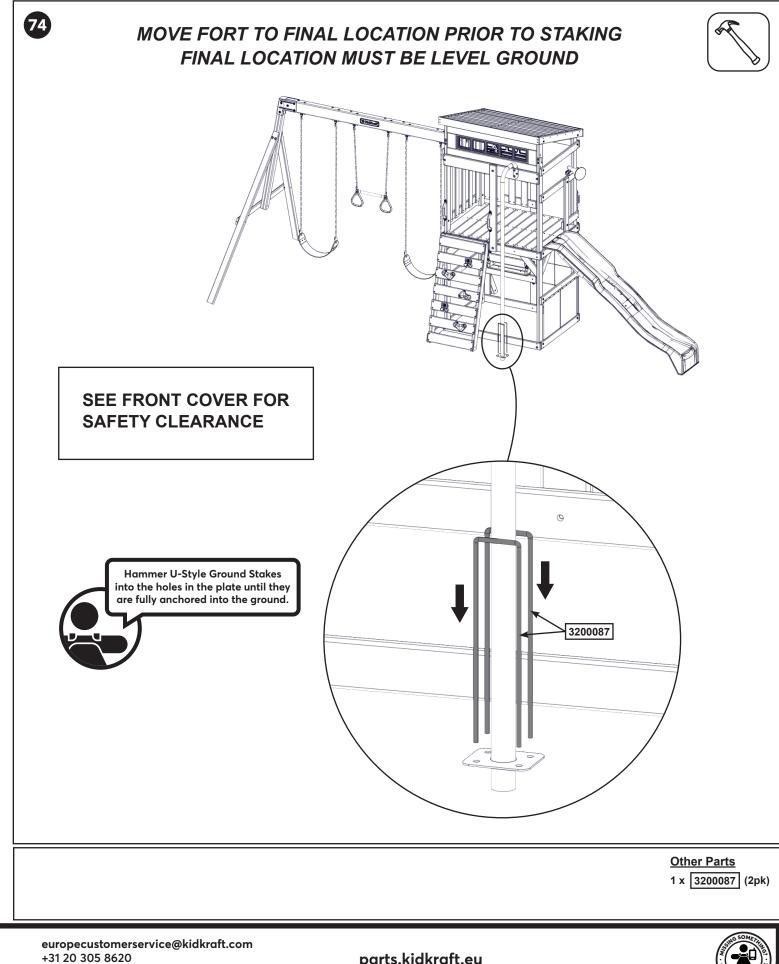

M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

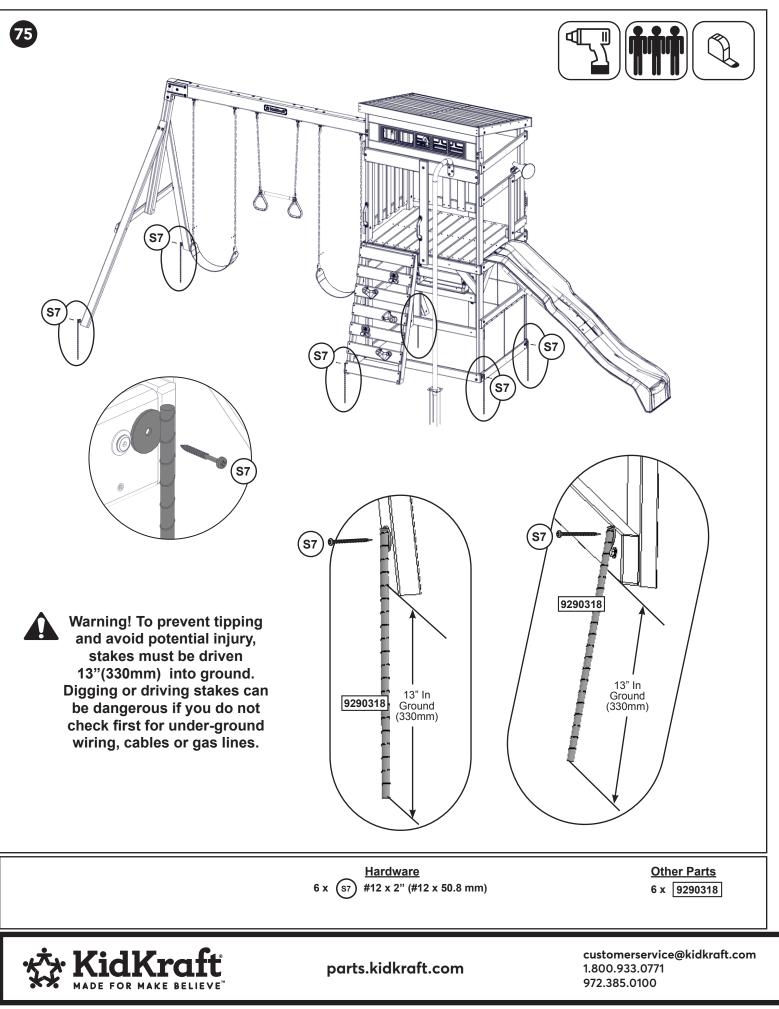

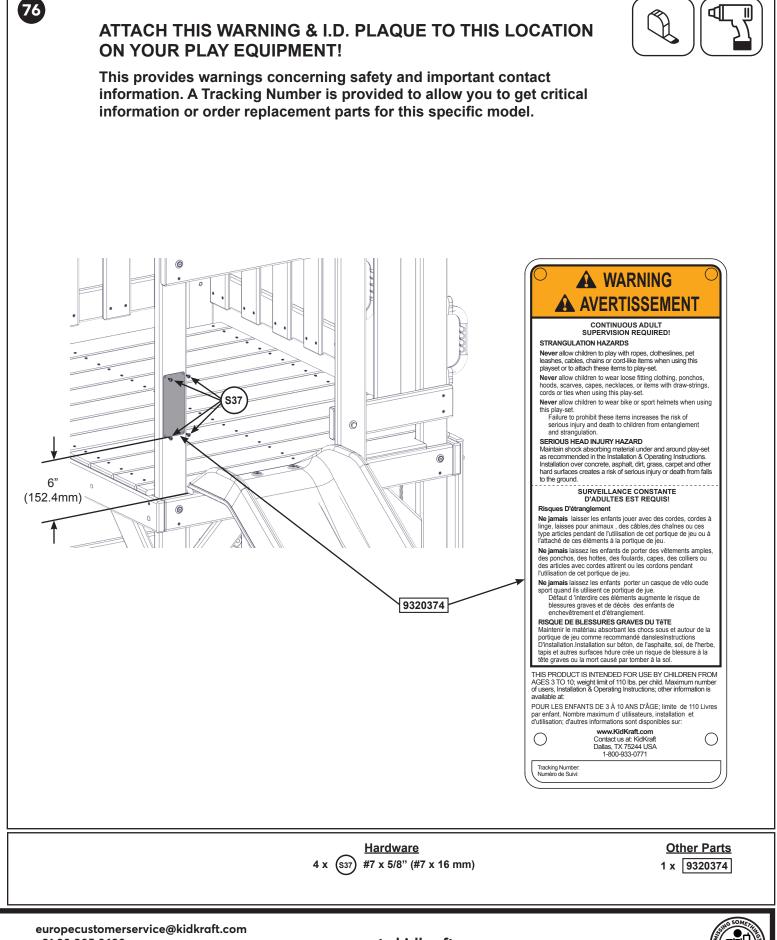

europecustomerservice@kidkraft.cc +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu

KIDKRAFT Consumer Registration Card

First Name	Initial	Last Name
Street		Apt. No.
City		State/Province ZIP/Postal Code
Country		Telephone Number
E-Mail Address		
Model Name		Model Number (Box Labels)
Serial Number (on ID Plaque)		
Date Purchase Purchased From		
How would you rate this product for quality?		erage 🛛 Below Average 💭 Poor
How would you rate this product for ease of asse	mbly?	erage 🛛 Below Average 💭 Poor
How would you rate our instructions?		erage 🛛 Below Average 💭 Poor
How would you rate the quality of packaging?	Ave	erage 🛛 Below Average 💭 Poor
Would you recommend the purchase of our products to friends and family?		
Comments:		



KidKraft 4630 Olin Road Dallas, TX 75244 United States Attention: Customer Service

MAIL TO:

Fill out your registration card online at https://prdregistration.kidkraft.com/

CUT ALONG LINE

KidKraft would like to say Thank You for your time and feedback.