 


DISNEY PRINCESS DANCE & DREAM DOLLHOUSE
MAISON DE POUPEE DISNEY PRINCESS DANCE & DREAM
CASA DE MUÑECAS DISNEY PRINCESS DANCE & DREAM

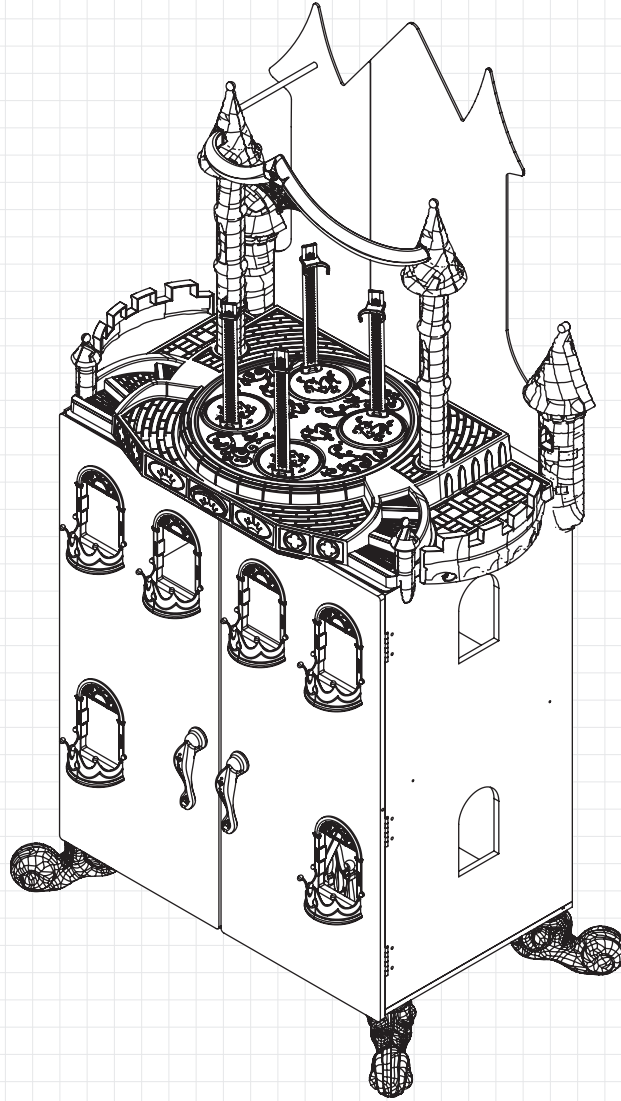

CALL US OR GO ONLINE
APPELEZ-NOUS OU ALLEZ EN LIGNE
LLÁMENOS O VISITE NUESTRO SITIO WEB



REV 06/24/2021

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE / INSTRUCCIONES DE MONTAJE

**FOR 24/7 ONLINE PARTS REPLACEMENT / POUR LE
REPLACEMENT 24/7 DES PIÈCES EN LIGNE / PARA SOLICITUDES
ONLINE DE PIEZAS DE REPUESTO DE MANERA ININTERRUMPIDA**

parts.kidkraft.com

KidKraft, Inc.
4630 Olin Road
Dallas, Texas 75244
USA

customerservice@kidkraft.com

1.800.933.0771
972.385.0100

parts.kidkraft.eu

KidKraft Netherlands BV
Olympisch Stadion 8
1076 DE Amsterdam
The Netherlands

europecustomerservice@kidkraft.com

 
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)

BATCH CODE / CODE DE LOT / CÓDIGO DE LOTE

We do our very best to ensure accuracy in every order, but occasionally we miss something. That's why our warranty covers every single part of your new product for 90 days after purchase.

Nous faisons de notre mieux pour assurer l'exactitude dans chaque commande, mais parfois nous manquons quelque chose. C'est pourquoi notre garantie couvre chaque partie de votre nouveau produit pendant 90 jours après l'achat.

Hacemos nuestro mejor esfuerzo para asegurar la precisión en cada orden, pero a veces se nos olvida algo. Por este motivo, nuestra garantía cubre cada parte de su nuevo producto por los próximos 90 días después de su compra.

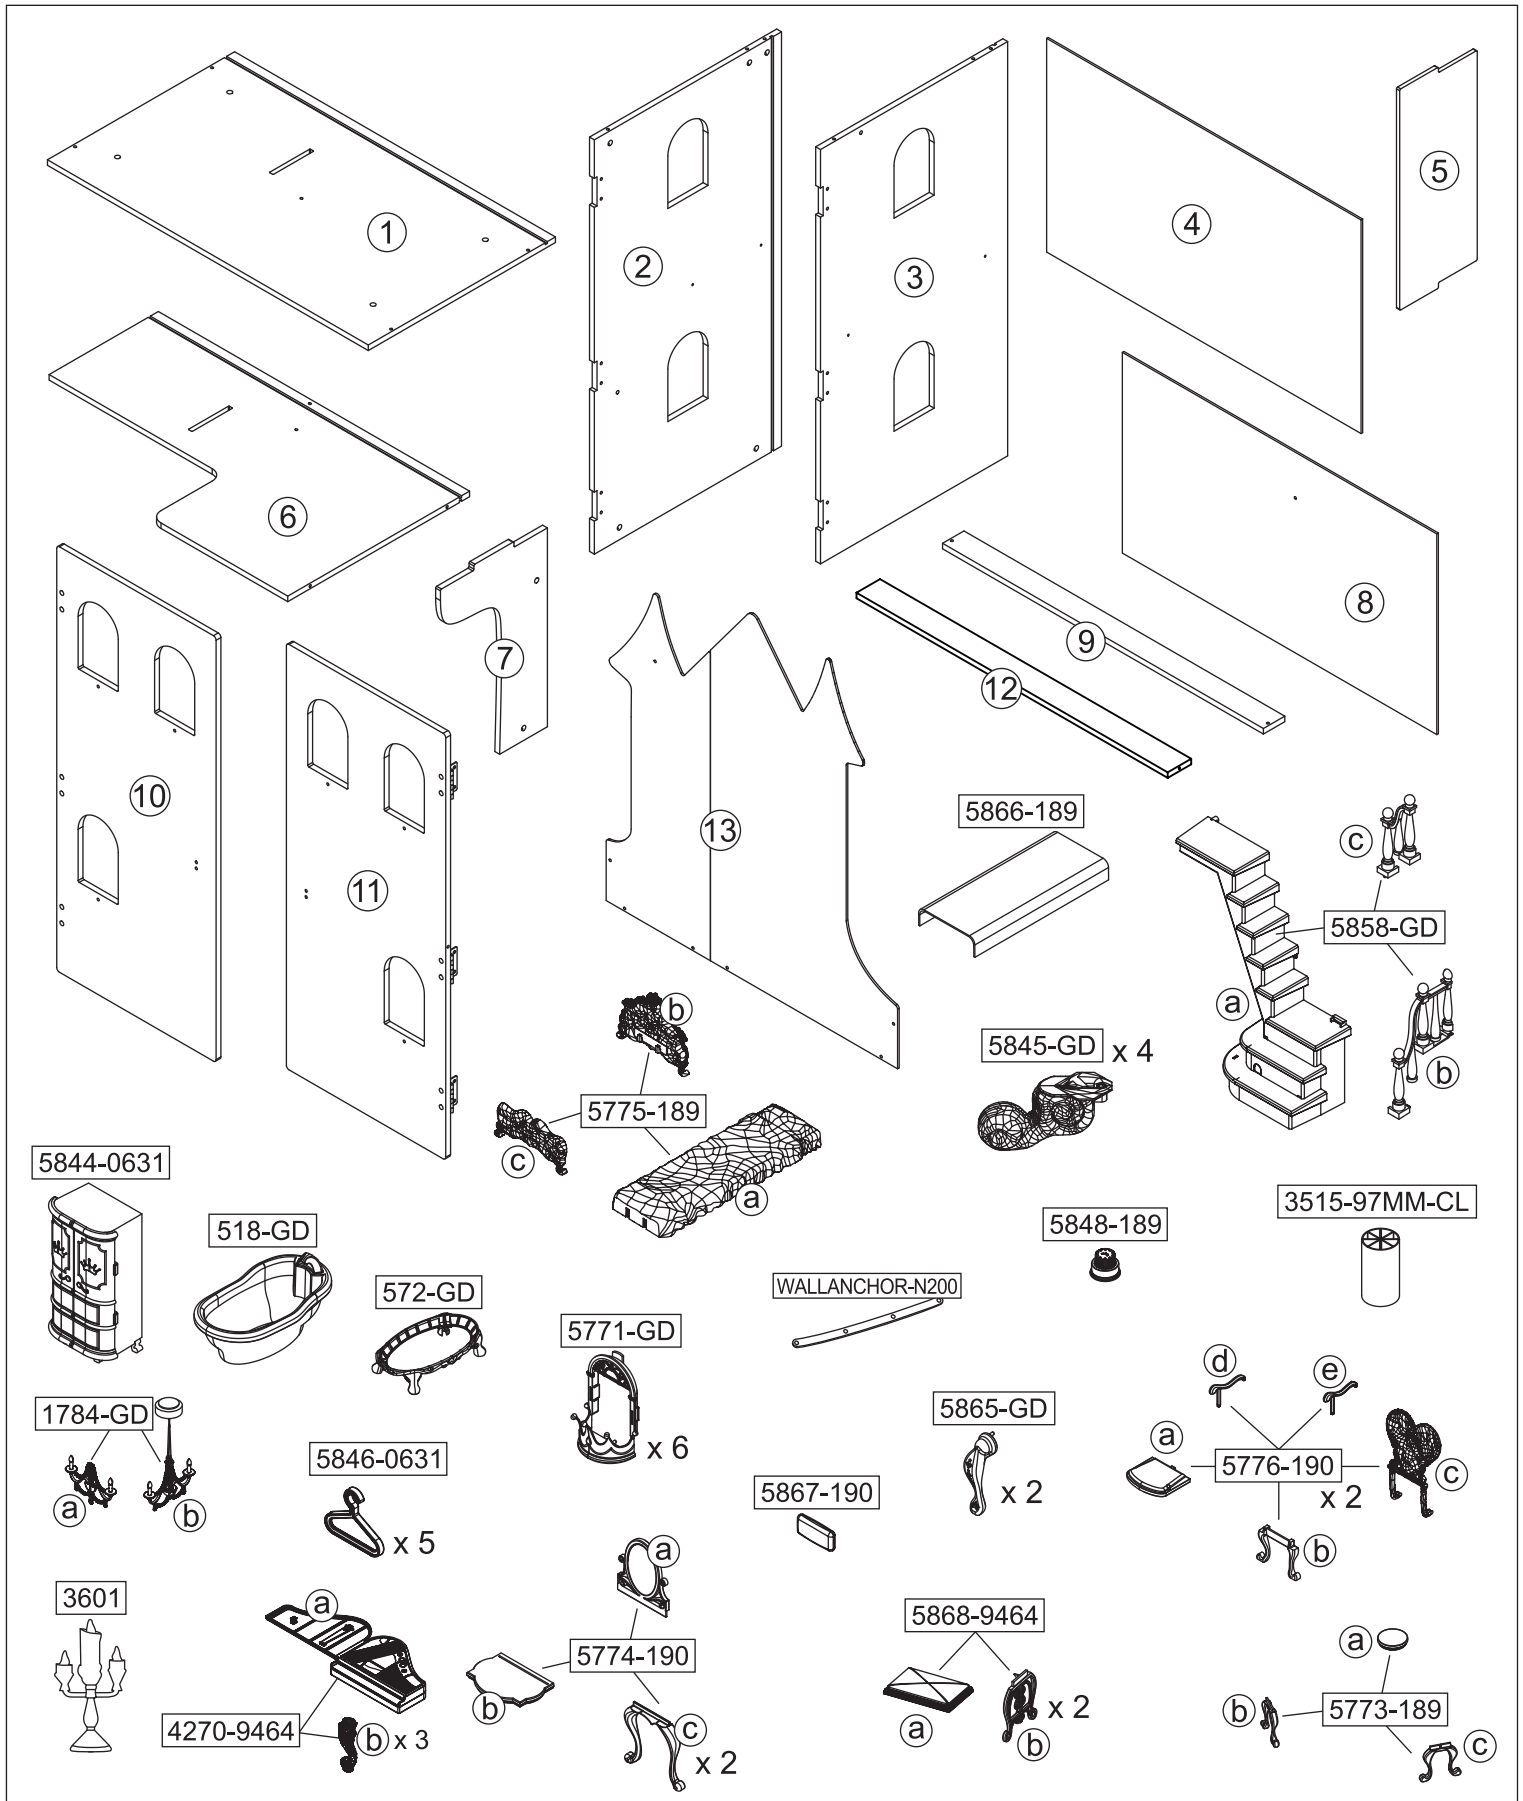 












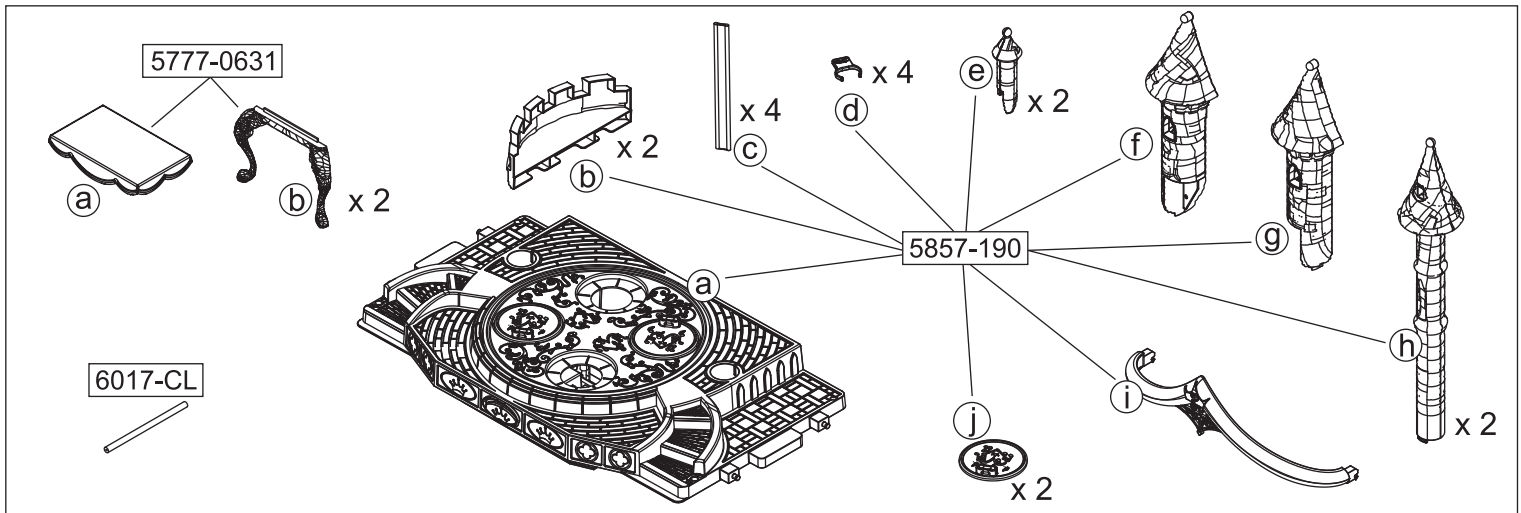



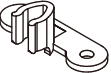

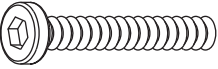
 

Parts and Hardware
Pièces et matériel
Partes y Piezas Para Instalación
Teile und Befestigungsmaterial
Parti e componenti meccanici

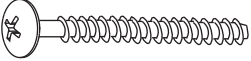

parts.kidkraft.com

customerservice@kidkraft.com
 1.800.933.0771
 972.385.0100

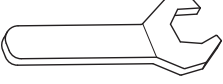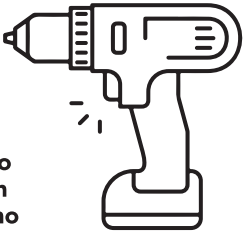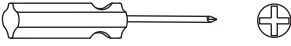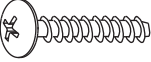

A	x 20	F	x 12	K	x 1	x 1
	39 mm		15 mm		22 mm	
B	x 8	G	x 13	L	x 1	x 1
	22 mm				35 mm	
C	x 1	H	x 5	M	x 1	<p>Tool required: Outils requis : Herramientas necesarias: Benötigtes Werkzeug: Attrezzi necessari:</p>  <p>Drill Perceur Taladro Bohren Trapano</p>  <p>Or Phillips® screwdriver Ou tournevis cruciforme O destornillador Phillips® Oder Phillips® Schraubenzieher Oppure cacciavite Phillips®</p>
	16 mm		30 mm			
D	x 9	I	x 2	N	x 2	
	8 mm					
E	x 5	J	x 2	O	x 1	
	27 mm					

Parts and Hardware
Pièces et matériel
Partes y Piezas Para Instalación
Teile und Befestigungsmaterial
Parti e componenti meccanici

 
All hardware dimensions are approximate.
Toutes les dimensions du matériel
sont approximatives.
Todas las dimensiones de las herramientas
son aproximaciones.

europcustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu



1


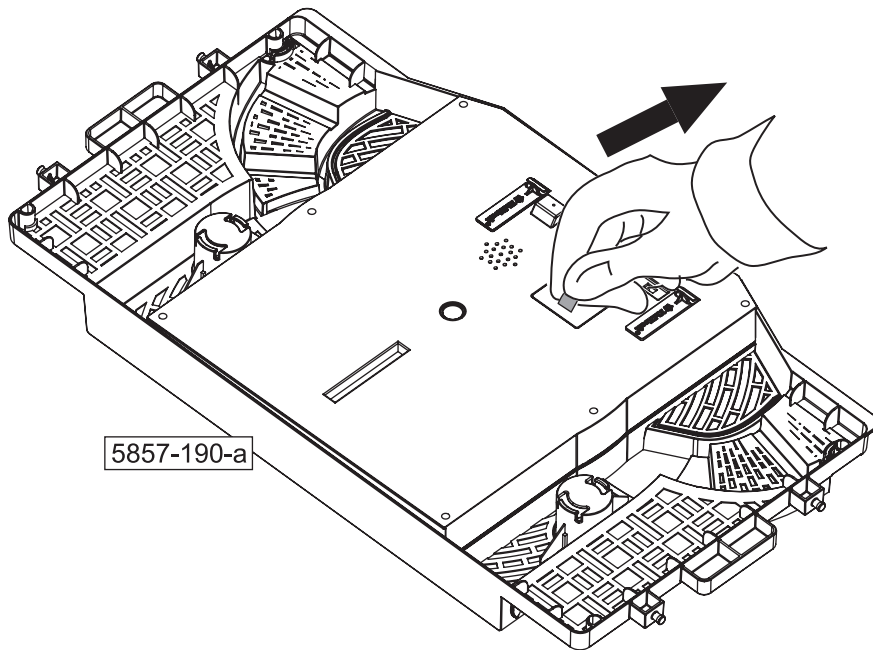


2

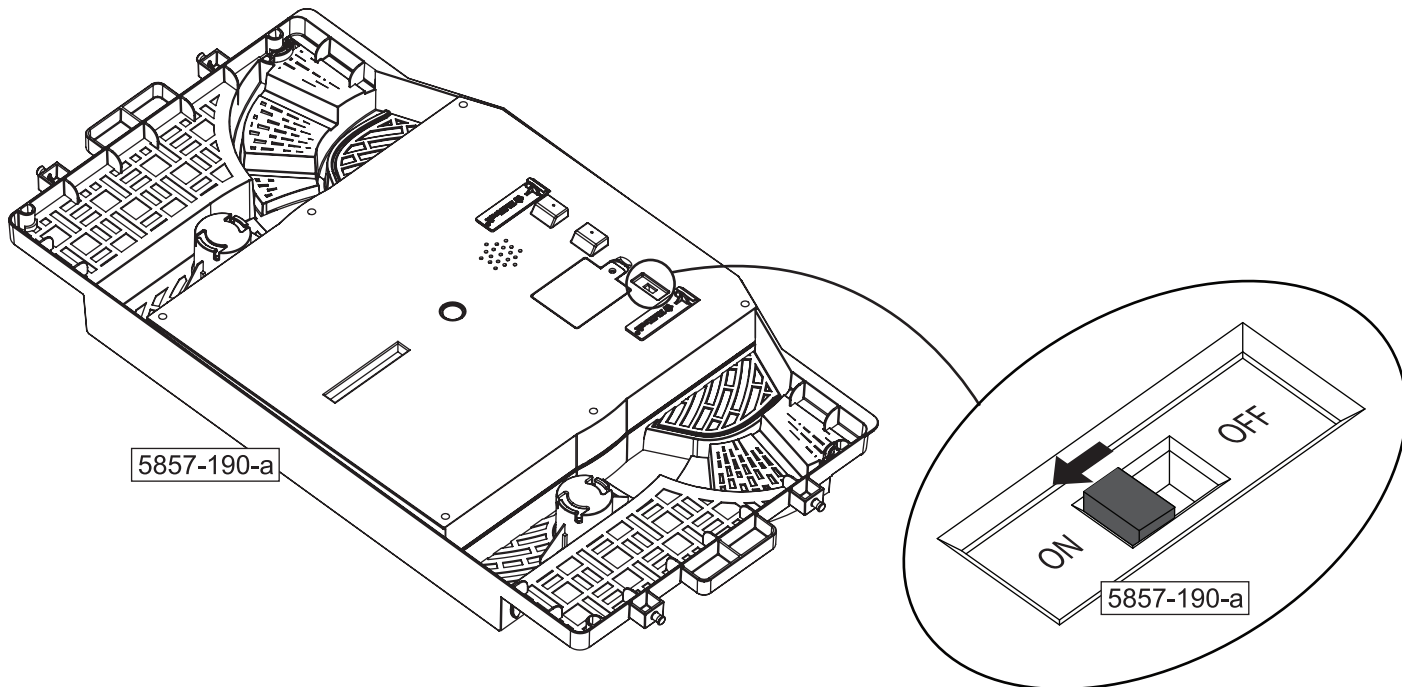 


3

  Test the electronics before proceeding with assembly. If you have any issues, please contact customer service.
 Tester les pièces électroniques avant de procéder à l'assemblage. Pour tout problème, veuillez contacter le service client.
 Prueba los dispositivos electrónicos antes de empezar el montaje. Si tienes algún problema, ponte en contacto con Atención al cliente.
 Testen Sie die Elektronik, bevor Sie mit der Montage fortfahren. Kontaktieren Sie bei Problemen bitte den Kundenservice.
 Testare le parti elettroniche prima di procedere con il montaggio. In caso di problemi, contattare il servizio clienti.

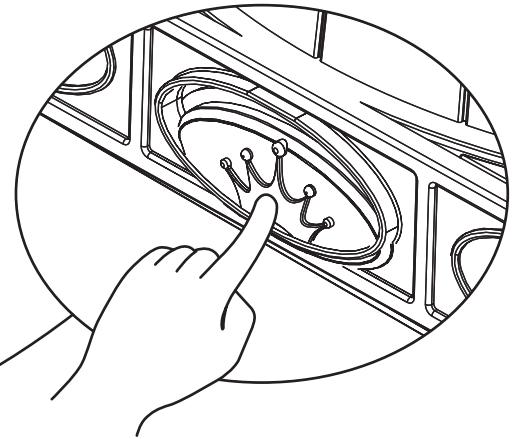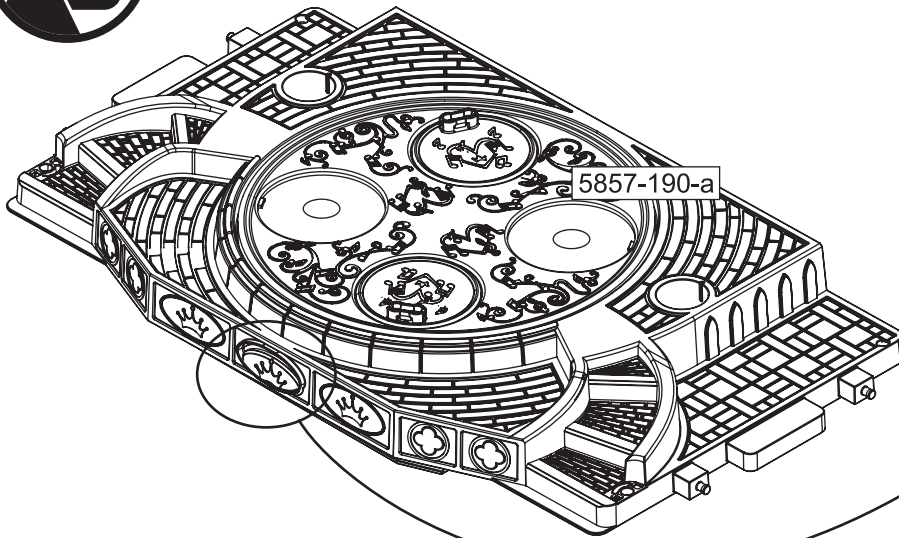

4

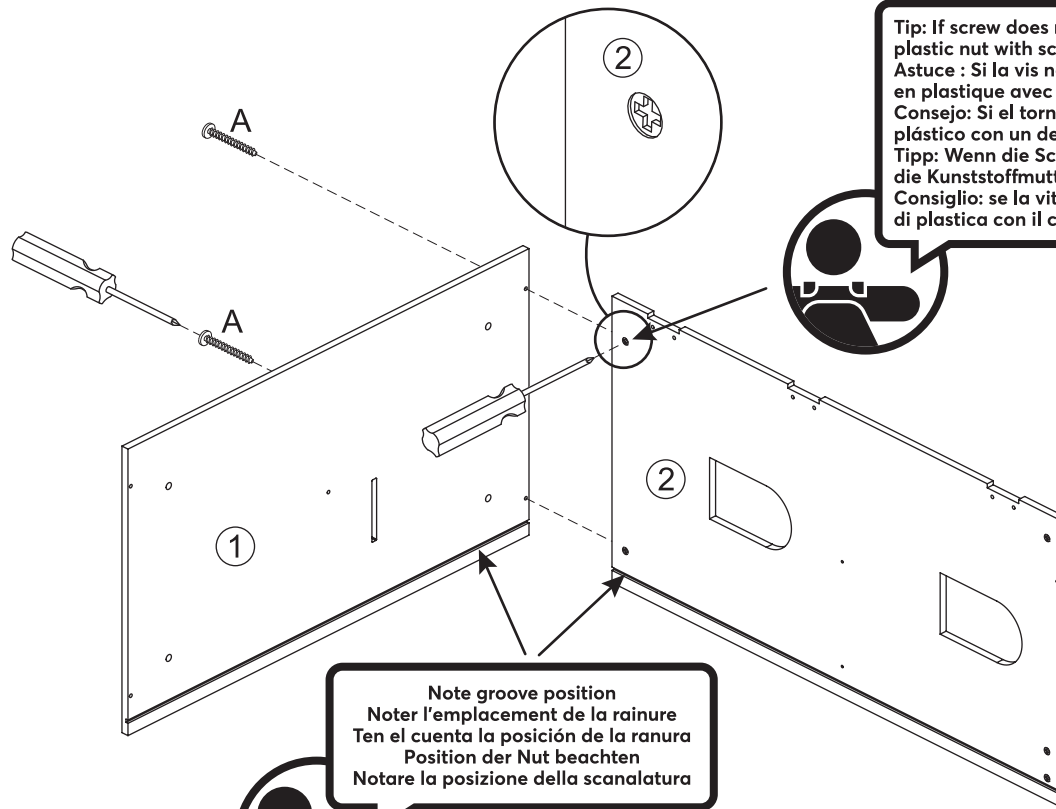 

Tip: If screw does not engage - please rotate plastic nut with screw driver.
 Astuce : Si la vis ne s'engage pas, pivoter l'écrou en plastique avec le tournevis.
 Consejo: Si el tornillo no encaja, gira la tuerca de plástico con un destornillador.
 Tipp: Wenn die Schraube nicht greift, drehen Sie die Kunststoffmutter mit einem Schraubendreher.
 Consiglio: se la vite non fa presa, ruotare il dado di plastica con il cacciavite.



Note groove position
 Noter l'emplacement de la rainure
 Ten el cuenta la posición de la ranura
 Position der Nut beachten
 Notare la posizione della scanalatura



 
europcustomerservice@kidkraft.com
 +31 20 305 8620
 M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu




5

Note groove position
Noter l'emplacement de la rainure
Ten el cuenta la posición de la ranura
Position der Nut beachten
Notare la posizione della scanalatura

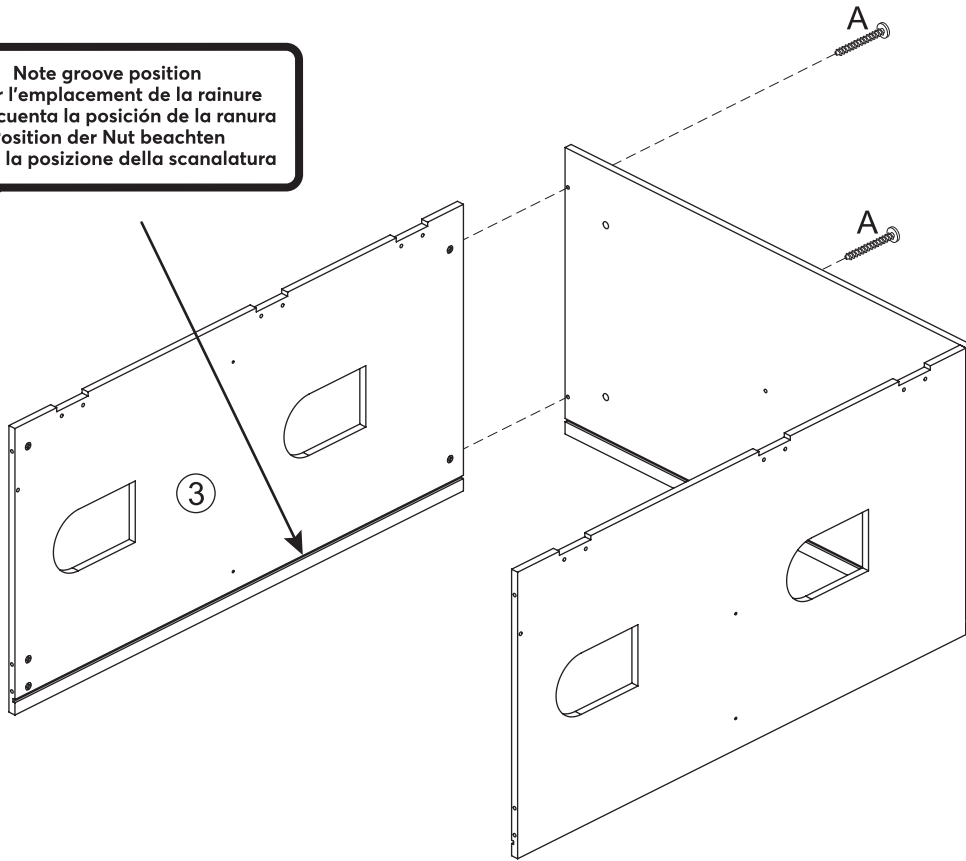

6

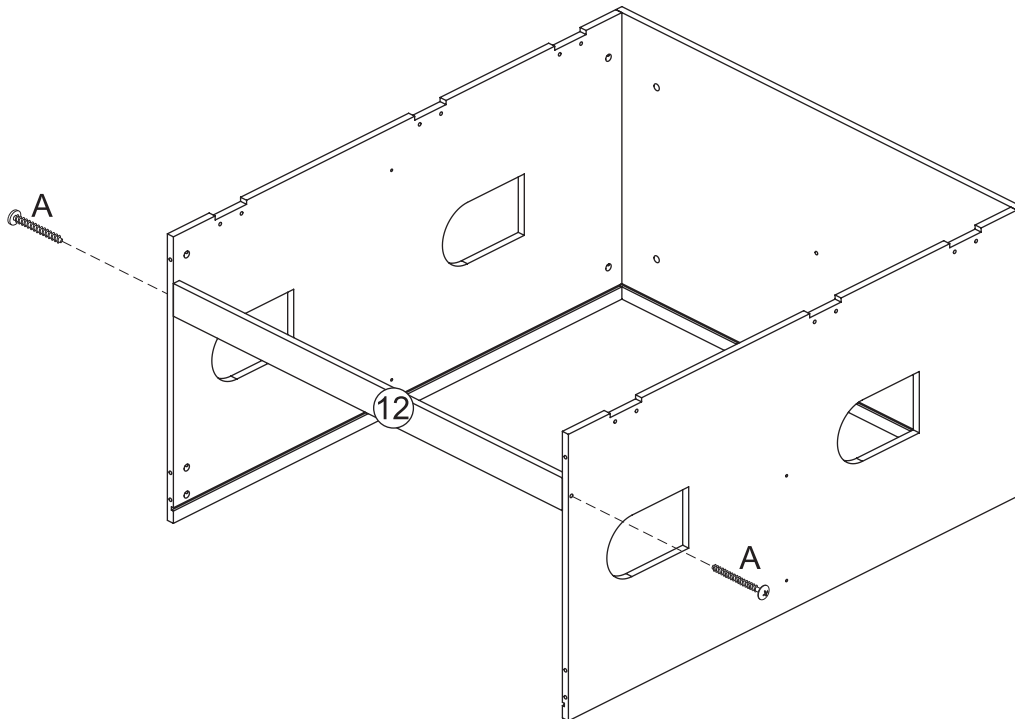 


KidKraft
MADE FOR MAKE BELIEVE™



parts.kidkraft.com

customerservice@kidkraft.com
1.800.933.0771
972.385.0100

 7

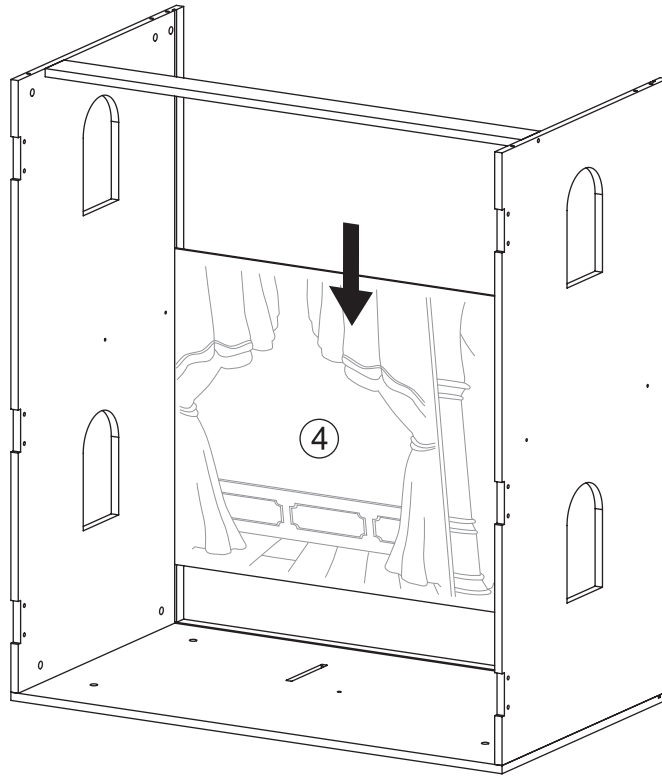


8

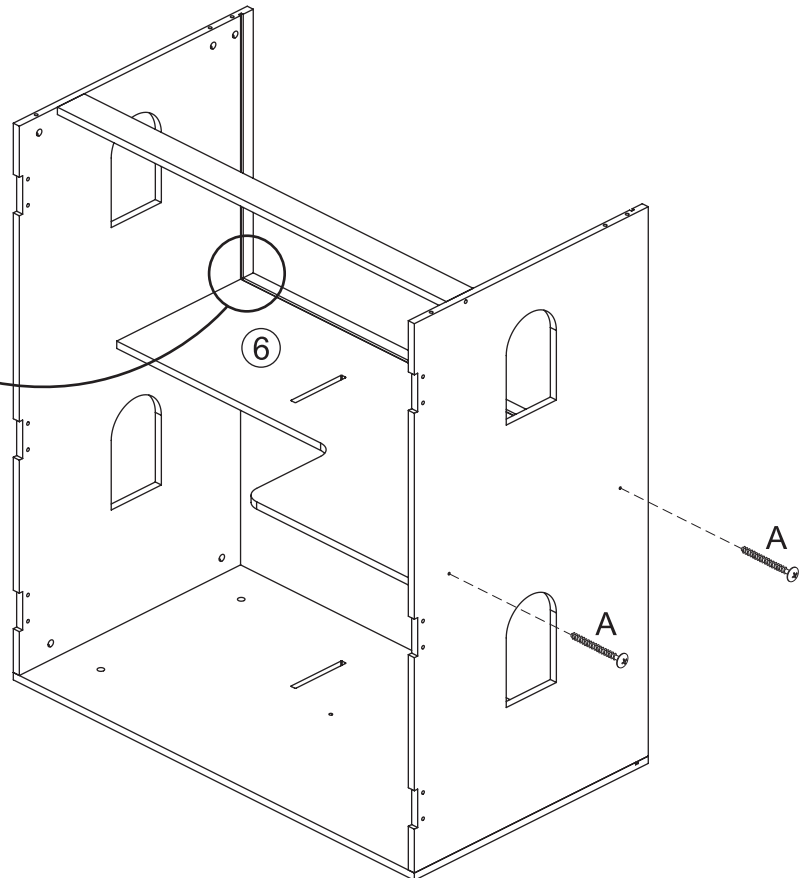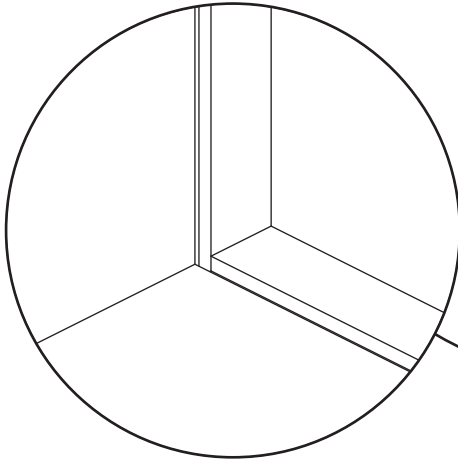  


Make sure the grooves align
Vérifiez le bon alignement des rainures
Asegúrese de que los surcos estén alineados
Die Nuten müssen aneinander ausgerichtet sein
Verificare che le scanalature siano allineate



 
9

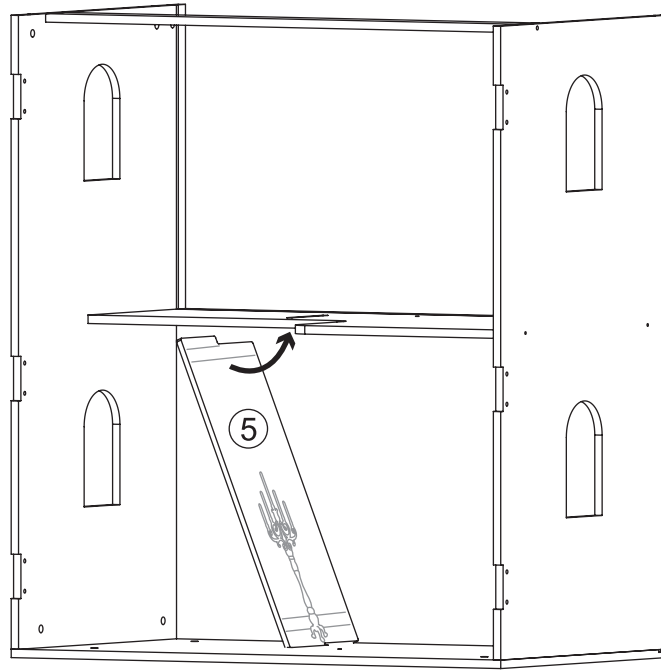


10

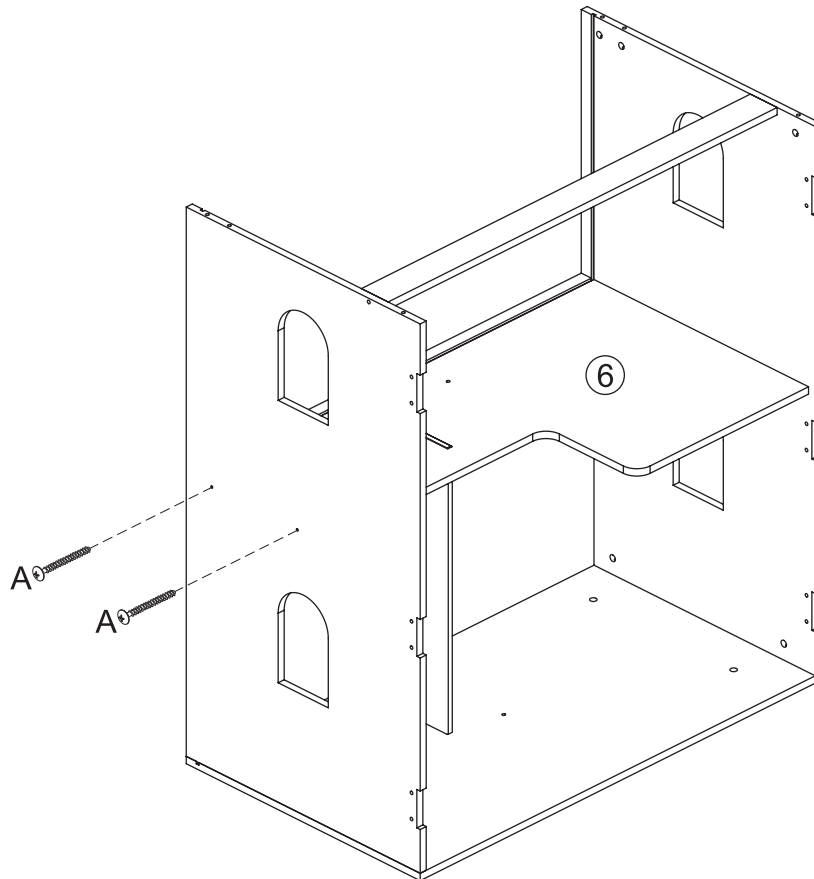 


11

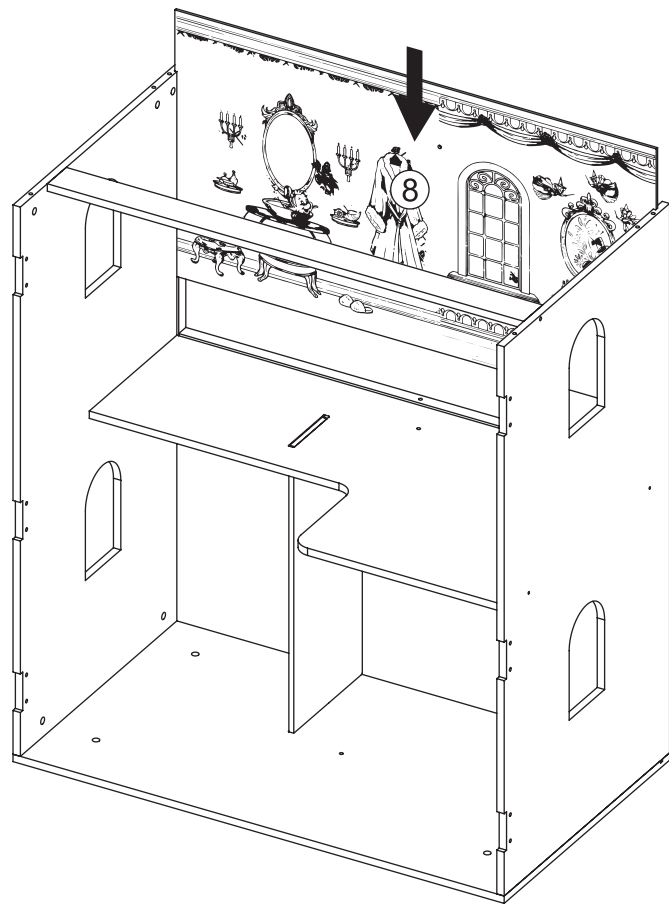 



12

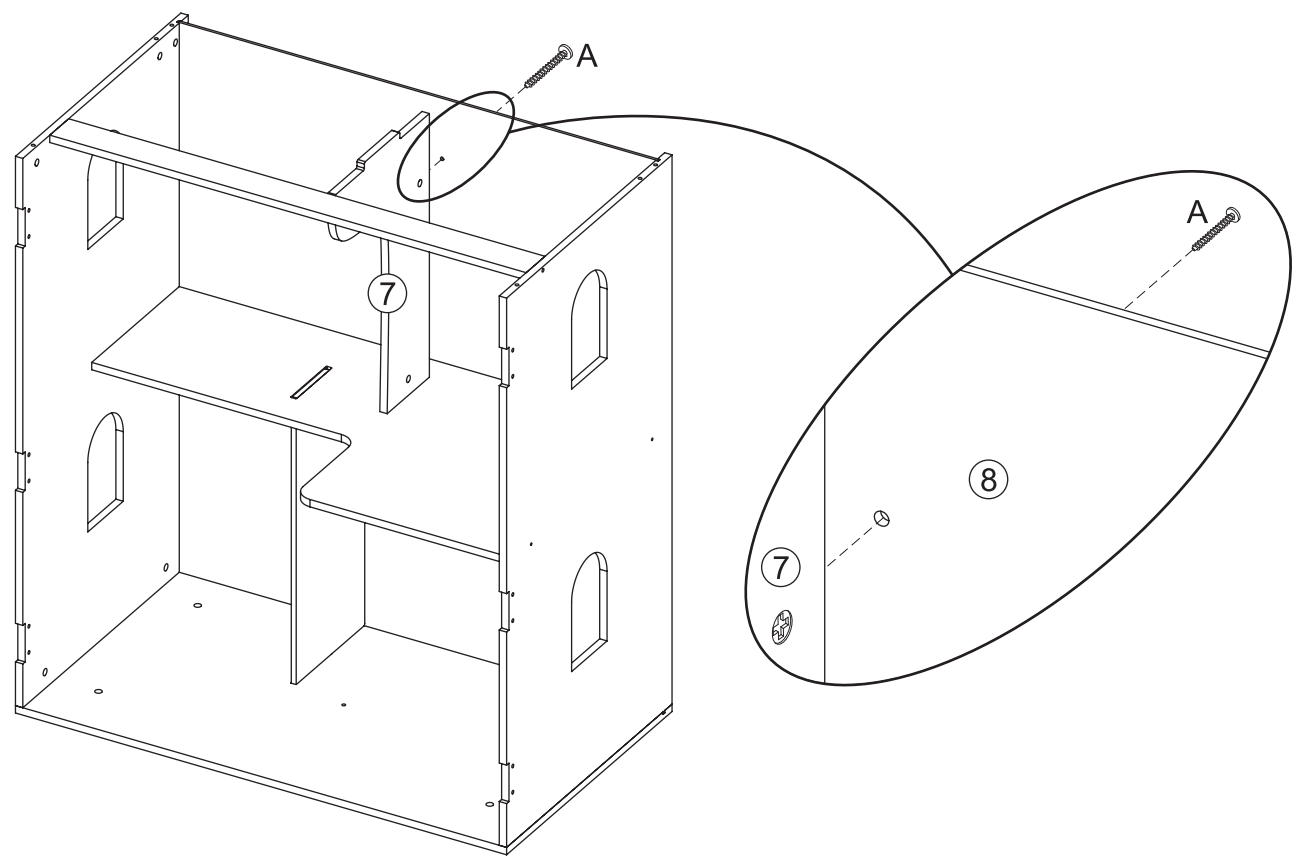 


13

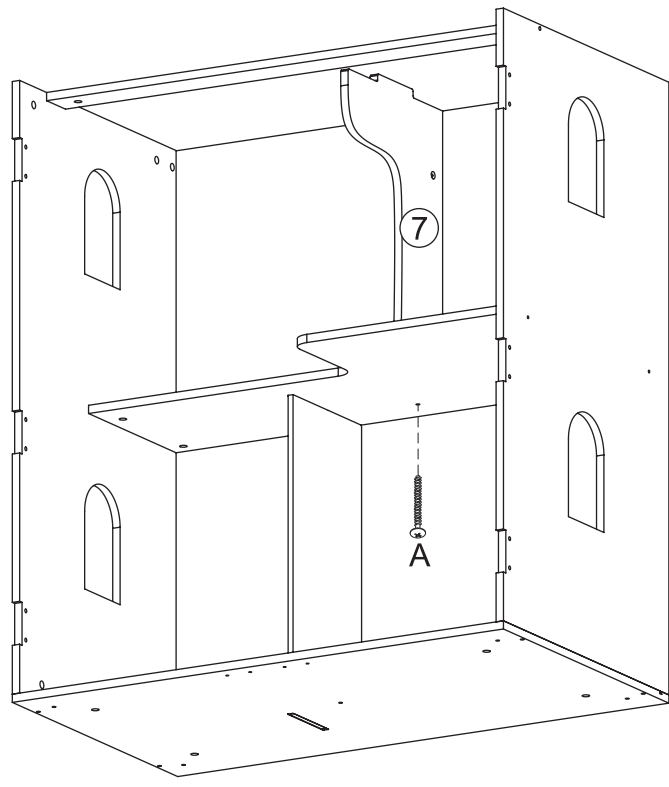 


14

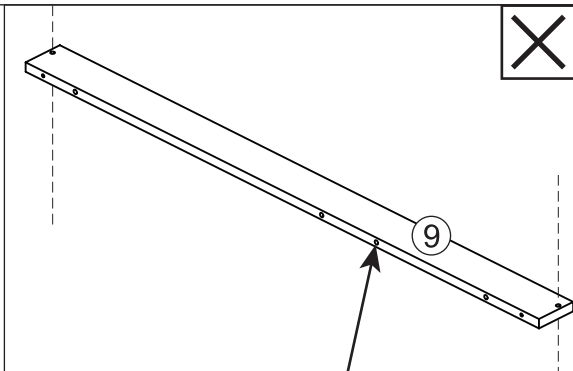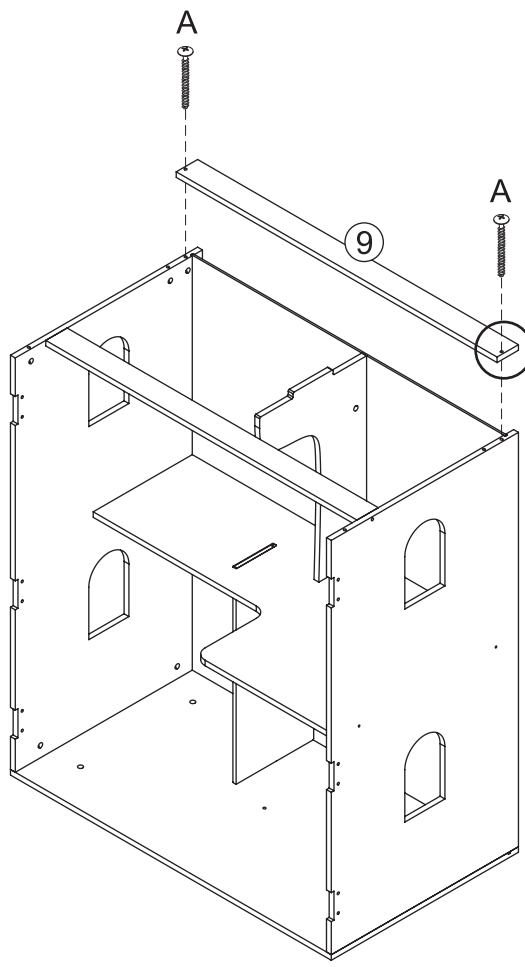  

 
Notice hole orientation
 Faites attention à l'orientation des trous
 Tenga en cuenta la orientación de los orificios
 Ausrichtung der Bohrungen beachten
 Prestare attenzione all'orientamento dei fori






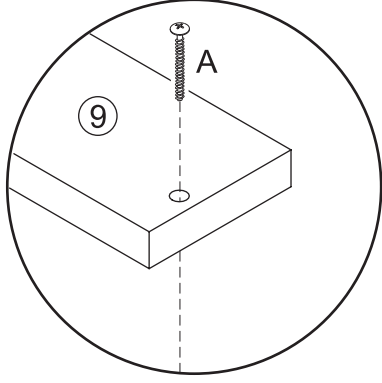


15

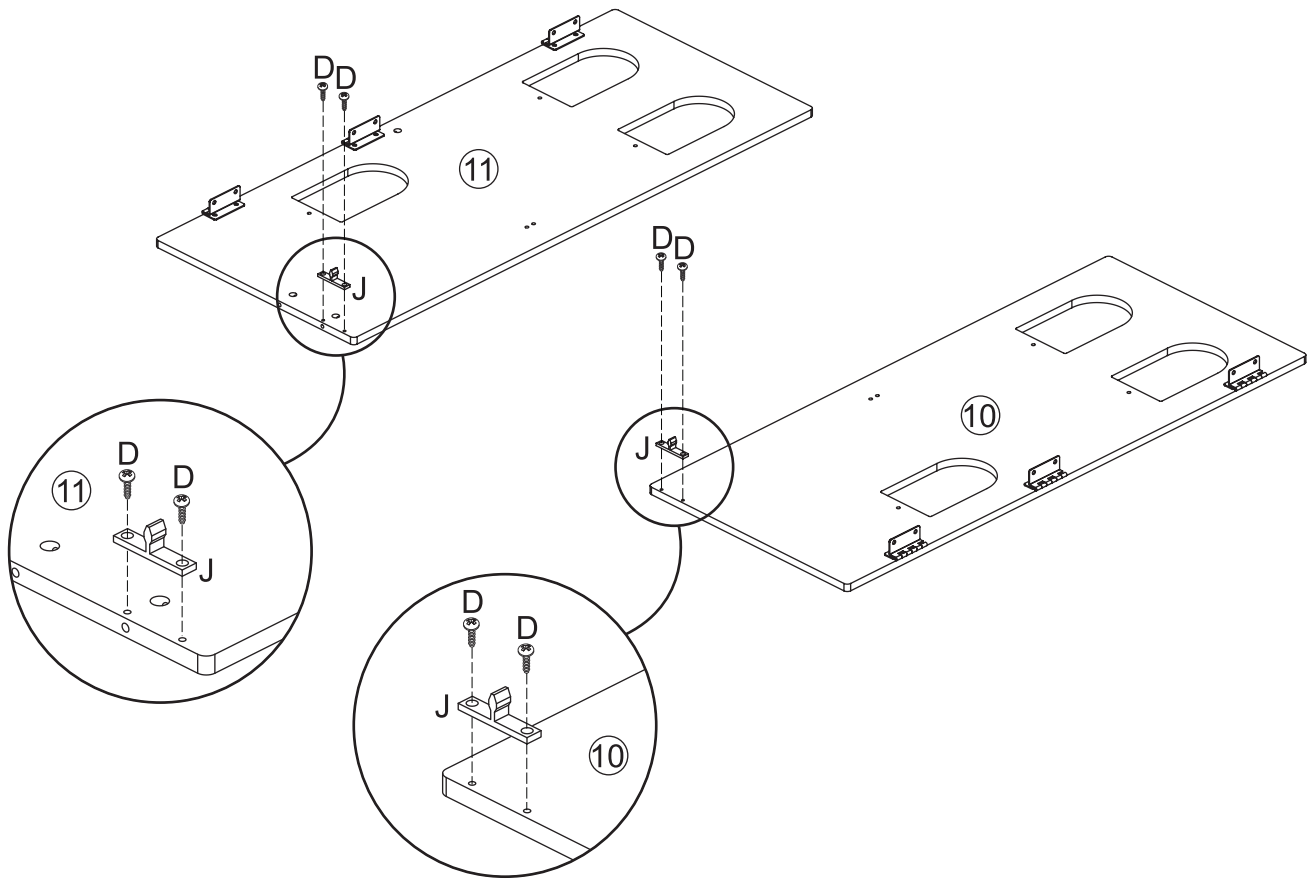 


16

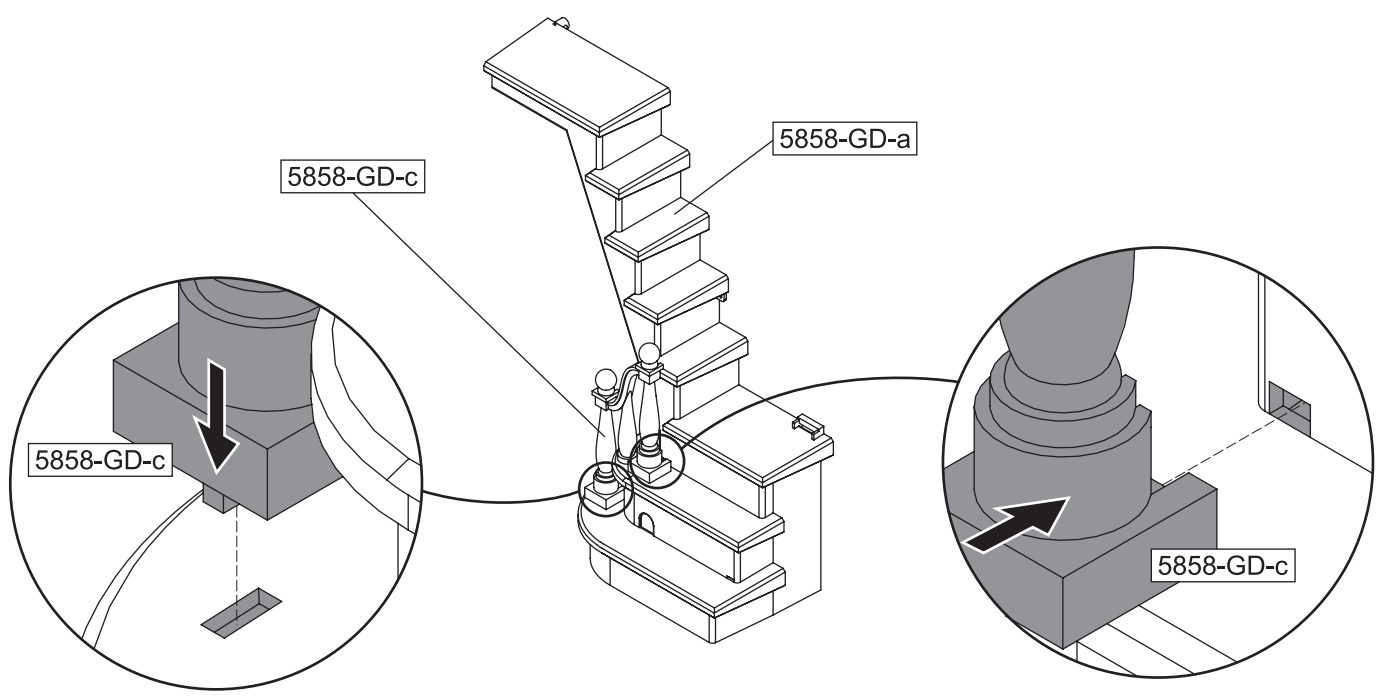 

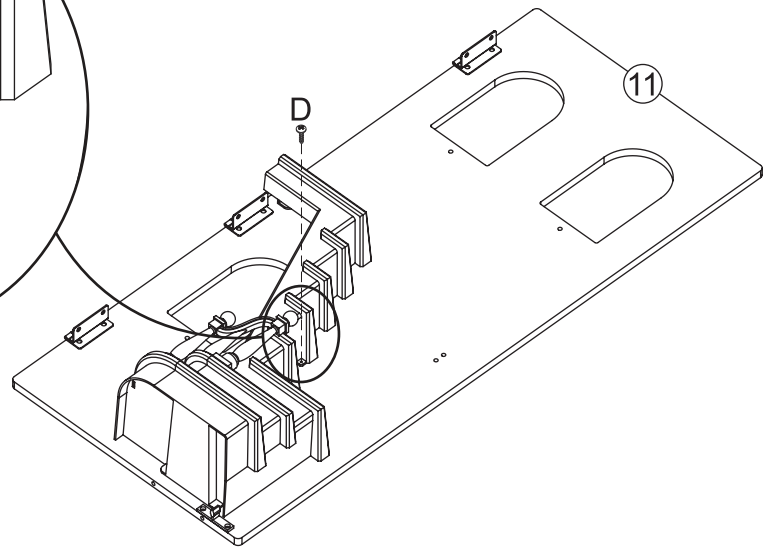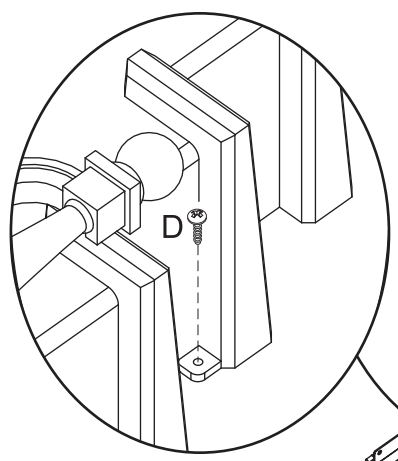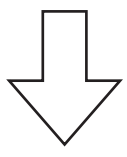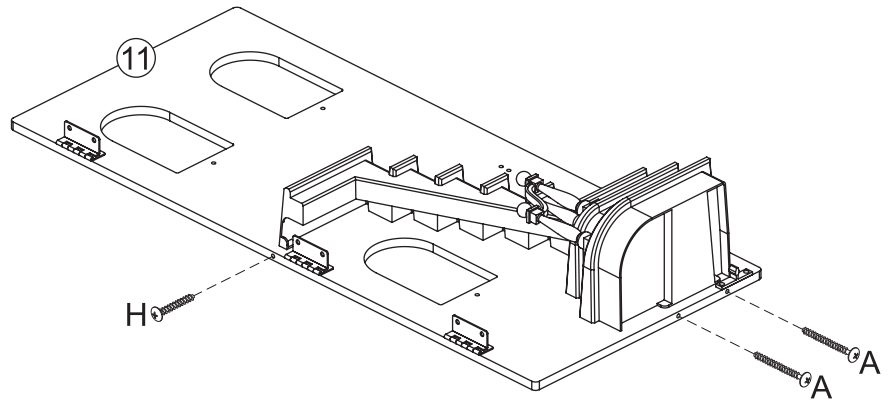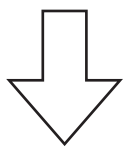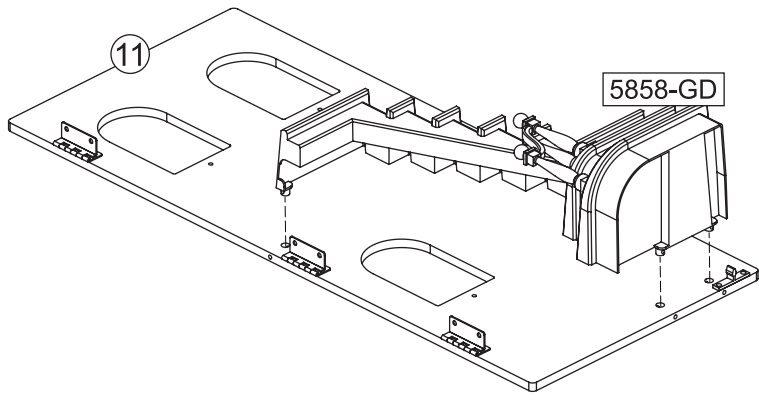      


18

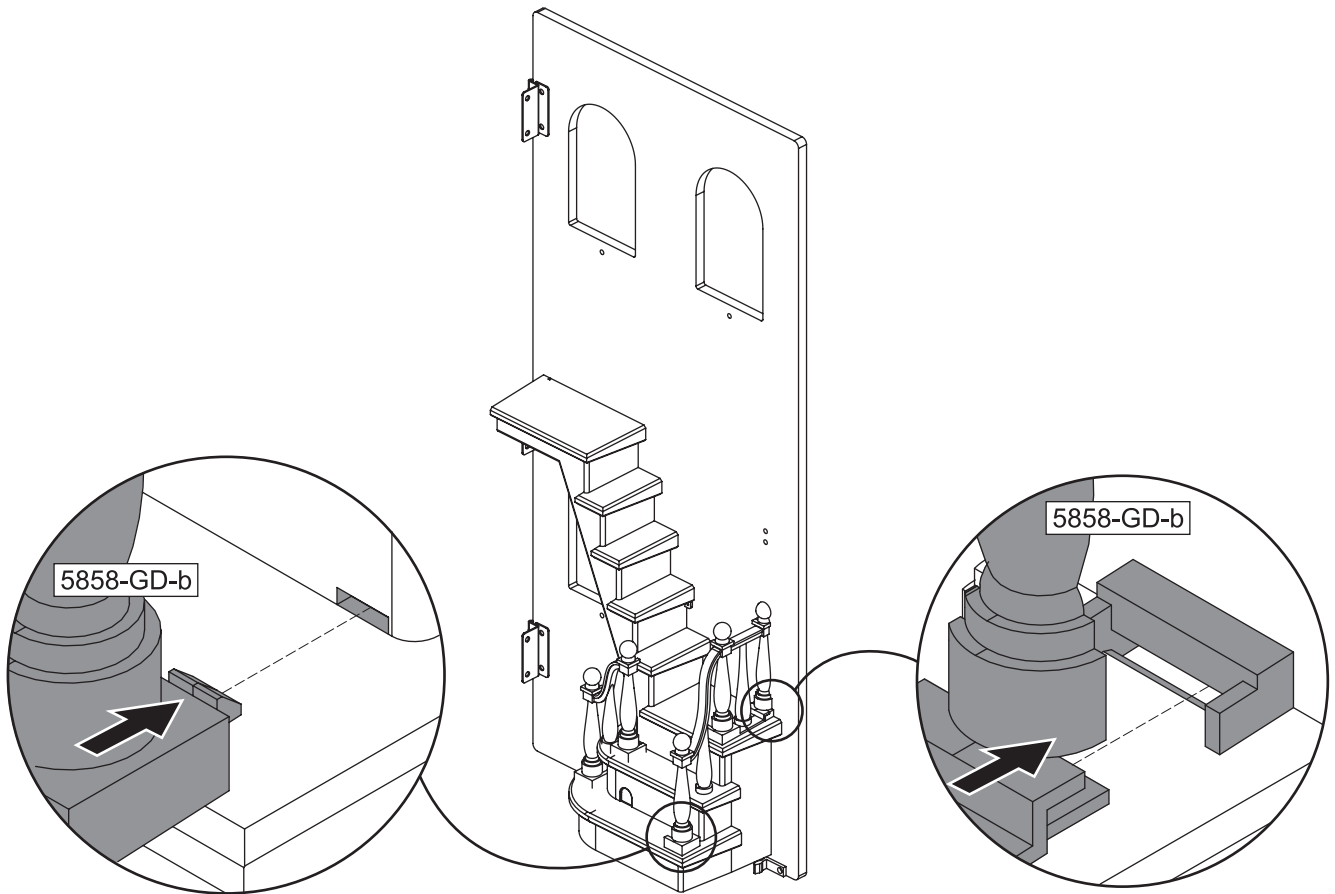 


19

 
Flip the house upside down.
Retournez la maison.
Invierta la posición de la casa.
Drehen Sie das Haus auf den Kopf.
Capovolgere la casa.

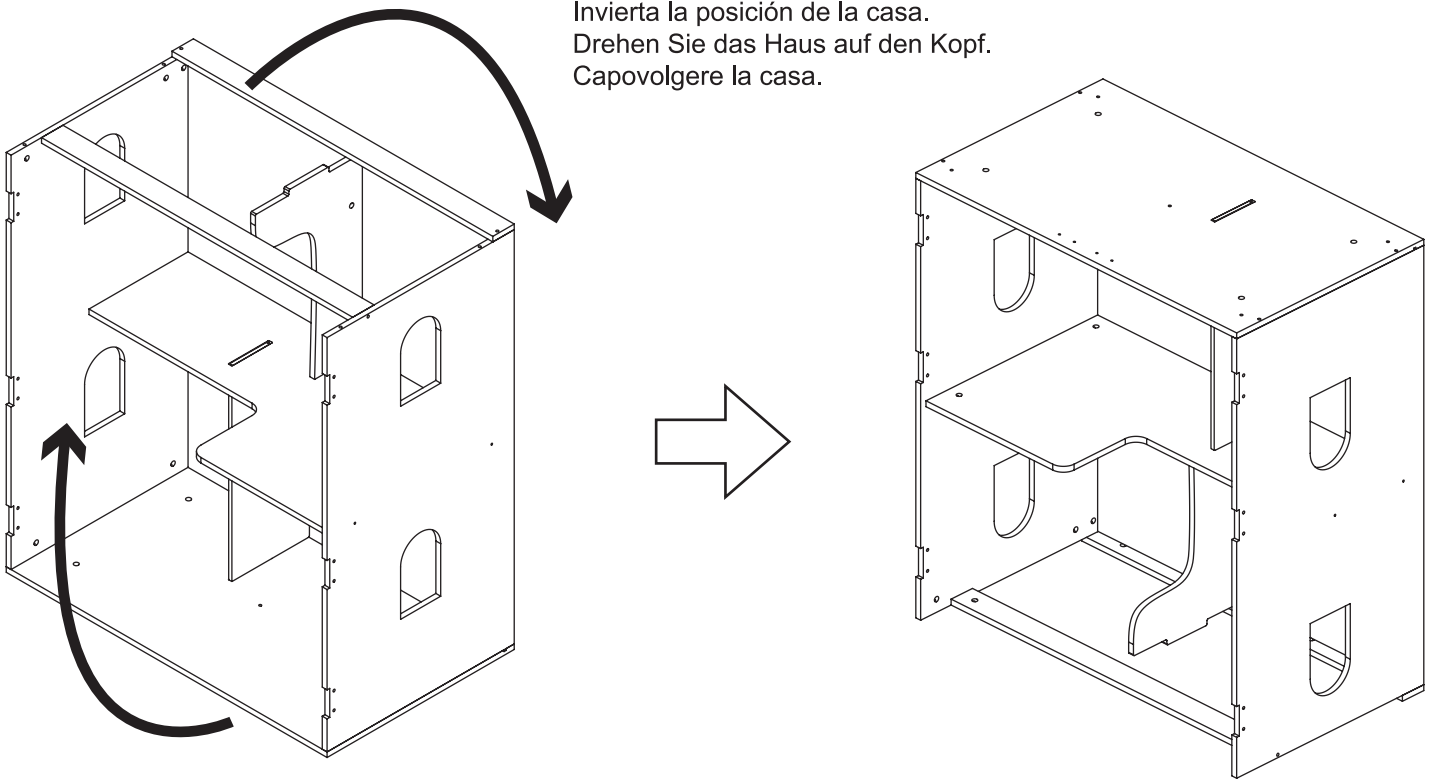


20

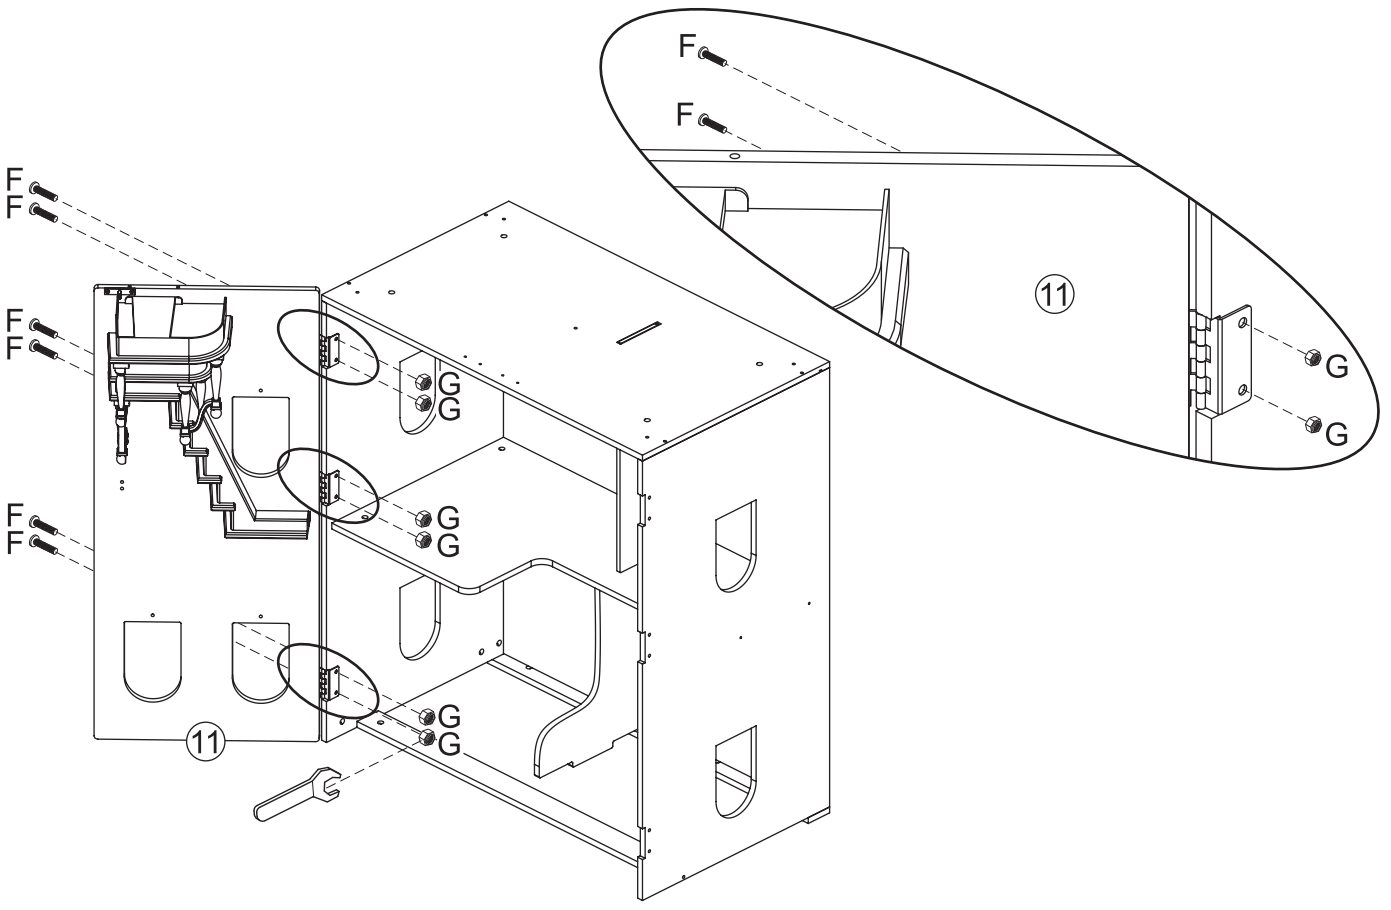 


21

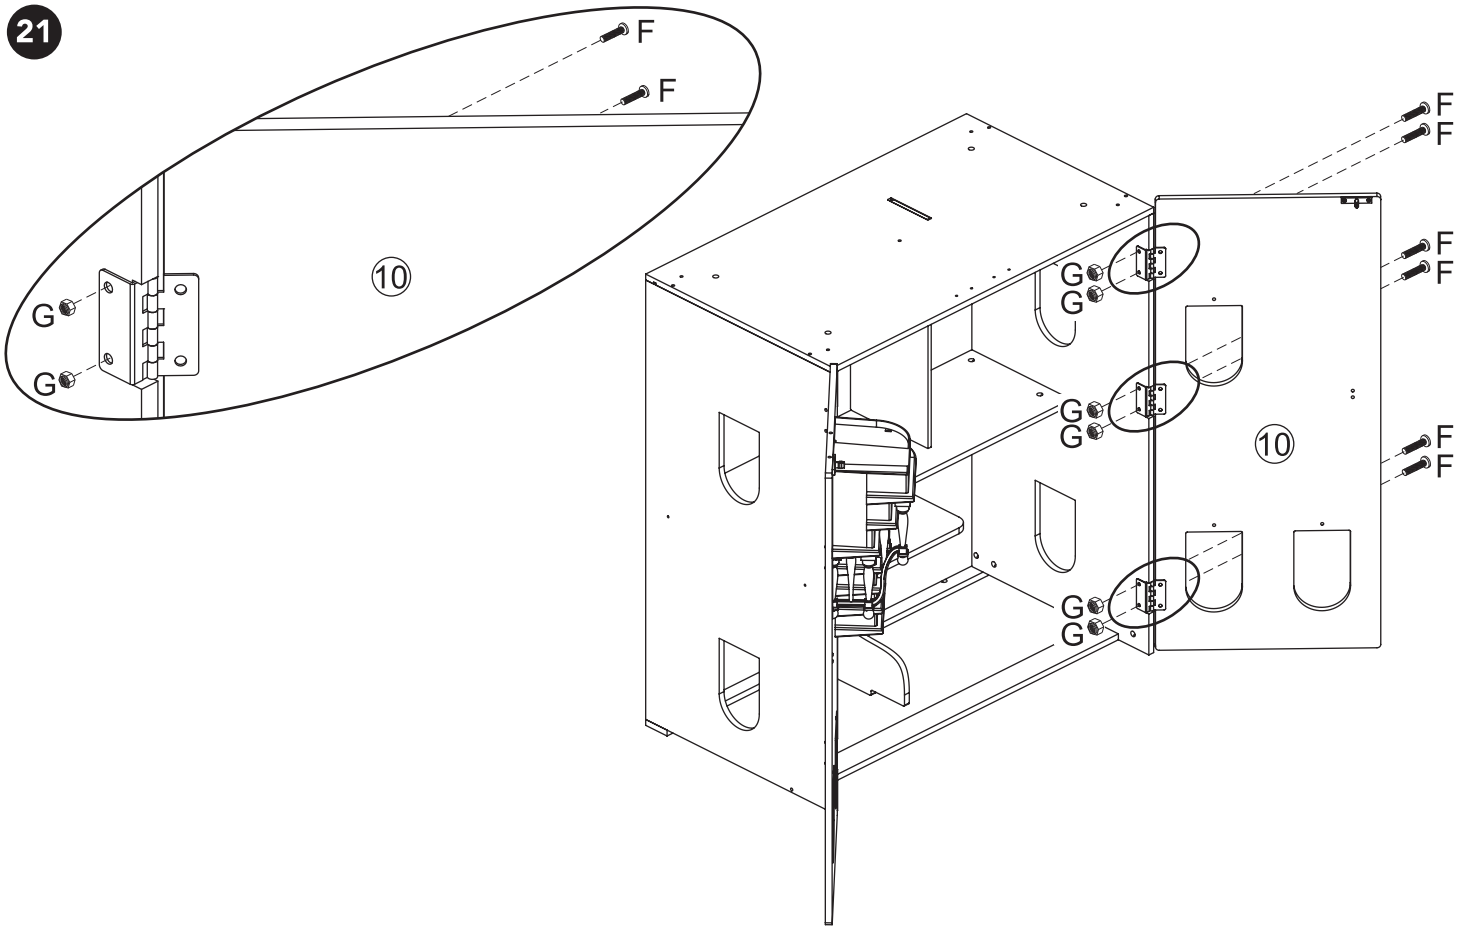 

22

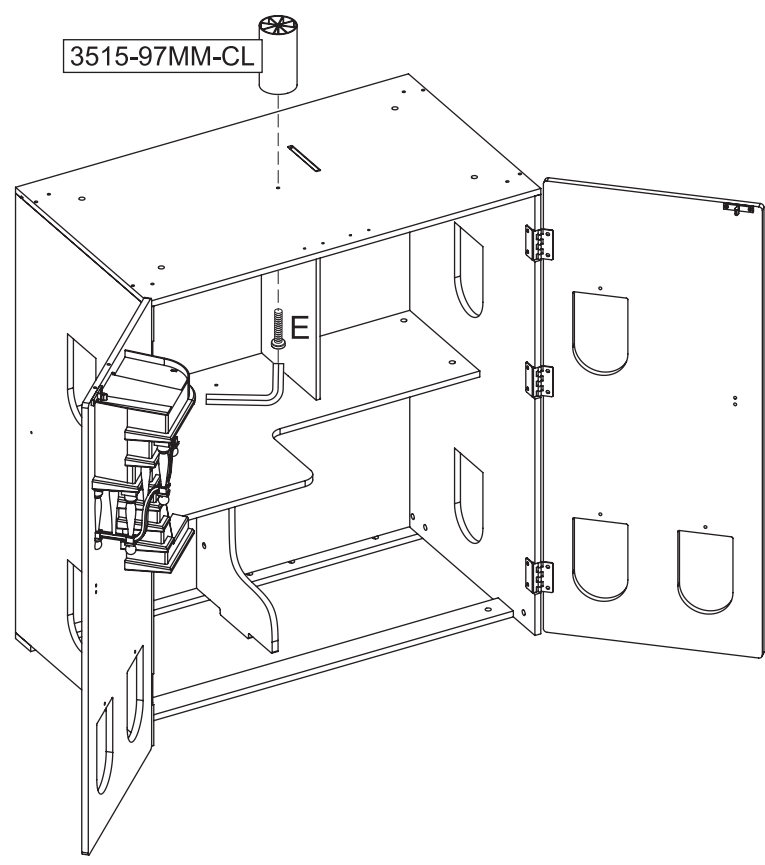 

23

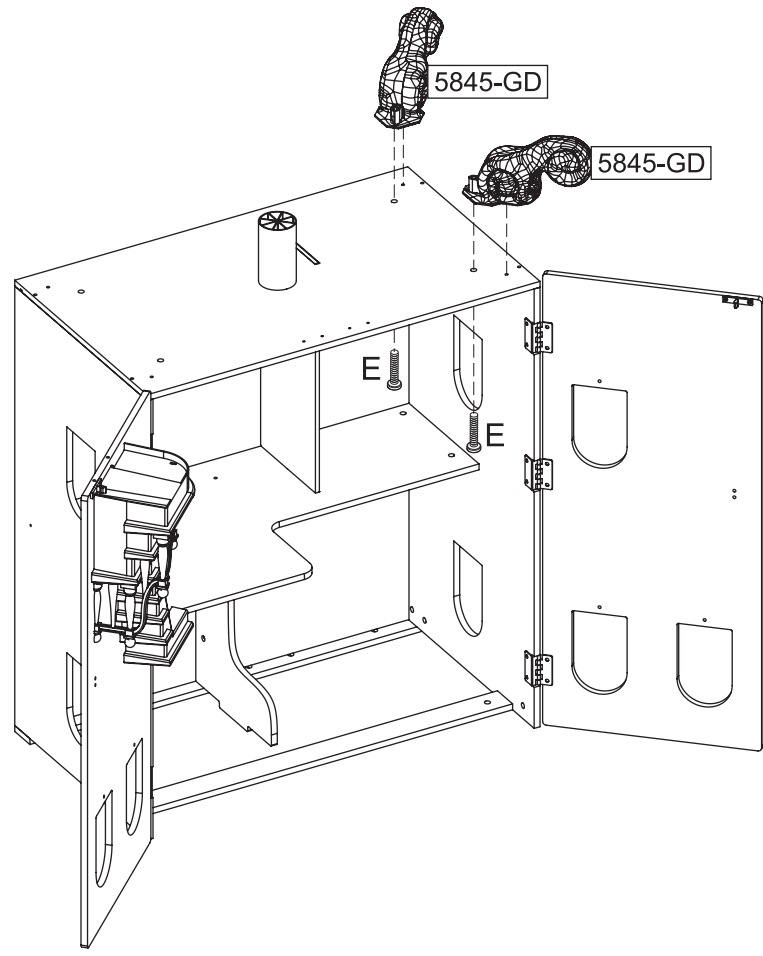 


europcustomerservice@kidkraft.com
+31 20 305 8620
M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu



 24

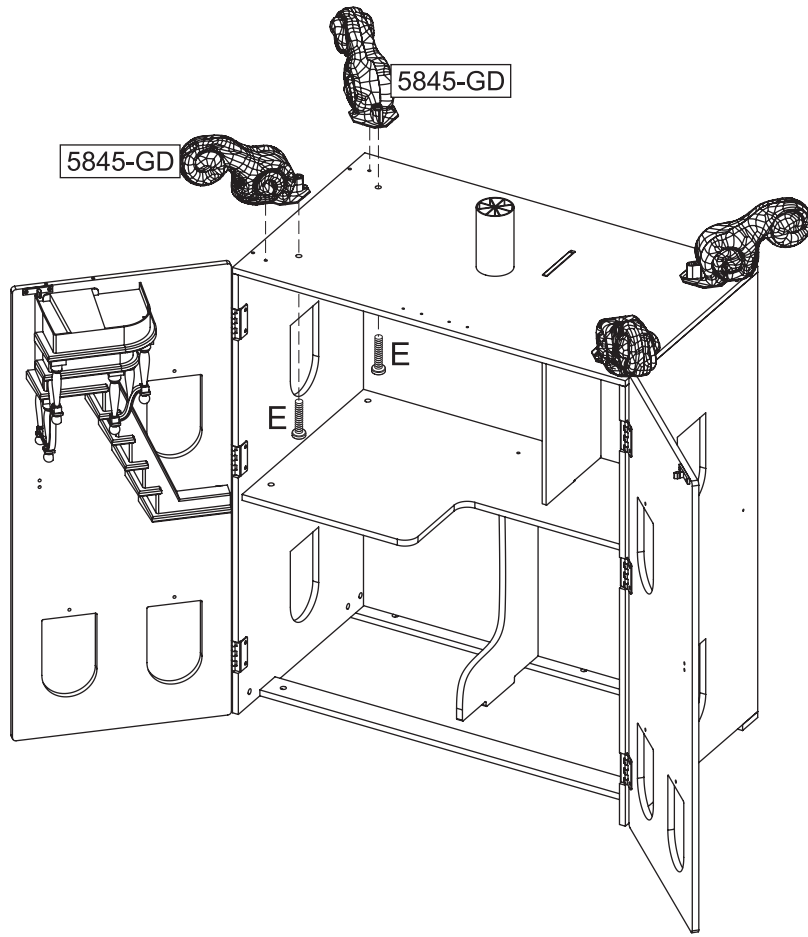


25

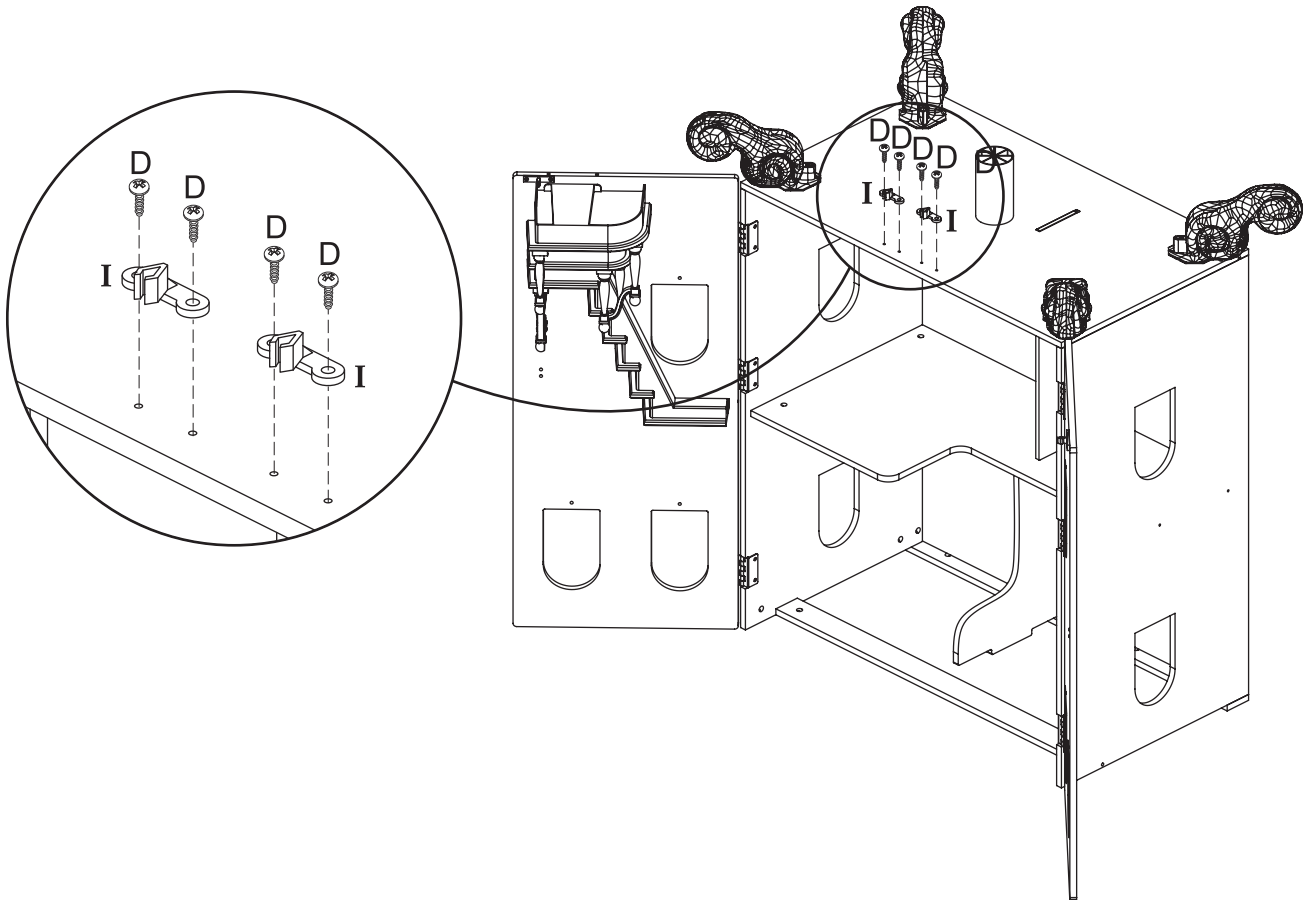 


26

 
Rotate dollhouse and put it right.
Retournez la maison pour la mettre dans le bon sens.
Gire la casa de muñecas y colóquela bien.
Drehen Sie das Puppenhaus und stellen Sie es richtig hin.
Ruotare la casa delle bambole per posizionarla nel verso giusto.

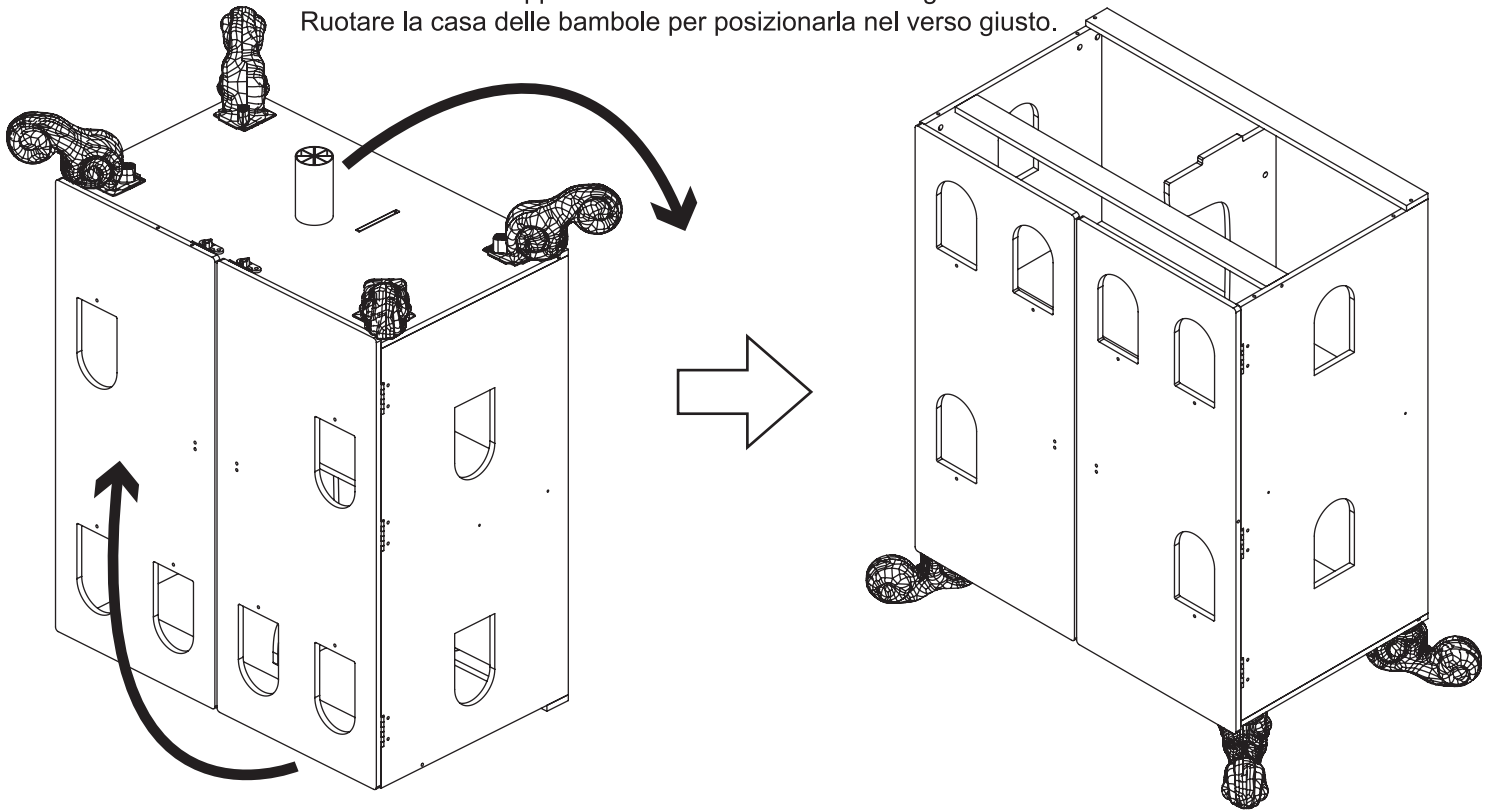


27

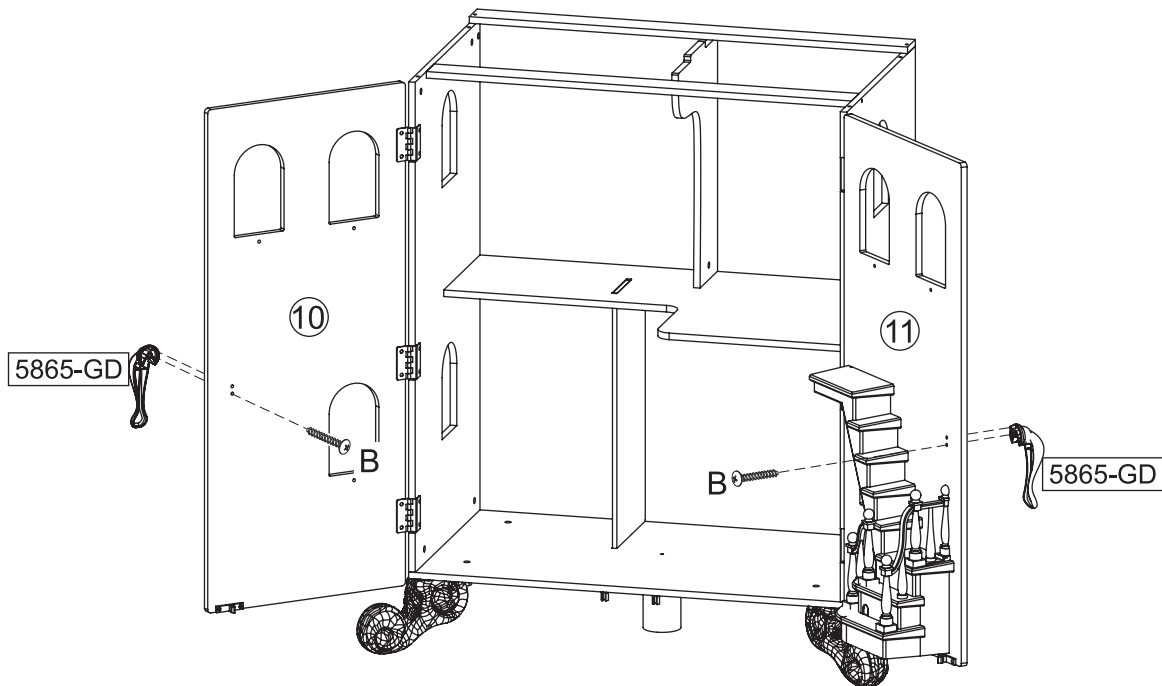 


28

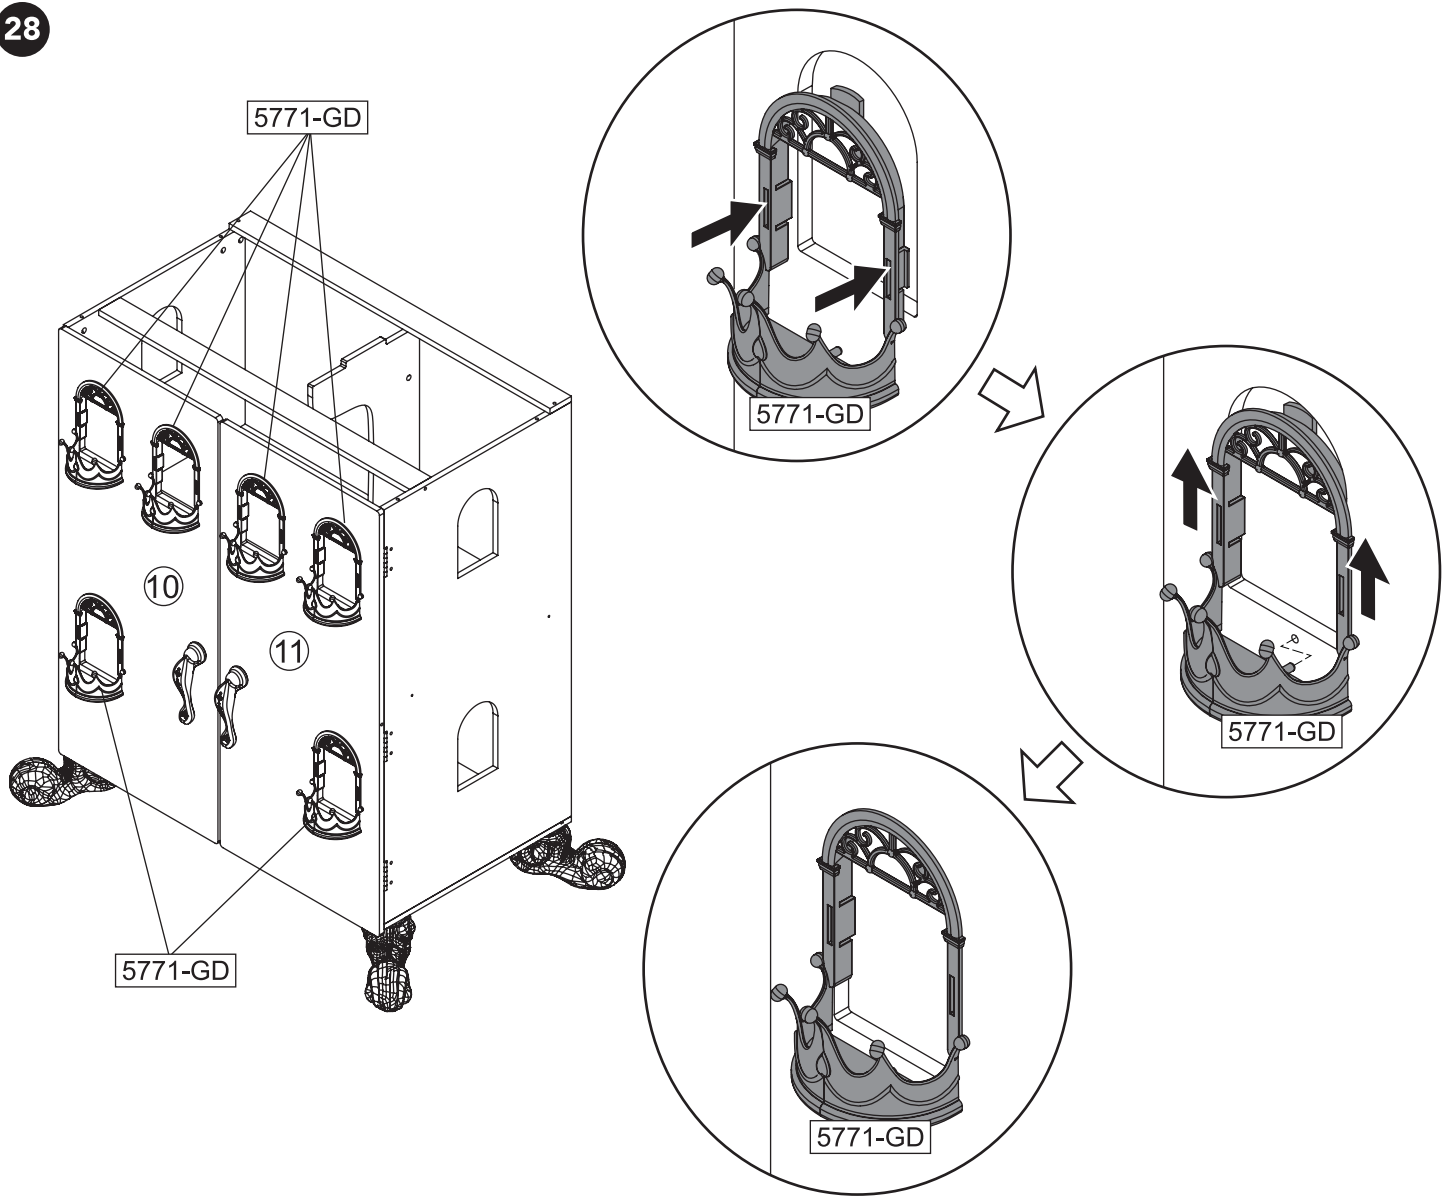 


29

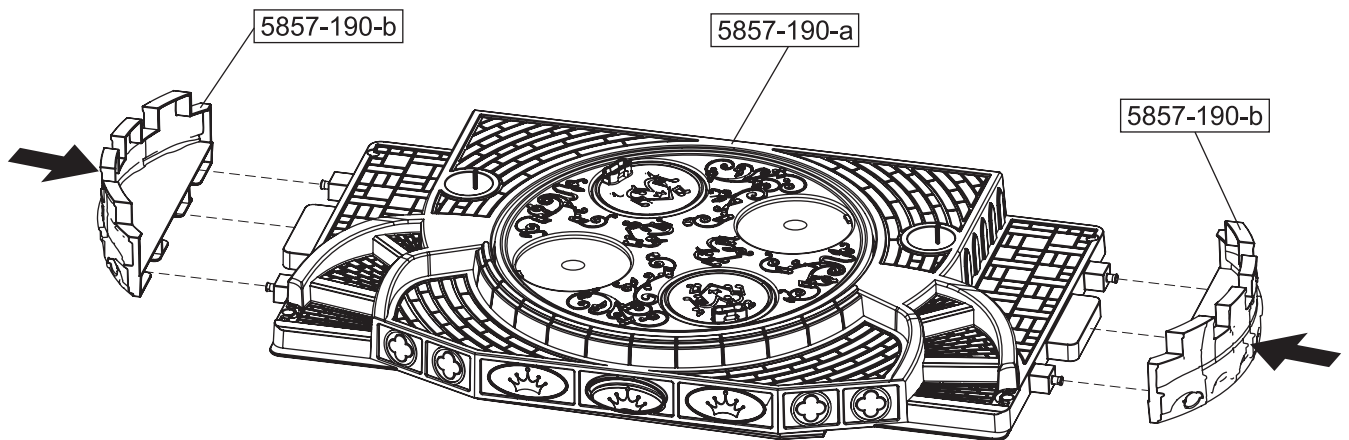 


30

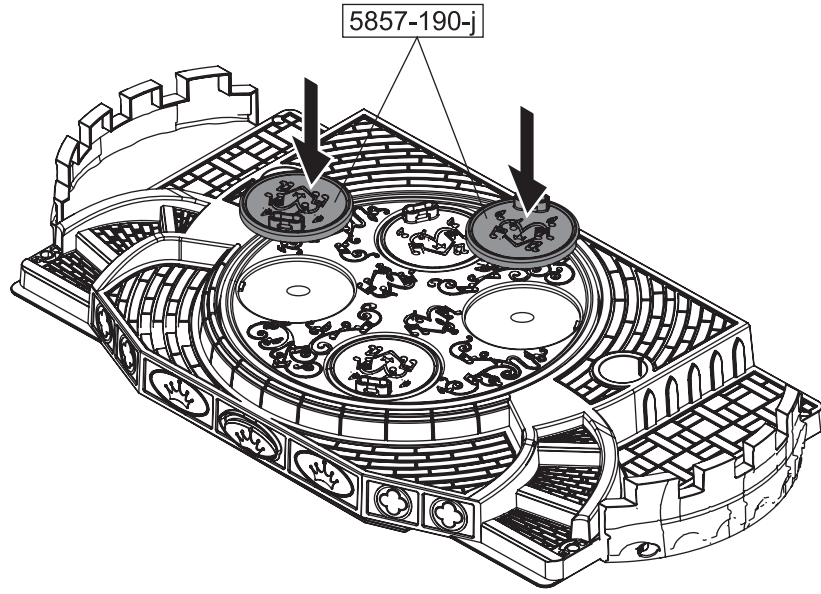 


31

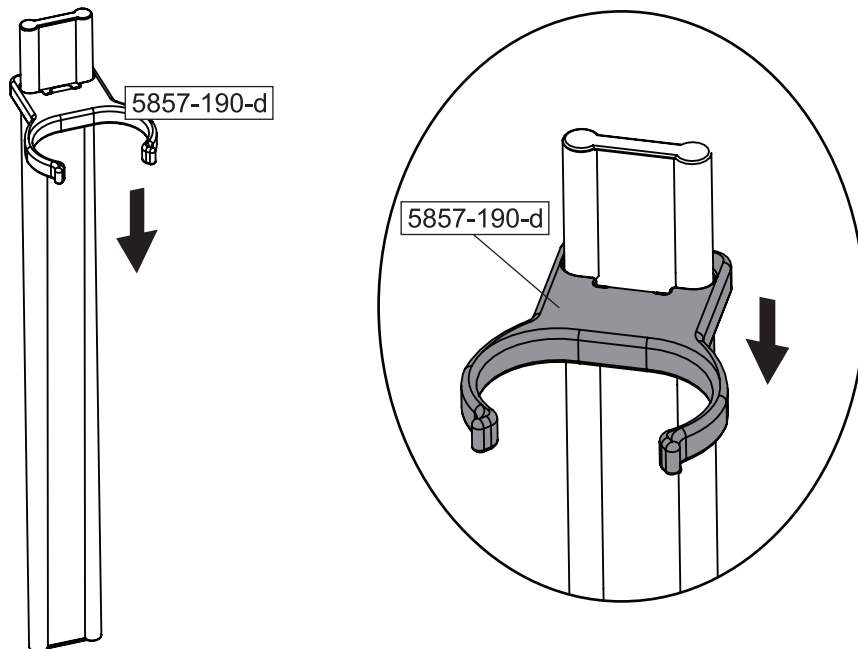 


32

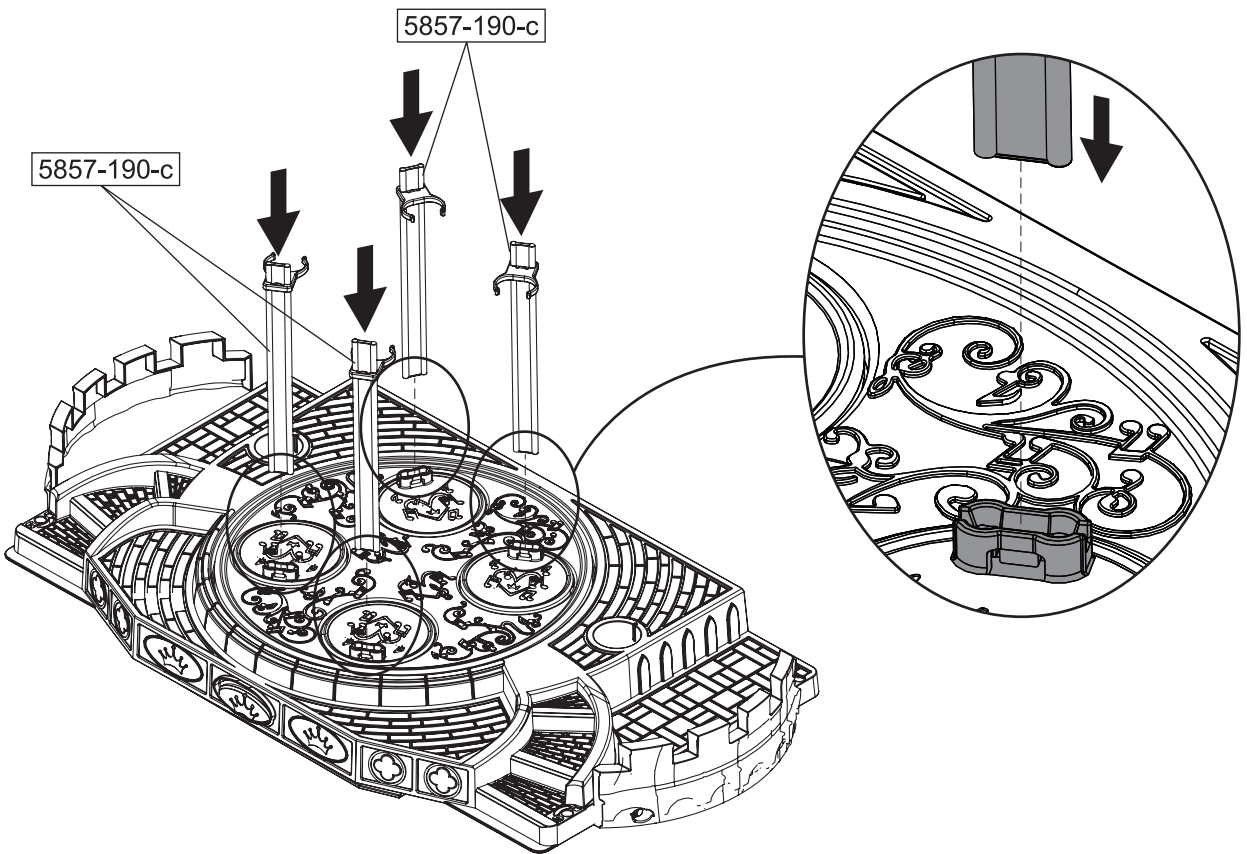 


33

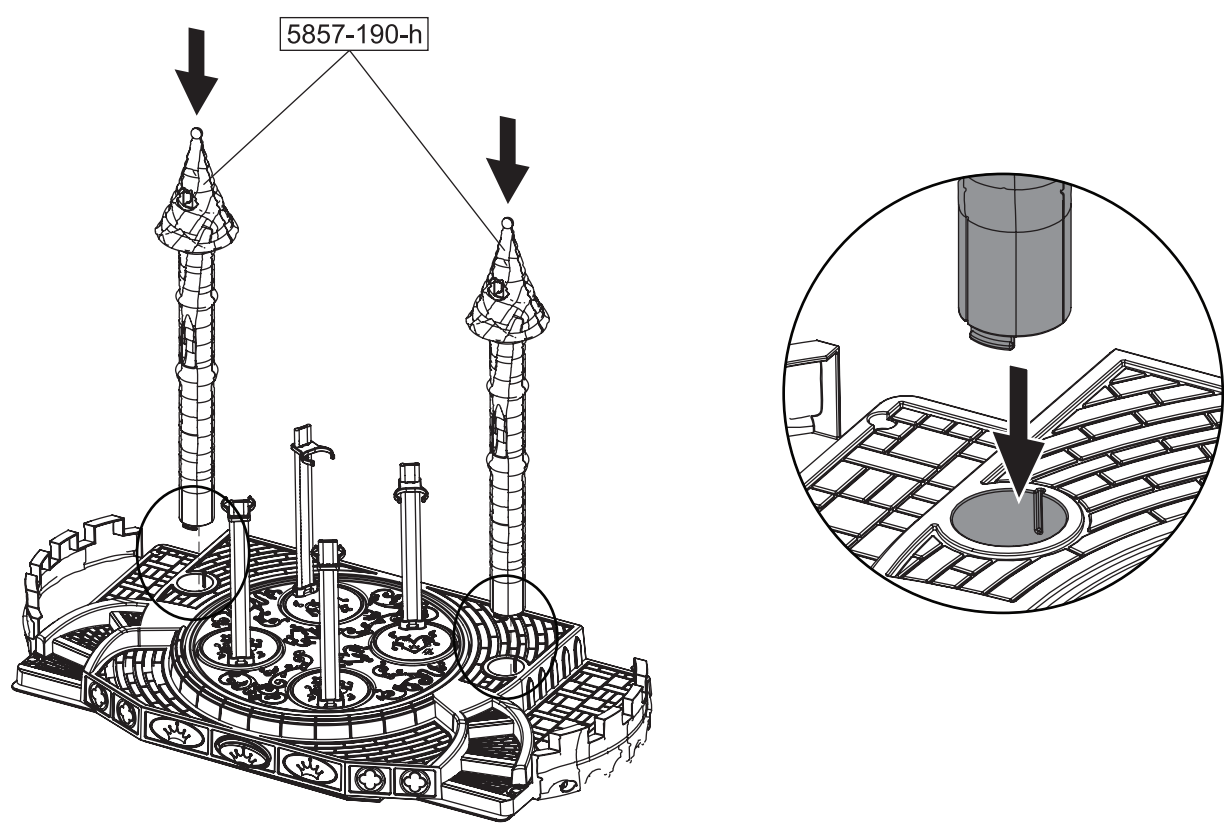 


34

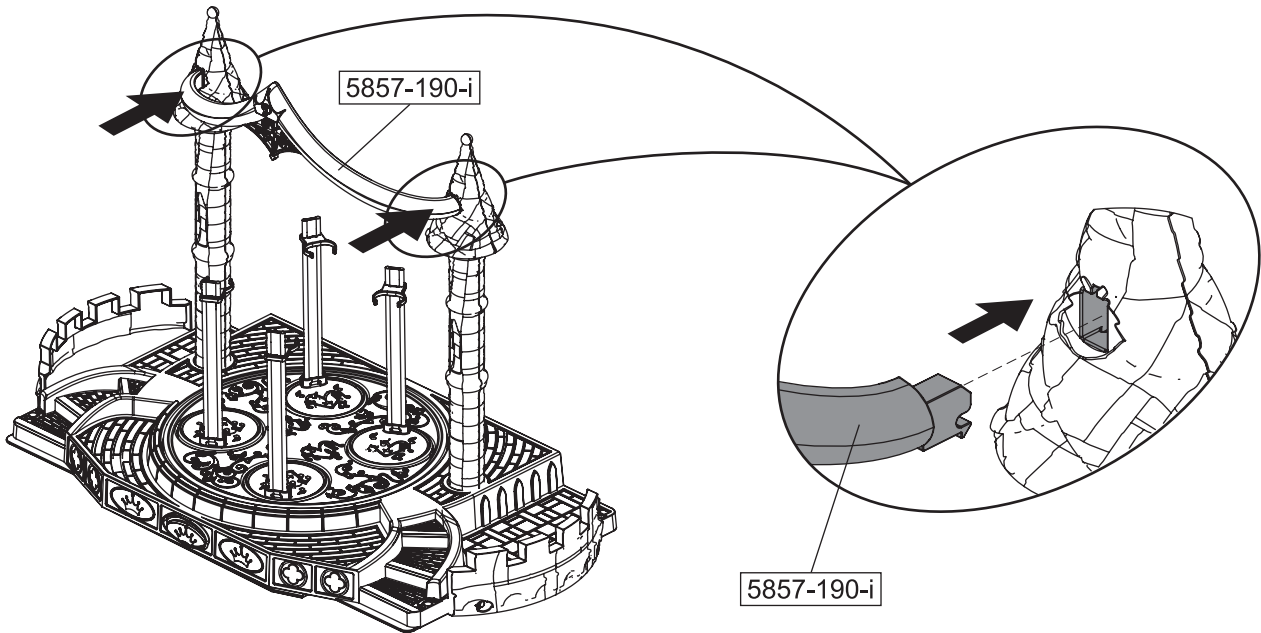 


35

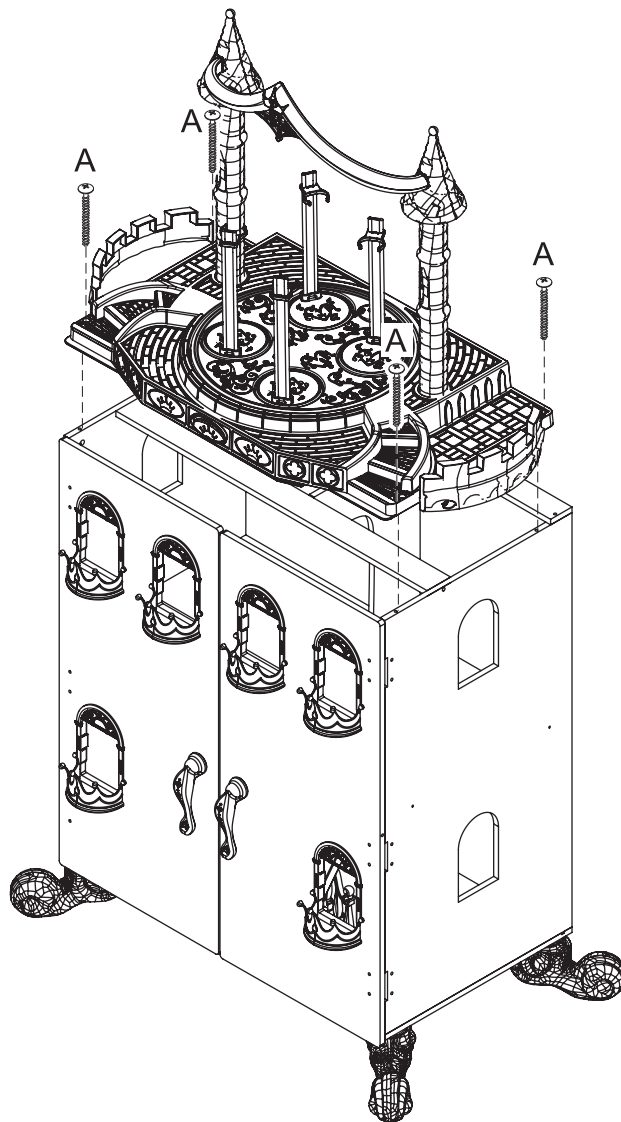 


36

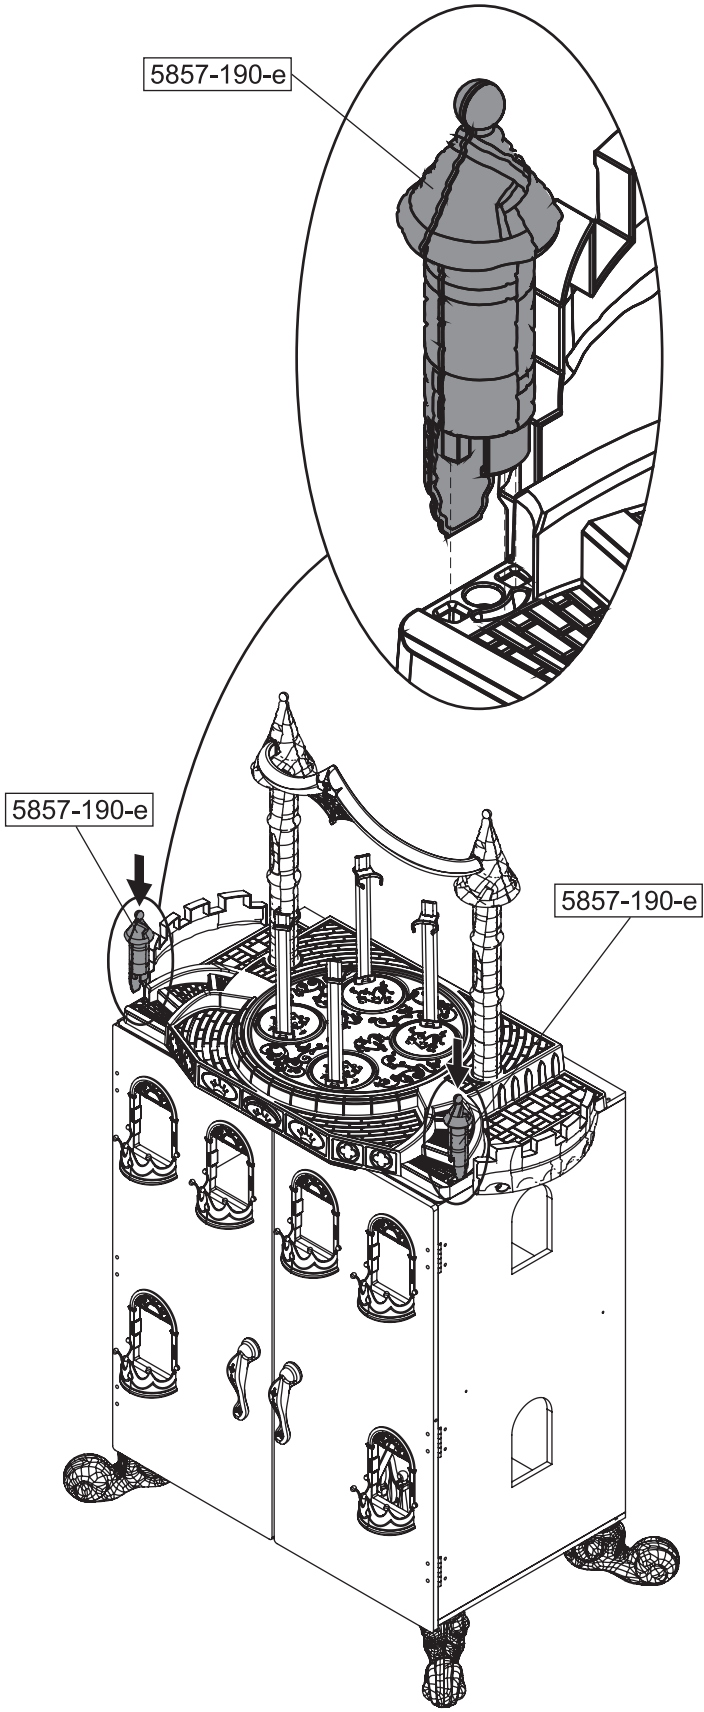 


37

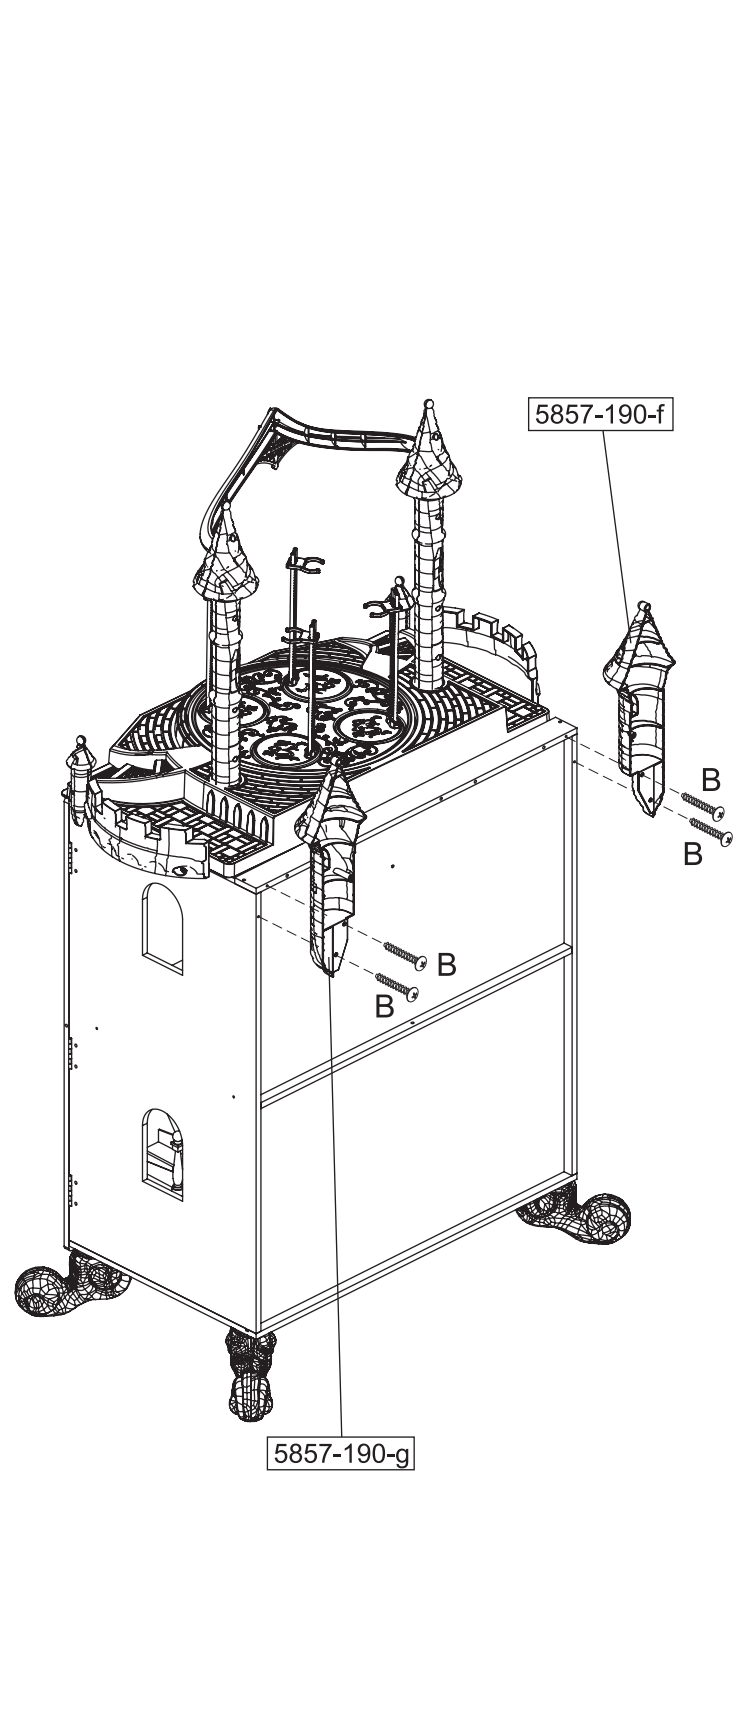 

38

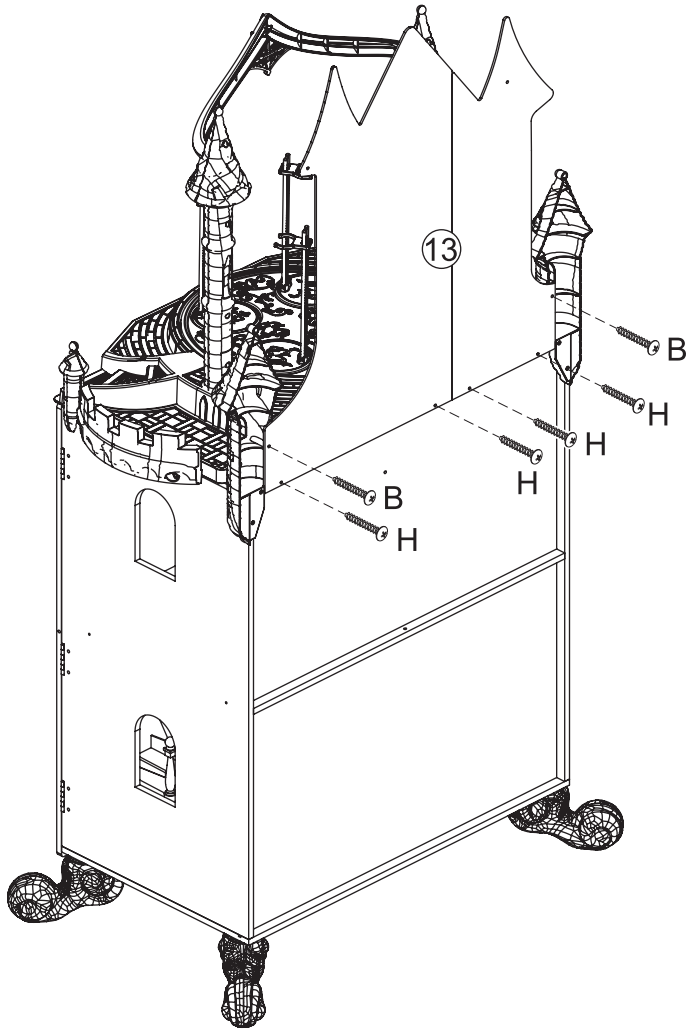 

39

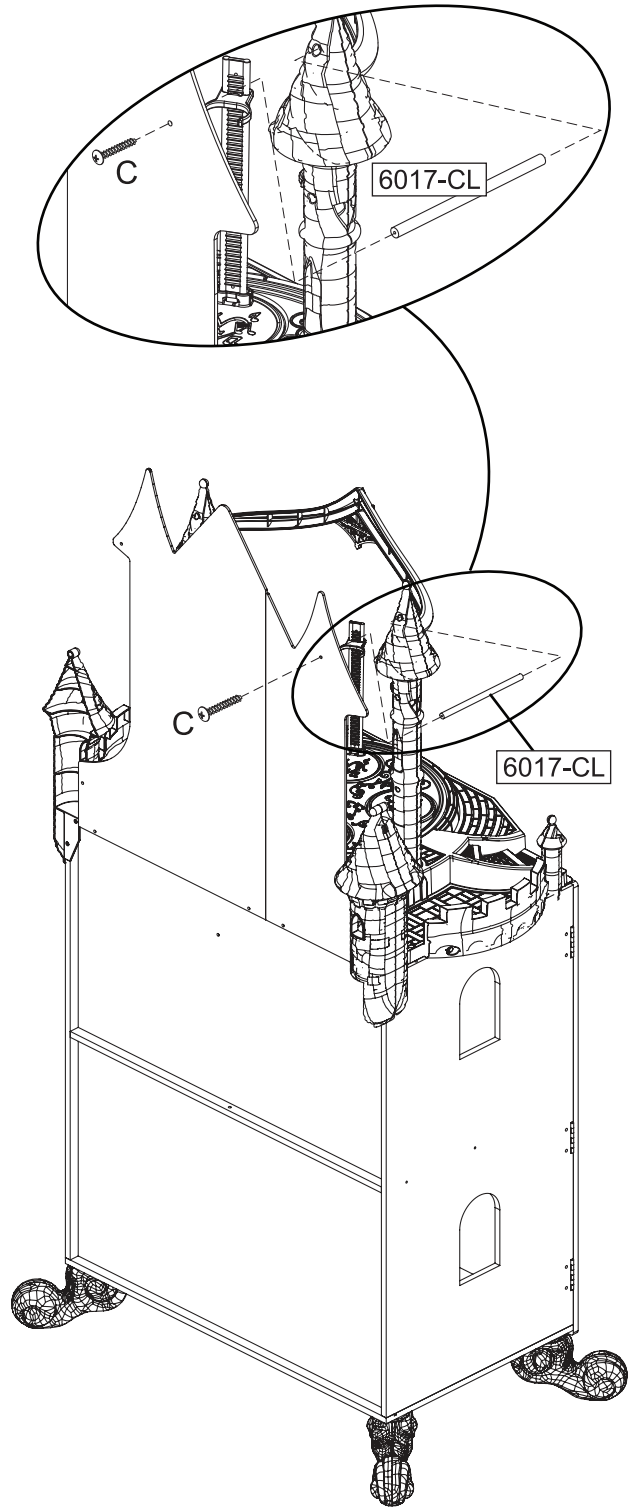 


europcustomerservice@kidkraft.com
 +31 20 305 8620
 M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu



 
40

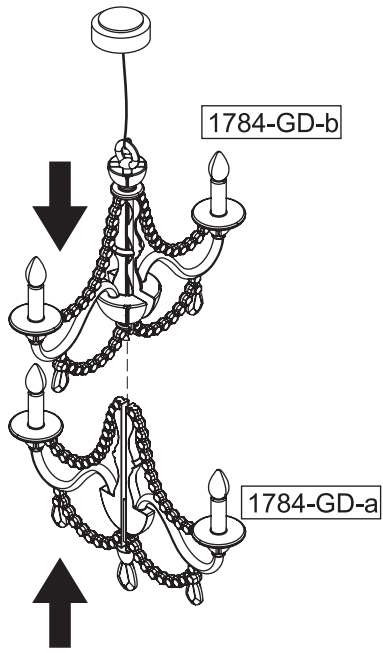


41

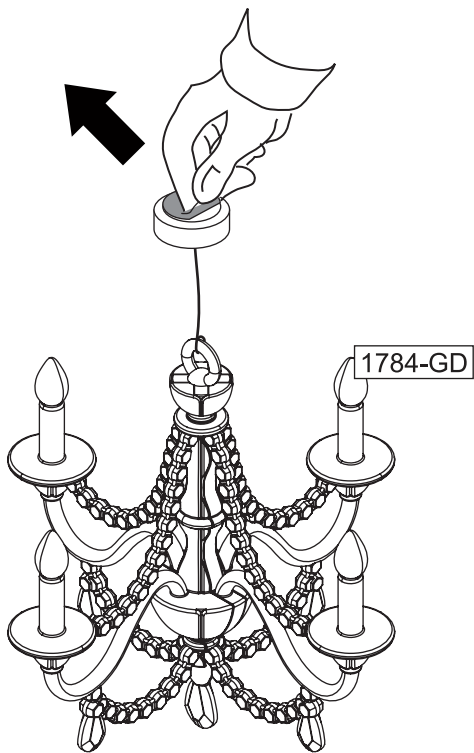 


42

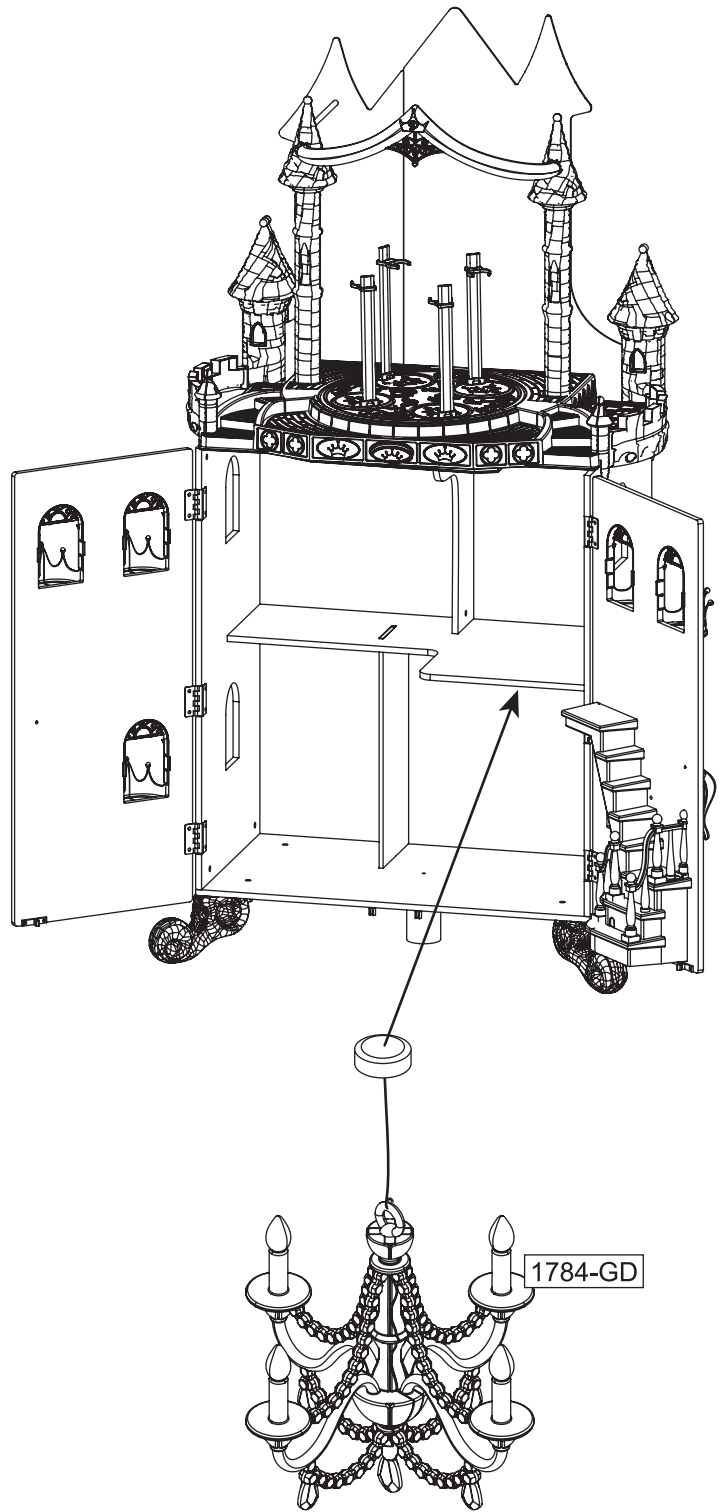 


43

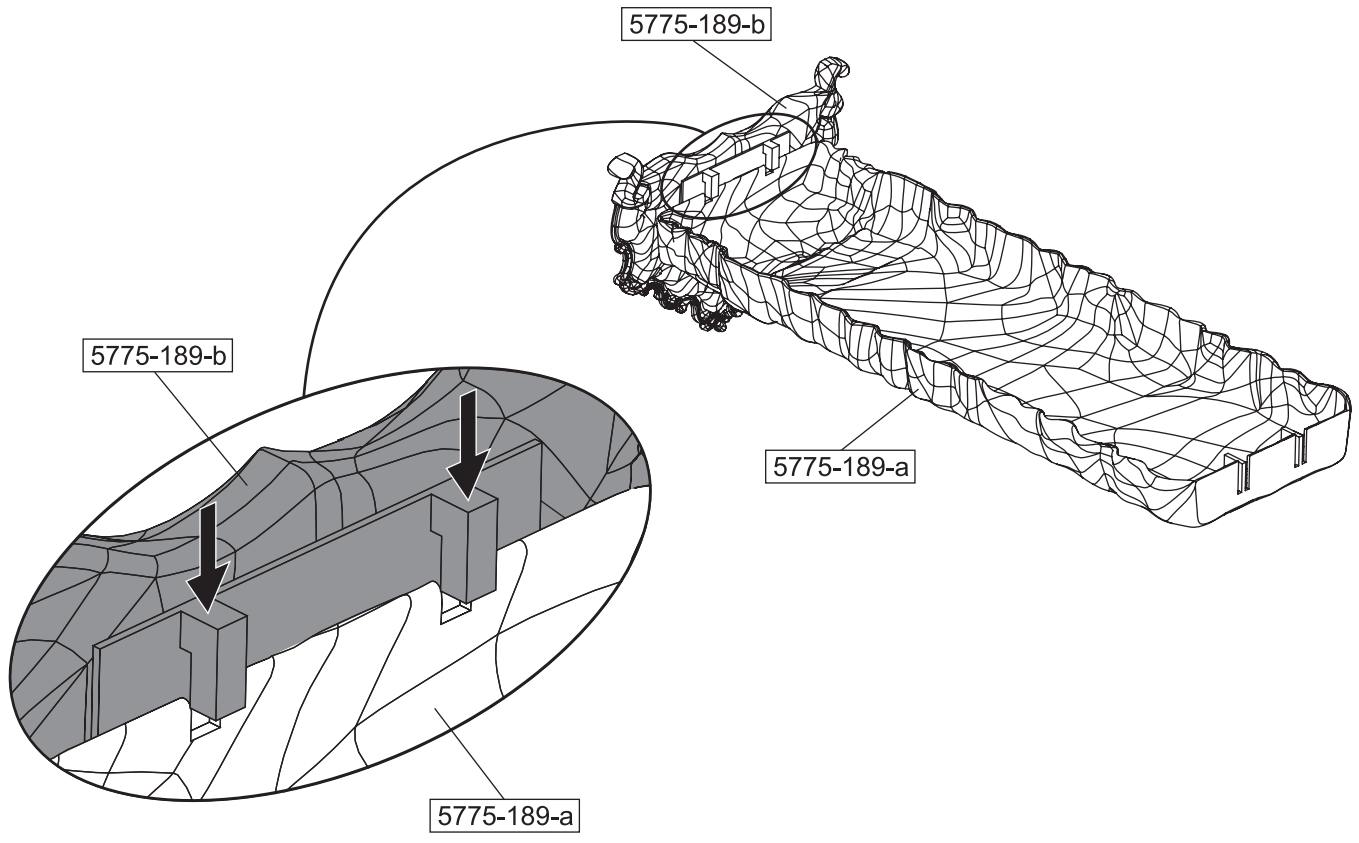 


44

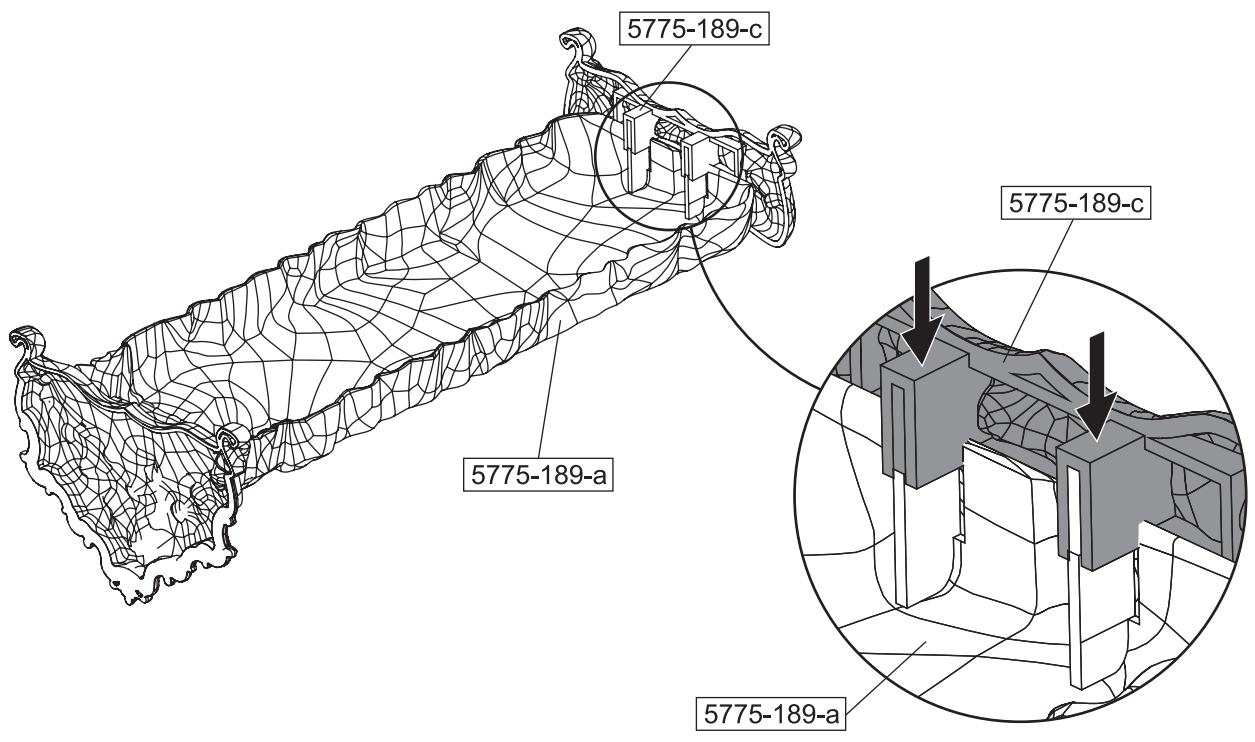 


45 x 2

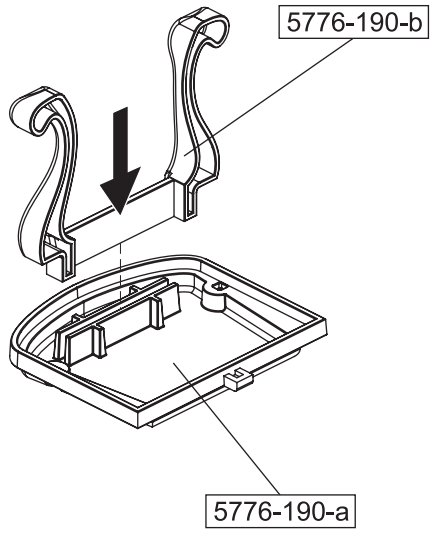 


46 x 2

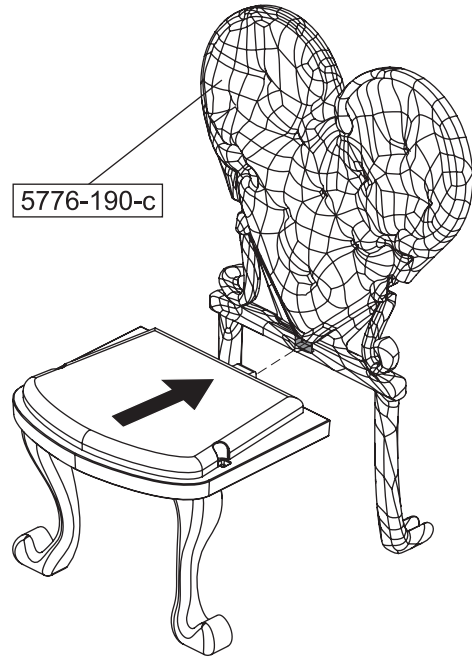 


47 x 2

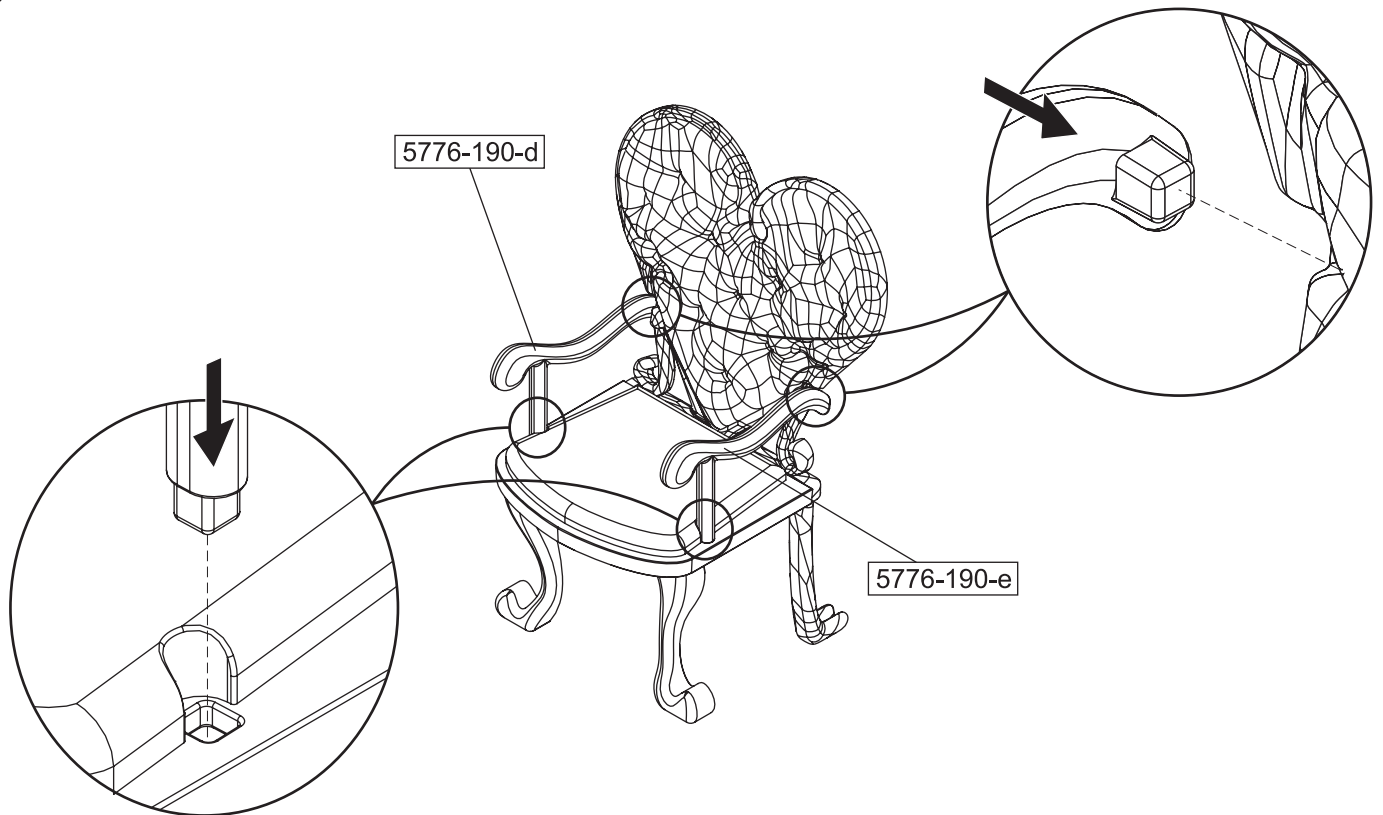 


48

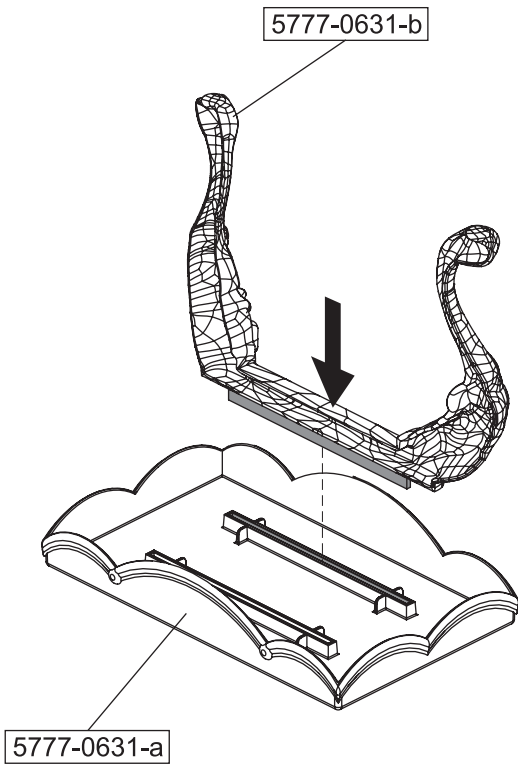 


49

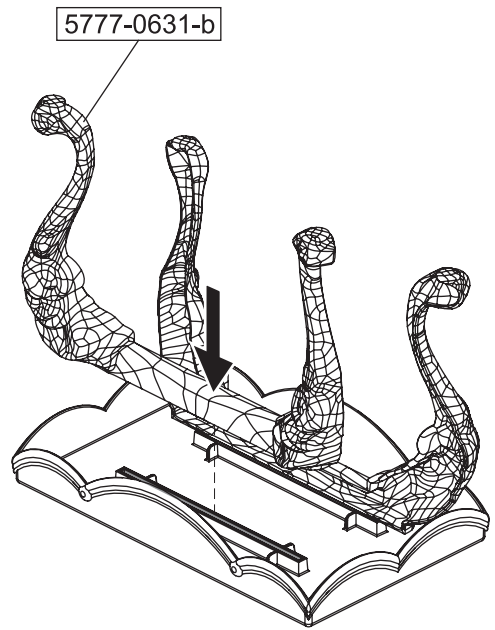 


50

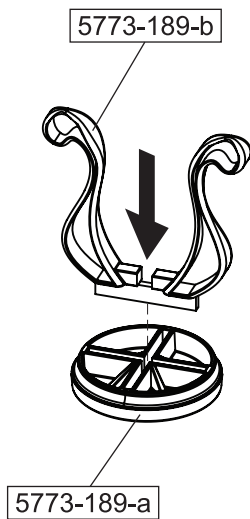 


51

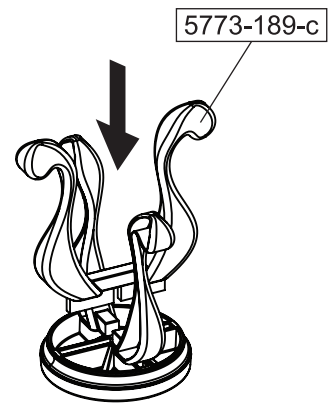 


52

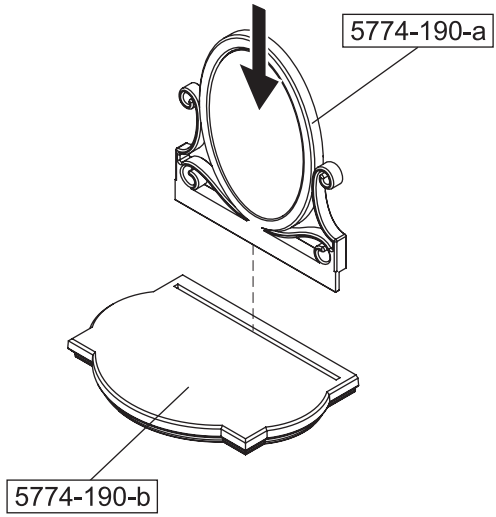 


53

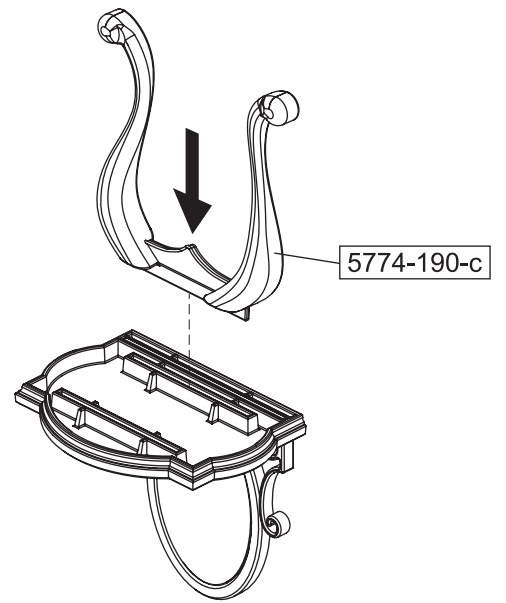 


54

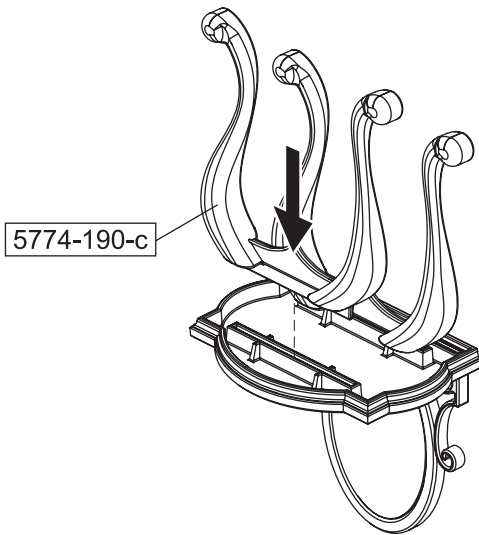 



55

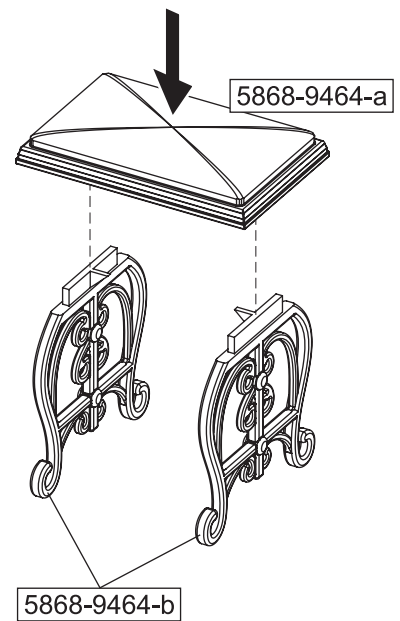 



56

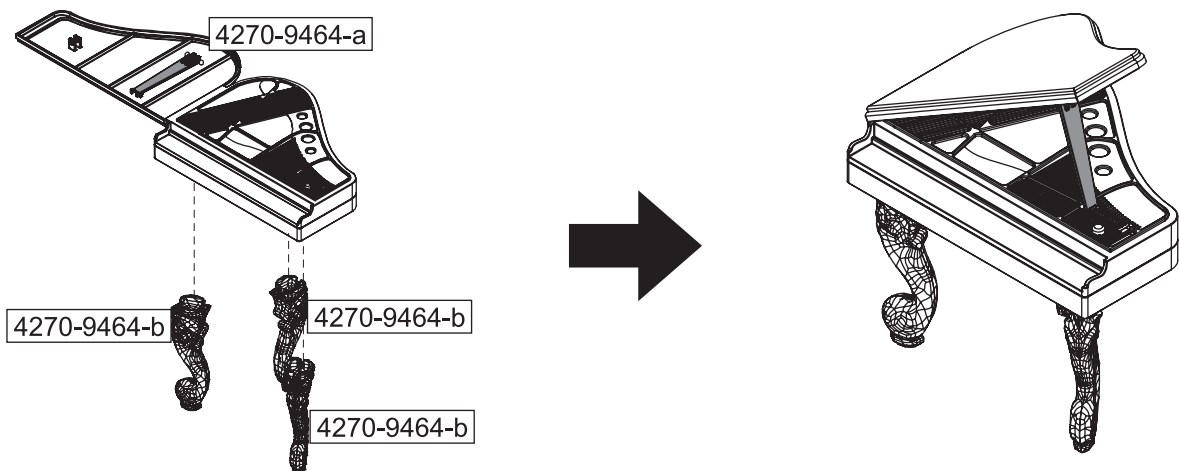 

57

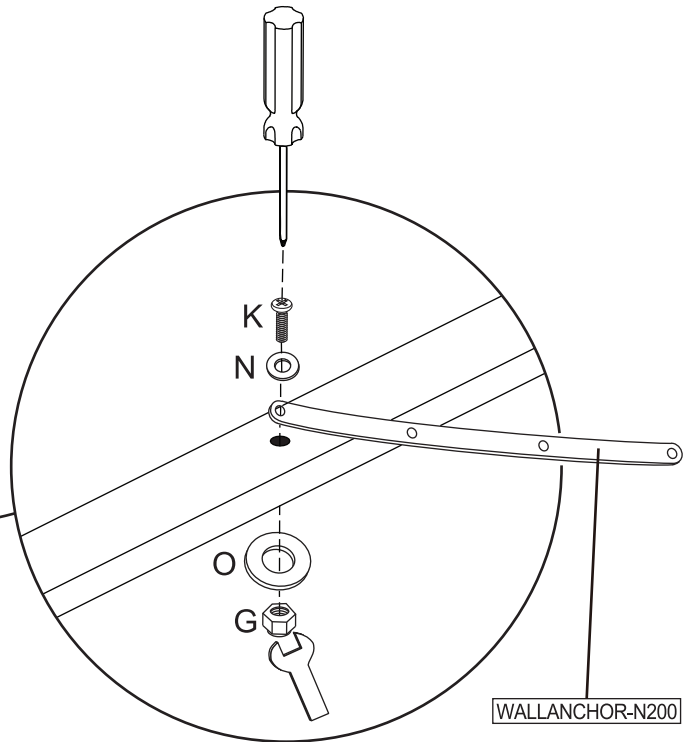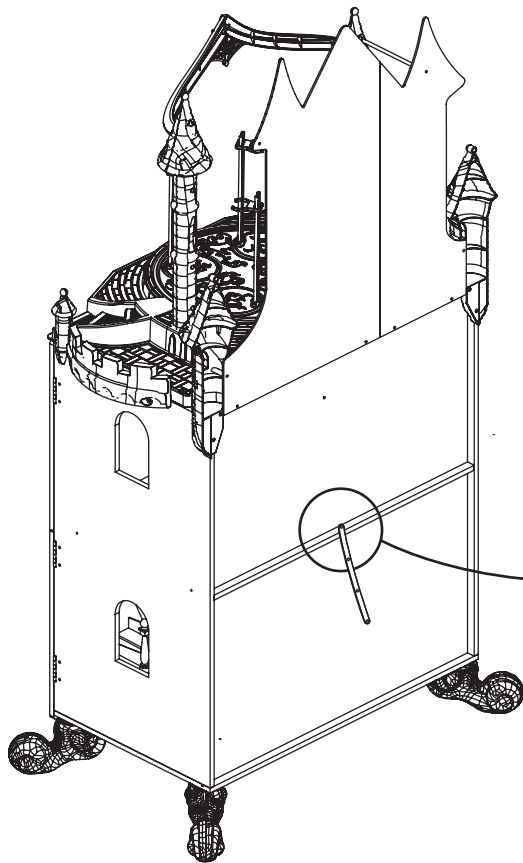  

58

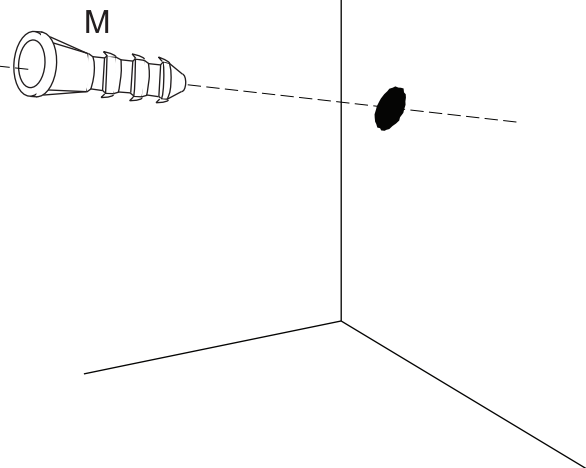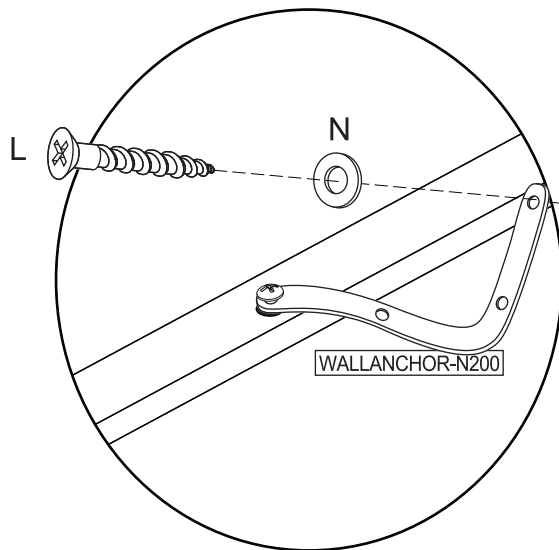  

⚠ WARNING:
Do not install on a wall where items can fall off and injure a child.

⚠ AVERTISSEMENT:
Ne pas installer sur un mur duquel d'autres objets risquent de tomber et blesser un enfant. A monter par un adulte.

 
⚠ ADVERTENCIA:
No instale en una pared donde otros artículos se puedan caer y lastimar a un niño.

⚠ VORSICHT:
Bitte nicht an einer Wand anbringen, wo Dinge herunterfallen und Kinder verletzen könnten.


⚠ AVVERTENZA:
Non installare su un muro da cui gli articoli possono cadere e ferire il bambino.

Battery Replacement Guide
Guide de remplacement de batterie
Guía para cambiar las baterías
Anleitung zum Ersetzen der Batterien
Guida per sostituire la batteria

A1

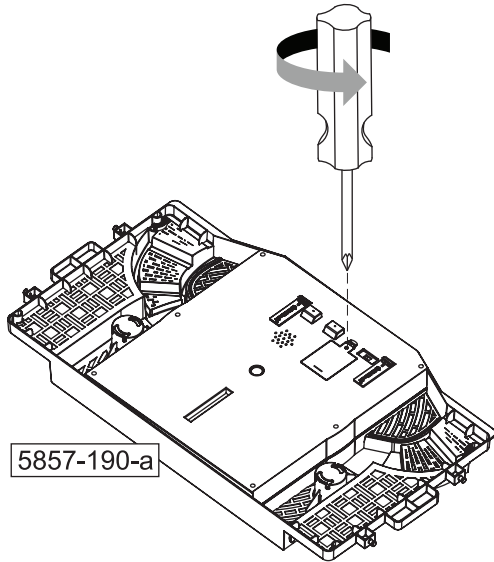

A2

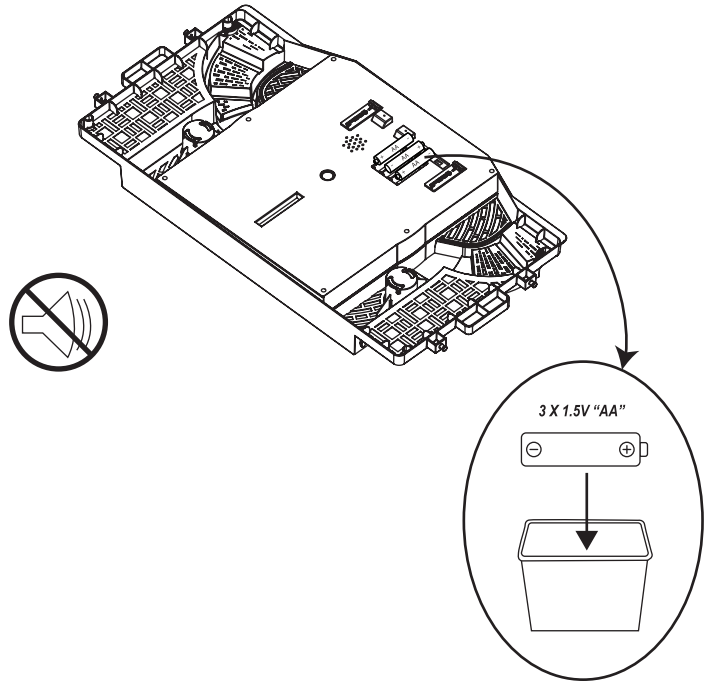 

A3

