

ITEM: 5066 - 10443 ETAGERE

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

## HARDWARE PACK

NO	DRAWING	DESCRIPTION	SIZE	Q'TY
a	0	Flat Washer	Ø1/4 * 18*1.5mm	34pcs
ь	Ø	Lock Washer	Ø1/4* 13*2mm	34pcs
c	<b>(a)</b>	Bolt	Ø1/4 * 1-3/16"	34pcs
d		Allen Wrench	4mm	1pc
e	D.	Anti- tip kit		1pc

STEP 1: Take two wood strips out.

STEP 2: Place the Side Panel [A] on a soft surface,
Attach the Top Shelf [B], Middle Shelf [C] and Bottom Shelf [D]. Assemble with flat wahser [a],lock washer [b] and bolt [c] by Allen Wrench [d].

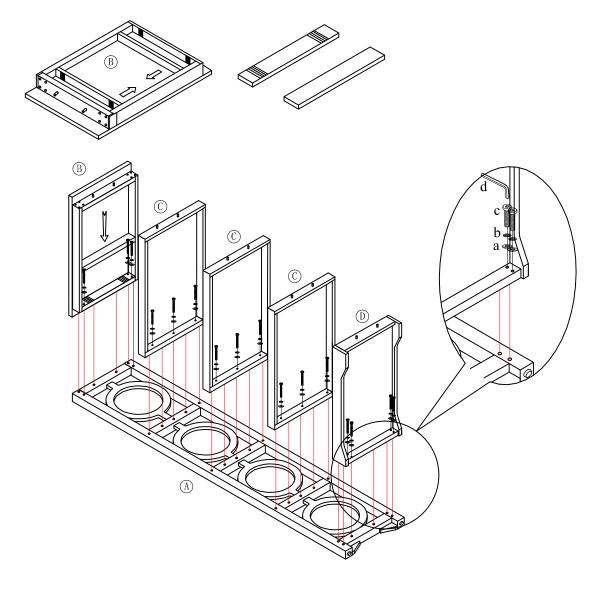



## HOOKER® ASSEMBLY INSTRUCTION

ITEM: 5066 - 10443 ETAGERE

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

