

OSD function

- Choose the LCD selection by pressing the "SOURCE" button on the remote control.
- 2)Pressing "TFT MENU" key to enter menu below.
- 3)Press[CH+][CH-] to select an item.
- 4)Press[V-][V+] to adjust.
- 5)When the FM transmitter is turned on, there are 8 channels to choose From:87.7、88.1、88.5、88.9、106.7、107.1、107.5、107.9. Tune your radio to the corresponding frequency.

PICTURE

差 4 失	
♡ BRIGHT	75
CONTRAST	25
COLOR	30
HHHHHHHHHHHHHHHHHHHHHHH	

VOLUME

在 全 交	
♡ VOLUME	40
IR TRANS.	IR-A
FM TRANS.	87. 7
HHHHHHHHHHHHHH	

OPTION

LR
16:9

SYSTEM

CLOCK


注 📤 🤽	
♡ SLEEP	0
TIME	: -
OFF-TIME	: -
ON-TIME	:-

CONTENTS

1. Features ······		<u>)</u>
2. Warnings		3
3. Product Structui	re 3	3
4. Installation		ļ
5. Leather Replace	mentl 5	5
6. Structure		ò
7. Accessories		ò
8. Remote Control		7
9. OSD Function		3

Features

- High resolution digital panel for superb picture
- LED backlit panels for exceptional picture quality, high efficiency and long life
- Cover colors easily interchangeable between black, grey and tan to match vehicle interior (all 3 colors included)
- Pole distance adjustable from 4"-7" apart for universal fit
- Free tilt mechanism allows for adjustment to optimal viewing angle
- Automatically selects PAL/NTSC system
- Built-in front 3.5mm AV input jack
- Front 3.5mm jack for headphones
- 2 A/V inputs
- One 3.5mm front input jack One wired RCA input
- Wireless remote control
- · Built-in dual-channel speaker
- Built-in dual channel IR transmitter Ch A: 2.3MHz(left)-2.8MHz(right)
- Ch B: 3.2MHz(left)-3.8MHz(right)
- 8"(16:9) TFT LCD display
- Resolution: 800(H) X 3(RGB) X 480(W)
- Number of Pixels: 336,960
- rightness: 400 cd/m2
- Power supply: DC +12V (10.6V-15.8V)
- Power consumption: 12W
- Operating temperature:-10°C to +60°C
- Dimensions: 11" x 6" x 14 3/4"
- · Weight: 2.9 lbs.

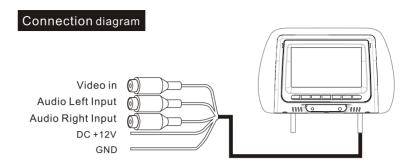


Remote control


MUTE on/off
Power switch
Sleep
No effect
Setting picture display dimension.
No effect
Switch AV mode
Main menu
To the next higher program (the cursor is
moved upwards)
To the next lower program (the cursor is
moved downwards)
Volume increase (submenu adjust)
Volume decrease (submenu adjust)
No effect
No effect
No effect



-2-

Structure

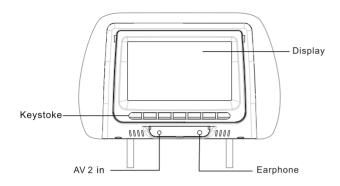

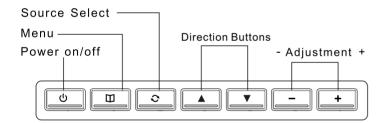


ACCESSORIES

Description	Quantity
1. Power Cable	1PC
2. Plastic Casing	8PCS
3. Remote Control	1PC
4. Users Manual	1PC
5. Leather	2PC

A Warning

- ▶ Read this manual before using this product.
- ► This product is composed of precision components and shall not be dissembled unless approved or authorized by us, otherwise you will void your warranty
- ▶ Protect the product from moisture and shock

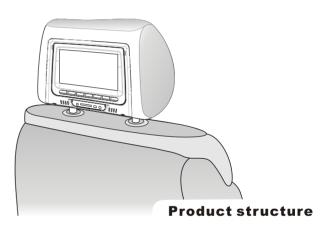

"Thank you for your purchase of our mobile video product. To ensure long-term trouble free operation of the product, please read the following operations manual before using the monitor. To further ensure the long-term service of your product, please have one of our authorized dealers to install this product into your vehicle for you."


-6-

Installation

- 1. Remove the original pillow in the car.
- 2. Forward and back tilt angle adjustment




3. Wiring diagram

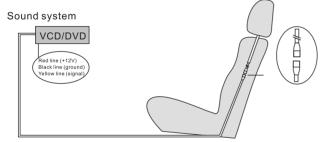

The circuit connection of the pillow monitor is very simple. As shown in Fig. Connect the +12V power of the sound system(red line to +,black line to ground),and then connect the video signals.

Leather replacement

- 1. Push up the button, and unplug the screen enclosure.
- 2. Take apart the wires inside to remove the screen.

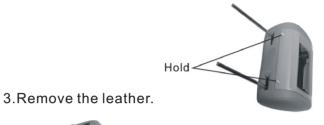



4. Replace the leather with the matching color cover.



5. Connected the cable, lock the monitor's buttons into position and push it in place to lock.

