 


## SIDNEY / FLEMING / DRESSLER

---

### 54 INCH TALL TV STAND

MODEL # AXCSDY-01

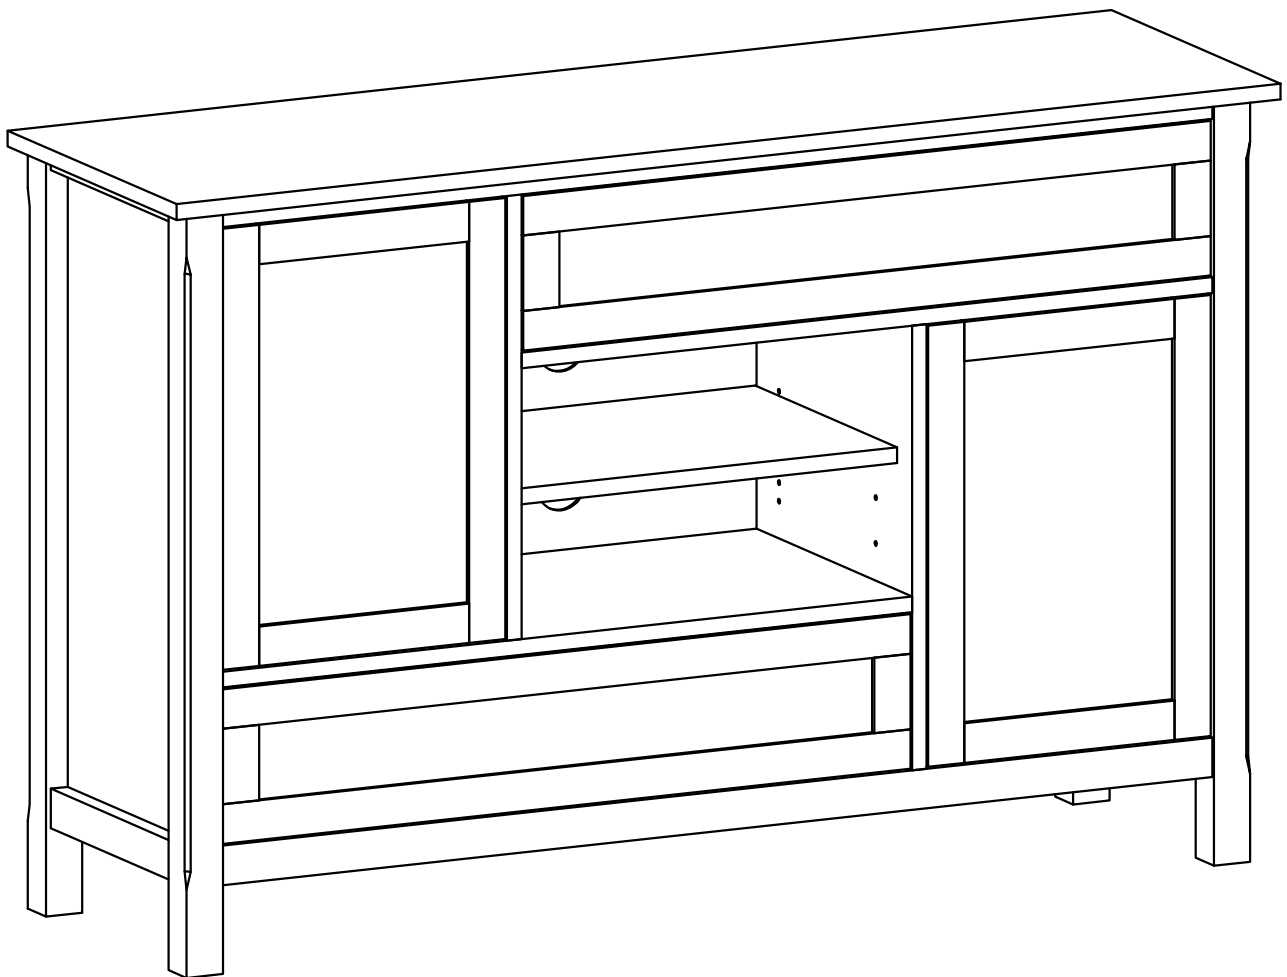



Questions, problems, assembly help, missing parts?

No need to return the product, we will gladly help and ship your  
replacement parts free of charge

Please call Customer Service at 1-866-518-0120 ext. 262

Monday to Friday between 9 am –4 pm EST

or go to

[www.simpli-home.com/parts request](http://www.simpli-home.com/parts request)

In order to assist you in a timely manner, please have the following  
information ready:

Model # \_\_\_\_\_ Part Number or Letter \_\_\_\_\_

Purchased at \_\_\_\_\_ Date of Purchase \_\_\_\_\_

**If you wish to return the product, please contact the retailer where the  
product was purchased.**

**IMPORTANT :** Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## SAFETY INFORMATION

**CAUTION:** Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help. If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

**May require 2 people for ease of assembly.**

**IMPORTANT :** Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## CARE and MAINTENANCE

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

 
 
 
 
 
 
 
 
 
 
 
 
Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger, but lose moisture more slowly than other finishes.

### **To help protect your wood furniture, take these steps:**

- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly. Don't over-humidify; that can damage wood by causing it to expand and contract.
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp.
- If you can avoid it, don't put furniture near heating vents. If you must, keep the piece 3 to 4 inches away from the wall, giving the heat and air space to circulate.
- Dust with soft dry cloth.
- Do not use liquid or aerosol products.
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry.
- Do not use abrasive cleaners.


## PART DESCRIPTION

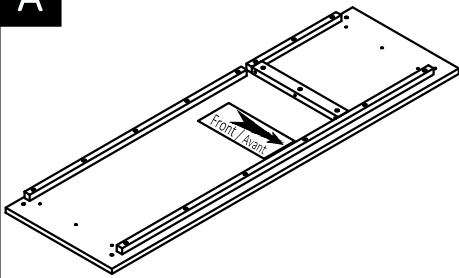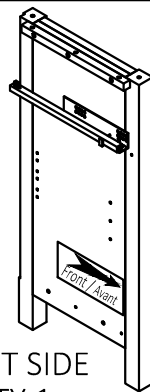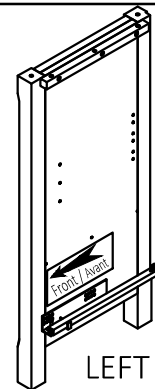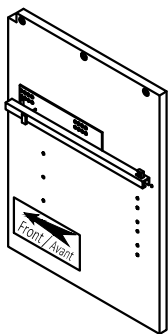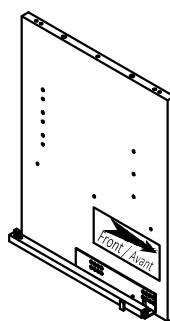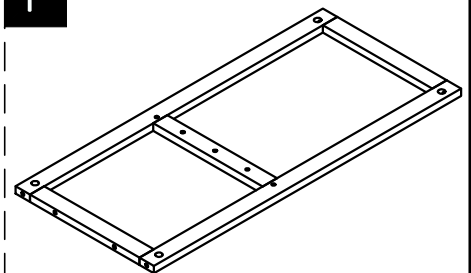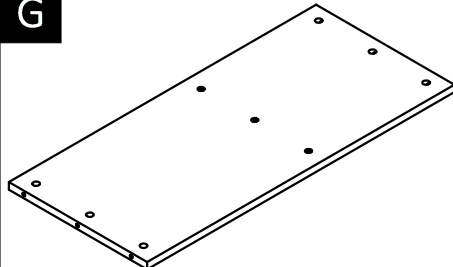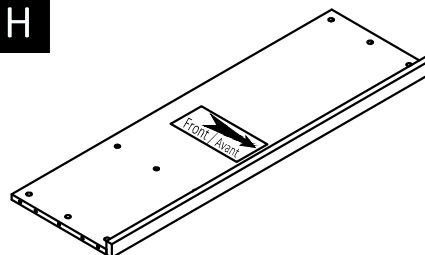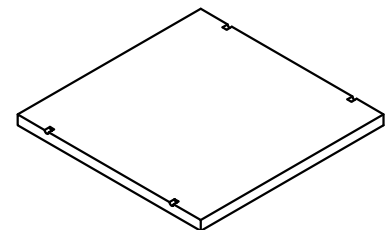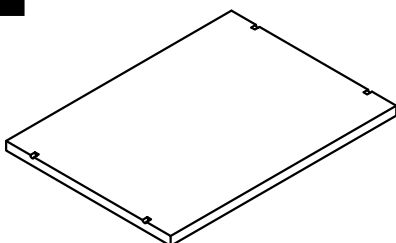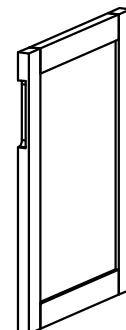**A**TOP  
QTY 1**B**RIGHT SIDE  
QTY 1**C**LEFT SIDE  
QTY 1**D**LEFT DIVIDER  
QTY 1**E**RIGHT DIVIDER  
QTY 1**F**TOP FRAME  
QTY 1**G**CENTRE SHELF  
QTY 1**H**BOTTOM SHELF  
QTY 1**I**SIDE SHELF  
QTY 2**J**CENTRE SHELF  
QTY 1**KL**LEFT DOOR  
QTY 1**KR**RIGHT DOOR  
QTY 1


**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

## PART DESCRIPTION

 
LL

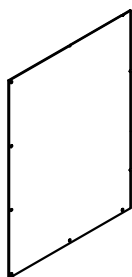LEFT BACK PANEL  
QTY 1

 
LR

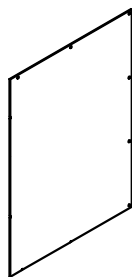RIGHT BACK PANEL  
QTY 1

 
L1

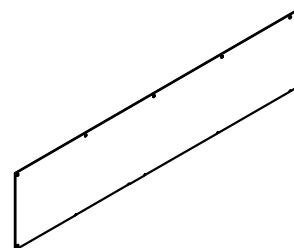TOP & BOTTOM BACK PANEL  
QTY 2

 
L2

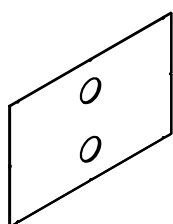CENTRE BACK PANEL  
QTY 1

 
M

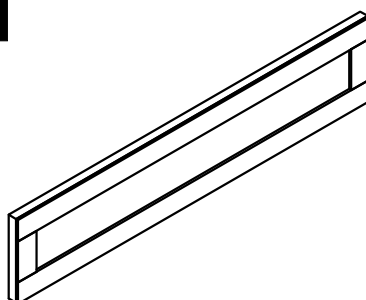DRAWER FRONT  
QTY 2

 
NL

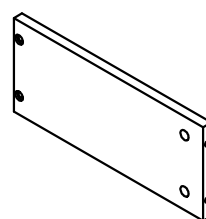LEFT DRAWER SIDE  
QTY 2

 
NR

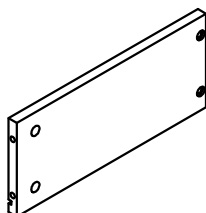RIGHT DRAWER SIDE  
QTY 2

 
O

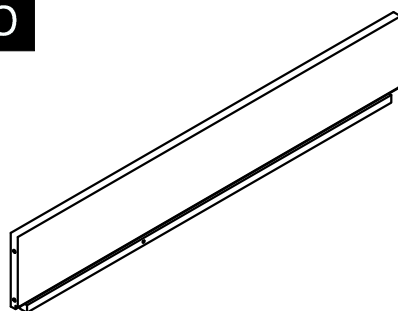DRAWER BACK  
QTY 2

 P

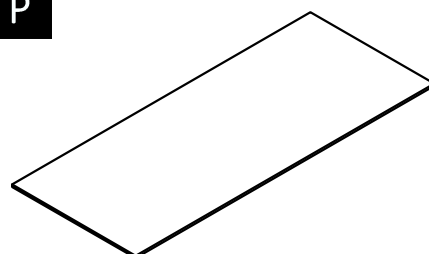DRAWER BOTTOM  
QTY 2

 
Q

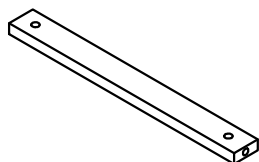DRAWER BOTTOM SUPPORT  
QTY 4

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)


## HARDWARE DESCRIPTION

 1



ALLEN KEY SCREW  
M6 X 30mm  
QTY 26

 2




CAM LOCK PIN  
CAM LOCK  
QTY 32 SETS

3




WOOD DOWEL  
M8 X 30mm  
QTY 18

 4




ALLEN KEY  
QTY 1

 5




PHILLIPS SCREW  
ROUND HEAD  
M4 X 15mm  
QTY 38

 6

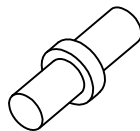


SHELF SUPPORT  
QTY 18

 7




PHILLIPS SCREW  
M3 X 15mm  
QTY 8

 8

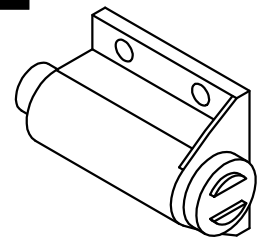


MAGNET  
QTY 2

 9




PHILLIPS SCREW  
M4 X 15mm  
QTY 24

 10

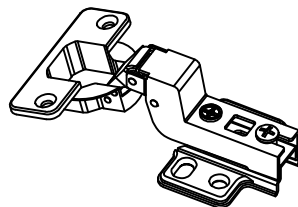





ADJUSTABLE HINGE  
QTY 4

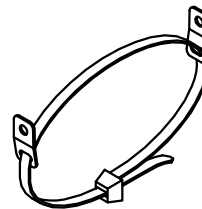 11

 


FURNITURE TIP OVER RESTRAINT  
QTY 1 SET

 
- a.  M4 X 25mm - QTY 2  
( 1 is extra )
- b.  M4 X 15mm - QTY 1
- c.  M4 X 25mm - QTY 1

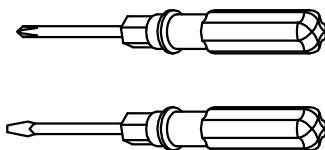

 Required -  
Flathead screwdriver  
Phillips screwdriver  
Rubber mallet  
**Not Included**

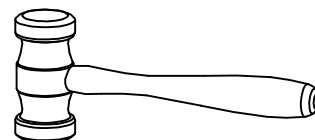


 **NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

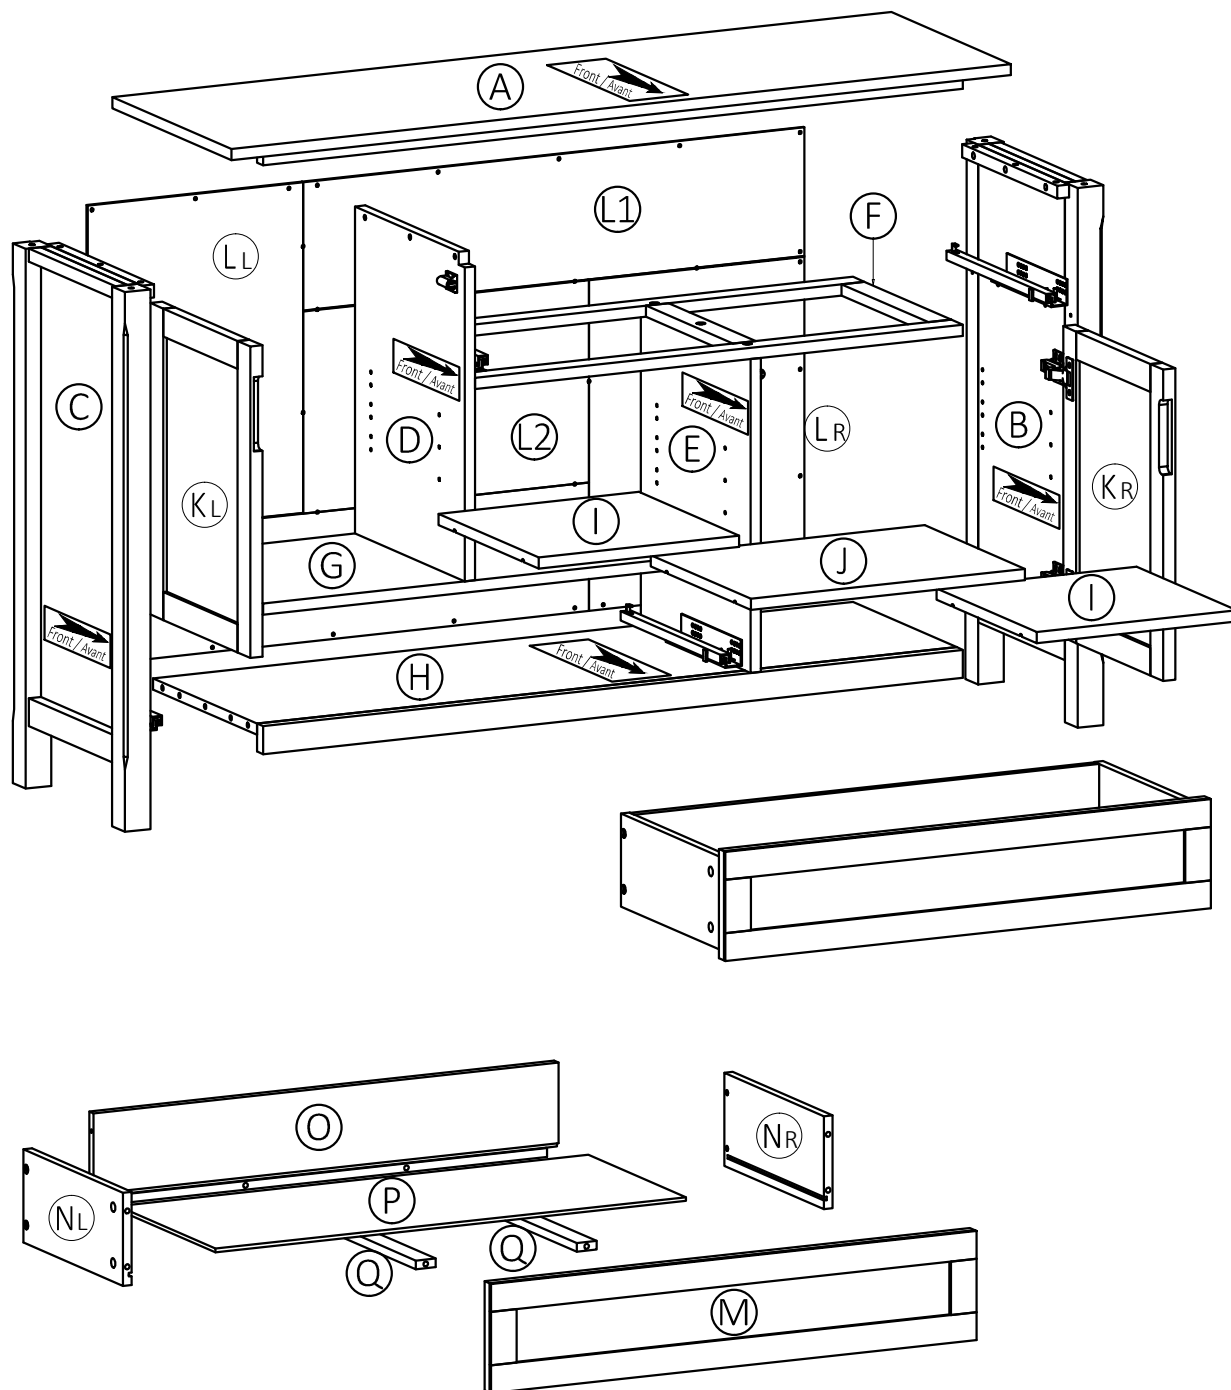




## STEP-1

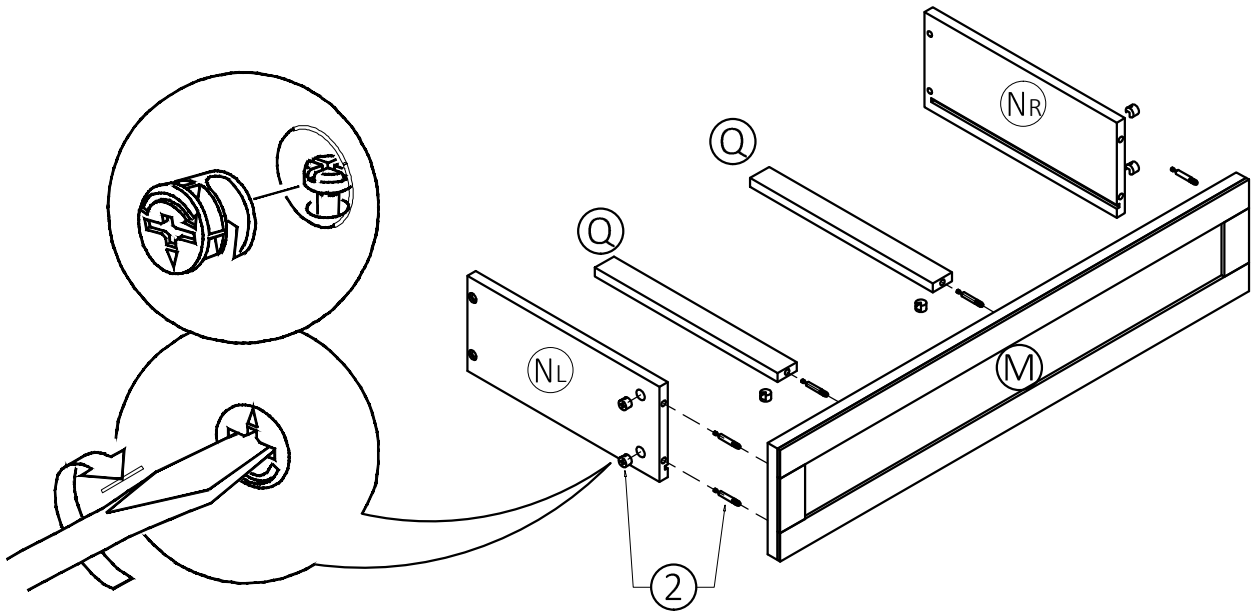 


1. Attach 6 Cam Lock Pins (2) to pre-drilled holes at back of Drawer Front (M).
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (NL, NR) and Drawer Bottom Supports (Q).
3. Insert 6 Cam Locks (2) into pre-drilled holes on Drawer Sides (NL, NR) and Drawer Bottom Supports (Q) (2 Cam Locks on each Drawer Side, 1 Cam Lock on each Drawer Bottom Support).
4. Use flathead screwdriver secure Cam Locks.

## STEP-2

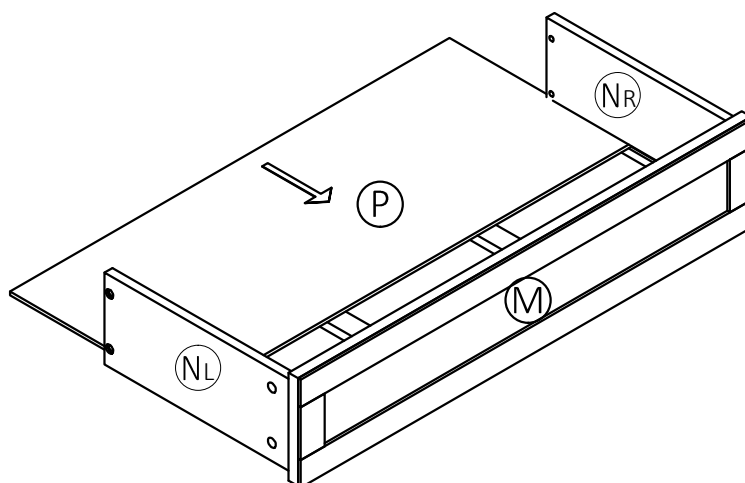 


1. Slide Drawer Bottom (P) firmly into slots on Drawer Sides (NL, NR) and Drawer Front (M).

 STEP-3

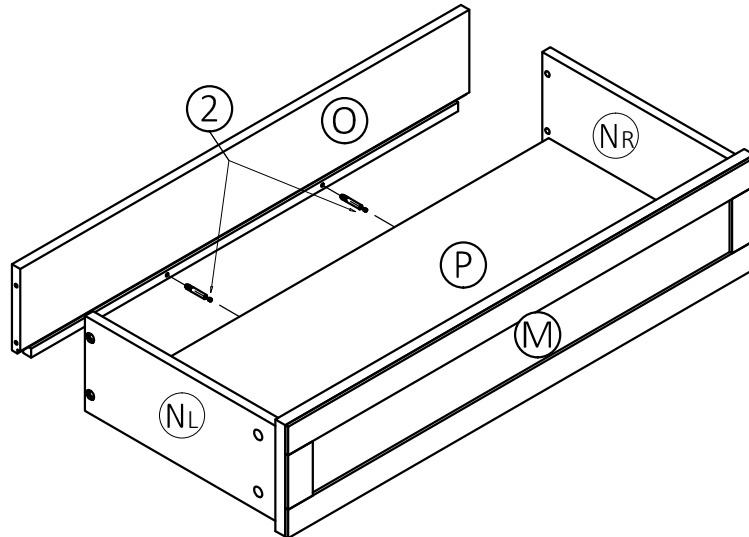


1. Attach 2 Cam Lock Pins (2) to pre-drilled holes at Drawer Back (O).

 STEP-4

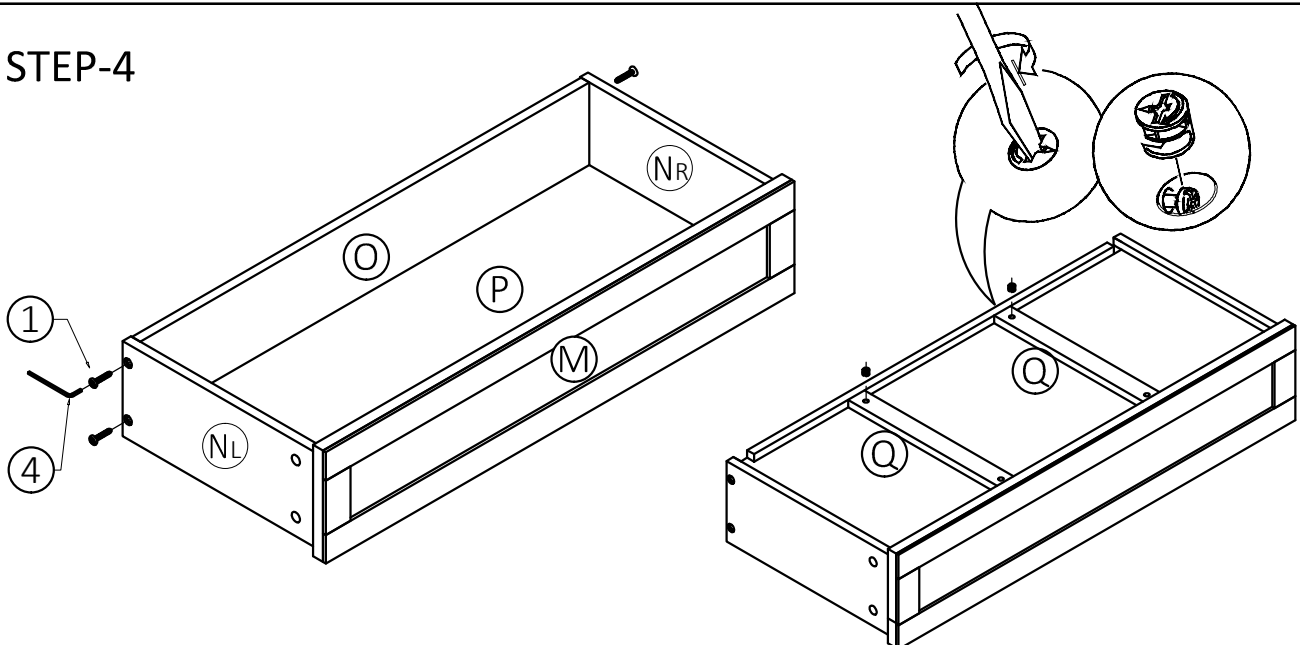


1. Align Cam Lock Pins on Drawer Back (O) with pre-drilled holes on Drawer Bottom Supports (Q).
2. Align Drawer Back (O) with Drawer Bottom (P) and press firmly into slot.
3. Attach Drawer Back (O) using 2 Allen Key Screws (1) through pre-drilled holes on each Side (NL, NR).
4. Use Allen Key (4) to tighten screws. Do not over-tighten.
5. Insert 1 Cam Lock (2) into pre-drilled hole on each Drawer Bottom Support (Q).
6. Use flathead screwdriver secure Cam Locks.

 Repeat Step 1 - 4 for the second drawer.

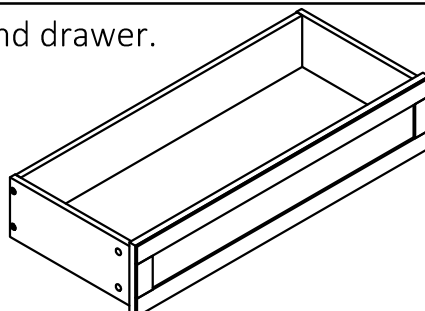


## STEP-5

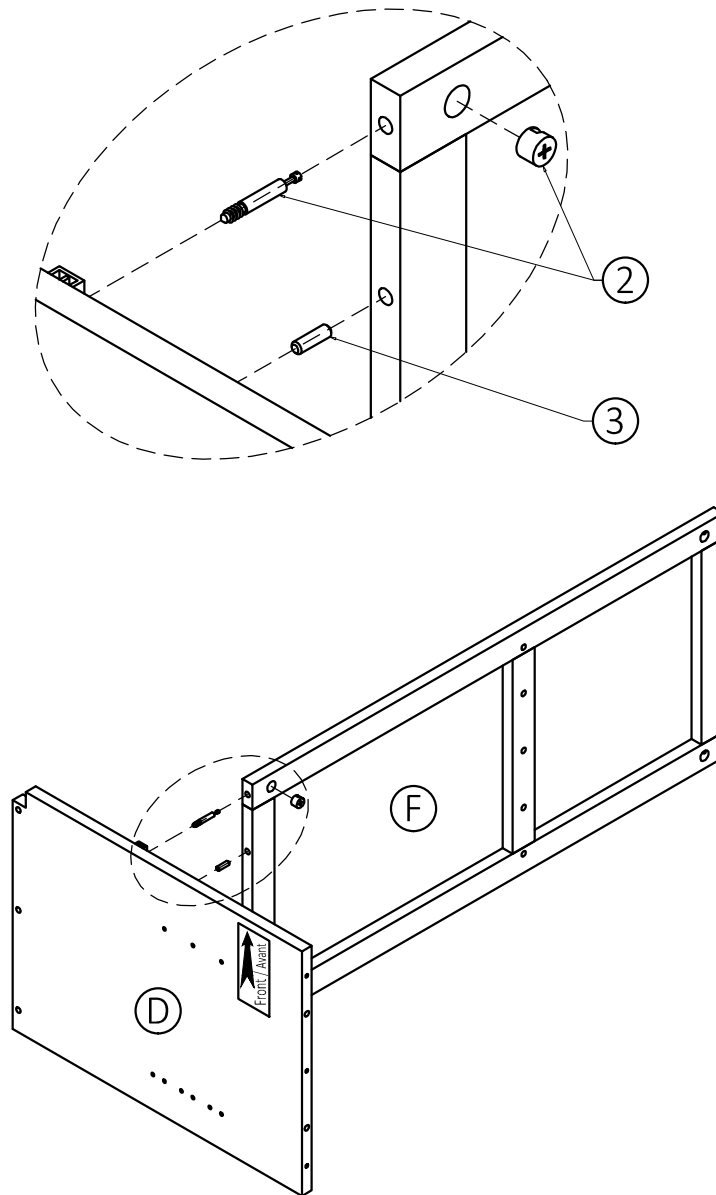 


1. Insert 2 Dowels (3) into pre-drilled holes on Left Divider (D).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 2 Cam Lock Pins (2) to Left Divider (D) using guide holes.
4. Align Cam Lock Pins with pre-drilled holes on Top Frame (F).
5. Insert 2 Cam Locks (2) into pre-drilled holes on Top Frame (F).
6. Use flathead screwdriver secure Cam Locks.

## STEP-6

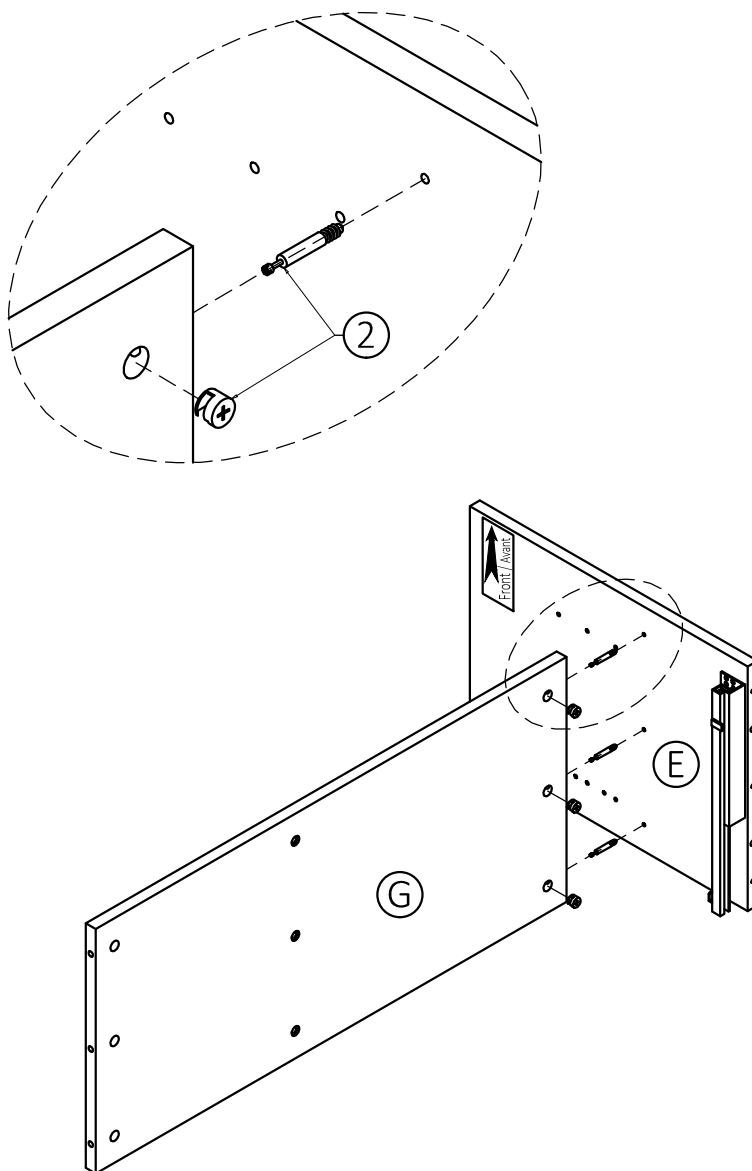 


1. Attach 3 Cam Lock Pins (2) to Right Divider (E) using guide holes.
2. Align Cam Lock Pins with pre-drilled holes on Centre Shelf (G).
3. Insert 3 Cam Locks (2) into pre-drilled holes on Centre Shelf (G).
4. Use flathead screwdriver secure Cam Locks.

## STEP-7

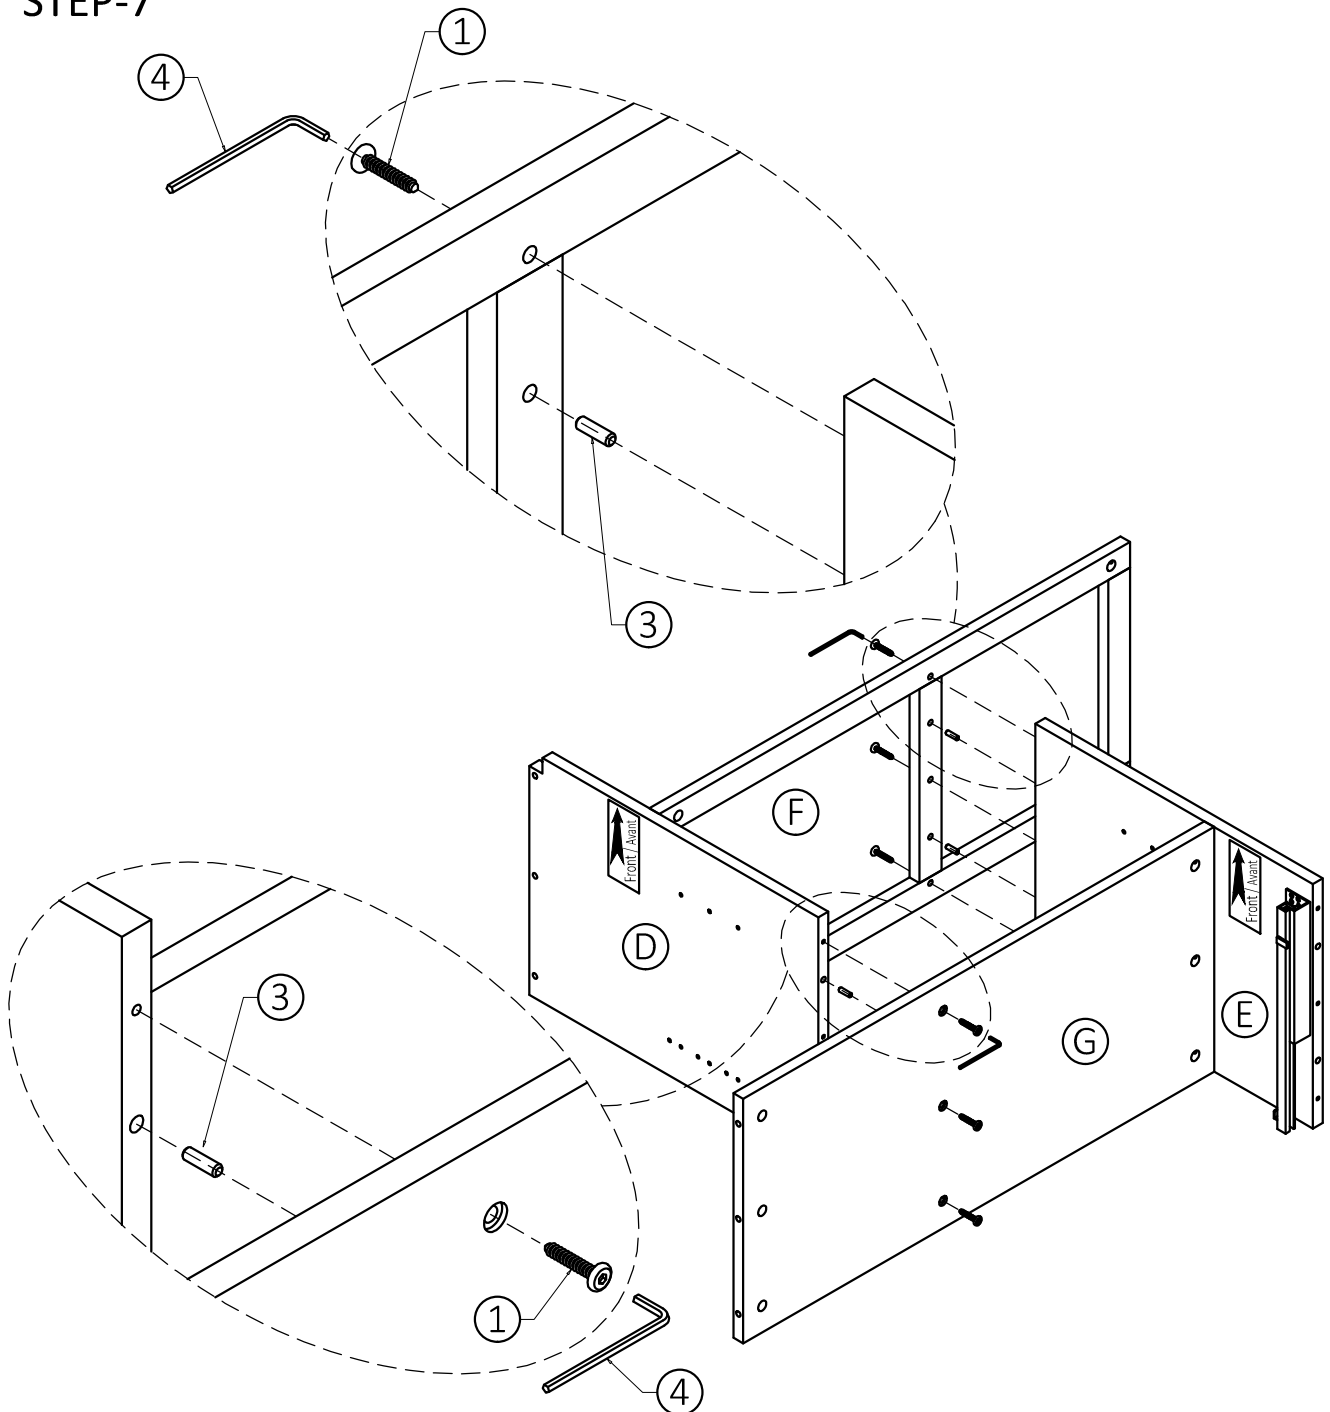 


1. Insert 2 Dowels (3) into pre-drilled holes on each Left Divider (D) and Right Divider (E).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Left Divider (D) to Centre Shelf (G) using 3 Allen Key Screws (1).
4. Attach Right Divider (E) to Top Frame (F) using 3 Allen Key Screws (1).
5. Use Allen Key (4) to tighten screws. Do not over-tighten.

## STEP-8

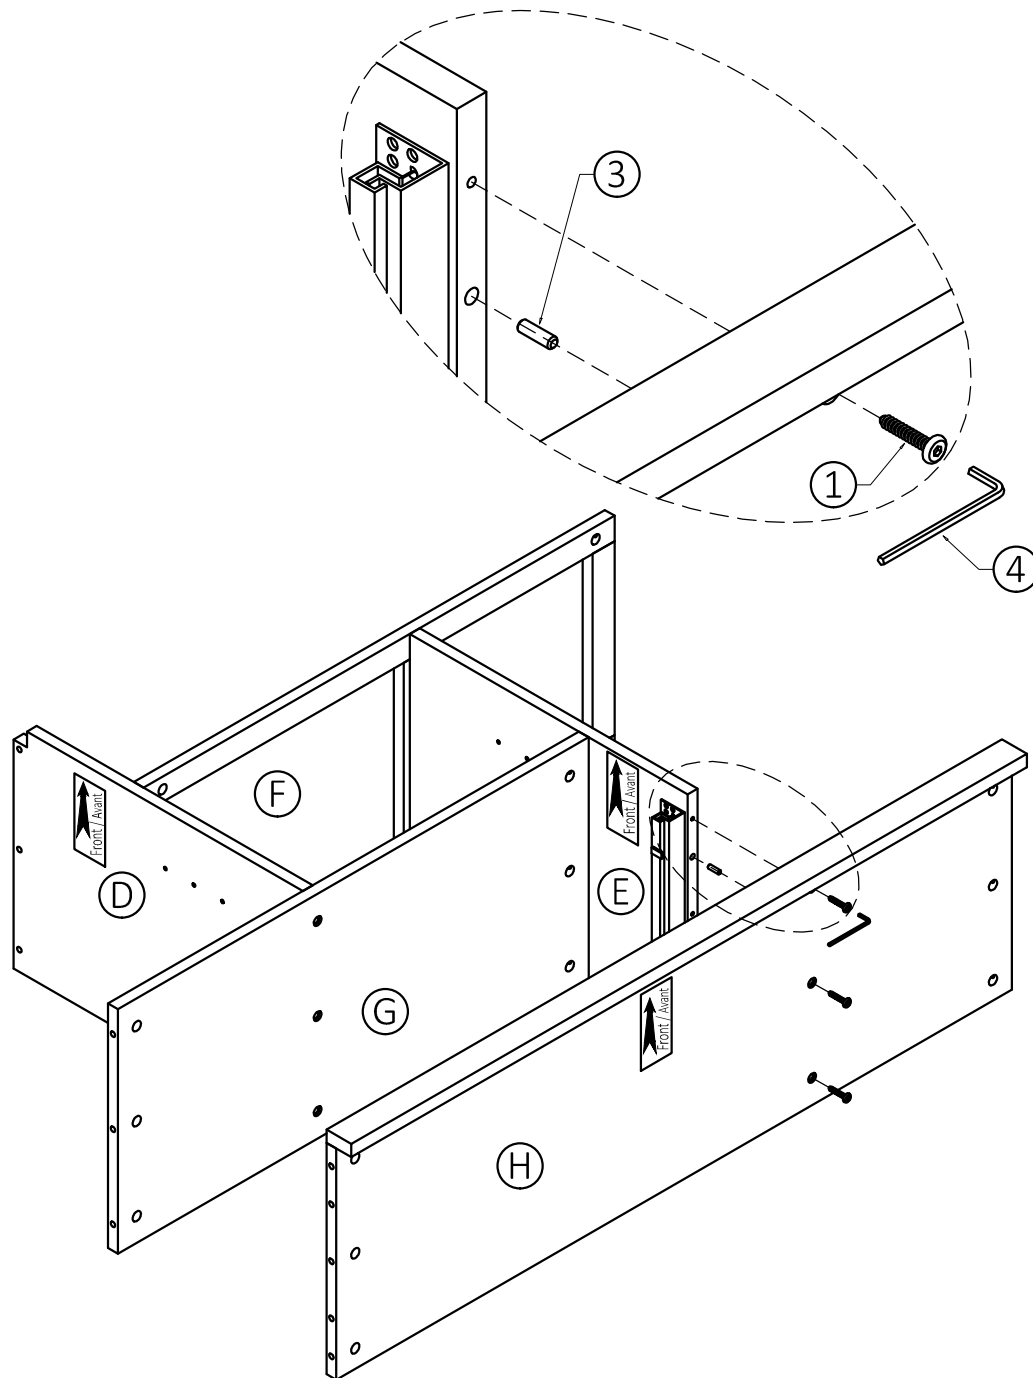 


1. Insert 2 Dowels (3) into pre-drilled holes on Right Divider (E).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach Right Divider (E) to Bottom Shelf (H) using 3 Allen Key Screws (1).
4. Use Allen Key (4) to tighten screws. Do not over-tighten.

## STEP-9

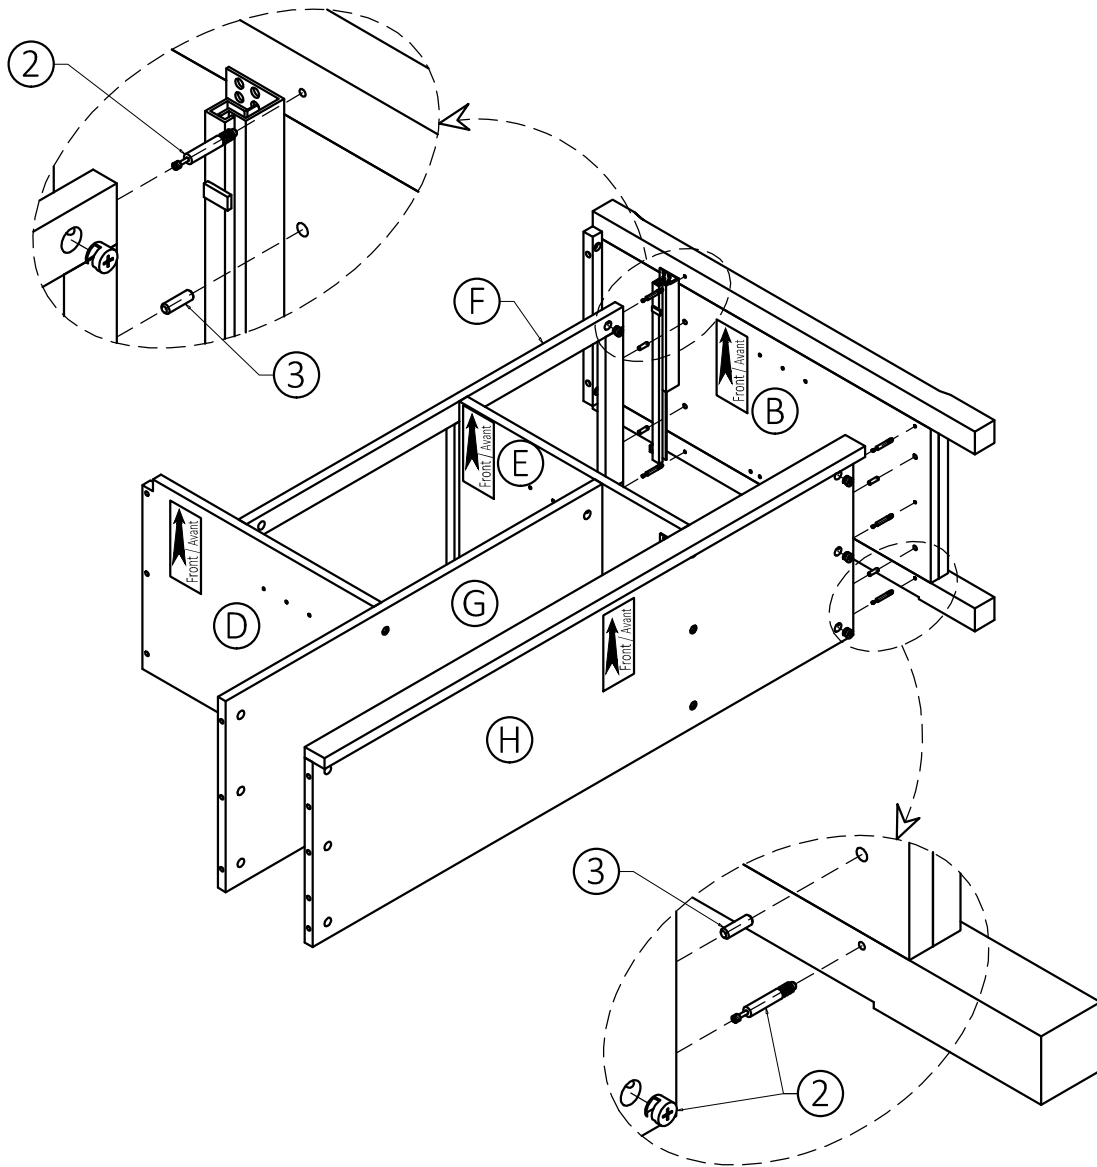 

1. Insert 4 Dowels (3) into pre-drilled holes on Bottom Shelf (H) and Top Frame (F) (2 Dowels on each part).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 5 Cam Lock Pins (2) to Right Side (B) using guide holes.
4. Align Cam Lock Pins with pre-drilled holes on Top Frame (F) and Bottom Shelf (H).
5. Insert 5 Cam Locks (2) into pre-drilled holes on Top Frame (F) and Bottom Shelf (H).
6. Use flathead screwdriver secure Cam Locks.


## STEP-10

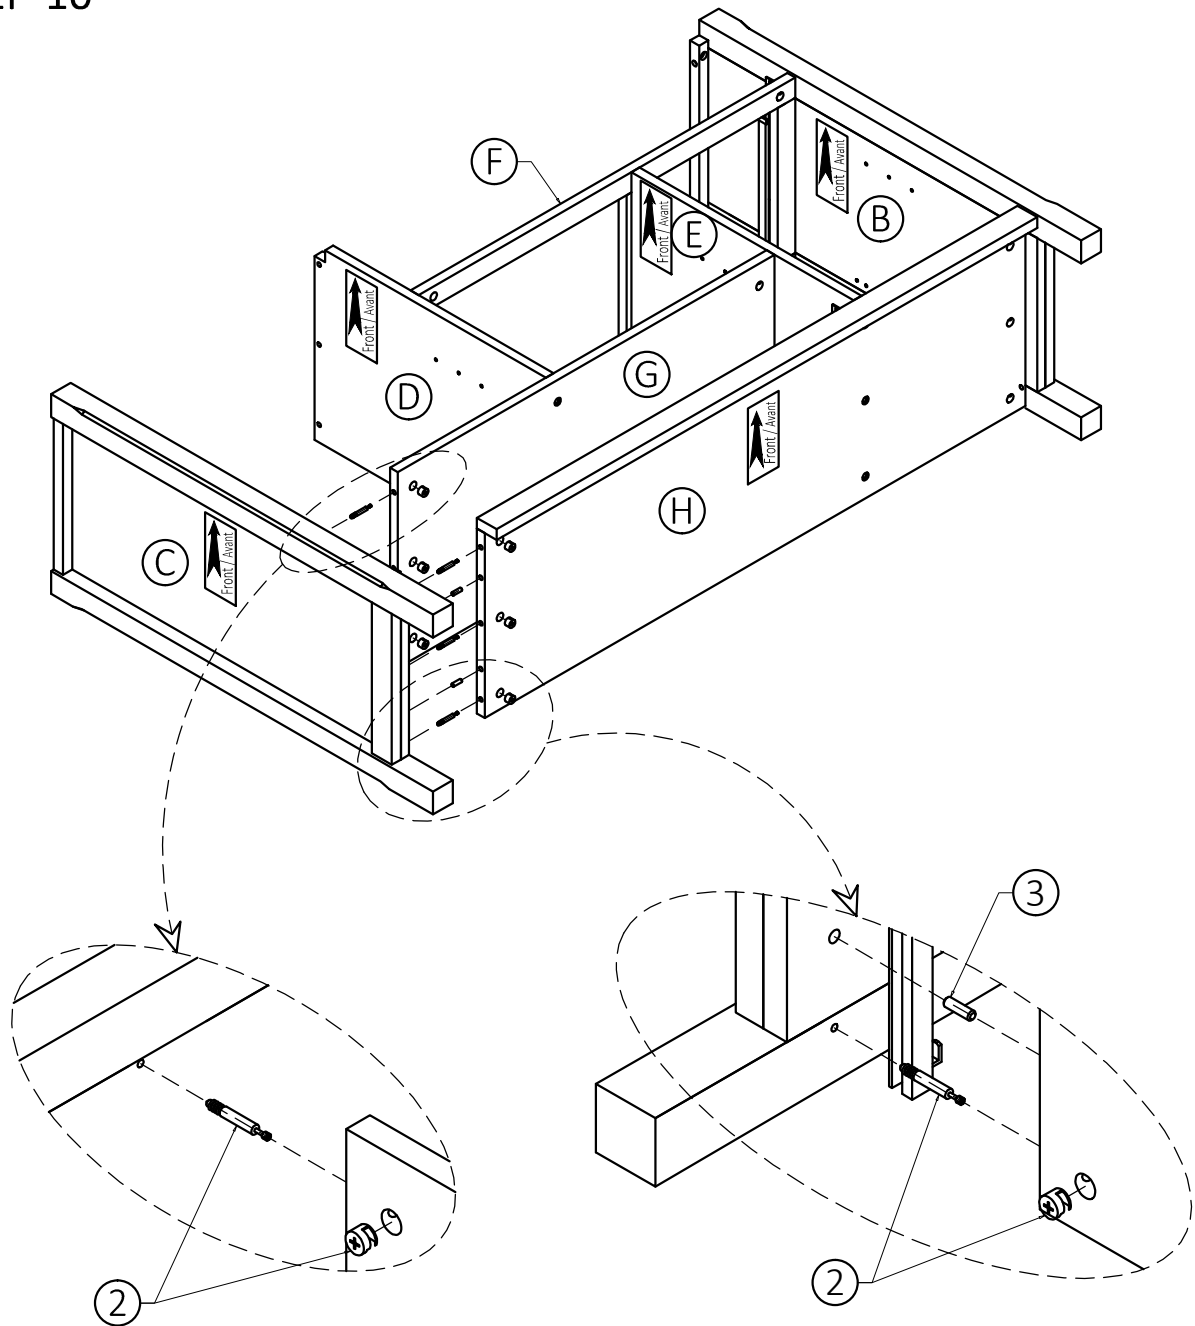 

1. Insert 2 Dowels (3) into pre-drilled holes on Bottom Shelf (H).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 6 Cam Lock Pins (2) to Left Side (C) using guide holes.
4. Align Cam Lock Pins with pre-drilled holes on Centre Shelf (G) and Bottom Shelf (H).
5. Insert 6 Cam Locks (2) into pre-drilled holes on Centre Shelf (G) and Bottom Shelf (H).
6. Use flathead screwdriver secure Cam Locks.




## STEP-11

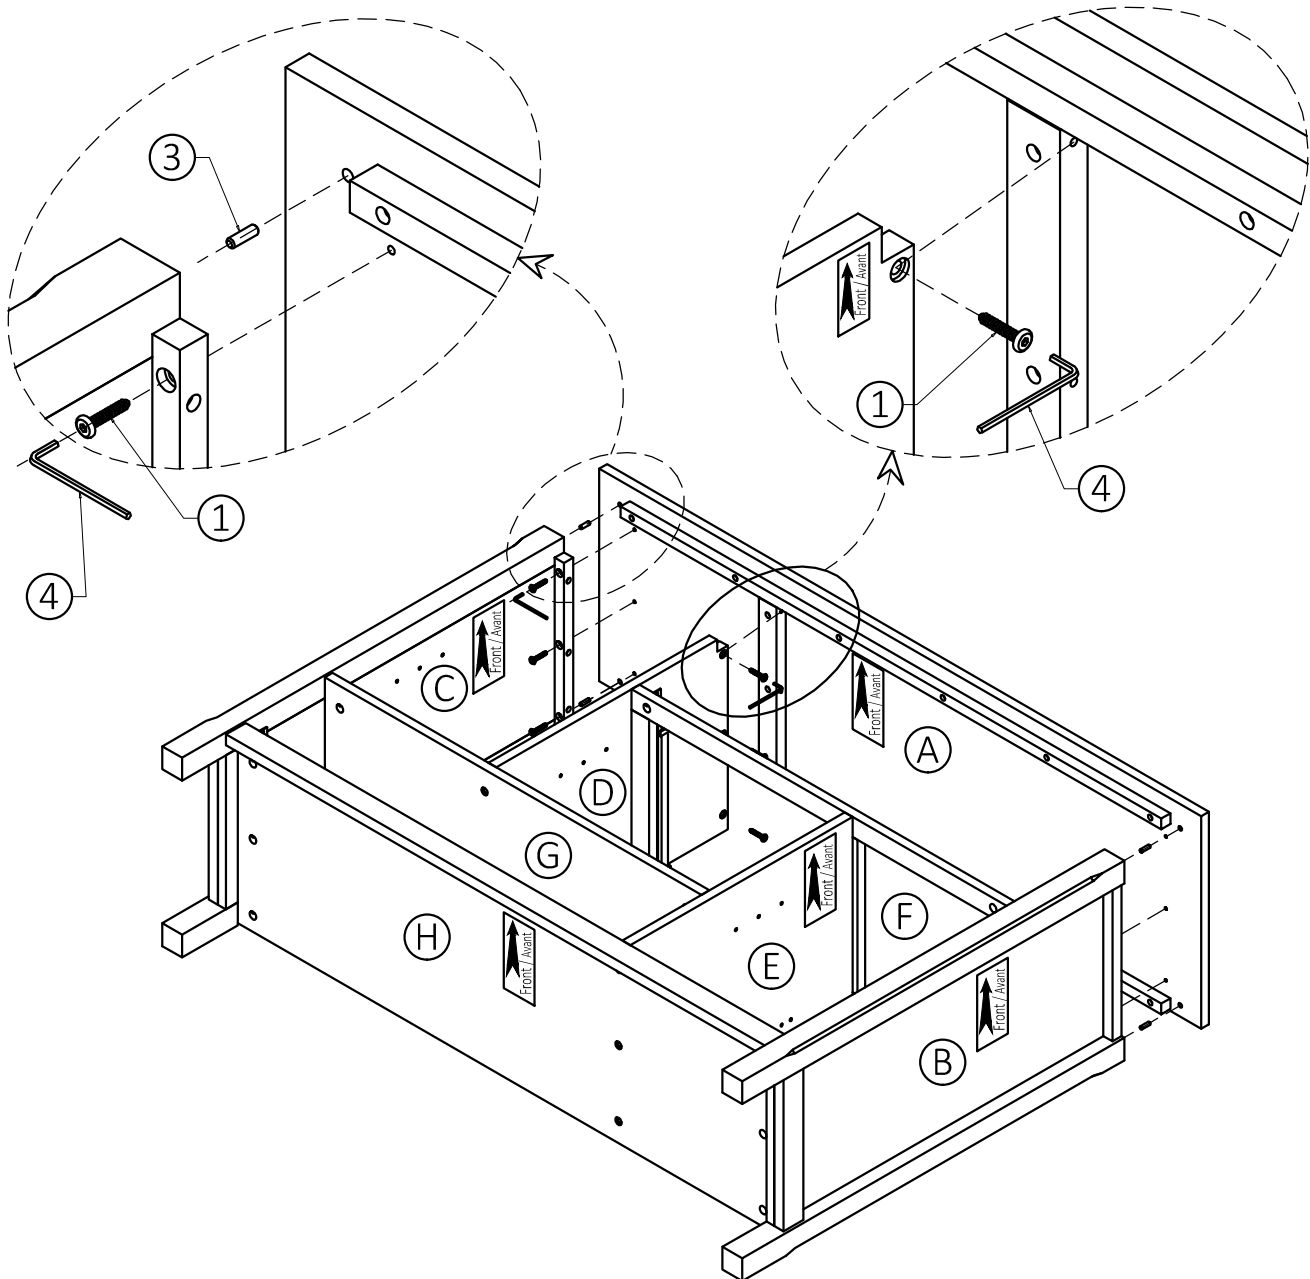 


1. Insert 4 Dowels (3) into pre-drilled holes on Right Side (B) and Left Side (C).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Align pre-drilled holes bottom corners of Top (A) with Dowels (3) in Right Side (B) and Left Side (C).
4. Attach Top (A) to Right Side (B), Left Side (C) and Left Divider (D) using 9 Allen Key Screws (1).
5. Use Allen Key (4) to tighten Screws. Do not over-tighten.

## STEP-12

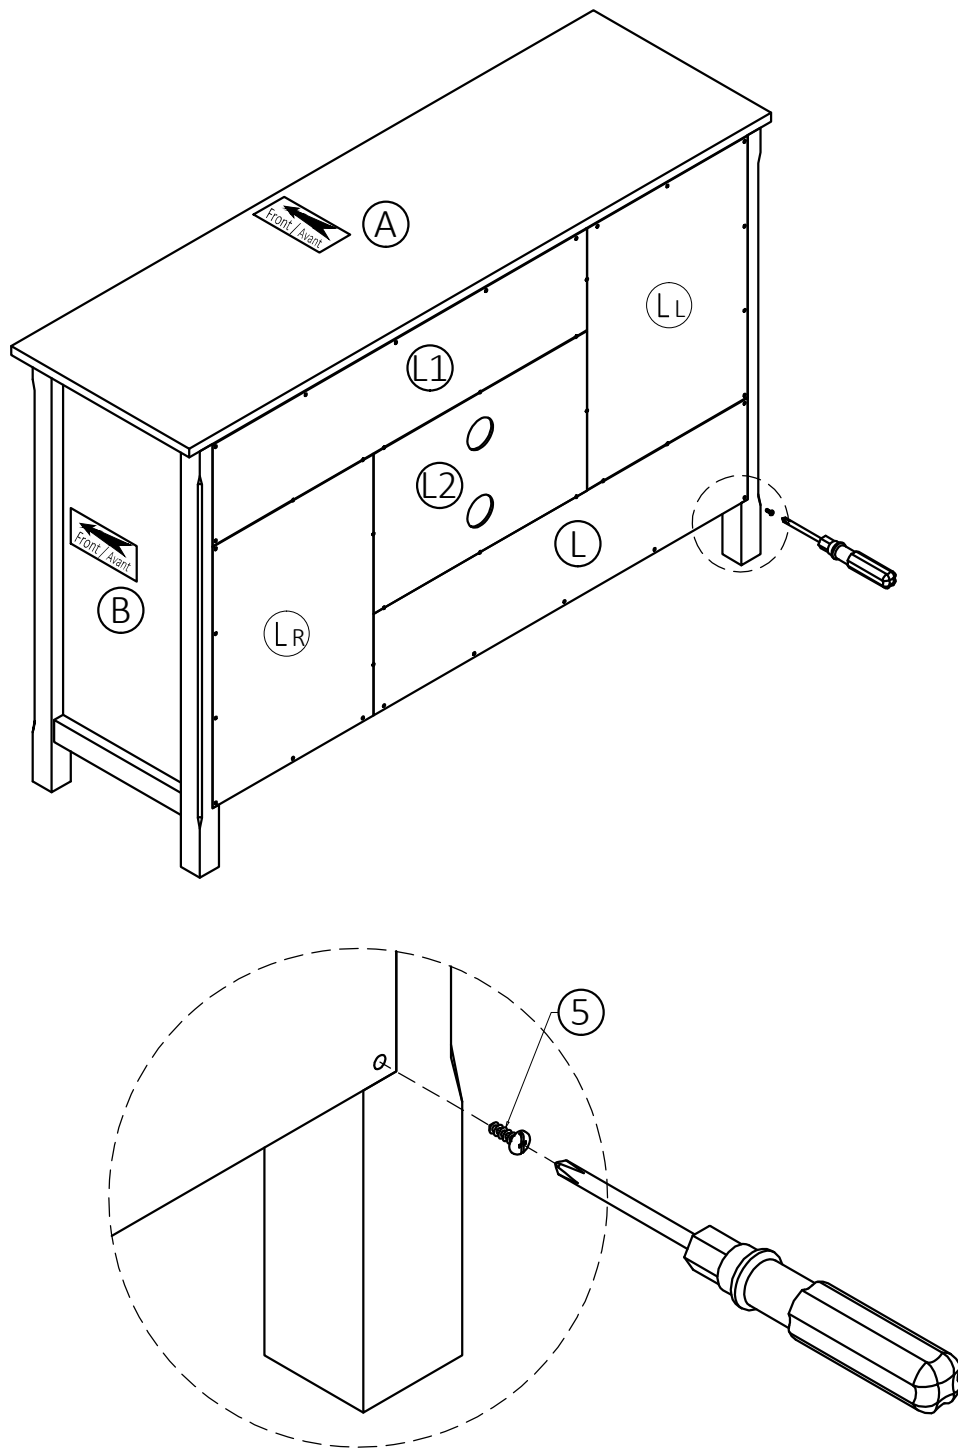 


1. Attach Back Panels (LL), (LR), (L1), (L2) to back frame of TV Stand using 38 Phillips Screws Round Head (5) through pre-drilled holes.
2. Use Phillips Screwdriver to tighten screws.

 STEP-13

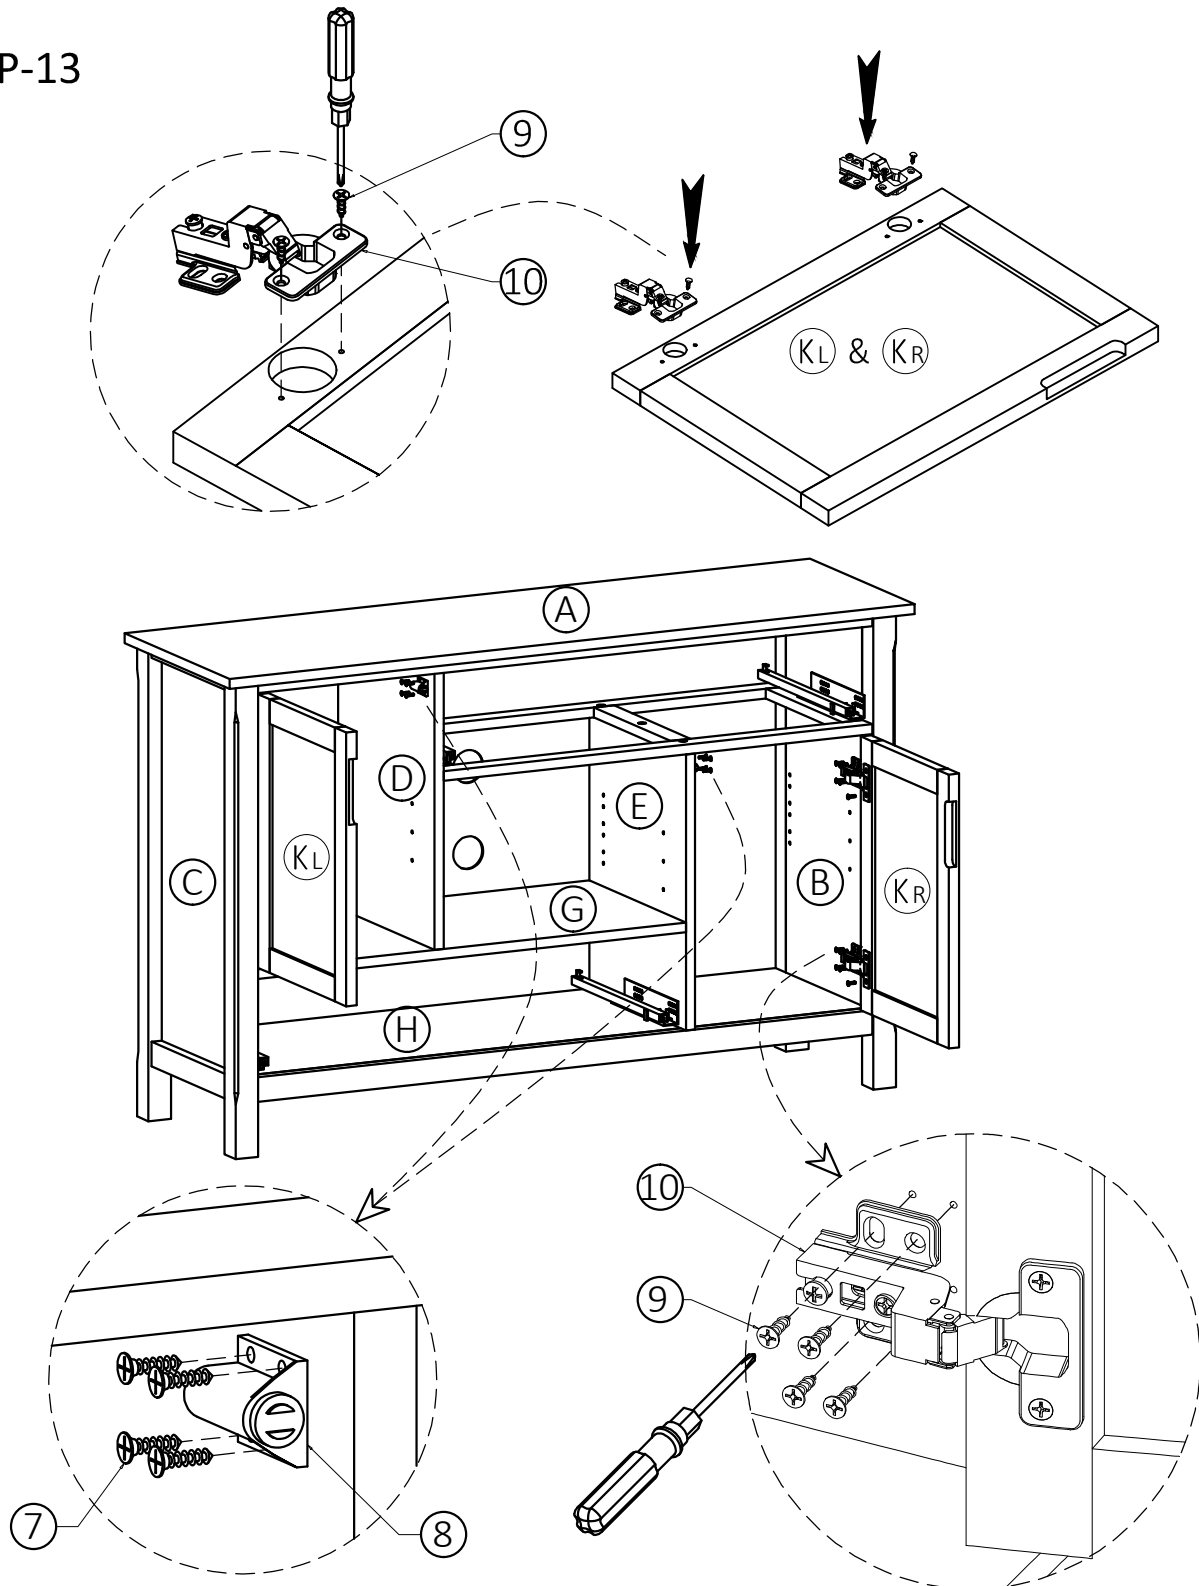

1. Attach Adjustable Hinges ⑩ to Doors ①L, ①R using Phillips Screws ⑨ into guide holes on Doors ①L, ①R.
2. Attach Adjustable Hinges on Doors ①L, ①R to Sides ①C, ①B using Phillips Screws ⑨ into guide holes on Sides ①C, ①B.
3. Attach Magnets ⑧ using Phillips Screws ⑦ into guide holes on Left Divider ①D and Right Divider ①E.
4. Use Phillips screwdriver to snugly tighten screw.

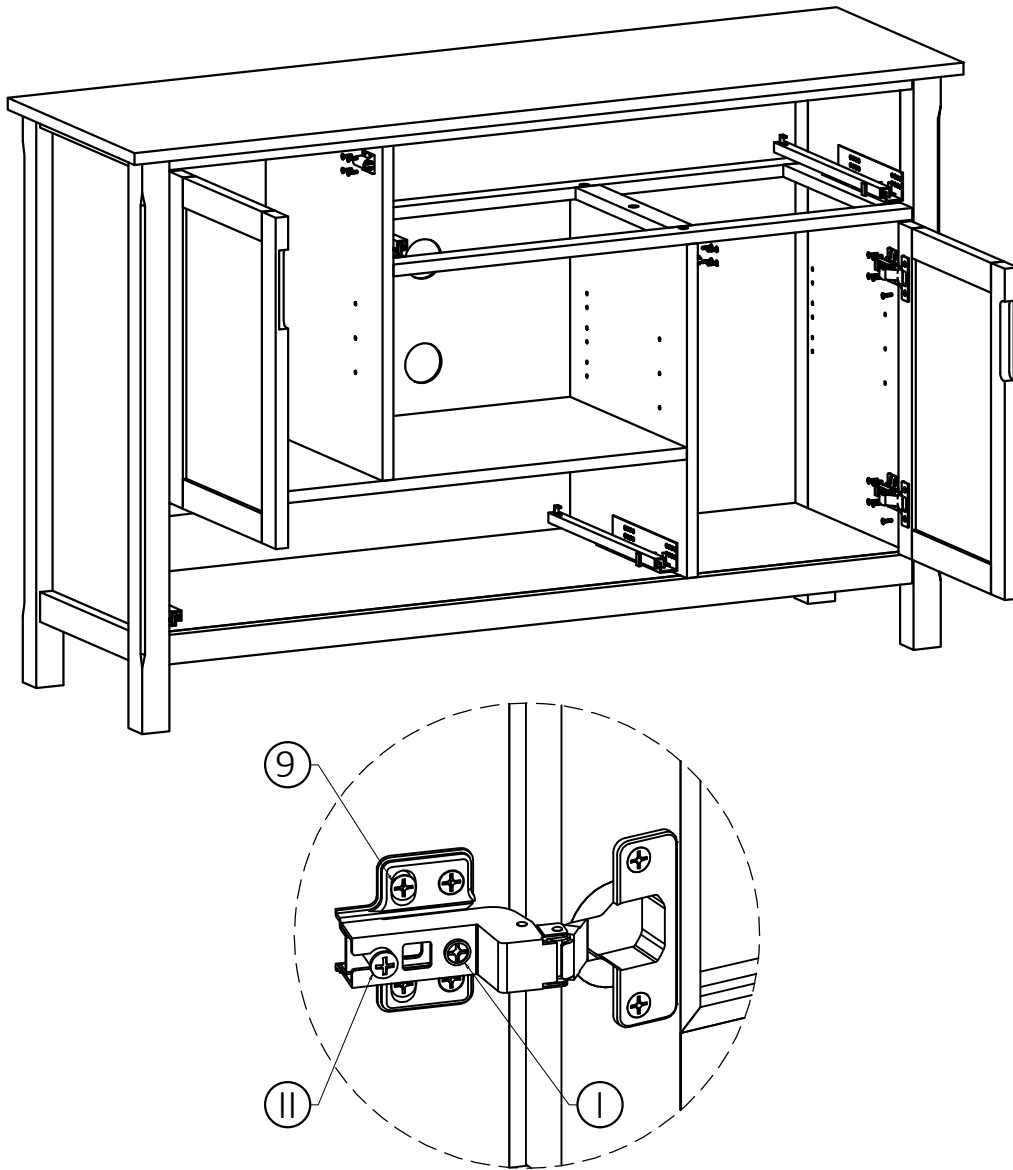 IMPORTANT NOTE:

Tighten the Screw marked ⑪ to fasten hinge. The door may need to be adjusted so that all the spaces between the door and the unit sides are equal. To adjust, follow instructions:

1. Side adjustment 4 mm

To move the door towards the side panel, loosen screw ① and tighten screw ⑪.

To move the door away from the side panel, loosen screw ⑪ and tighten screw ①.


2. Depth adjustment 4 mm

Loosen screw ⑪ ( just one turn ), adjust door to desired position, re-tighten screw .

3. Height adjustment

Loosen screw ⑨, adjust door to desired position, re-tighten screw .

## STEP-14

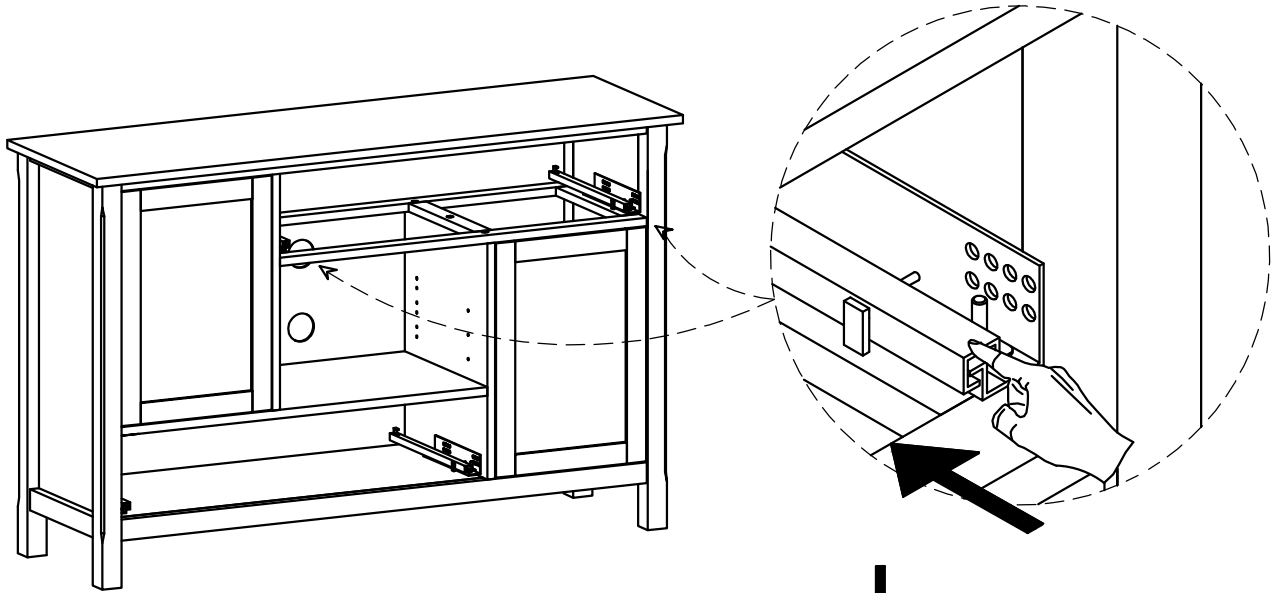 


1. Keep your position 0.5 m ( 20 inch ) away from the glider!
2. Slightly push the rail backward to unlock. Hold the rail while it is pulled out automatically.


Important Note:

While push the rail backward, do not release the rail. Instead please hold it in order to avoid the propulsive force by its springs.

 3. Pull the lock (C) out of the rail.

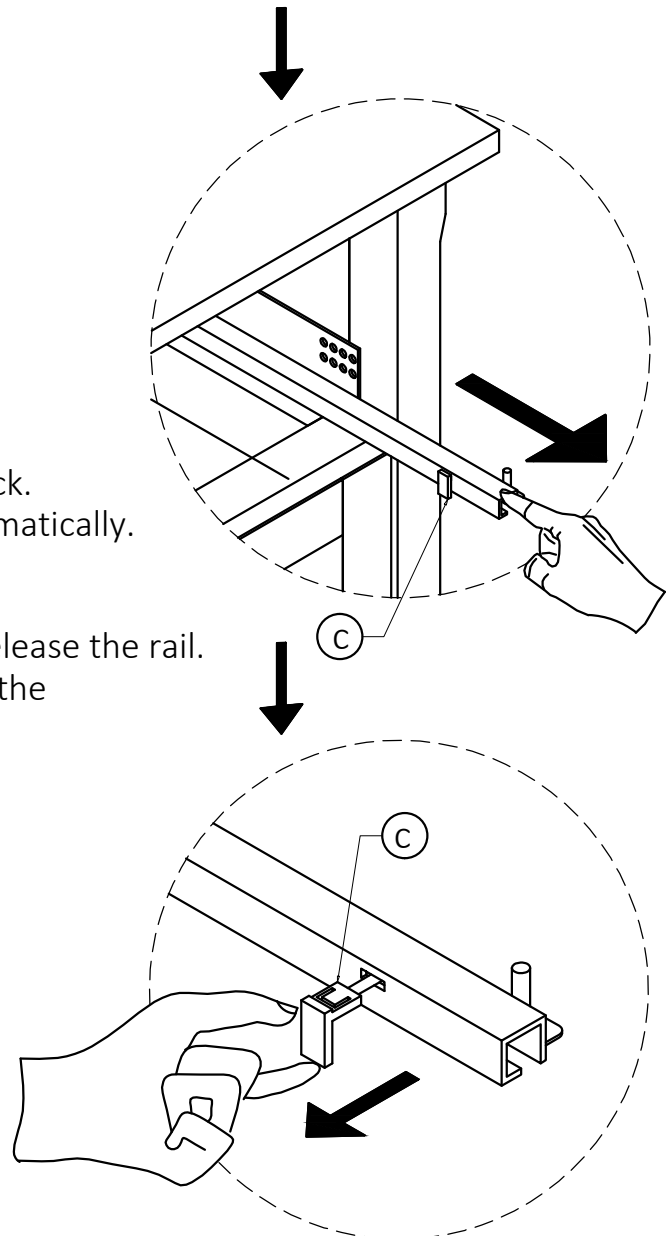


STEP-15

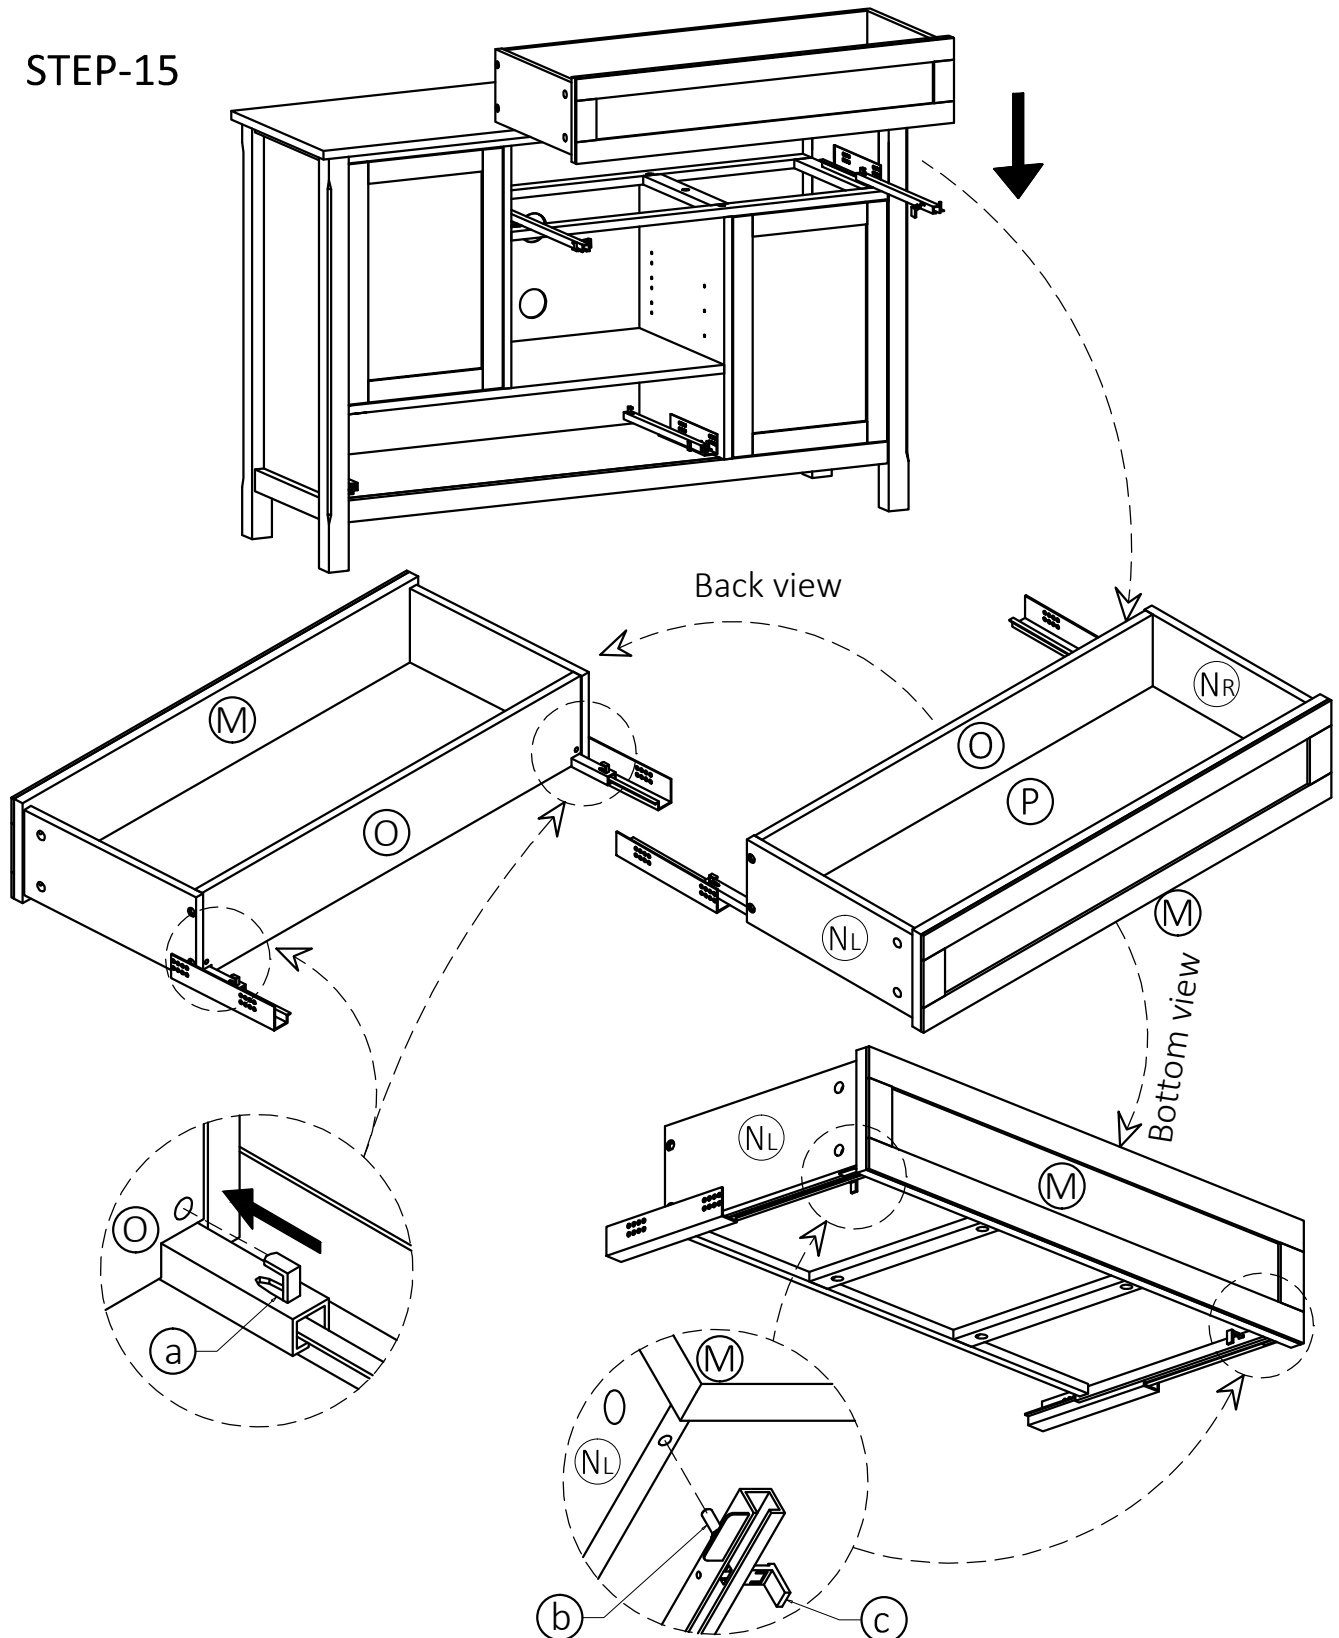 

1. Place the drawer on top of 2 gliders.
2. Push the drawer along the gliders until the 2 holes at the rear of the back panel ( of drawer box ) inserted into the hook at back of the rails.
3. Inserting 2 holes underneath of 2 side panel ( of drawer box ) into 2 pins (b) on the rails.


## STEP-16

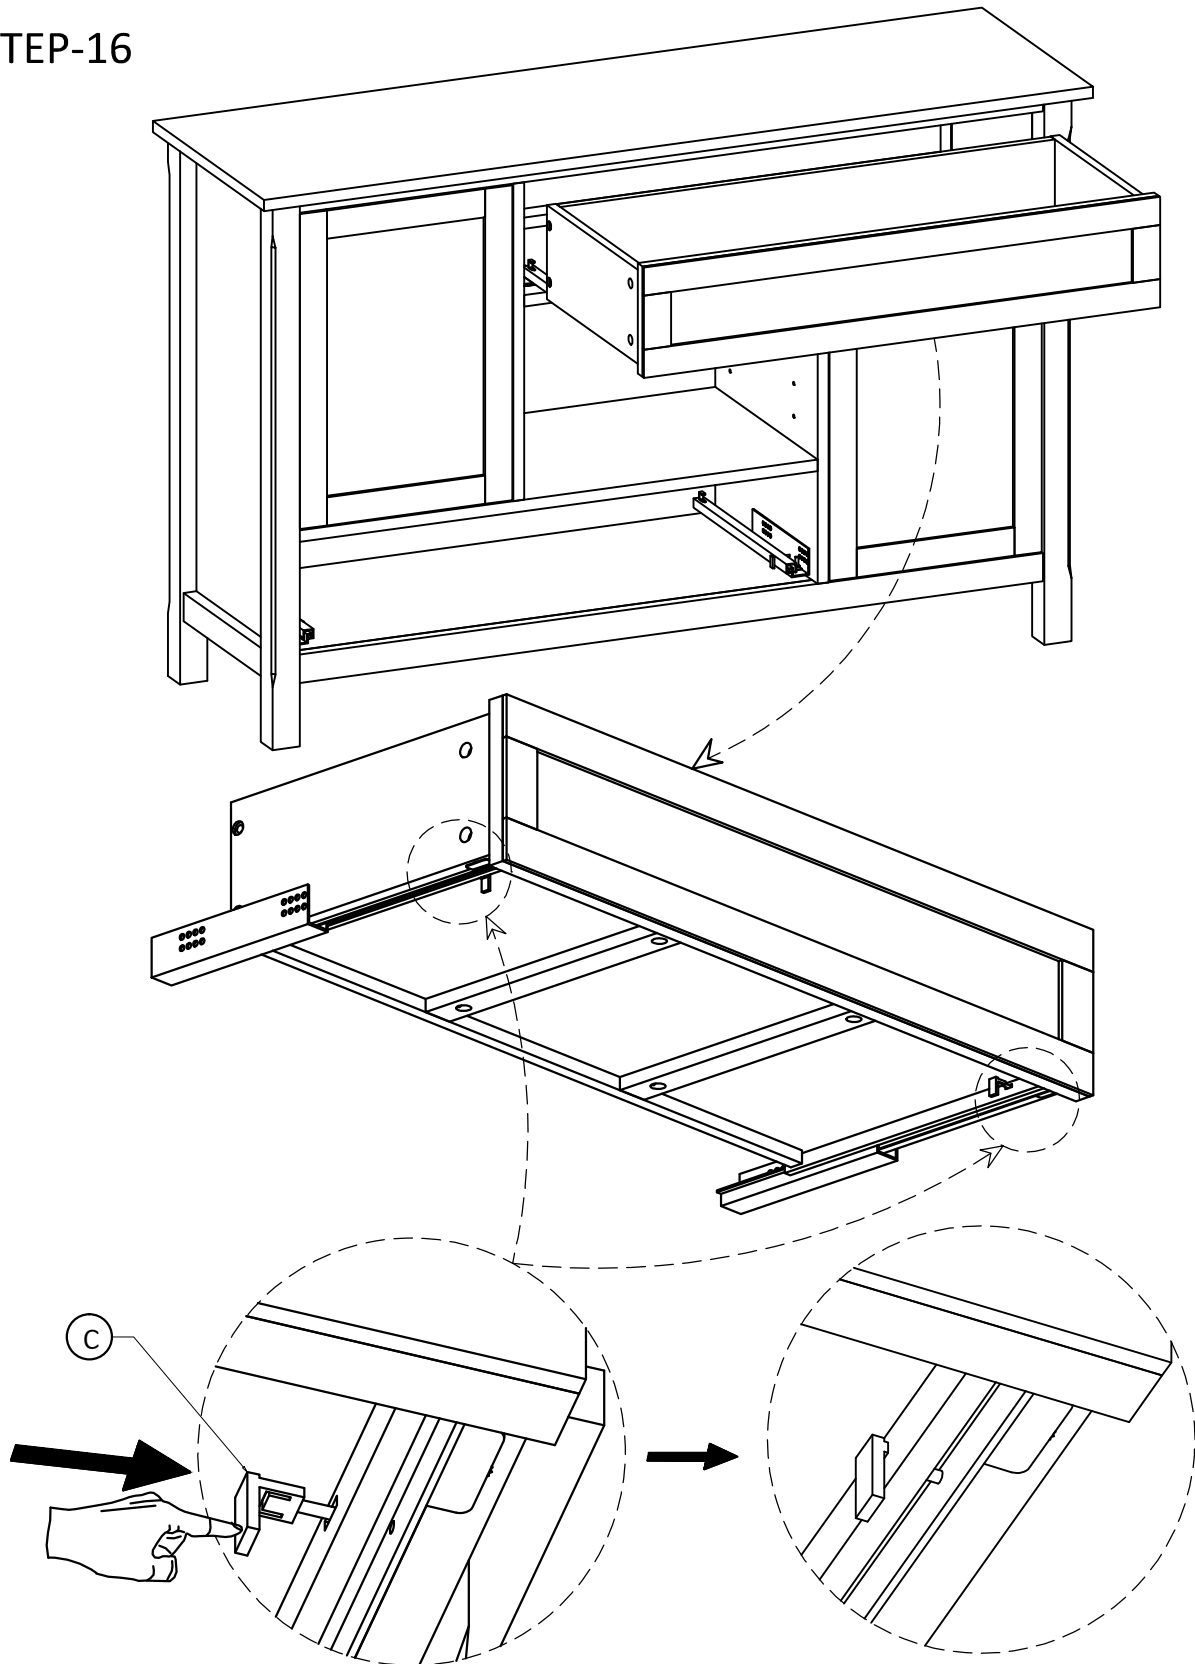 

Lock position ( Both side of drawer ).

1. Push lock (C) on the rails to lock the rail and the drawer.


## STEP-17

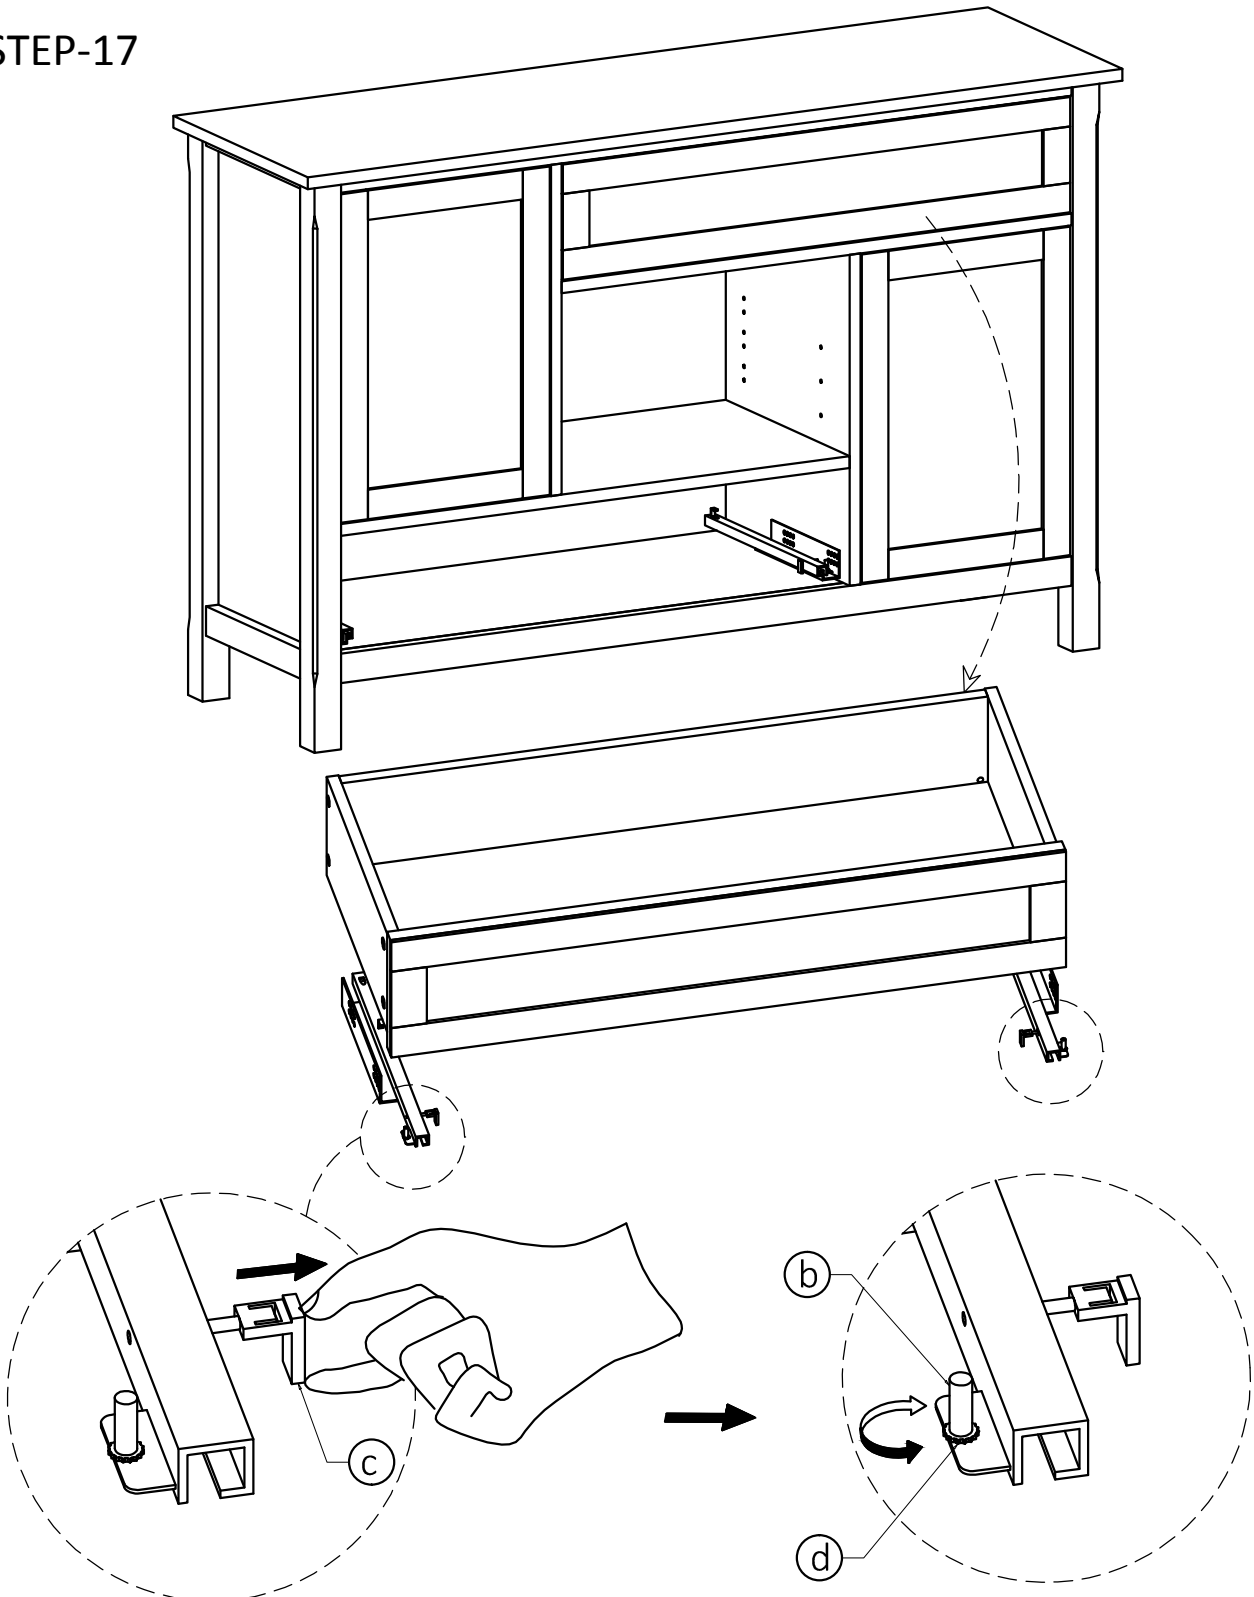 

1. After completing the assemble of drawer box, if it's not well positioned with the front of drawer frame, pls follow the below steps:
  - Unlock the lock (c) by pulling it out.
  - Lift up the front of drawer box.
  - Adjusting the cog-wheel (d) to lower / higher the side panel to suitable position.
  - Return the front of drawer box to its fixed position & push lock (c) to lock the rail & drawer.







## STEP-18

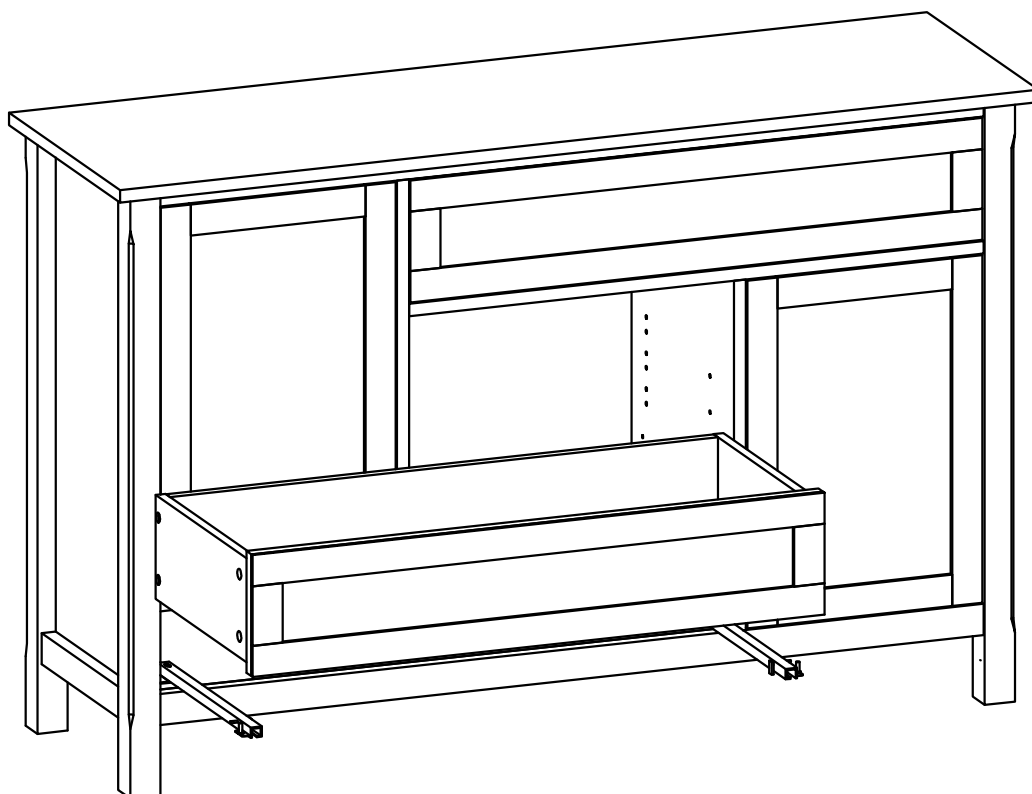 

1. Repeat Step 14-17 for the second Drawer.

    STEP-19

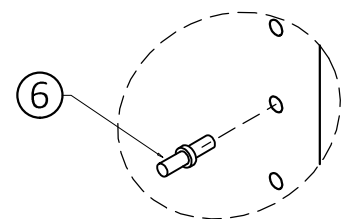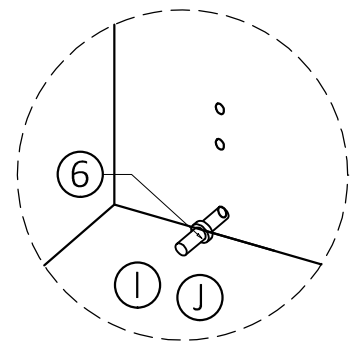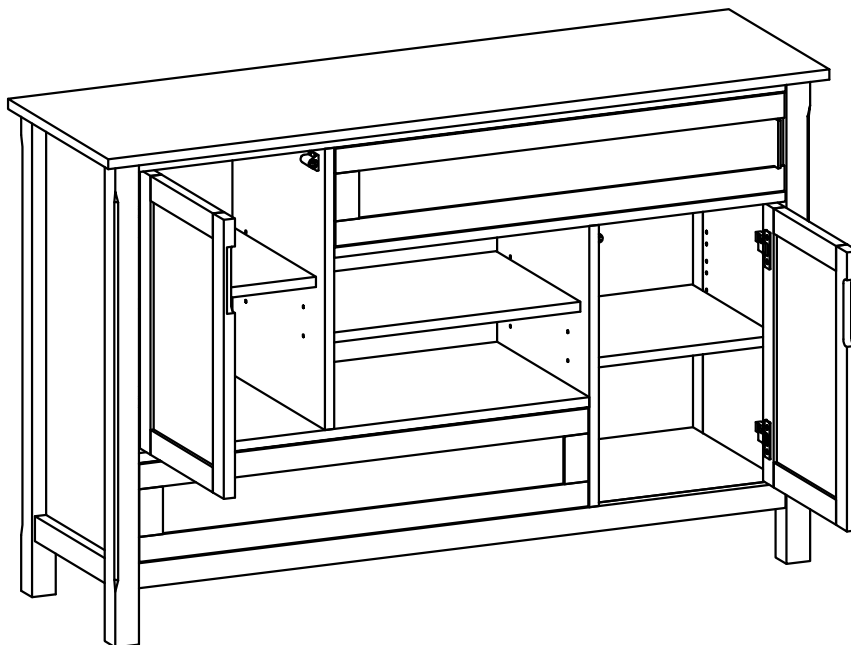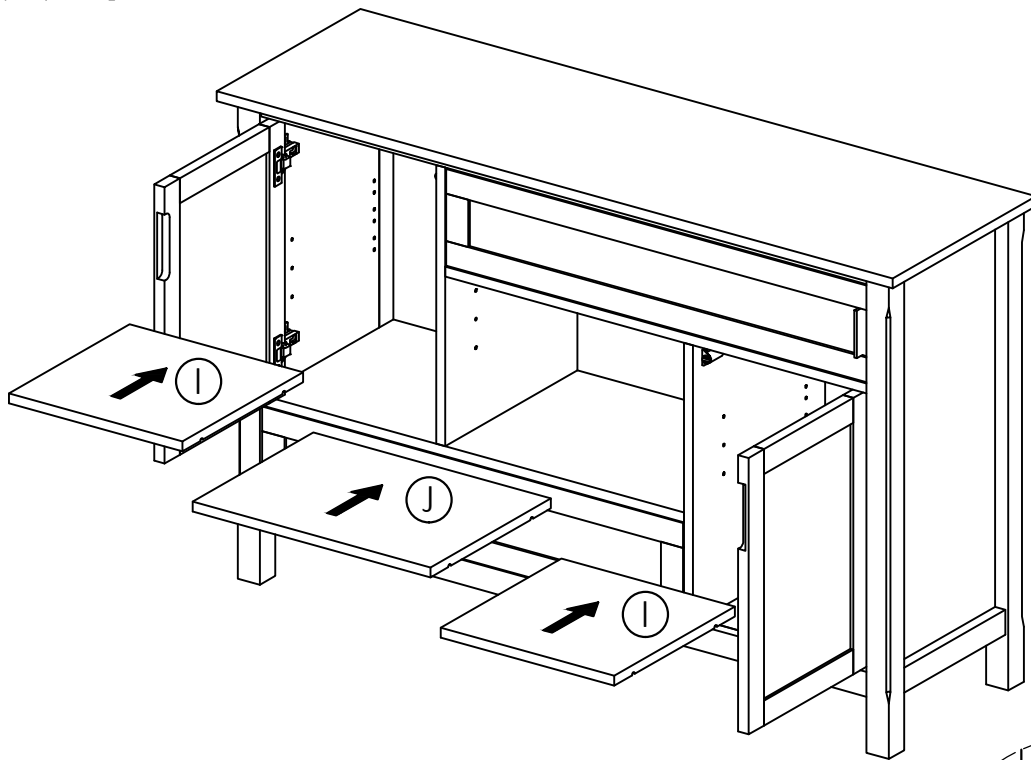


1. Use 4 Shelf Supports (6) for each Side Shelf (I) and Centre Shelf (J) in desired location.
2. 2 Shelf Supports (6) may be used on back top of each Side Shelf (I) and Centre Shelf (J) as a tipping restraint.

## FURNITURE TIP OVER RESTRAINT ASSEMBLY

 
### **WARNING**

Serious or fatal crushing injuries can occur from furniture tip-over.  
If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.



**NOTE:** The screwdriver is not included in the hardware pack.


### STEP-20

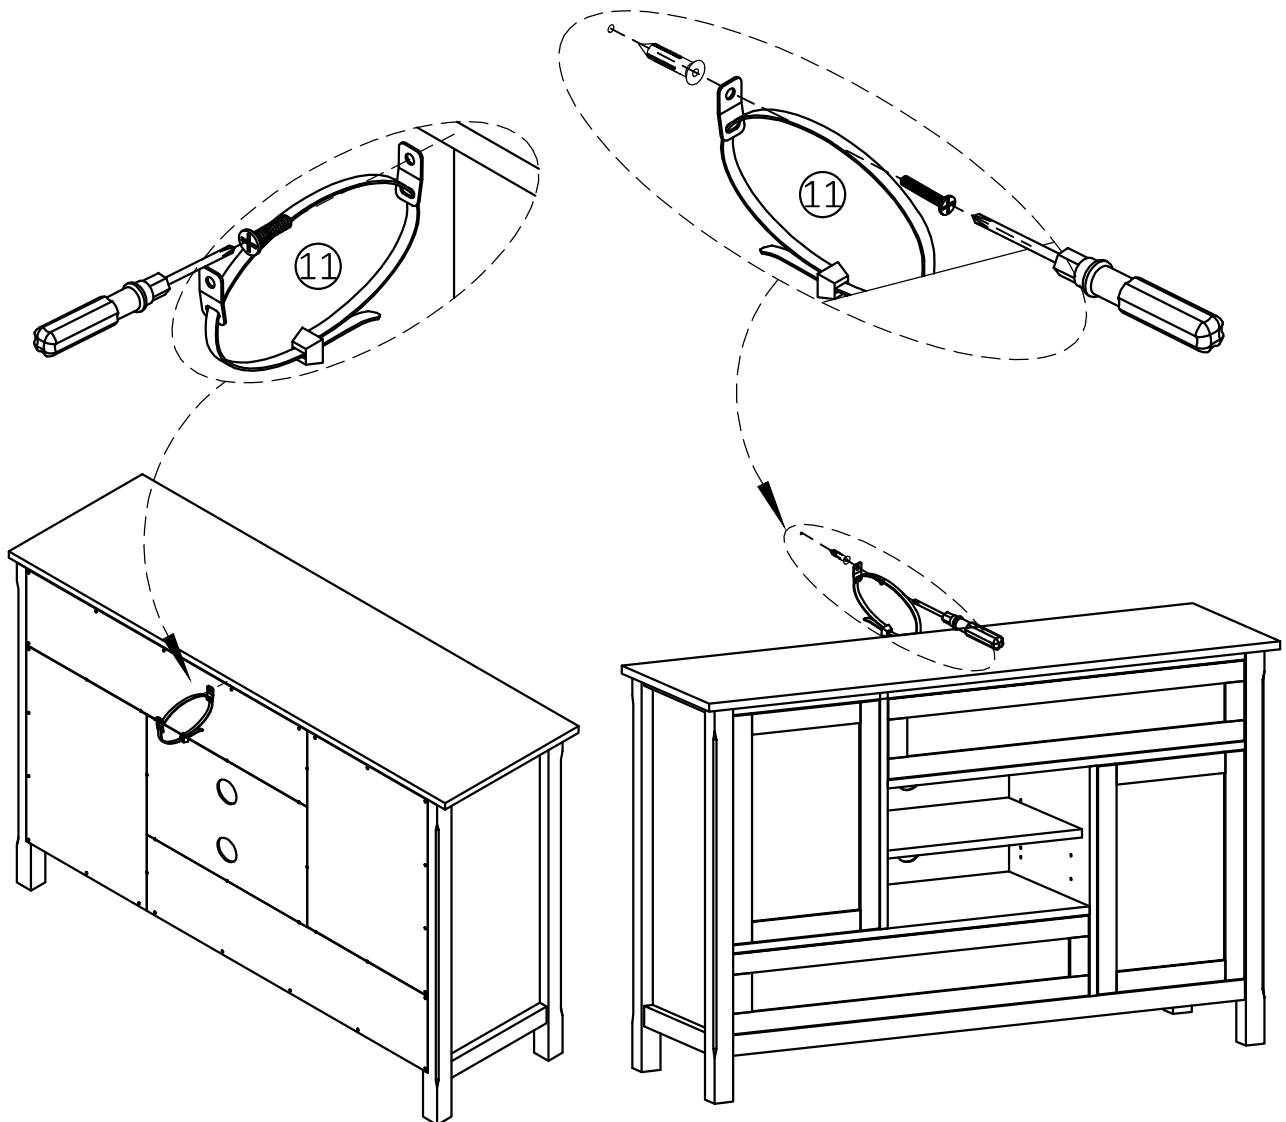 


## FURNITURE TIP OVER RESTRAINT ASSEMBLY

### Furniture Tip Over Restraint Instructions:

 
1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

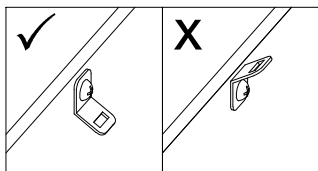

2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches **below** the bracket mounted to the furniture.

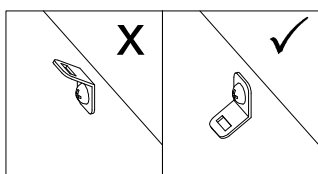

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

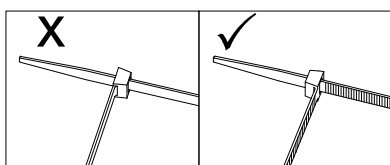

- DO NOT place heavy objects in top drawers
- DO NOT let children climb or hang on drawers, doors or shelves



## WARRANTY

Thank you for purchasing a Simpli Home – Wyndenhall – Brooklyn + Max product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at [customerservice@simpli-home.com](mailto:customerservice@simpli-home.com).

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.