

Item No: TD-12302D

Teamson Kids – Urban Adventure Play Kitchen –Light Wood Grain Effect

WARNING

Small parts and sharp points may be present prior to assembly.


Care Instructions

To clean your product, use mild soap and water on adamp cloth. Do not use window cleaners or cleaning abrasives as they will scratch the surface and could damage the protective coating.

Customer Service

For questions regarding this product, or to recevice replacement or missing parts, please contact customer service based on your location. Please have ready the model number and part number(s) located in this assembly instruction sheet when you contact us.

www.teamsonkids.com

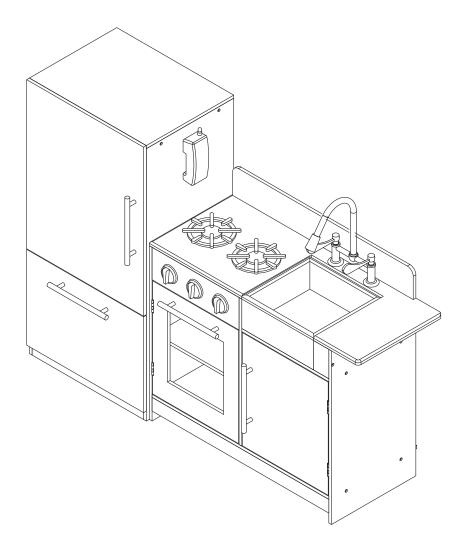

PRODUCT PARTS:								
Α	В	С	D	Е	F			
1PC	1PC	1PC	1PC	1PC	1PC			
G	Н		J	K	L			
1PC	1PC	1PC	1PC	1PC	1PC			
M	Ν	0	Р	Q	R			
1PC	1PC	1PC	1PC	1PC	1PC			
S	Т	U	V	W	X			
1PC	1PC	1PC	1PC	1PC	1PC			
Υ	Mini Furniture							
000								
1PC	1SE	T						

HARDWARE:

1	2	3	4	(5)	6
(†)			eccacacaca()	8	
Ø3*9mm			Ø4*22mm		Ø5*30mm
16PCS	4PCS	4PCS	47PCS	4PCS	16PCS
7	8	9	10	11)	12
(X)mm>				(*)	
Ø2.5*8mm				M6*22mm	
18PCS	1PC	1PC	1PC	1PC	1PC

