


USB Charger Wall Outlet

R22U24CTR

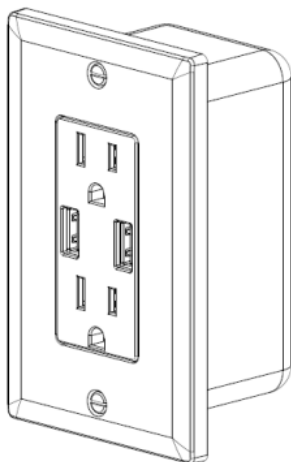

USER'S MANUAL

We recommend that the installation of the USB charger wall outlet is performed by a professional electrician. For information about electrical specifications, see *SPECIFICATIONS*.

Warnings

- **RISK OF ELECTRIC SHOCK** — Use only in dry locations and only indoors.
- All cables should be routed away from the charger outlet openings.
- **DO NOT** use with any aquarium equipment.
- **DO NOT** install in an outlet that is not grounded.


Notes to the installer

- This device must be installed in accordance with National and Local electrical codes.
- To prevent severe shock or electrocution, always turn power OFF at the service panel before working with wiring.
- This device should be used with copper or copper-clad wire. **DO NOT** use with aluminum wire.
- **DO NOT** plug this device into a shallow wall box. The wall box must be deep enough to house the charger outlet. If the box is too shallow, the charger outlet will not fit securely into the wall.

PACKAGE CONTENTS

- 1, 2.4A USB Charger Wall Outlet
- 1, white decora-style wall plate
- Screws: 2 long and 2 short
- User's Manual

FEATURES

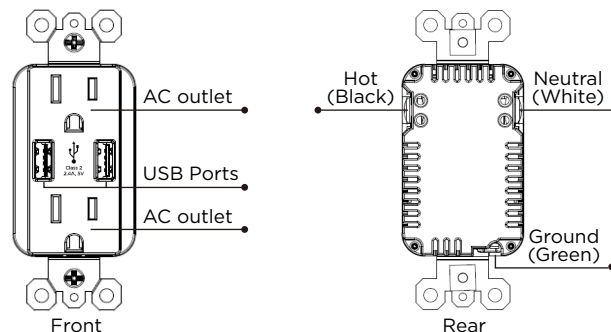


- Replaces a standard duplex outlet
- Quickly charges USB devices
- Tamper-resistant outlets for added safety
- Provides two USB ports with 2.4A total output
- Provides two standard 125V power outlets
- Works in nearly all installations
- Compatible with your existing decora wall plate

INSTALLING THE CHARGER


1. **Warning:** DISCONNECT POWER. Failure to do so can result in severe injury or death.
Make sure that you disconnect power to the circuit by removing the fuse from the circuit breaker or turning OFF the circuit breaker.
2. Remove the wall plate and mounting screws that cover the old outlet.
3. Carefully remove the existing outlet from the wall box.
4. Disconnect the wiring from the old outlet. Note the wire positions. Connect the charger outlet wires the same way.
5. Connect the wires to the charger outlet:
 - Black lead attaches to the hot wire(s)
 - White lead attaches to the neutral wire(s)
 - Green lead attaches to the ground wire(s)
 You can attach the wires by:
 - (1) Inserting straight wires into the holes
 - (2) Wrapping the wires 3/4 of the way around the terminal screws, making sure that the wires do not overlap.
6. Tighten every screw and make sure that no bare copper wire is exposed. When tightening screws, use 14 pounds-per-inch of torque.
7. Carefully insert the charger outlet into the wall box.

1

8. Secure the charger outlet to the wall box with the two long screws (provided).

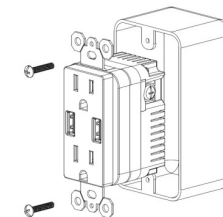

9. Secure the wall plate to the charger outlet with the two short screws (provided).

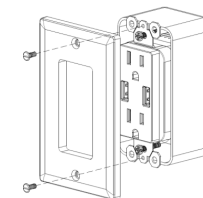

10. Restore power by replacing the fuse or turning on the circuit breaker. The charger outlet is ready to use.

USING THE CHARGER OUTLET

- To charge USB devices (like mobile phones or tablets), plug USB cables into the USB ports on the charger outlet and into the USB ports on the devices.
- To power electrical devices (like lamps or notebooks), plug them into the electrical outlets.

SPECIFICATIONS

Dimensions (L x W x H)

With Plate:	4.7 × 3 × 1.9 in. (120 × 76 × 47.5 mm)
Without Plate:	4.2 × 1.7 × 1.9 in. (106 × 43 × 47.5 mm)

Electrical

Receptacle Rating:	15Amp, 125VAC
USB Rating:	Two USB ports with total 2.4A, 5V DC
Line Voltage:	125V AC @ 60 Hz
Wire Terminals:	#14-#12 AWG

TECHNICAL SUPPORT

Please contact our Tech Support department with installation, troubleshooting, or general product questions.

- Phone: 1-877-297-6937
- Email: tech@cpsww.com
- Hours of Operation: Monday – Friday, 8:00am – 5:00pm CST

2

1 YEAR LIMITED WARRANTY

Read the following terms and conditions carefully before using the CyberPower R22U24CTR (the “CPS Product”). By using the CPS Product, you consent to be bound by the terms and conditions of this 1 Year Limited Warranty (together referred to as this “Warranty”).

IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS WARRANTY, YOU SHOULD RETURN THE PRODUCT FOR A FULL REFUND PRIOR TO USING IT.

Who is providing this Warranty, what does it cover?

Cyber Power Systems (USA), Inc. (“CyberPower”) provides this Limited Warranty. It only covers the original purchaser and ends if you no longer own the CPS Product. This warranty covers defects in materials and workmanship in the CPS Product under normal use and conditions. This Warranty covers the CPS Product for as long as you own the CPS Product.

What must I do to make a warranty claim?

1. Pack and ship the product with a dated Proof-of-Purchase receipt to CyberPower at 4241 12th Ave E, Suite 400, Shakopee, MN 55379;
2. Clearly indicate on the outside of the packaging that this is a WARRANTY RETURN;
3. Clearly include your name and address
 - a. on the outside packaging and
 - b. on a sheet of paper enclosed in the box with the product that is being returned; and
4. You MUST prepay all shipping costs and you are responsible for packaging and shipment.

Who pays for shipping?

We pay when we send items to you; you pay when you send items to us.

What are some things this Warranty does not cover?

1. THIS WARRANTY DOES NOT COVER ANY SOFTWARE THAT WAS DAMAGED OR NEEDS TO BE REPLACED DUE TO THE FAILURE OF THE CPS PRODUCT OR ANY DATA THAT IS LOST AS A RESULT OF THE FAILURE OR THE RESTORATION OF DATA OR RECORDS, OR THE REINSTALLATION OF SOFTWARE.
2. This Warranty does not cover: misuse, modification, operation or storage outside environmental limits of the CPS Product or the equipment connected to it, or for damage while in transit or in storage, nor if there has been improper operation or maintenance, or use with items not designed or intended for use with the CPS Product, such as laser printers, appliances, aquariums, medical or life support devices, etc.

What are the other limitations?

The sole and exclusive remedies of the Initial Customer are those provided by this Warranty.

1. This Warranty does not apply unless the CPS Product and the connected equipment were connected to properly wired and grounded outlets (including compliance with electrical and safety codes of the most current electrical code), without the use of any adapters or other connectors.
2. The CPS Product must have been plugged directly into the power source and the equipment connected to the CPS Product must be directly connected in the CPS Product, not “daisy-chained” together in serial fashion with any extension cords, another Product or device similar to the CPS Product, surge suppressor, or power tap. Any such installation voids the Warranty.
3. The CPS Product and connected equipment must have been used properly in a suitable and proper environment, in conformance with any applicable license, instruction manual, or warnings.
4. The CPS Product must have been used at all times within the limitations on the CPS Product’s VA capacity.

Where can I get more information?

Contact CyberPower at 4241 12th Ave E., STE 400, Shakopee, MN 55379; call us at (877) 297-6937; or send us an e-mail message at claims@cpsww.com.

PRODUCT REGISTRATION

Prompt product registration assures coverage under the Limited Warranty, and also allows the opportunity to be notified of product enhancements, upgrades, and other announcements. Registration is quick and easy. Go to Product Registration page at www.cyberpower.com.

CONTACT INFORMATION

Cyber Power Systems, Inc. 4241 12th Avenue East Suite 400 Shakopee, MN 55379

Toll-free: 1-877-297-6937 | CyberPower.com

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

ICES-003: This Class B digital apparatus complies with Canadian ICES-003.



Please join CyberPower in caring for the environment by recycling this manual.



This device is manufactured using environmentally-safe procedures in compliance with the Restriction of Hazardous Substances (RoHS) directive.



CyberPower®

www.cyberpower.com