

88 5549 09

 
TV Stand

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

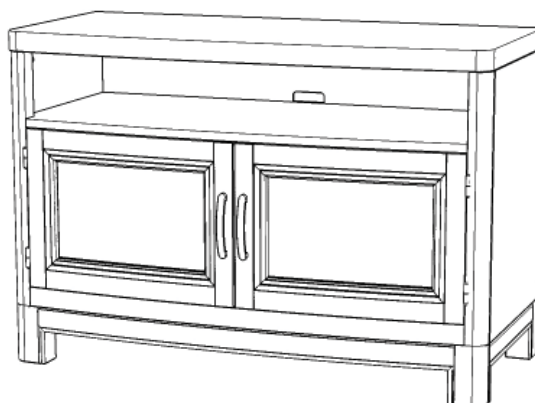

Part List

 

 A.
Top
1 Pc.

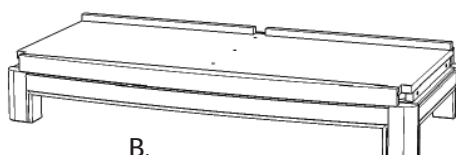

B.
Base
1 Pc.



 
C.
Side Panel
1 Pc.



D.
Side Panel
1 Pc.




E.
Middle Panel
1 Pc.

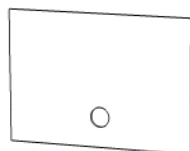

F.
Back Panel
2 Pcs.



 
G.
Back Panel
1 Pc.




I.
Shelf
2 Pcs.



 H.
Shelf
1 Pc.

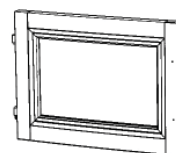


 J.
Door
1 Pc.

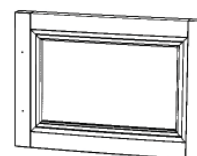

K.
Door
1 Pc.

 
Hardware List

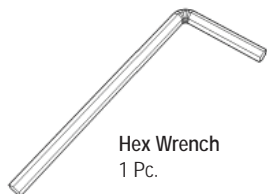


Hex Wrench
1 Pc.



 
Cam Lock
12 Pcs. (+4 extra)



M6x25
Head Cap Bolt
4 Pcs. (+1 extra)

 


Magnet
2 Pcs.

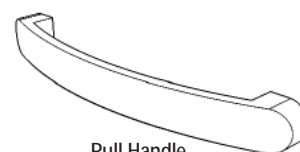 

Pull Handle
2 Pcs.



 Small Hex Wrench
1 Pc.

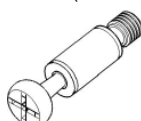

Cam Lock Screw
12 Pcs. (+1 extra)



Adjustable Pin
8 Pcs.



M3x10
Tapered Wood Screw
4 Pcs. (+1 extra)



M3x15
Wood Screw
12 Pcs. (+1 extra)



M4x25
Machine Screw
4 Pcs.

Tools required for assembly : Phillips screwdriver

 
Tools recommended for assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/4

IMPORTANT

- * Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the bolts until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly item must be level to work properly. Use the included adjustable levelers to level.

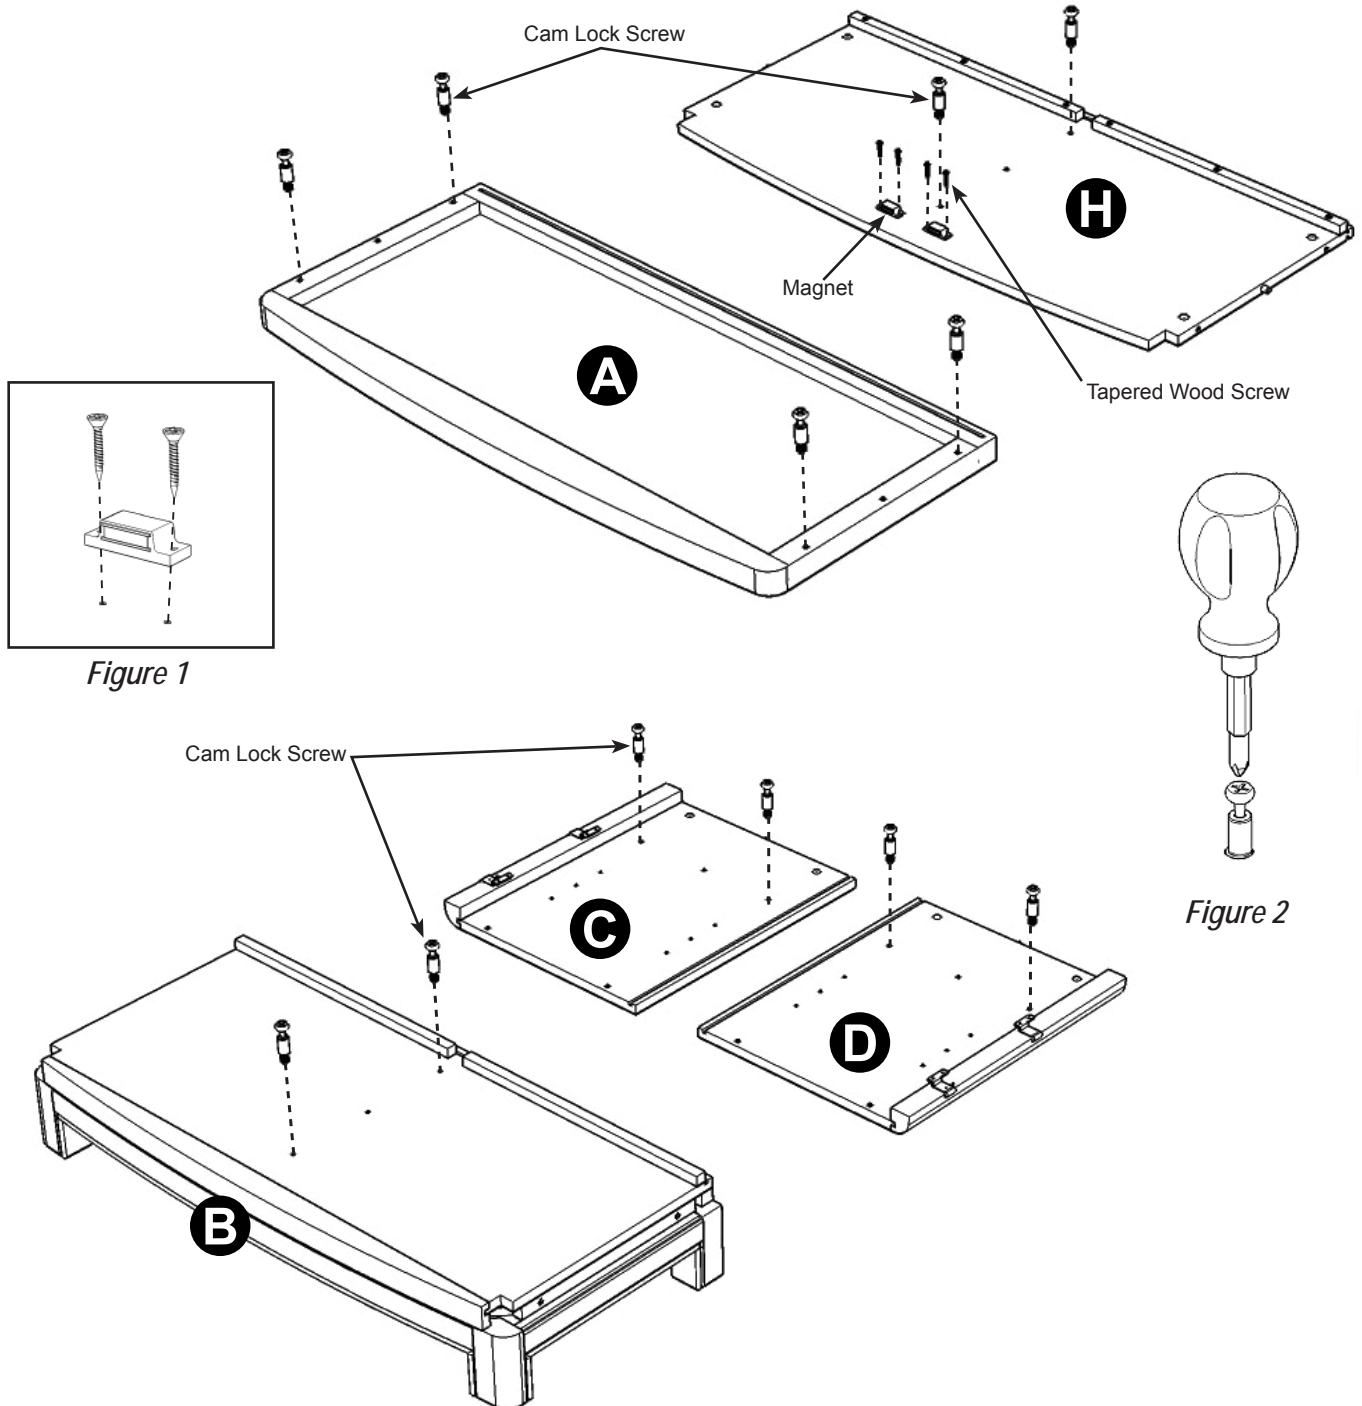



STEP 1

Attach Magnets to Shelf (H) with Tapered Wood Screws. (See Figure 1)

Insert Cam Lock Screws into the pre-drilled holes of Top (A), Base (B), Side Panels (C) and (D) and Shelf (H). (See Figure 2)

STEP 2

 
 
Attach Middle Panel (E) to Base (B) with Cam Locks.
(See Figure 3)

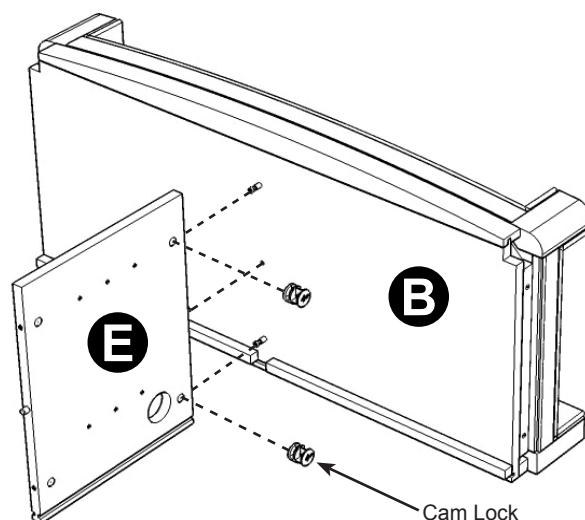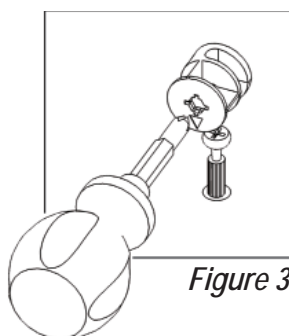

STEP 3

Attach Side Panel (C) to unit with Head Cap Bolts. (See Figure 4)

  
Slide Back Panels (F) into position.

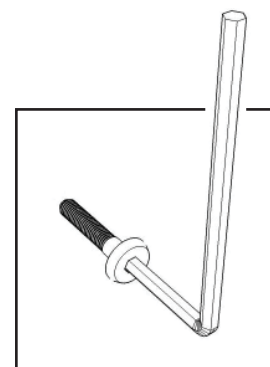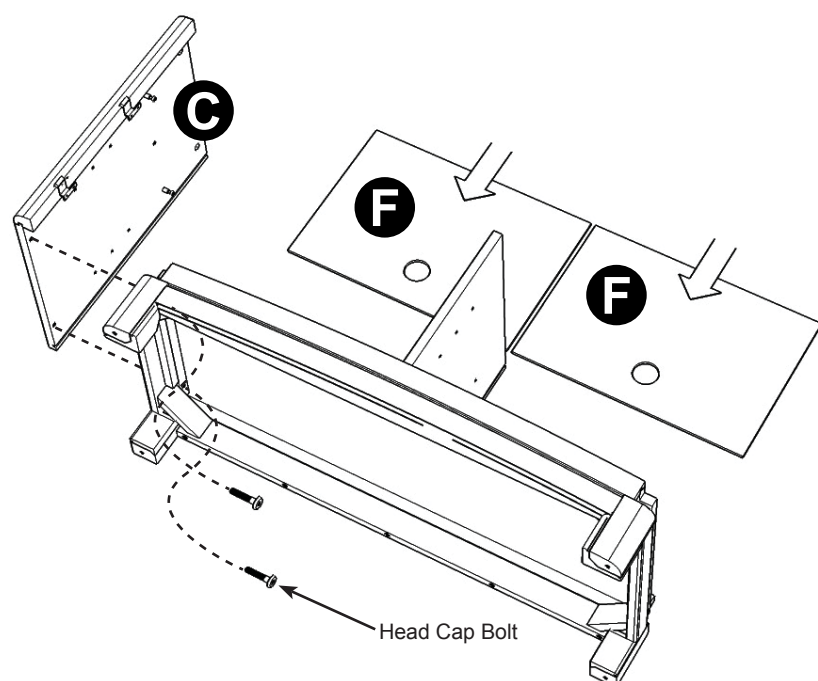

STEP 4

Attach Shelf (H) to unit with Cam Locks.

 Attach Side Panel (D) to unit with Cam Locks and Head Cap Bolts.

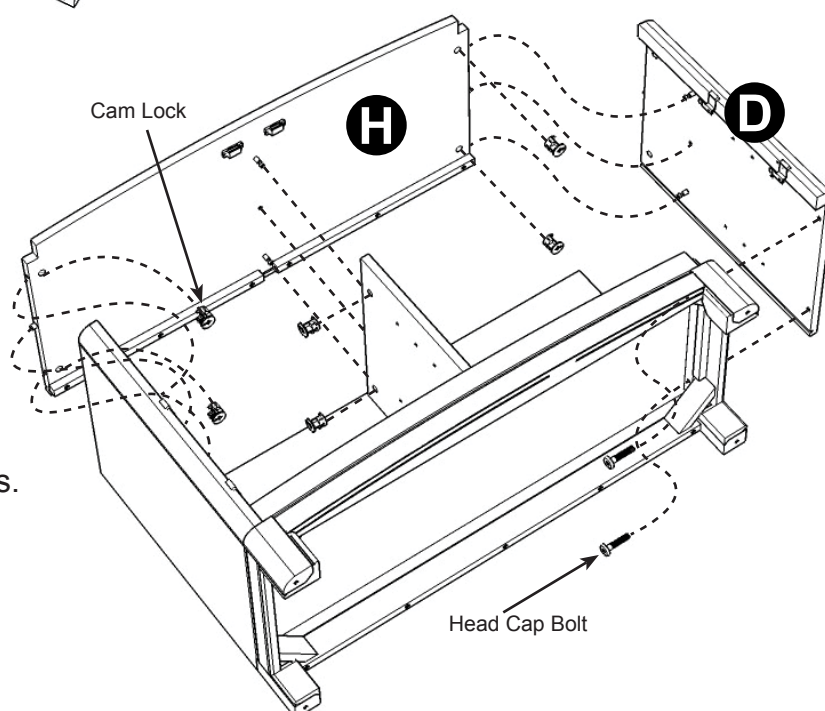

Assembly Instructions 4/4

 
STEP 5

Turn the unit over to its' upright position.

Slide Back Panel (G) into position.

Insert Adjustable Pins into side panels and middle panel at the desired level.

Place Shelves (I) into position.

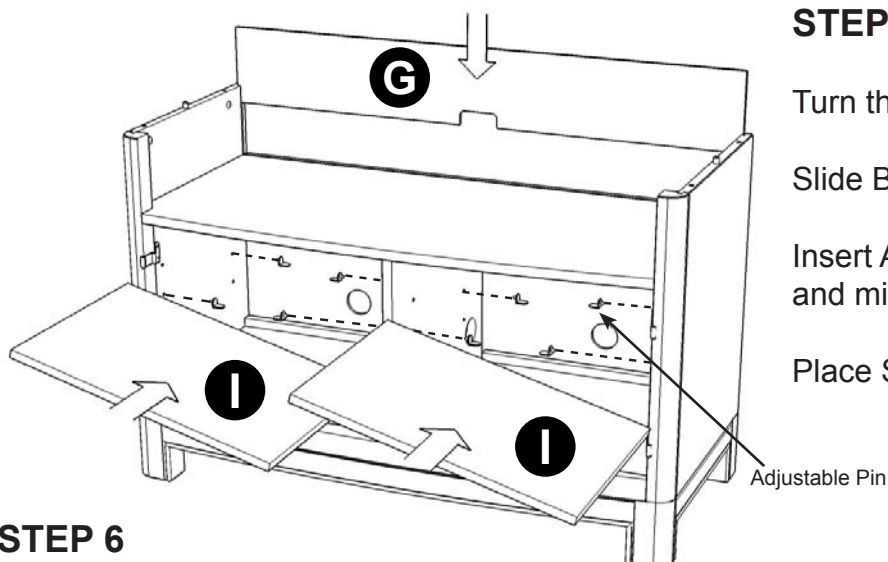

STEP 6

Attach Pull Handles to Doors (J) and (K) with Machine Screws. (See Figure 5)

Attach Doors (J) and (K) to unit by sliding the door lift hinges into the side panel lift hinges. (See Figure 6)

Attach Top (A) to the unit with Cam Locks.

Level the unit by adjusting the adjustable levelers on the bottom of the base legs. (See Figure 7)

Insert Wood Screws into the pre-drilled holes in the back panel. (See Figure 8)

Note : Please make sure unit is level before tightening these screws.

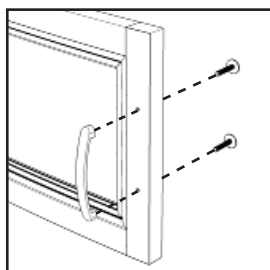 
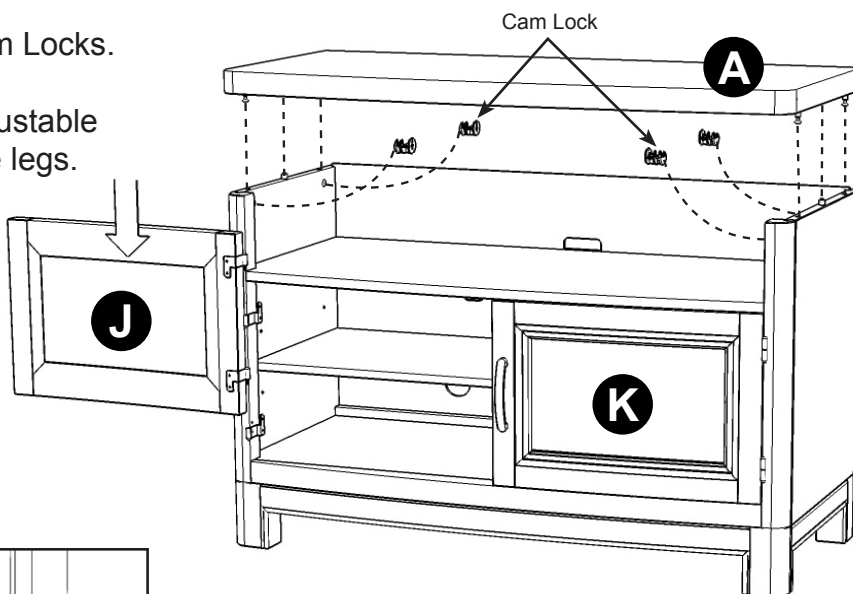 


Figure 5

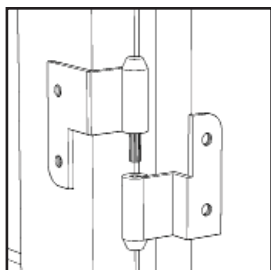 


Figure 6

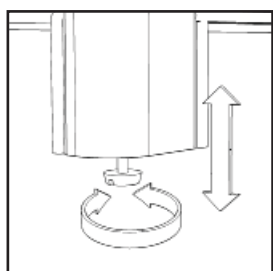 


Figure 7

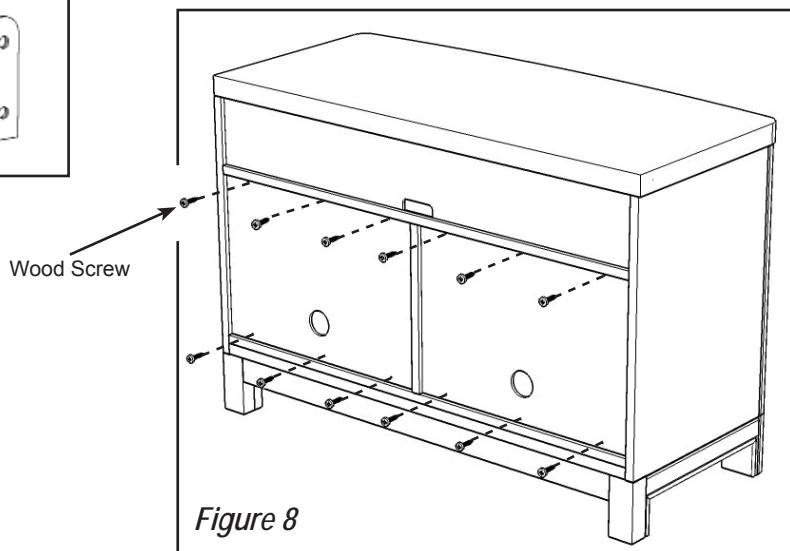 


Figure 8