



# Hot Dog Mini Cart

Item No: **60072**

120V~60 Hz, 1200W, 10A



**WARNING ELECTRICAL SHOCK HAZARD.**

**FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.**

**WARNING:** Handling the cord on this product may expose you to lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. WASH HANDS AFTER HANDLING.

Electrical ground is required on this appliance.

1. Do not modify the power supply cord plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
2. Do not use an extension cord with this appliance.
3. Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.

## SAFETY INSTRUCTIONS

1. Plug electrical cord into a certified electrical outlet with a corresponding voltage rating as listed on the machine model labels.
2. Always unplug the electric cord when appliance is not in use and before cleaning, adjusting or maintaining this steamer. Do not operate with a damaged cord or plug or after the machine malfunctions, has been dropped or damaged. Use authorized service for examination, electrical or mechanical adjustment or repair.
3. This equipment will be HOT during use and for a short time after it is turned off. BE CAREFUL. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this appliance. Keep combustible materials away from appliance.
4. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left operating and unattended.
5. This appliance is not intended for use in wet locations. Never locate appliance where it may fall into a water container.

Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock, fire or damage to the appliance.

## ASSEMBLY INSTRUCTIONS

1. Install the four legs into the threaded holes in the base. Attach the two decorative wheels to the opposite side of the warmer from the control panel by removing the screws from the bottom plate (drawing# 4) and re-inserting through the hole on the wheel attachment bracket.
2. Install the hotdog tray (perforated) and bun tray (solid) side by side in the reservoir. Put a false bottom rack in each of the trays. This will allow the hotdogs to cook faster and keep the buns from getting wet. Place the domed lid over the Solid Bun Tray and the flat lid over the Hotdog Tray.
3. Place the umbrella stand behind the warmer on the table surface. Slide the umbrella shaft into the tube on the stand. Position the umbrella as desired.

## OPERATING INSTRUCTIONS

1. Plug the machine into a properly grounded 120 volt power supply.
2. Fill the reservoir with 7 quarts of water by removing the hotdog and bun trays from the machine and pouring water into the reservoir with a pitcher. Using hot water will speed up the start-up time of the machine. Fill the reservoir with water to the MAX line which is marked in the reservoir. The warmer will hold a maximum of 7 quarts.
3. Load the warmer with the desired amount of hotdogs by placing the Hotdogs in the Perforated Tray and the Buns in the Solid Tray.
4. Turn on the “**Master Switch**” and set the thermostat to a maximum setting. The machine should be producing steam in approximately 5-7 minutes (depending on water and room temperature). You can adjust the thermostat according to your operating conditions.
5. Once Steam is produced adjust the thermostat to **80-100** to **COOK** and **60-80** to **HOLD**.
6. Once steam is produced a standard size hotdog should reach serving temperature in approximately 20-30 minutes. Adjust the thermostat accordingly. You will want the hotdogs to maintain at least 140 Degrees Fahrenheit before serving.
7. **CAUTION:** Use tongs to remove buns and hotdogs from the warmer as the product will be hot to the touch.
8. **IMPORTANT: DO NOT LET THE WATER LEVEL IN THE RESERVOIR GET BELOW THE MINIMUM LINE.** Letting the water run low or out could damage the unit and void your warranty. The minimum line represents 4 quarts of water.


## CONDENSATION


1. Cool air striking the warm steamer may cause moisture accumulation. Protecting the unit from cool drafts of air will help prevent condensation.
2. As the covers of the warmer are opened and closed some of the condensation may leak out from the under-sides of the lids. This should be wiped up with a towel or rag.

## CLEANING

1. Turn control off and unplug the power cord. Avoid splashing water onto control.
2. Do not clean this appliance with a water jet or immerse in water or other liquid.
3. **At the end of day:** Turn the machine off using the master switch. Remove the lids, trays and false bottoms. (**caution:** the items will be hot unless you wait long enough to allow them to cool before removing!) These items can be taken to a sink or dishwasher for cleaning. Use a mild detergent and water to clean.
4. Empty the remaining water in the reservoir by dumping it into a sink or drain. (**caution:** the water will be hot unless you allow sufficient cool-down time). Clean the reservoir with a mild detergent and water. Wipe down with a soft cloth.
5. Wipe down the outside of the unit with a mild detergent and a soft cloth.
6. After the components have been cleaned, re-assemble the machine as outlined above so you will be ready for the next usage.

# DIAGRAM

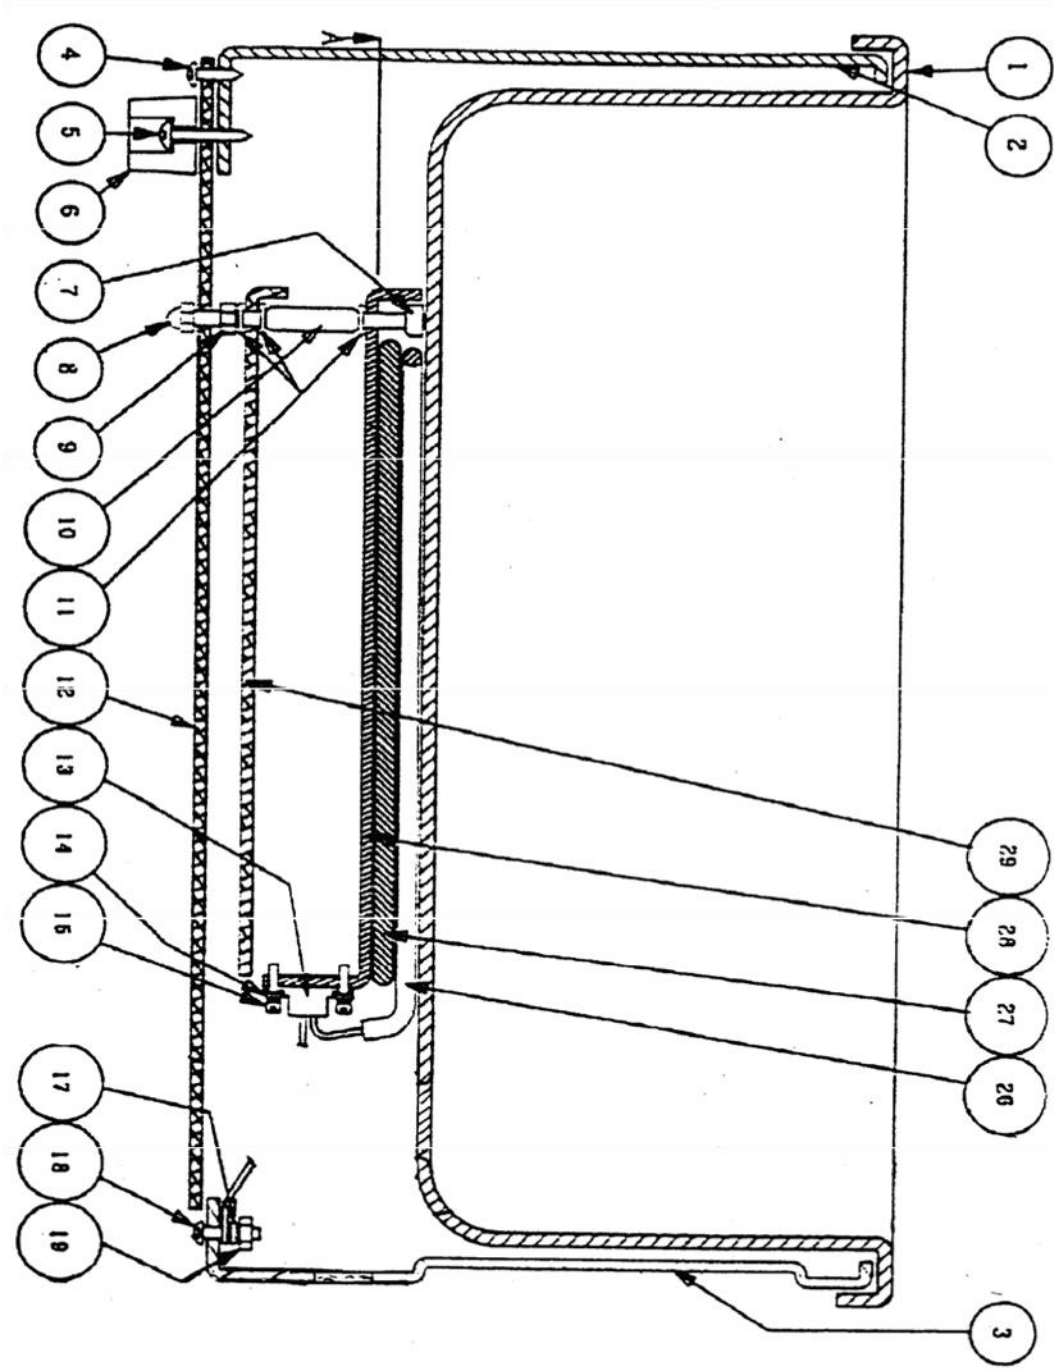

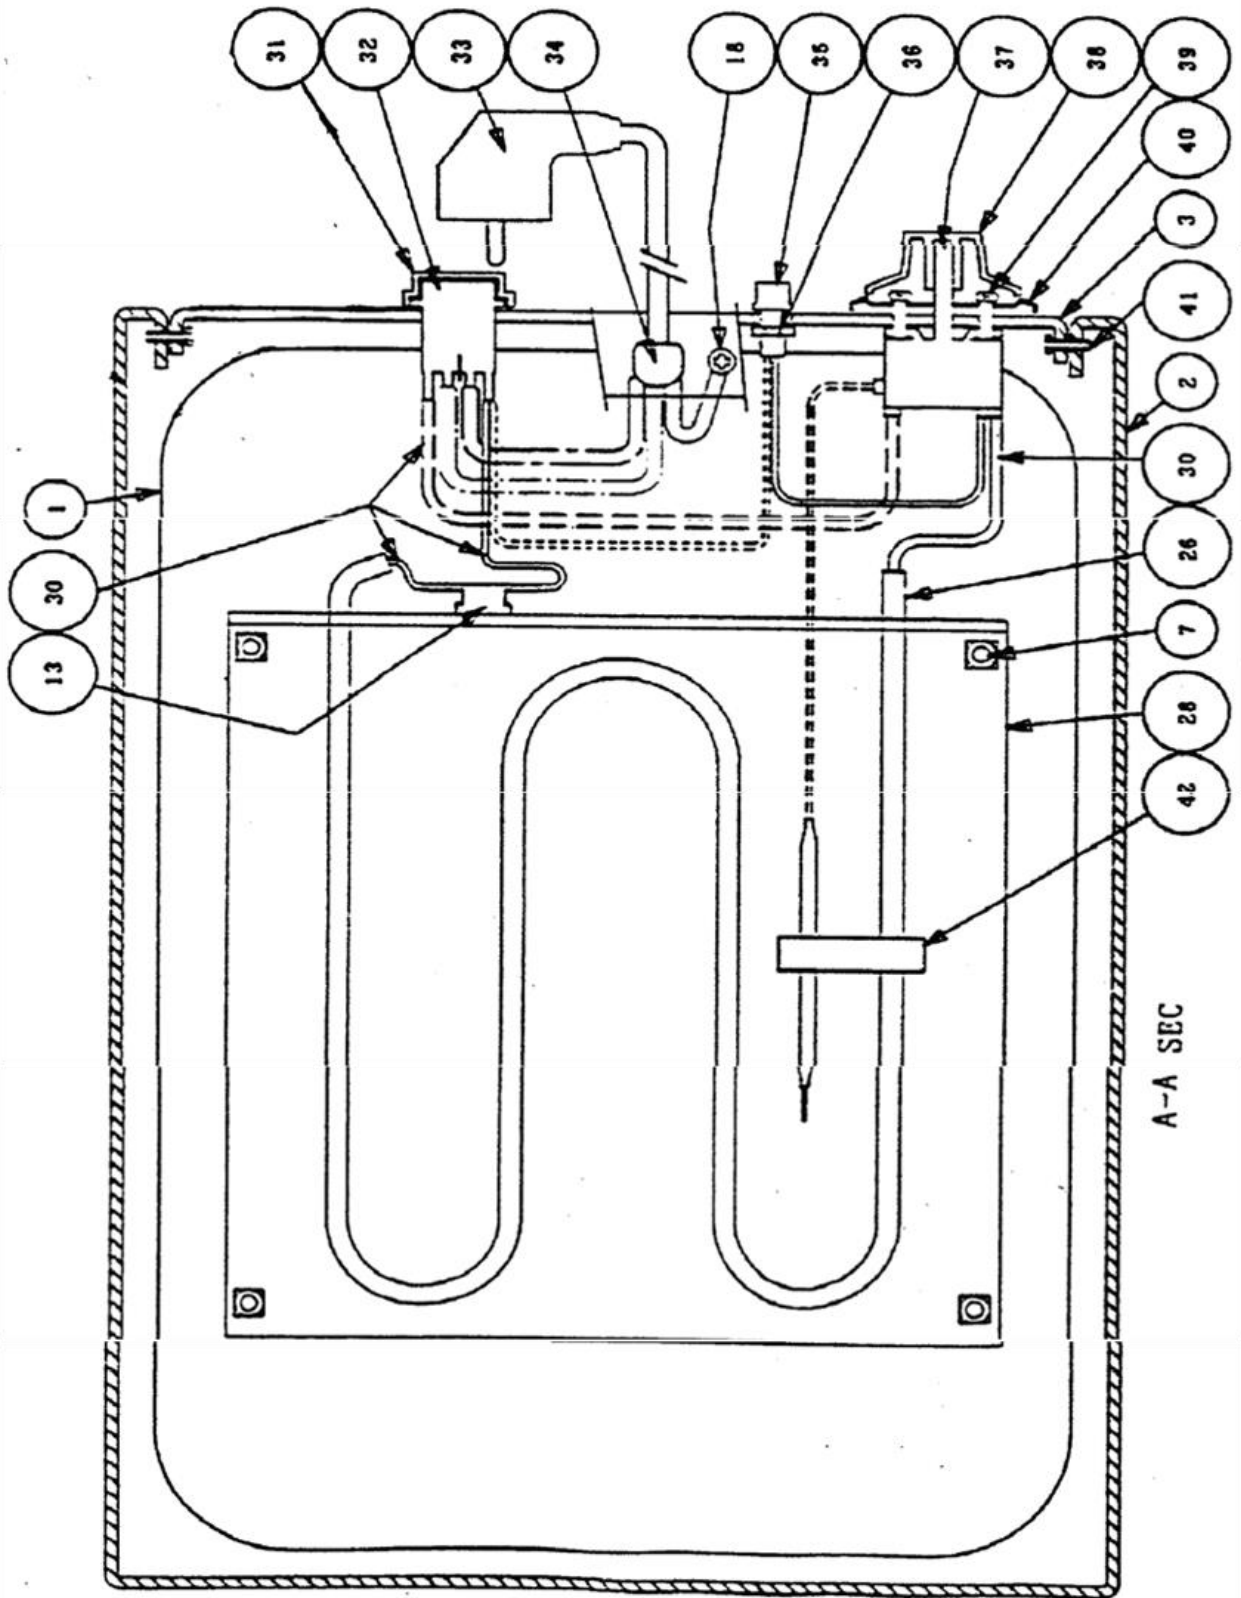

## PARTS LIST

Part #	Description
1	6701 Reservoir
2	6702 Warmer Body
3	6703 Front Plate
4	6704 Sheet Metal Screw
6	6706 Leg
7	6707 Element Spacer
8	6708 Acorn Nut
10	6710 Spacer tube
11	6711 Threaded Rod
12	6712 Bottom Aluminum Cover
13	6713 Jumper
14	6714 Terminal
15	6715 Terminal Screw
17	6717 Lock-washer
18	6718 Bolt
26	6726 Heating Element
27	6727 Heat plate
28	6728 Hold-down plate
29	6729 Bracket
30	6730 Element Lead

Part #	Description
30	6730 Element Lead
31	6731 Switch Cover
32	6732 Switch
33	6733 Plug
34	6734 Strain Relief
35	6735 LED Light
37	6737 Thermostat
38	6738 Thermostat knob
40	6740 Thermostat backer Plate
41	6741 Bolt
42	6742 Clamp
43	6743 Perforated Hotdog Tray
44	6744 Solid Pan
45	6745 Perforated Pan
46	6746 Flat Hotdog Lid
47	6747 Domed Bun Lid
48	6748 Umbrella
49	6749 Umbrella Stand
50	6750 Wheel

## Wiring Diagram

