# **home**styles\*

#### 4410-95

#### Kitchen Cart


#### **IMPORTANT**

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



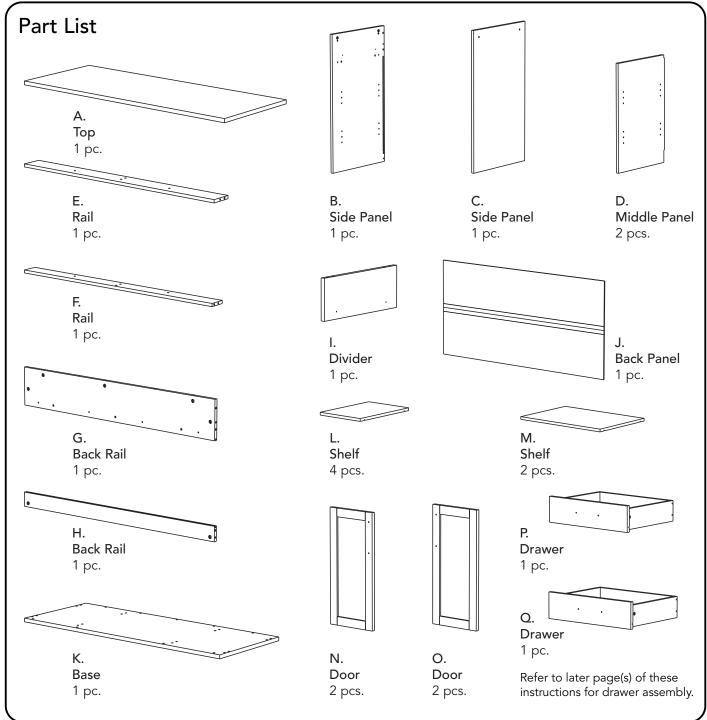

Tool(s) required for assembly: Phillips screwdriver

## Assembly Instructions 2/11

#### Hardware List



Cam Lock Screw 29 pcs. (+4 extra)



 
Cam Lock 29 pcs. (+4 extra)



M7x10 Varianta Screw 8 pcs. (+1 extra)



M3.5x12 Magnet Screw 8 pcs. (+1 extra)



Magnet 4 pcs.



Dowel 49 pcs. (+1 extra)



Cover 25 pcs. (+4 extra)



M7x50 Assembly Screw 17 pcs. (+1 extra)



M4x16 Caster Screw 24 pcs. (+1 extra)



M6x25 Head Cap Bolt 4 pcs. (+1 extra)



M3.5x12 Wood Screw 24 pcs. (+1 extra)



M3.5x50 Flat Head Screw 8 pcs. (+1 extra)



M3.5x19 Plastic Clip Screw 8 pcs. (+1 extra)



Plastic Clip 8 pcs. (+1 extra)



M4x22 Machine Screw 12 pcs.



Handle 6 pcs.



Adjustable Pin 24 pcs. (+1 extra)



Insert 8 pcs.




Hinge 8 pcs.




M3x12 Plate Screw 4 pcs. (+1 extra)



 
Plate 4 pcs.




Side Bar 2 pcs.

 

Left Guide 2 pcs.

 

Right Guide 2 pcs.

 

Left Runner 2 pcs.



Right Runner 2 pcs.




Non-Locking Caster 4 pcs.

#### Assembly Instructions 3/11

#### **IMPORTANT**

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.

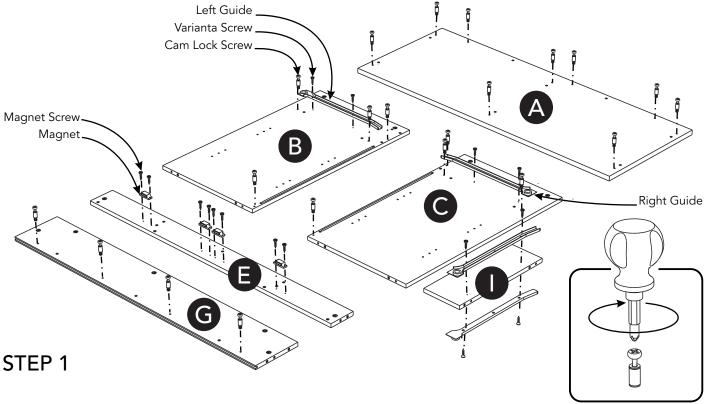


Insert Cam Lock Screws into pre-drilled in Top (A), Side Panels (B), (C) and Back Rail (G), then tighten. (See Figure 1)

Attach Left Guide to Side Panel (B) and Right Guide to Side Panel (C) with Varianta Screws. (See Figure 2)

Attach Left Guide and Right Guide to Divider (I) with Varianta Screws.

Attach Magnets to Rail (E) with Magnet Screws into pre-drilled holes. (See Figure 3)

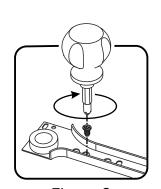



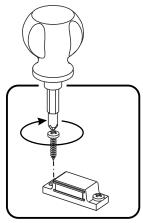


Figure 1

Figure 3

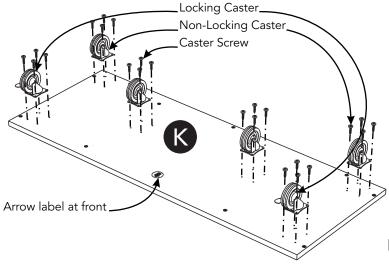



Figure 4

STEP 2


Attach Casters to Base (K) with Caster Screws into pre-drilled holes, with Locking Casters at front. (See Figure 4)

Note: Arrow label indicates front of Base (K).


## Assembly Instructions 4/11

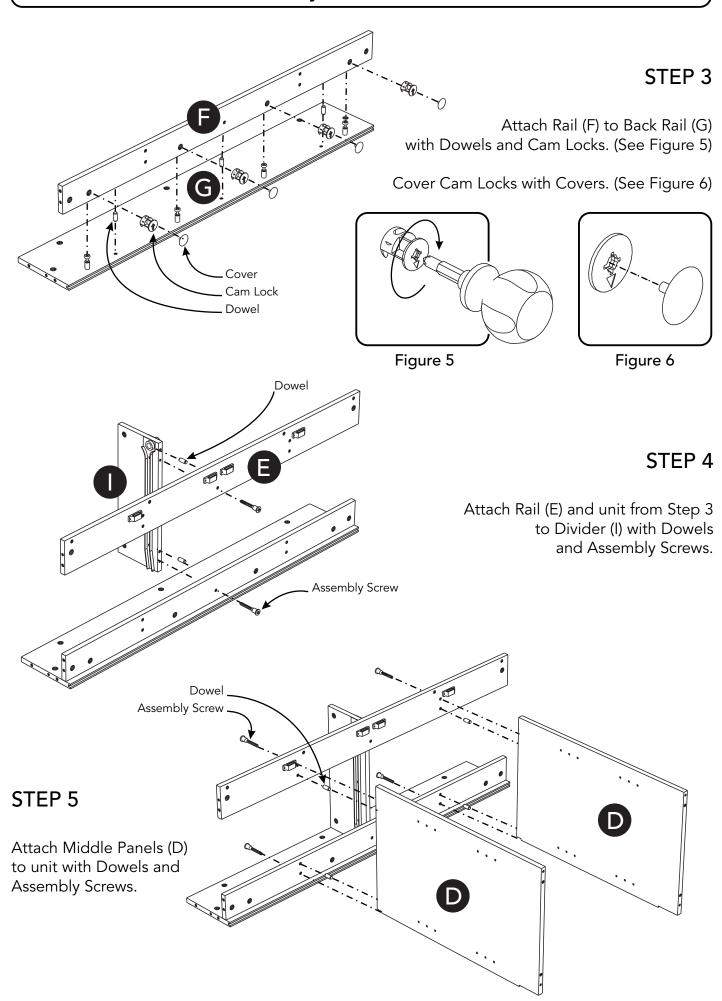

## Assembly Instructions 5/11

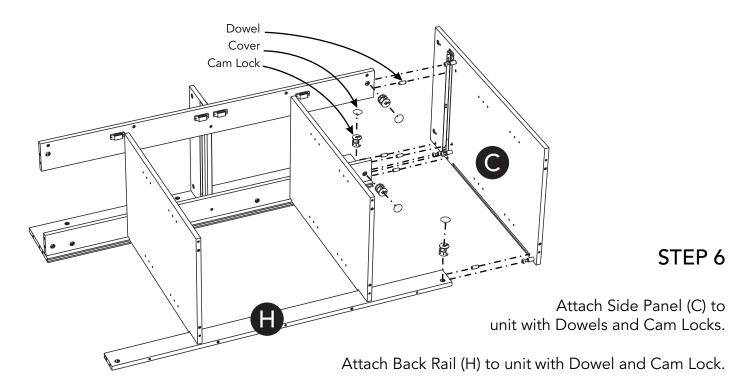

Cover Cam Locks with Covers.

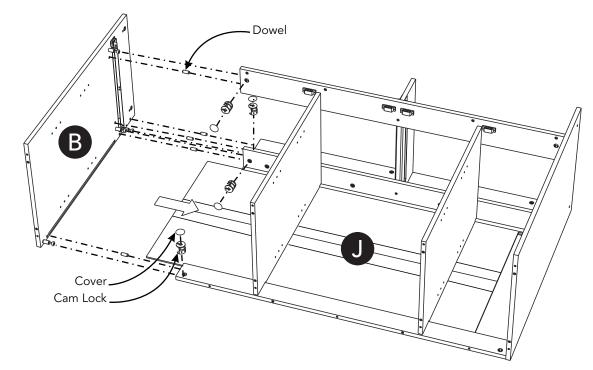


# STEP 7


Slide Back Panel (J) into position.

Attach Side Panel (B) to unit with Dowels and Cam Locks.


Cover Cam Locks with Covers.

## Assembly Instructions 6/11

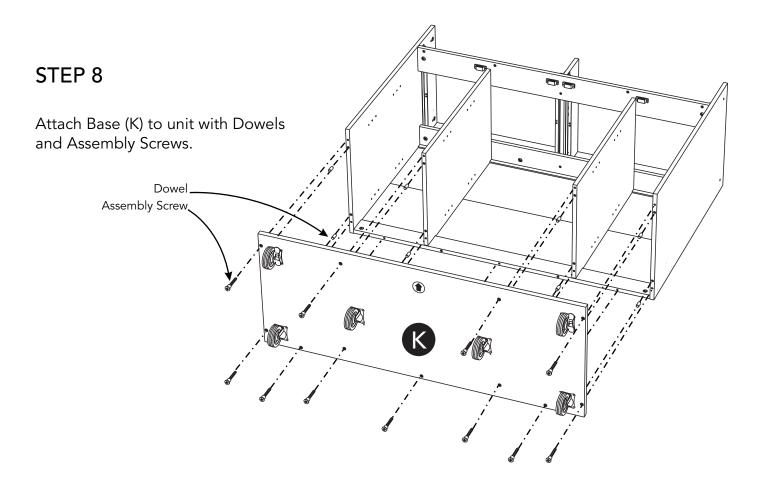

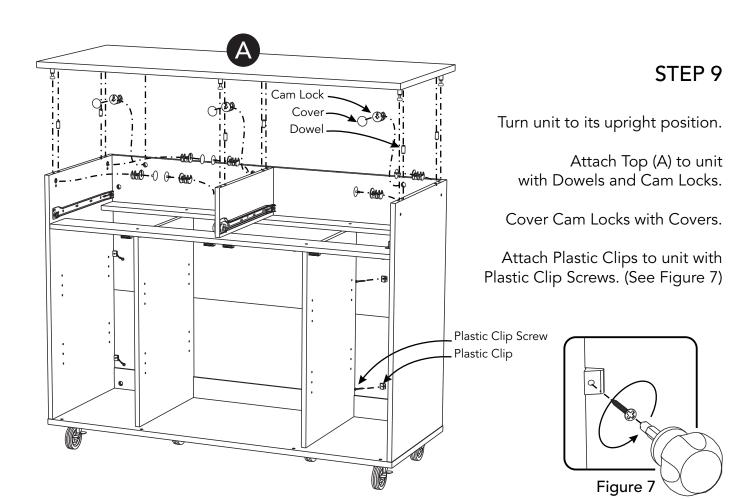


#### Assembly Instructions 7/11

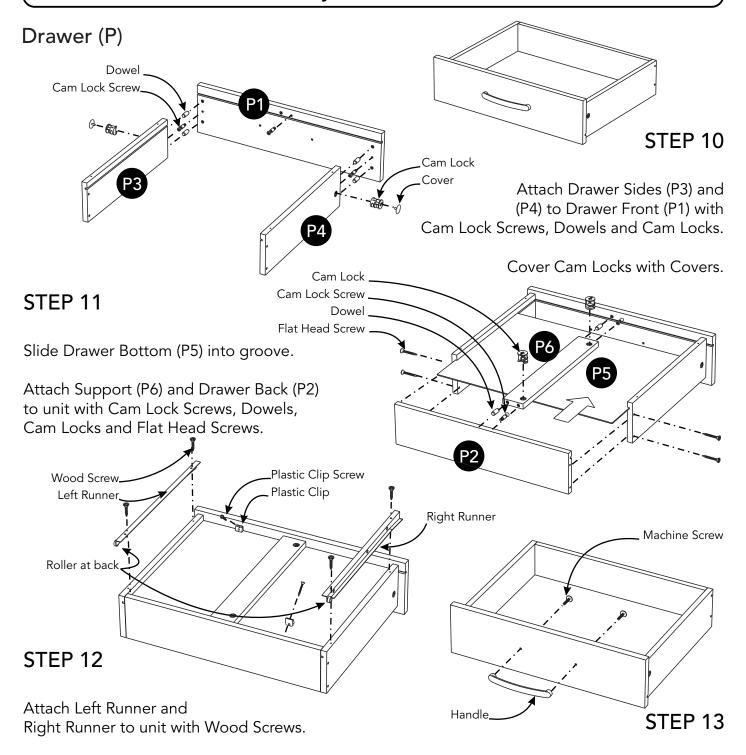


Attach Plastic Clips to unit with Plastic Clip Screws.

Attach Handle with Machine Screws.

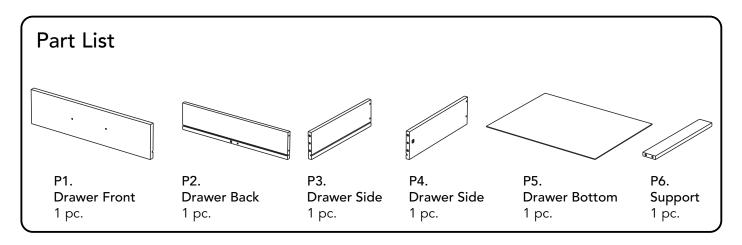


#### Assembly Instructions 8/11

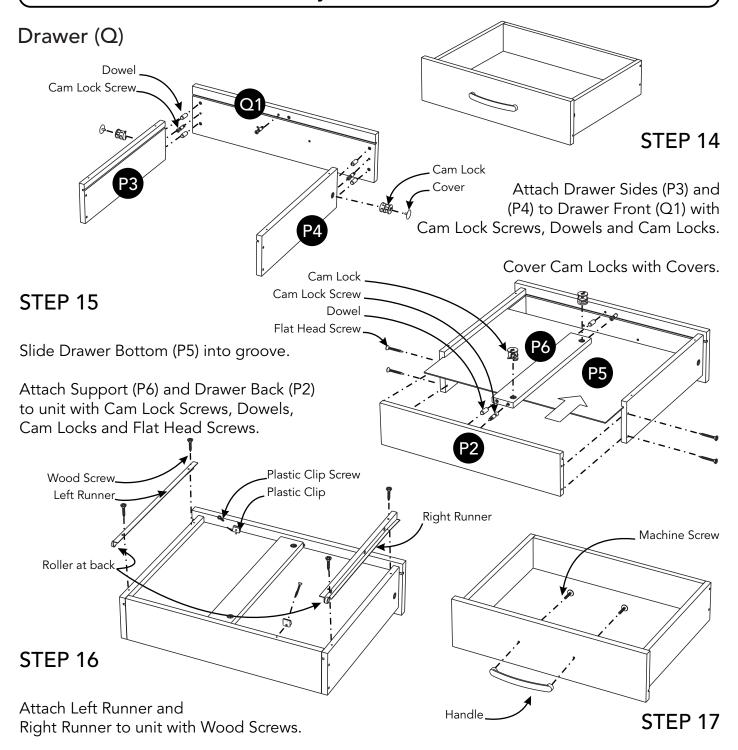


Attach Plastic Clips to unit with Plastic Clip Screws.


Attach Handle with Machine Screws.

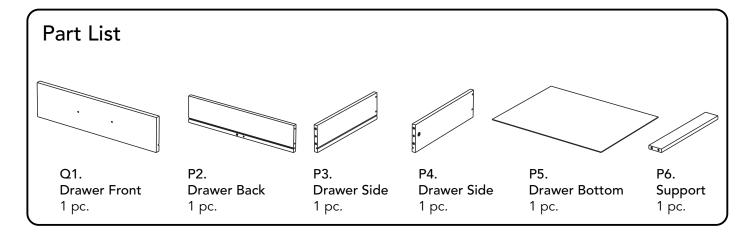

## Assembly Instructions 9/11

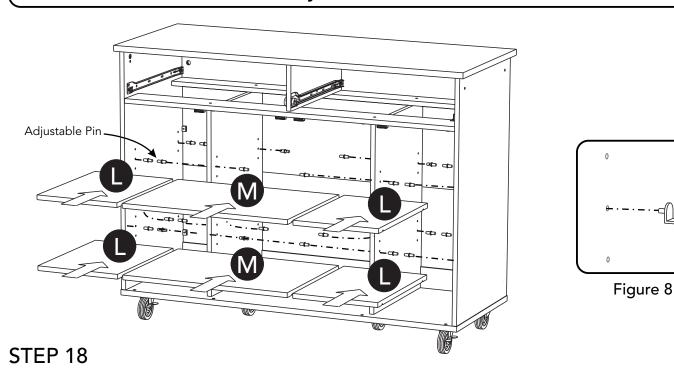

Insert Adjustable Pins into side panels and middle panels at desired level. (See Figure 8) Place Shelves (L) and (M) into position.

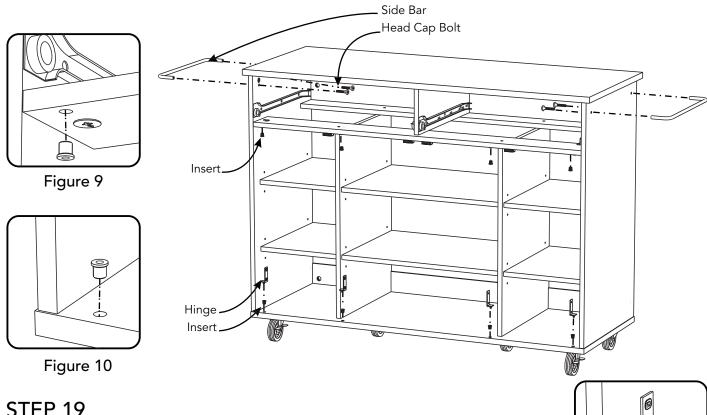

**STEP 19** 

Attach Side Bars to unit with Head Cap Bolts into pre-drilled holes.


Insert Inserts into pre-drilled holes in unit. (See Figures 9 and 10)

Insert Hinges into Inserts. (See Figure 11)

Figure 11

#### Assembly Instructions 10/11

#### **STEP 20**

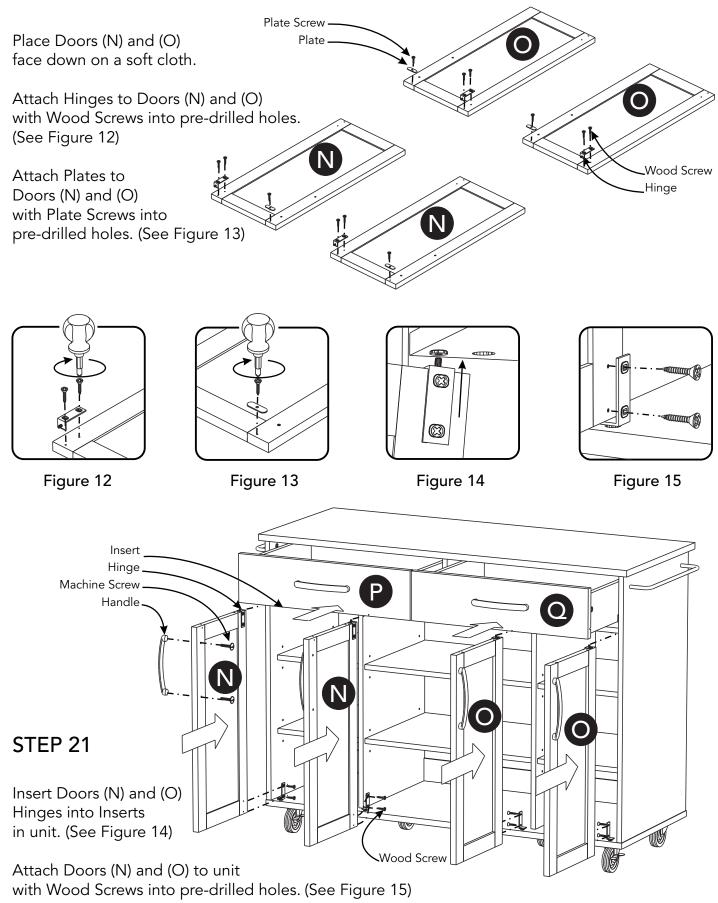


Attach Handles to Doors (N) and (O) with Machine Screws.

Slide Drawers (P) and (Q) into position.

## Assembly Instructions 11/11

#### **STEP 22**

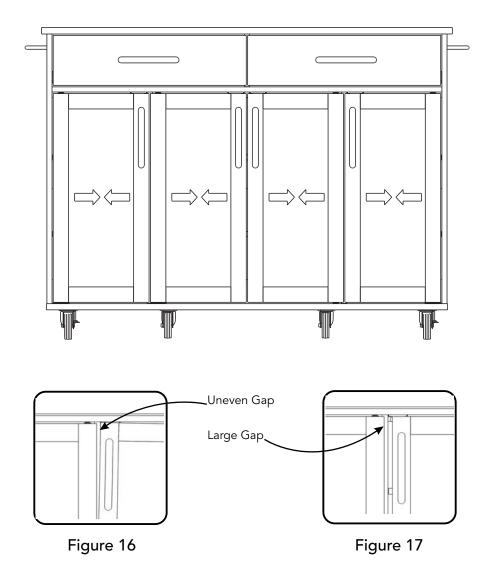

If needed, doors may be adjusted for large or uneven gaps between them. (See Figures 16 and 17)

Loosen Wood Screws attaching Hinge to door. (See Figure 18)

Slide door left to right as needed to adjust gap. (See Figure 19)

Re-tighten Wood Screws attaching Hinge to door. (See Figure 20)

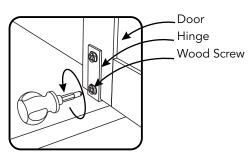






Figure 18 Figure 19

Figure 20

# CARE INSTRUCTIONS

# **NEVER**

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

# **NEVER**

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

# **CLEAN**

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



**home**styles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.