


Parts List

Lista de piezas

- A** Gate panel (2)
- B** Wall bumper (4)
- C** Locking arm with latch
- D** Adjustment arm
- E** Parent handle

NOTE: Date code is located on inside of gate panel.

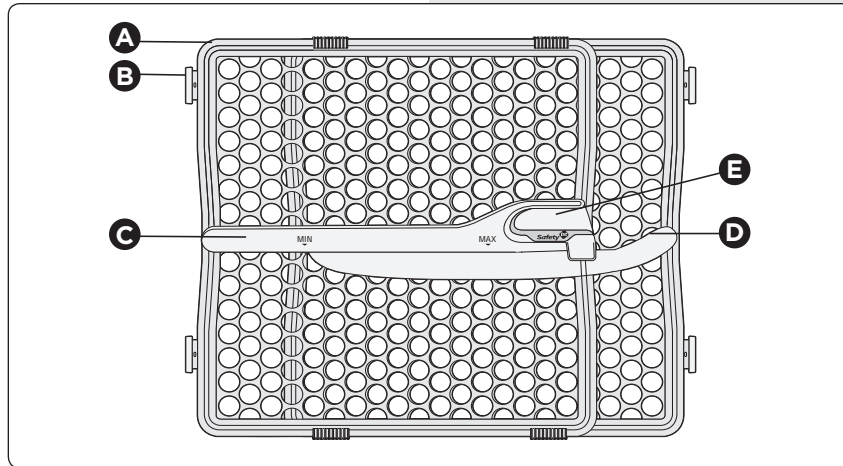

- A**
- B**
- C**
- D**
- E**

NOTA: El código de la fecha se encuentra ubicado en el interior de la hoja de la puerta.

Before you Begin

Antes de comenzar

To successfully install your gate, please note the following:

- Measure the width of the opening where gate is to be fitted and confirm that it is between 28" and 38" (x - x cm).

Para instalar la puerta adecuadamente, tenga en cuenta lo siguiente:


- Mida el ancho de la abertura donde se colocará la puerta y verifique que sea de 28 y 38 pulgadas (x - x cm).

To Install

Para instalar


1 Unlock gate:

Place gate in opening. Grasp panel with one hand and lift up on parent handle with other to unlock (Figure 1).

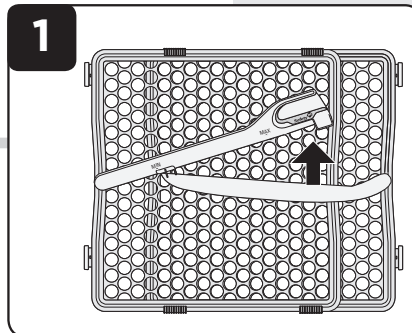

2 Adjust gate width:

With locking latch in full upright position, slide lower locking latch to extend gate panels so that they are 1 inch (x cm) from sides of opening (Figure 2).

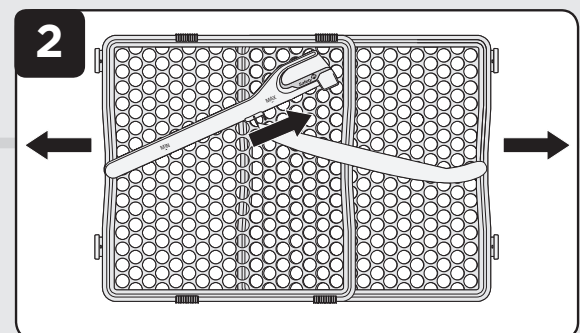

3 Secure gate:

Lower and lift locking latch 1-2 more times until bumpers touch the sides of the opening, then lock latch in place (Figure 3).
NOTE: Place gate with locking latch side of gate faced away from child.

