

88 5560 66 Umbrella

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

*Home
Styles*



Part List

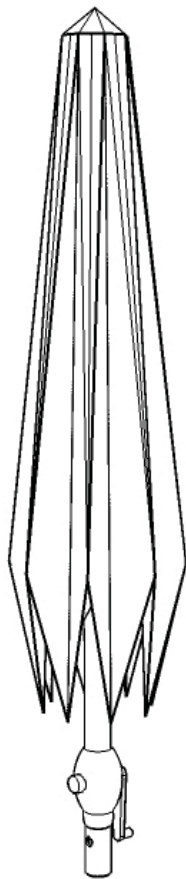

A.
Top
1 Pc.



B.
Bottom
1 Pc.

88 5560 67

Umbrella Stand


IMPORTANT NOTE

Do not use power tools to assemble and only tighten bolts until they are snug.


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home
Styles

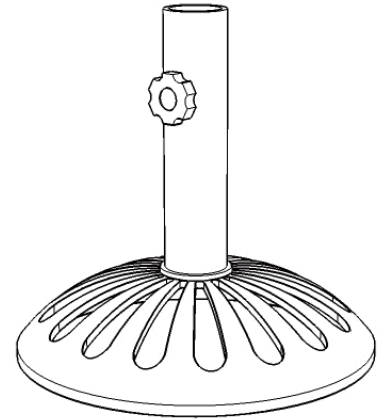

Part List

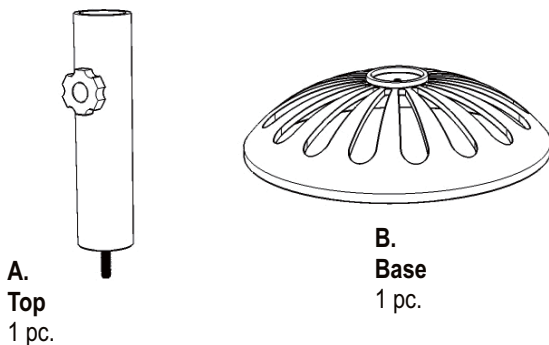


Hardware List



M12
Nut
1 pc.




 Spring Washer
1 pc.



Flat Washer
1 pc.

Assembly Instructions

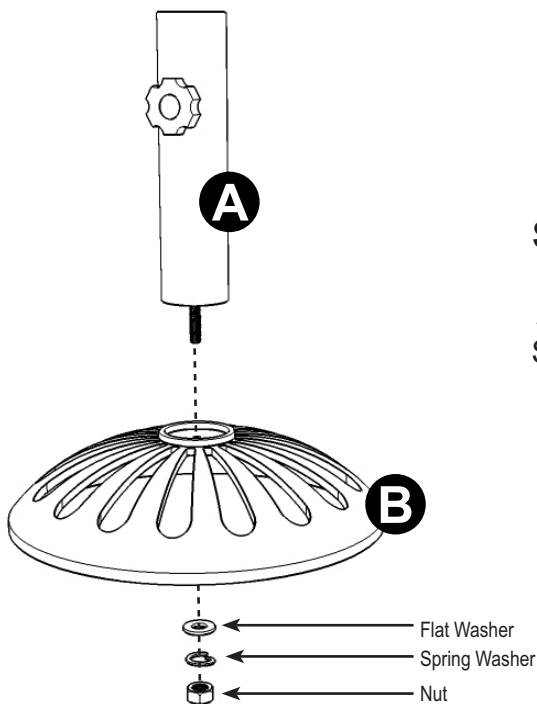

STEP 1

Attach Top (A) to Base (B) with Flat Washer, Spring Washer and Nut.

Tools required for assembly : 12 MM Wrench or Adjustable Wrench

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

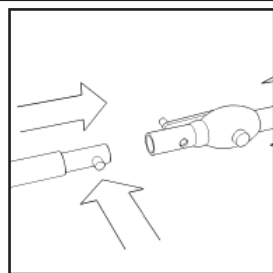


Figure 1

STEP 1

Slide Bottom (B) into Top (A) by pushing in the pin on Bottom (B) and then, while holding the pin in, slide Bottom (B) into Top (A) until the pin pops out of the hole in Top (A). (See Figure 1)

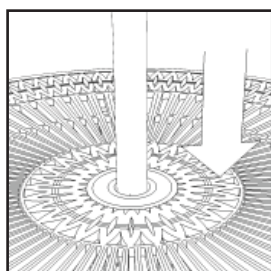


Figure 2

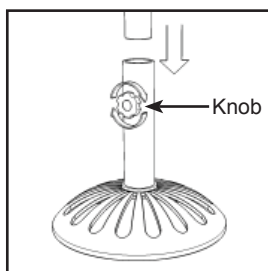


Figure 3

STEP 2

Slide the umbrella into the hole in the table top. (See Figure 2)

Loosen the knob on the already assembled umbrella base; slide the umbrella into the umbrella base and then tighten the umbrella base knob. (See Figure 3)

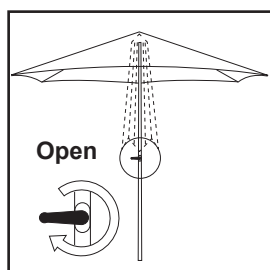


Figure 4


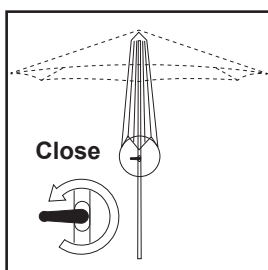


Figure 5

STEP 3

Open the umbrella by turning the handle clockwise until the umbrella is fully opened. (See Figure 4)

Close the umbrella by winding the handle counter-clockwise until the umbrella is fully closed. (See Figure 5)

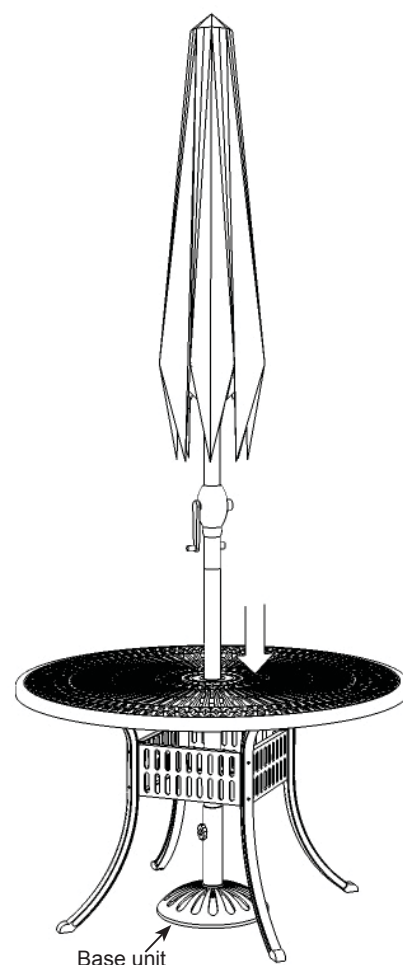

STEP 4

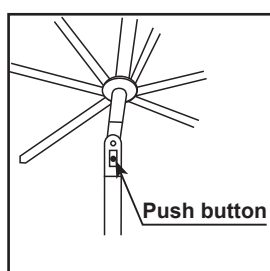


Figure 6

To adjust the angle of the umbrella, press the button on the top section of the umbrella and adjust the angle of umbrella section above the button. (See Figure 6)

Release the button to lock the umbrella into the new position.