



31.5" OUTDOOR METAL DINING TABLE

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

https://westintrends.com/welcome



OUESTIONS OR COMMENTS?

If you have questions reach out to cs@westintrends.com

FOLLOW, SHARE, & LEARN













PRODUCT REGISTRATION

https://westintrends.com/apps/product-registration




(!) NOTICE

Do not overtighten screws. (Insert all screws before tighten screws)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.


1 PC

- Inspect and tighten all bolts on a regular basis to ensure proper pertormance and satety.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- We recommend the use of furniture covers to protect when not in use, and store in a dry and protective area during off season.

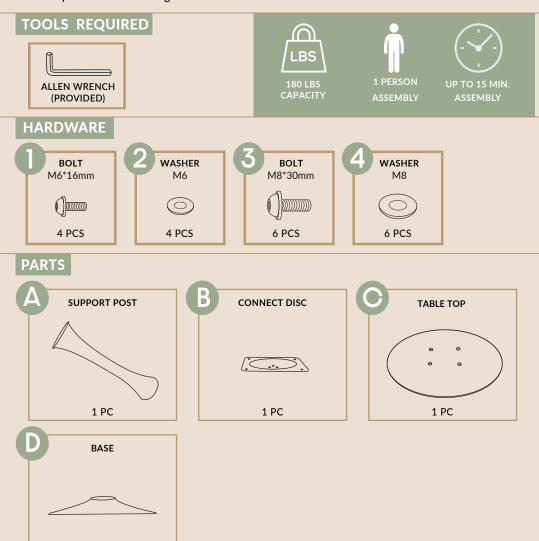

PRODUCT ASSEMBLY - OVERALL VIEW


Look at following overall view of this table and learn the exact position of each parts to be assembled.

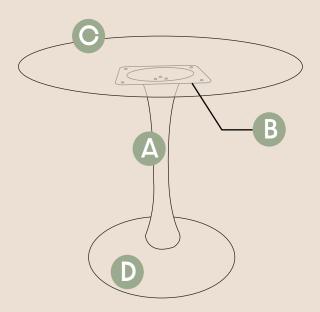

PRODUCT ASSEMBLY



Place Part A Support Post straight up as shown below. Attach Part B Connect Disc to Part A Support Post with 3 sets of Hardware #3 Bolt and #4 Washer M8.

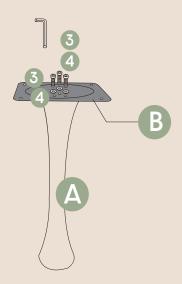


PRODUCT ASSEMBLY



Place Part C Table Top on flat surface with four assembly holes upward. Attach the assembled Part A Support Post+ Part B Connect Disc to Part C Table Top with 4 sets of Hardware #1 Bolt and #2 Washer (M6).


Pay attention to protect the paint.

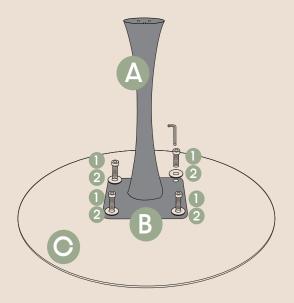

PRODUCT ASSEMBLY



Attach Part D Base to Part A Support Post with 3 sets of Hardware #3 Bolt and #4 Washer (M8).

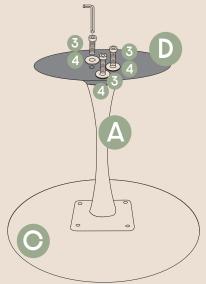

PRODUCT ASSEMBLY



Check and tighten all the bolts again to ensure the table is steady enough.

Enjoy the table now.



REGISTRATION & REFUND POLICY

https://westintrends.com/apps/product-registration



https://westintrends.com/policies/refund-policy



HAVING TROUBLE

• Not sure how to assemble or missing pieces?
Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #, Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the furniture with a damp cloth.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.