 



Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty> If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>

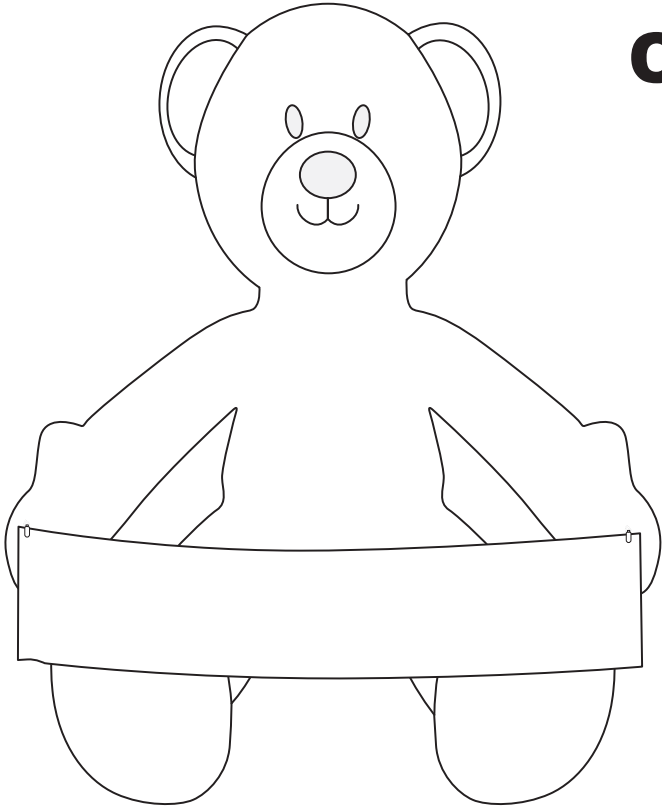

# CELEBRATION BEAR WITH BANNER
 
## LDE-694

Read this manual carefully before use and save it for future reference.



PARTS	
Inflatable Product	Lawn Stakes
Banners	Tether Ropes
Blower	LED Lights
UL Adapter	

### ⚠️ WARNINGS:

**This item is not a toy – for decoration purposes only.**

This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

## EASY INSTALLATION AND OPERATION INSTRUCTIONS

This item should take approximately 15 minutes to install and inflate, when assembled according to this manual.

### ⚠️ IMPORTANT SAFETY INFORMATION ⚠️

**Please read and follow all instructions carefully before using the product and retain for future reference.**

1. This product is not intended for permanent installation or use.
2. Do not mount or place near gas or electric heaters, fireplace, candles, or other similar heat sources.
3. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
4. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
5. This is an electrical product and not a toy! To avoid risk of fire, burns, personal injury or electric shock, this product should not be played with or placed where children can reach it.
6. Do not hang ornaments or other objects from the cord.
7. Before using or reusing, inspect the product carefully. Discard and DO NOT operate the product if cuts, cracks, damages or frayed wire insulation cord, loose connections, or exposed copper wire are visible.
8. Do not remove or change the bulb(s) inside while the power is on.
9. Replace failed bulb(s) immediately. Purchase bulb(s) of the same rated voltage and wattage to prevent overheating.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

### ⚠️ WARNING:

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**

# ASSEMBLY

**STEP 1:** Remove all contents from packaging and lay out the deflated inflatable on a clean, clear area that is away from sharp objects.

**STEP 2:** Ensure the zipper at the base of the inflatable is zipped shut.


**STEP 3:** Locate the air intake on the blower and make sure it is clear of fabric or other obstructions, and that it is facing upright.

**STEP 4:** Plug the adapter plug into a properly grounded GFCI wall outlet. The blower/fan will immediately begin to fill the inflatable product with air. **NOTE:** It is helpful to lift up on the fabric as the blower inflates the unit to avoid clogging the blower air intake.

**STEP 5:** Once fully inflated, tie the included tether ropes to the sewn-in loops on the sides of the inflatable. Gently pull on the tether ropes to extend and straighten them out. Position the extended tether ropes with equal spacing distance.

**STEP 6:** To secure the inflatable into the ground, push lawn stakes through the loops that are sewn to the bottom of the inflatable. Push the additional lawn stakes into the ground a few inches out from where the loose ends of the tether ropes are lying on the ground. Tie the loose ends of the tether ropes to the tops of the lawn stakes. Gently pull and tighten each tether rope to adjust the inflatable to an upright and fully secure position.

**STEP 7:** To hang the banner, open the clips that are located on the hands of the unit by pulling the lever upward. Place the banner between the teeth of the clip and carefully press the clip lever closed.

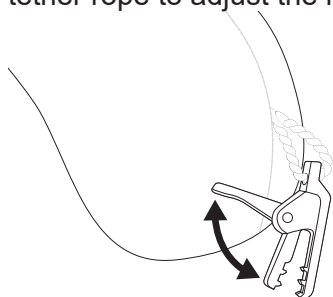

## CARE AND STORAGE

For Indoor and Outdoor Use.

For best performance, operate this item indoors or in a sheltered outdoor area. It is also recommend that you bring this item indoors during adverse weather (extreme cold, strong winds and/or rain). When not in use, store this product in its original packaging. Keep away from heat and moisture.

1. Only use the transformer supplied by the manufacturer.
2. Adults should supervise children while this product is in use. Keep children away from the transformer, as it heats up during operation.
3. Assemble the product according to the instructions and read all instructions carefully before assembly.
4. Spot clean fabric with a damp cloth. Never use harsh chemicals or abrasive materials.

## TROUBLESHOOTING

Carefully read and follow all Care and Storage, Safety, and Assembly Instructions; the most common troubleshooting tips are referenced under each set of instructions.

**If your inflatable is not inflating, please check the following:**

1. The power source may have been interrupted, or the cord may be unplugged.
2. Blower airflow may be obstructed. Unplug the blower and check that the intake vent is free from debris. Also ensure the inflatable product is not blocking the intake vent.
3. Check that the zipper near the blower is closed.
4. Inspect fabric for holes and tears. Do not use if product if fabric is damaged.

**Any modification to the product or failure to follow recommended care will void the product warranty.**