

# FLEXSTEEL®



## W1013-840

### Upholstered Dining chair


#### IMPORTANT NOTES

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent damage to the parts.

We have taken great care in the design of this product and request that you carefully and accurately follow our assembly instructions to ensure proper set-up. We recommend at least two adults assemble this product.

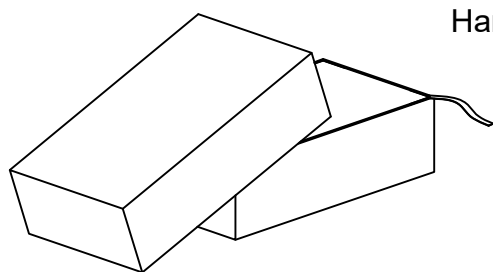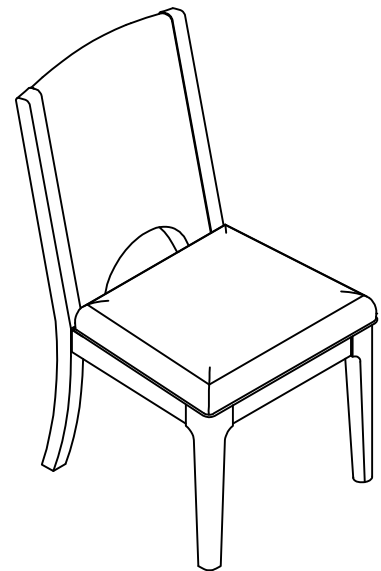


Hardware pack

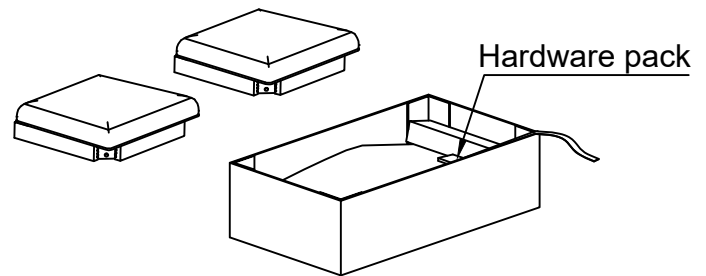

Hardware pack

#### Part List


#### Assembly Instruction 1/4

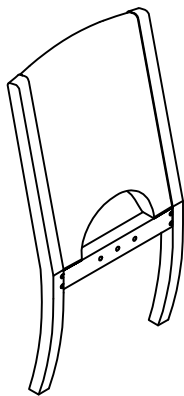

A. Back frame  
1 piece



 B. Front legs  
2 pieces




C. Seat frame  
1 piece


#### Hardware List



 D. Medium Bolt  
Ø5/16" - 18 UNC x 2-1/4"  
4 pieces



 E. Large Bolt  
Ø5/16" - 18 UNC x 3-1/2"  
4 pieces




F. Small Bolt  
Ø5/16" - 18 UNC x 1-3/4"  
2 pieces



G. Spring Washer  
Ø5/16" x 1.5mm  
10 pieces



H. Flat Washer  
Ø5/16 x Ø19mm x 2mm  
10 pieces

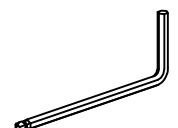

J. Hex Key 4mm  
1 piece


### IMPORTANT NOTES

- Do not tighten up all the screws until each part is properly assembled.
- Keep the Hex Key in a safe place as you may need to tighten up the bolts in the future.
- Use a soft cloth between these parts and the floor.
- We recommend this product be assembled by at least two adults.

### STEP 1

To assemble the base, attach the Legs (B) to the Seat frame (C), attach all Medium Bolts (D), Spring Washer (G), and Flat Washer (H), level two legs then tighten with the Hex Key (J). (See Figure 1).


Figure 1

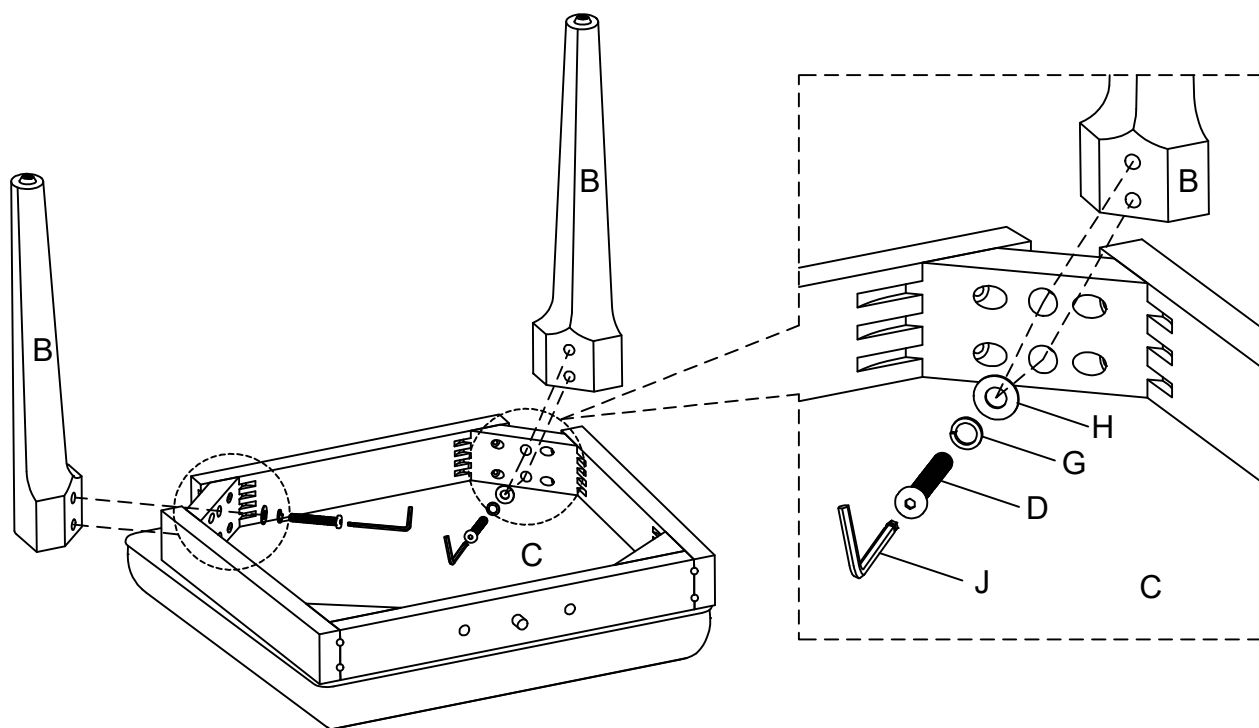

### STEP 2

Lay the Back frame (A) flat on a soft cloth. Insert the Seat frame (C) to the Back frame (A), attach all Large Bolts (E) and Small Bolts (F), Spring Washer (G), and Flat Washer (H), level Seat frame to Back frame then tighten with the Hex Key (J). (See Figure 2).


Figure 2

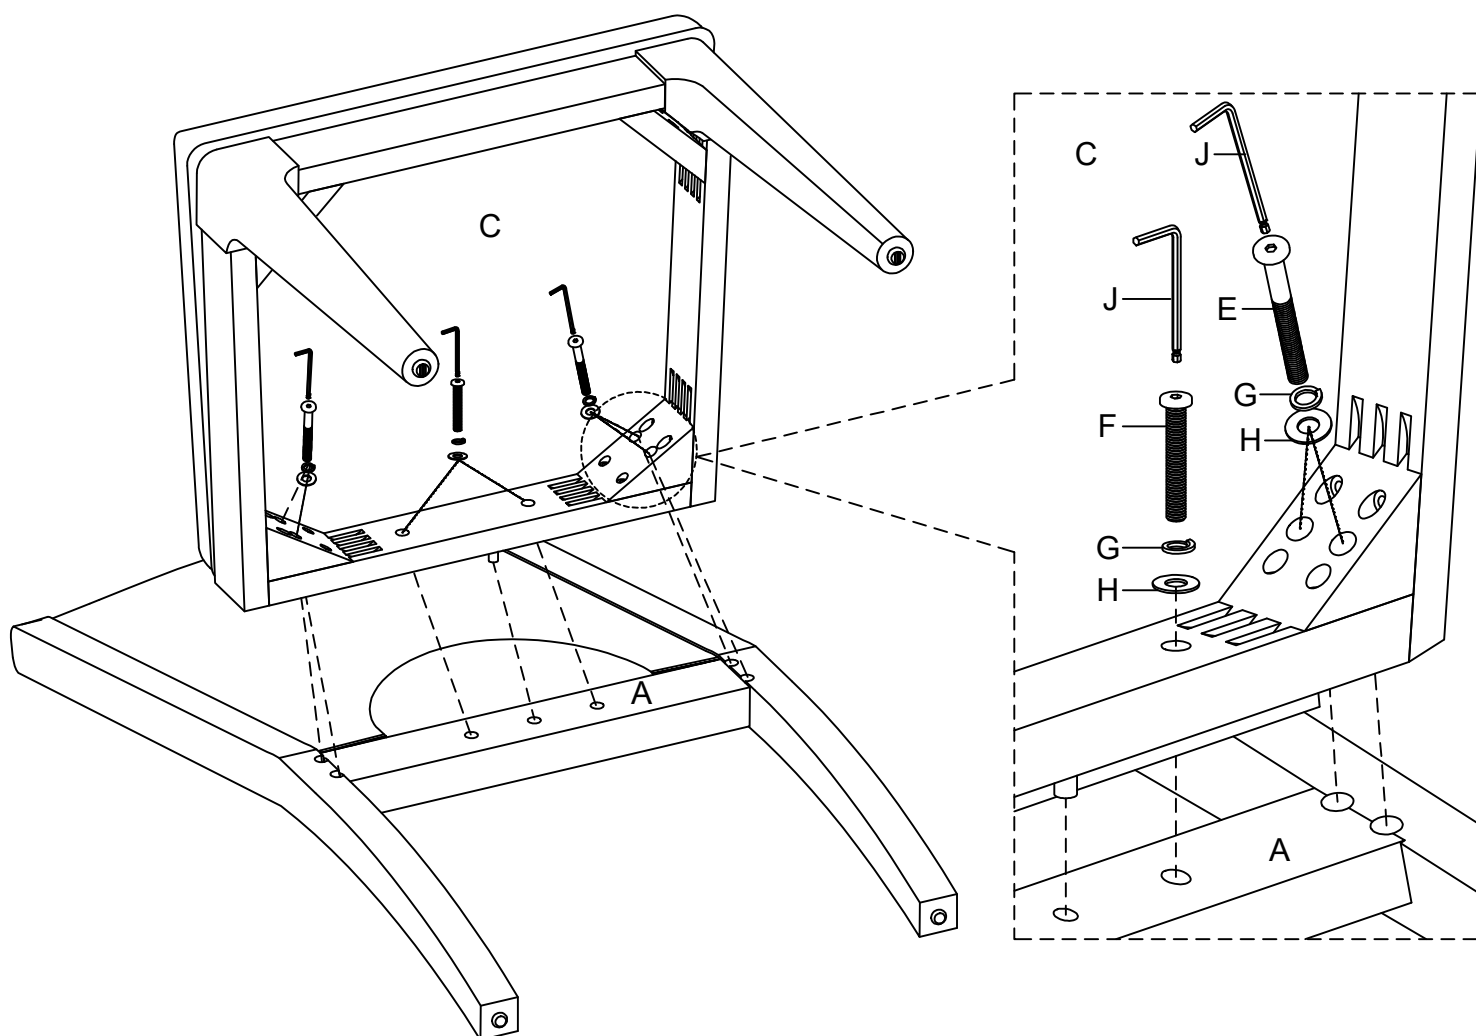

### STEP 3

Ask for assistance to lift the unit upright and position it at the desired location.  
Adjust the levelers on the legs until the furniture is leveled. (See Figure 3).

**Figure 3**

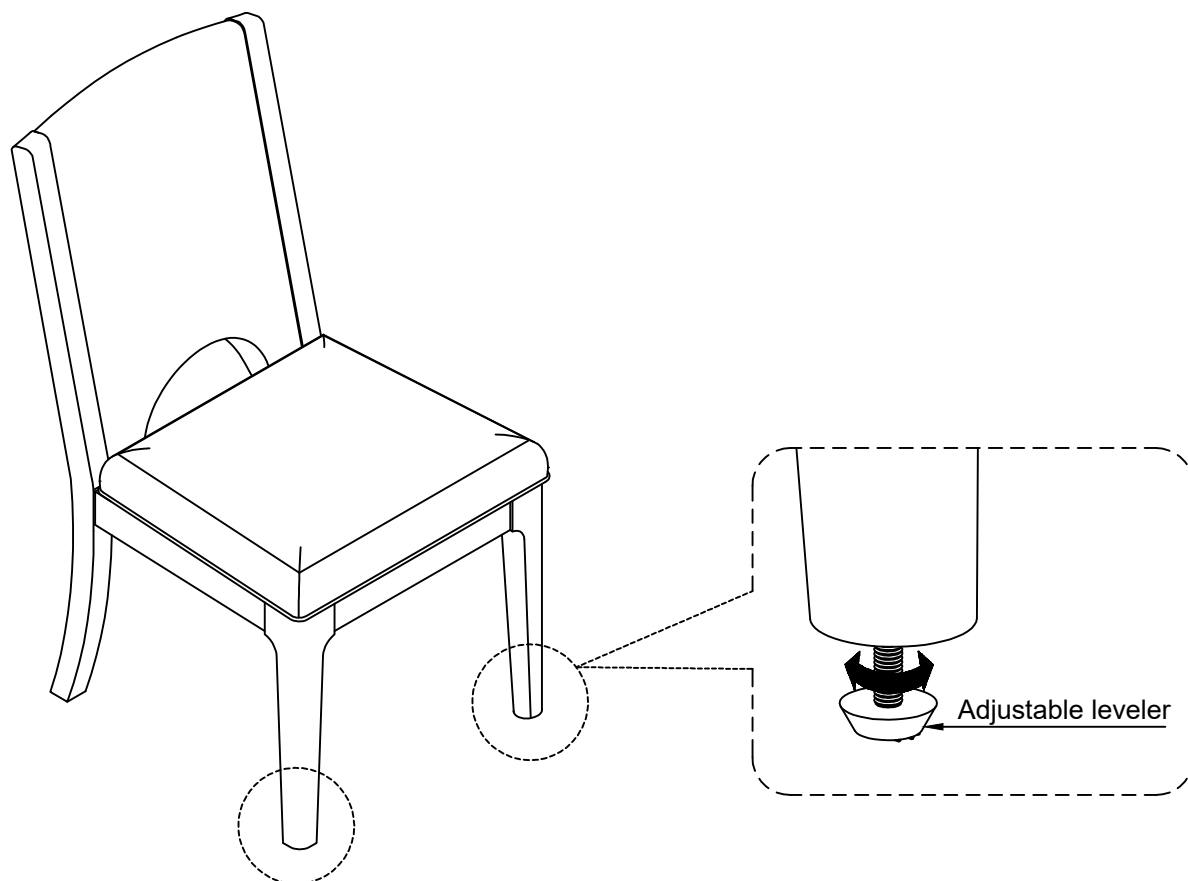

### CARE INSTRUCTIONS

- To avoid scratches, do not place sharp or jagged objects directly on the table top.
- Do not place hot items directly on the table top.
- Use placemats or trivets under hot items and coasters under beverages to prevent marks and stains.
- Avoid the use of harsh chemicals or abrasive cleaning materials.
- Wipe the table clean with a soft, dry cloth after each use.
- Wipe up spills quickly with a soft, dry cloth.

Flexsteel Industries, Inc.

For Parts or Customer Service call  
toll-free:

1-888-415-3979

Monday-Friday

8:00 a.m. -5:00 p.m.

(Central Time)

Email:

customersolutions@flexsteel.com

www.flexsteel.com